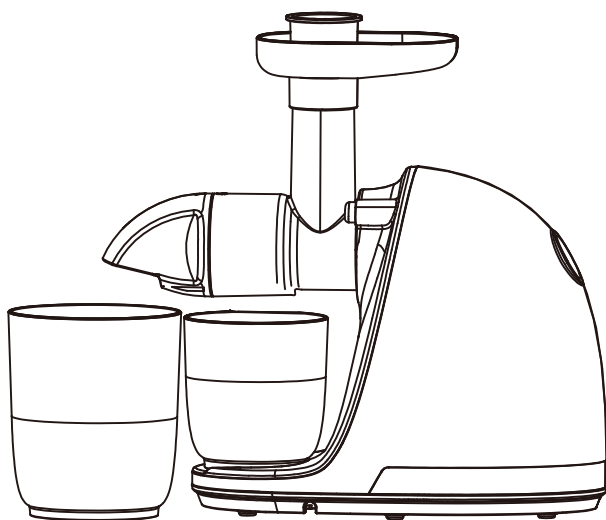 




Slow Juicer Instruction Manual



Brand:amzchef

Model: ZM1501

Item Model:ZM1CD501/ZM1KF501/ZM1OT501

220-240V~ 50/60Hz 150W

**PLEASE READ INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY
RETAIN THIS MANUAL FOR FUTURE REFERENCE**

CONTENT

ENGLISH

Chapter I.	Precautions for Safe Use	45
Chapter II.	Parts and Functions	48
Chapter III.	Assembly and Disassembly Methods	49
Chapter IV.	Methods of Operation	51
Chapter V.	Ingredient Selection and Handling Tips	51
Chapter VI.	Cleaning Guidelines and Maintenance	52
Chapter VII.	Troubleshooting	53
Chapter VIII.	Safety Indexes	54
Chapter IX.	Warranty	55



The device meets the requirements of Regulation 2014/30/EU as well as the applicable standards EN55014-1:2017, EN55014-2:2015, EN61000-3-2:2014, EN61000-3-3:2013



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Manufacturer: Zhongshan Jimi Electrical Appliance Co., Ltd.

ADD.: No.2, Yucheng 2nd Road, Xiaolan Town, Zhongshan City, Guangdong, China

Contact : Emily Tel : +1 (838) 910 8317 E-Mail : info01@iamzchef.com

EC

REP

Name: EUREP GmbH

Add.: Unterlettenweg 1a 85051 Ingolstadt Germany

Tel: +4984188697744 E-Mail: eurep@eurep-gmbh.com

Chapter I. Precautions for Safe Use

All users of this appliance must read and understand these safety precautions before operating.

SIGN SAMPLES



This sign indicates contents that may cause risk of a fire or an electrical shock.

Specific warnings are written in the sign.



This sign indicates contents of regulating or directing actions.

Specific prohibitions are written around or in the sign.



This sign indicates prohibited acts.

Specific prohibitions are written around or in the sign.

PRECAUTIONS FOR SAFE USE



1. DO NOT PLUG IN OR UNPLUG WITH WET HANDS.

It may cause an electric shock or an injury.



2. DO NOT USE WITH OTHER THAN RATED VOLTAGE.

It may cause an electric shock, a fire or abnormal performance. If the voltage is different, it may shorten the life of the motor or cause a failure.



3. PLUG THE POWER CORD CORRECTLY AND PUSH IT TIGHT IN A WALL SOCKET.

It may cause electric shock or a fire.



4. IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.

If the power cord is damaged, it may cause electric shock or a fire.



5. NEVER ALTER THE APPLIANCE. ALSO DO NOT DISASSEMBLE OR REPAIR BY YOURSELF. DO NOT INSERT FINGERS, FOREIGN SUBSTANCES OR OBJECTS SUCH AS PINS INTO GAPS OR HOLES IN THE BASE.

It may cause a fire, an electric shock or a failure. For any technical support, contact the authorized local Customer Care Center.



6. DO NOT MOISTEN THE BASE OR SPLASH WATER ON THE BASE.

Be careful not to let any liquids or other substances get into the switch on the appliance. **DO NOT OPERATE THE SWITCH WITH WET HANDS.** It may cause electric shock or a fire.



7. WHEN THE POWER CORD, WIRE IS BROKEN OR DAMAGED OR THE PLUG-IN PART BECOMES LOOSE, DO NOT OPERATE IT.

It may cause an electric shock, a fire or an injury.



8. ALWAYS USE AN OUTLET WITH A GROUND CONNECTION.

To be safe, always use an outlet with a ground connection, but never ground on gas lines, plastic water pipes, telephone lines, etc. Failure to do so may result in electric shock, fire or malfunction and explosion.



9. NEVER DISASSEMBLE ACCESSORIES DURING OPERATION OR INSERT FINGERS, FOREIGN OBJECTS SUCH AS FORKS, SPOONS ETC. INTO FEEDING TUBE OR JUICE OUTLET.

It may cause an injury, an accident or a failure.

Never replace the spiral pusher with any other objects or have eyes get close to the feed port, otherwise accidents may happen.



10. THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.

Children should be supervised to ensure that they do not play with the appliance. Children are not allowed to clean and perform user maintenance without supervision.



11. DO NOT OPERATE WITHOUT LOCKING THE HOPPER PROPERLY.

It may cause an injury or a failure.



12. IF A GAS LEAK IS DETECTED, DO NOT PLUG IN THE APPLIANCE'S POWER CORD INTO A POWER OUTLET. IMMEDIATELY VENTILATE THE ROOM BY OPENING A WINDOW, AND ALLOW TO FULLY VENTILATE BEFORE PLUGGING IN THE APPLIANCE.

It may cause an injury or a failure.



13. IF SCREW ROTATION IS STOPPED IN NORMAL OPERATION, PRESS [REV] BUTTON AND HOLD FOR 3 SECONDS AND THEN AFTER REVERSE OPERATION IS COMPLETELY STOPPED, PRESS [ON] BUTTON AGAIN.

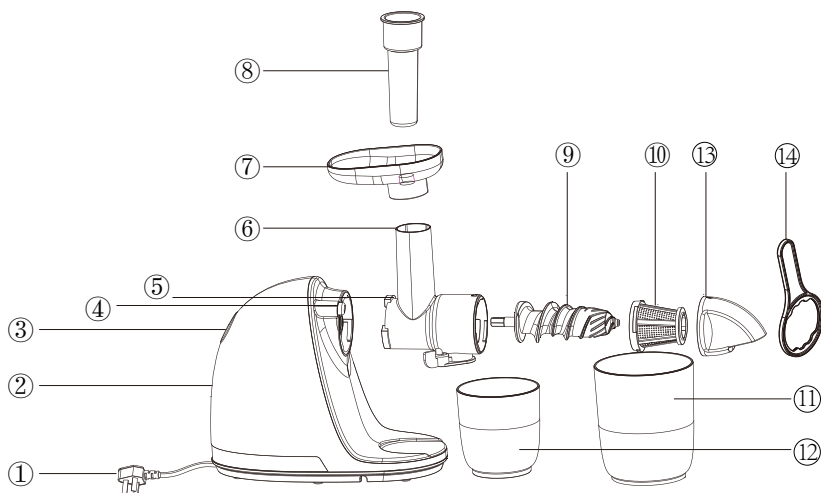
If such a stop event continues during the operation, the parts may be damaged and performance may be deteriorated due to overheating in a motor. When the problem continues, immediately stop the appliance and contact the local Customer Care Center.



14. CAUTION

1. Before use, please check if the power cord, the plug, the juice strainer, the spiral pusher and any other part is damaged. If any of the said part is damaged, stop using the appliance and contact our customer service department promptly. Do not dismantle and repair it by yourself, otherwise dangers may happen.
2. It is necessary before connecting the power supply to ensure that the juicing body, the spiral pusher, the juicing body cap and all other dismountable parts are properly installed.
3. Cut food ingredients into small blocks with sizes fitting the feed port of the juicing body. Do not begin to process any vegetables or fruits with cores, hard seeds or thick skin or shells until the cores, hard seeds or thick skin or shells are removed.
4. When feeding a food ingredient, do not make the pushing force too large but have it just enough to cut the food ingredient.
5. Dyeing of the juice strainer, the juicing body cap, the spiral pusher and other accessories after juicing of some vegetables or fruits is normal and will neither affect food eating nor do harm to health.
6. If the appliance has current limiting protection or its motor is locked and stops automatically and cannot reverse automatically, switch off the power switch and put it on the "O" position, then press the "ON" button of the power switch to discharge the food ingredients in the appliance and finally press the "REV" button of the power switch for normal use of the appliance. If the motor is still locked, it is suggested to remove the food ingredients in the spiral pusher before continue to use the appliance. This measure can protect the motor.
7. Do not dismantle the dismountable parts of the appliance immediately after use but after both the motor and the spiral pusher have stopped and the power supply is disconnected.
8. Do not sterilize any accessories of the appliance with hot water with a temperature higher than 50°C(122°F) or a microwave oven, otherwise they may be heated, deformed and damaged. The materials of all parts in contact with food ingredients should comply with food hygiene certification and be clean, hygienic and reliable.
9. Do not clean the appliance with steel wool, abrasive cleaning agents or corrosive liquids (such as gasoline or acetone).
10. The appliance is applicable to use by individuals or families only.
11. Switch off the appliance and disconnect the power supply before changing accessories, assembling, disassembling, cleaning, or moving the appliance.
12. The hazardous operation may result in minor personal injury or equipment damage. Care should be taken during the handling and cleaning of the auger.

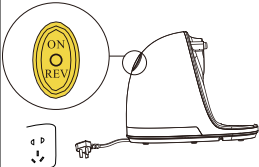
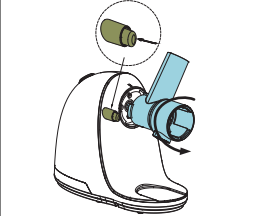
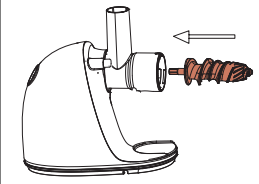
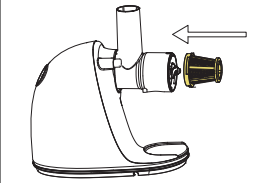
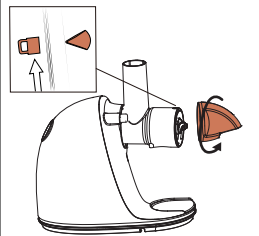
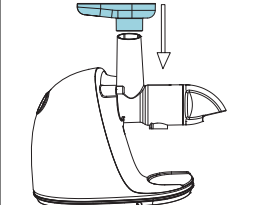
Chapter II. Parts and Functions

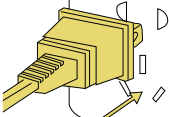


No.	Component Name	Function Description
①	Power Cable	For connection to power supply.
②	Housing	The main unit containing motor and other components, providing power output.
③	Mode Switch	It controls the operating status of the juicer (on/off/reverse mode).
④	Lock Button	Used to lock the accessory to prevent accidental release of the case. To remove the accessory from the housing, press and hold the button.
⑤	Drum	One of the main parts of juicing, vegetables or fruits are added from the feed chute at the top, while juice and pulp are discharged from the outlet.
⑥	Feed Chute	Feeding food and load down to drum.
⑦	Tray	For interim storage of food material to process.
⑧	Food Pusher	Push the ingredients into full contact with the auger to maximize the efficiency of juicing.
⑨	Auger	Used to extrude ingredients.
⑩	Filter	Separate juice and pulp.
⑪	Juice Container	Collect the juice squeezed by the juicer.
⑫	Pulp Container	Collect the pulp separated by the extractor.
⑬	End Cap	For draining pulp.
⑭	End Cap Remover	Use this tool when the end cap is difficult to remove.

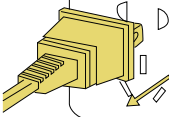
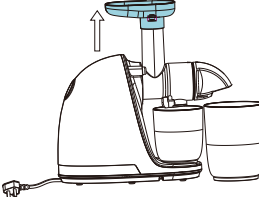
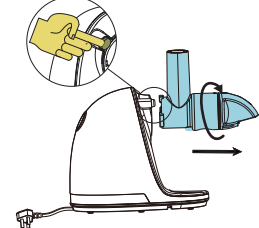
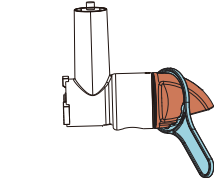
Chapter III. Assembly and Disassembly Methods

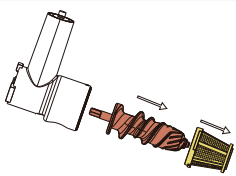
1. Assembly Guide

	1	Before starting assembly, set the machine mode to [0] (off state) and unplug it.
	2	Install the Drum 5 on the housing, and turn it counter-clockwise until you hear a "click".
	3	Insert the Auger 9 into the Drum 5 until it is fixed.
	4	Install the Filter 10 on the Auger 9 and rotate it if necessary.
	5	Connect the End Cap 13 to the Drum 5 and turn it counterclockwise until the ▼ is aligned with the lock symbol, That means the alignment is successful.
	6	Install Tray 7.

	7	Put the Juice Container ⑪ and Pulp Conatiner ⑫ in the corresponding positions.
	8	Plug the juicer into the power supply, press the Mode Switch ③ to start using.

2. Disassembly Guide

	1	Before starting disassembly, make sure the device is unplugged and the mode switch is set to off.
	2	Please remove the tray first.
	3	Please press and hold the Lock Button ④, then rotate to the right to remove the whole accessory. When pressing the Lock Button ④ but it is difficult to remove the accessory, please restart the machine, press and hold the "REV" button for 5~10 seconds, then shut down and remove the plug before taking out the accessory.
	4	Use the attached End Cap Remover ⑭ to remove the end cap.

	5	Remove Filter 10 and Auger 9 step by step.
--	---	--

Chapter IV. Methods of Operation

	"ON"	Power on
	"O"	Off
	"REV"	Reverse mastication (For solving ingredient clogging problems)

Chapter V. Ingredient Selection and Handling Tips

1. How to choose ingredients?

- Please avoid foods that you are allergic to.
- Please avoid putting in frozen ingredients.
- Do not put ice cubes in.
- Please avoid putting hard food, such as nuts, coffee beans, sugar cane, etc.
- Please avoid putting meat.
- Please avoid putting cooked ingredients such as boiled potatoes and carrots.

2. How to clean the ingredients?

- Rinse fruit or vegetables thoroughly with water or produce wash for fruits and vegetables.

3. Preparing ingredients for best results.

- Remove large stones from fruits, such as peaches, plums, mangoes and apricots to avoid damage to the juicer.
- Please peel hard and thick skin from fruit first, such as citrus fruits, watermelon.
- Please remove the seeds first to avoid affecting the taste of the juice, such as oranges.
- Please cut the long fiber vegetable into small pieces (about 3cm) before putting it in. Such as celery and wheatgrass.
- Please cut large pieces of food into small pieces before putting them in, such as carrots and apples.

4. How to increase the juice yield?

- Soft fruits (e.g. grapes and watermelon) are easy to stuck in the juicer, please reduce the feeding speed. Or mix it properly with hard fruits before feeding.
- If you need to extract a large amount of juice, please repeat the steps of "cleaning-juicing-cleaning" to avoid pulp accumulating in the filter and blocking the mesh.
- Please cut the ingredients into small enough pieces.
- Do not press the food hard with the food pusher.



Note: When juicing soft fruits and vegetables (such as grapes, kiwi, tomato, etc.), due to the high juice content, it is easy to cause the juice to stay in the drum. This is a normal phenomenon. At this time, the feeding speed should be slowed down until the juice flows out. If necessary, please disassemble and clean it in time.

Chapter VI. Cleaning Guidelines and Maintenance

1. Tips for cleaning

	Before cleaning, please make sure that the juicer is turned off and the power is cut off.
	Disassemble and separate the accessories of the juicer (please refer to the "Disassembly Guide" section).
	Please rinse all accessories and cups under running water and wash them with soapy water.
	Do not use a metal brush to clean, you can use the attached cleaning brush to clean.
	Please do not put all accessories and cups into the dishwasher.



Do not immerse the motor base in water or other liquids.

2. Tips for maintenance

- After cleaning the accessories, let dry completely then assemble and place in a cool and dry place.
- The machine needs to rest every 10 minutes to protect the motor.
- Please handle the ingredients correctly before putting them in (please refer to the "Preparing ingredients for best results" section).
- When moving the juicer, always hold it by the base (and not the juicer accessories).



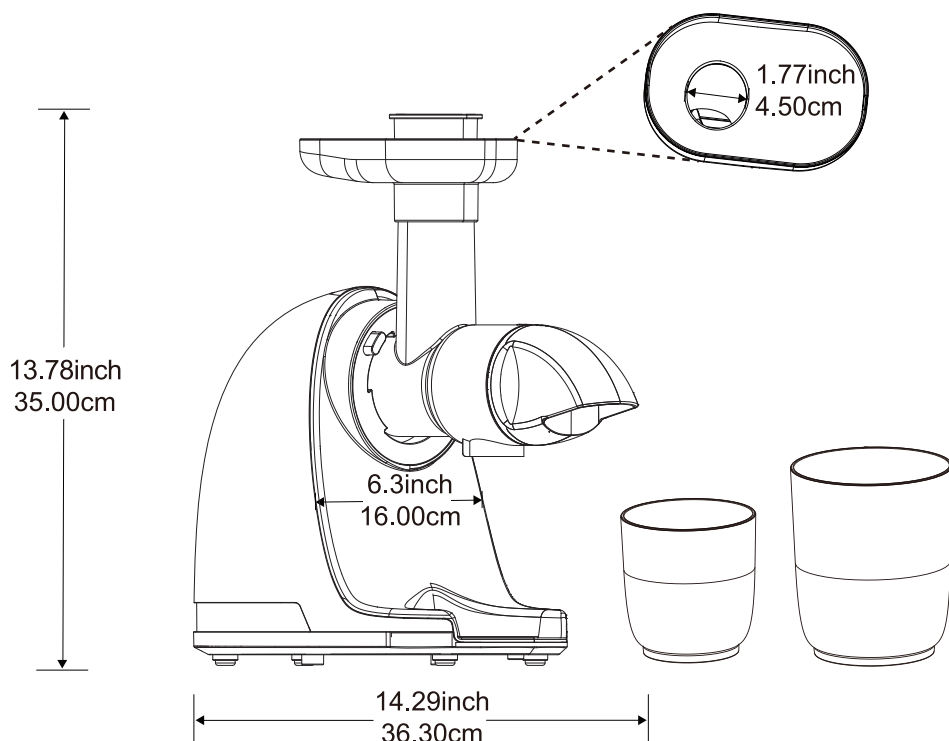
Note: If the machine works continuously for a long time, it will automatically shut down to protect the motor from overheating. Please note that this does not mean that the machine is broken, but it means that it needs to take a rest. At this time, please turn off the machine and wait for the machine to cool down for 1 hour before use it again.

Chapter VII. Troubleshooting

Fault Phenomenon	Analysis of cause	Fault Resolution
Machine not working.	The power is not plugged in or the power button is not pressed.	Connect the power and press the power button.
	Machine damage.	Please contact the after-sales email: info01@iamzchef.com.
Bad smell.	It is normal that it appeared in the first few times of use, and there will be no safety hazard.	It disappears after a few uses.
	It has not occurred before, but it suddenly occurs during a certain use, which may be caused by continuous use for a long time.	After 10 minutes of continuous use, rest for 10 minutes before the next start.
Machine stops working.	Overheat protection due to continuous use for a long time.	Shut down and wait 1 hour before restarting the machine.
	Food clogs in the juicer.	Restart the machine after disassembling and cleaning the accessories.

Chapter VIII. Safety Indexes

Model	ZM1501
Rated Voltage	220-240V
Rated Power	150W
Rated Frequency	50/60Hz
Continuous Operating Time	≤10 minutes
Interval Time	≥10 minutes
Screw Running Speed	90-110 rpm



Please send your Amazon order number to our email (**info01@iamzchef.com**) to register AMZCHEF super member.

Once the email is successfully sent:

- ① The warranty is automatically upgraded from 12 months to 24 months after you send the email.
- ② If anything goes wrong with your product, we will provide you with a brand new unit as a replacement, or provide you with a full refund.
- ③ If there is a problem with your parts and accessories, you can replace them for free.



Send: info01@iamzchef.com

Subject: Warranty

Amazon Order ID: _____

Please note: Please send us your order number within 2 weeks of receiving the goods to ensure successful registration.