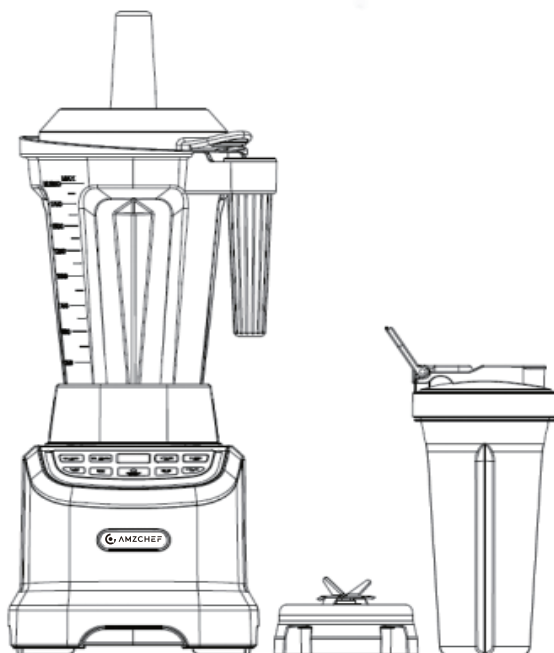 




INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG
MANUEL D'INSTRUCTIONS
MANUEL D'INSTRUCTIONS
MANUALE DI ISTRUZIONI



Brand:amzchef

Model:ZM5003

220-240V~ 50/60Hz 1200W

Max Locked power: 2000W

PROFESSIONAL BLENDER
PROFESSIONELLER MIXER
LICUADORA PROFESIONAL
MÉLANGEUR PROFESSIONNEL
FRULLATORE PROFESSIONALE

PLEASE READ INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY
RETAIN THIS MANUAL FOR FUTURE REFERENCE

Contents

MODEL:ZM5003

ITEM MODEL:ZM5CD003/ZM5KF003/ZM5OT003

English | **03-16**

Deutsch | **17 - 30**

Español | **31- 43**

Français | **44-56**

Italiano | **57-69**

[IMPORTANT]

IMPORTANT SAFEGUARDS
PARTS&FEATURES
PANAL CONTROL
FUNCTION
INSTRUCTION AND STEPS
CLEANING AND MAINTENANCE
TROUBLESHOOTING
WARRANTY

[CONTENT]

IMPORTANT SAFEGUARDS	4
PARTS&FEATURES	7
PANAL CONTROL	8
FUNCTION	9
INSTRUCTION AND STEPS	10
CLEANING AND MAINTENANCE	13
TROUBLESHOOTING	13
WARRANTY	16

IMPORTANT SAFEGUARDS

WARNING: This unit contains electrical connections and moving parts that potentially present risk to the user. To avoid the risk of serious injury when using your blender, basic safety precautions should be followed, including but not limited to following:

READ ALL INSTRUCTIONS, SAFEGUARDS, AND WARNINGS BEFORE OPERATING BLENDER.

The failure to follow any of the important safeguards and instructions for safe use is a misuse of your blender, which can create the risk of serious injury and void your warranty.

1. Read all instructions.
2. Carefully observe and follow all warnings and instructions.
3. Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp blades that can cause injury if mishandled.
4. Take inventory of all contents to ensure that you have all parts needed to properly and safely operate your appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
6. Do not allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
7. To protect against the risk of electric shock, DO NOT submerge the appliance or allow the power cord to contact any form of liquid.
8. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
9. To avoid a hazard due to inadvertent resetting of the thermal cut-out, power to this blender must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
10. Do not operate any blender with a damaged cord or plug or after the blender malfunctions, or is dropped or damaged in any manner. into@iamzchef.com at once for information on examination, repair, or adjustment.
11. GFI circuit breakers might be installed in your kitchen. Look for them in outlets near sinks. If the blender won't operate, unplug the blender. Reset the wall outlet or circuit breaker. If the circuit breaker continues to trip, unplug the blender from the outlet. Allow the blender to sit for 24 hours before attempting to use it again. Contact Customer Service if the problem persists.
12. This appliance has important information on the plug prong. The power cord is not suitable for replacement. If damaged, contact into@iamzchef.com for servicing in order to avoid a hazard.
13. Before use, wash all parts that may come into contact with food. Follow washing instructions covered in this instruction manual.
14. ALWAYS use the appliance on a dry and level and firm surface. Never operate the appliance on soft surfaces.

15. Alteration or modification of any part of the blender base or container, including the use of any **part or** parts that are not genuine authorized into@iamzchef.com parts, may cause fire, electric shock, or injury.
16. The use of attachments, including canning jars, not expressly authorized or sold by into@iamzchef.com for use with this blender, including container, may cause fire, electric shock, or injury.
17. Do not use outdoors.
18. **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use blender for other than intended use.
19. Check if the voltage you are using matches the voltage listed on the machine.
20. Do not let cord hang over edge of table or counter.
21. Do not let cord come into contact with hot surface, including the stove.
22. **DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven). Never leave an appliance unattended when in use.
23. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
24. The tamper provided must be used only when the main part of the lid is in place.
25. Do not leave foreign objects, such as spoons, forks, knives or the lid plug, in the container as this will damage the blades and other components when starting the machine and may cause injury.
26. Never attempt to operate with damaged blades.
27. **DO NOT** use the appliance if blade assembly is bent or damaged.
28. Before each use, inspect blades for damage. If blades are bent or damage is suspected, contact into@iamzchef.com to arrange for replacement.
29. Always operate blender with lid and lid plug firmly in place. The lid plug should be removed only when adding ingredients and when using the tamper.
30. If you find unmixed ingredients sticking to the sides of the container, stop the appliance, remove the lid, and use a spatula to dislodge ingredients. **NEVER** insert your hands into the container, as you may contact one of the blades and experience a laceration.
31. **DO NOT** attempt to remove the container and lids from the motor base while the blades are still spinning. Allow the appliance to come to a complete stop before removing lids and containers.
32. Add ingredients to the container. **NOTE:** Do not overfill! To avoid spilling, do not add ingredients past the "MAX" fill line.
33. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
34. When making nut butters or oil-based foods, do not process for more than one minute after the mixture starts to circulate in the container. Processing for longer periods can cause dangerous overheating.
35. Machines and power cords should be stored in a safe place to prevent children from pulling on the power cord.
36. Blades are sharp-handle with care. Clean around the blades in the container with extreme care to avoid injury.
37. Never attempt to operate with the centering pad removed.
38. Make sure that the container and blades base are flush with the centering pad to ensure that the drive spline is engaged with the drive socket before operating.
39. **DO NOT** attempt to Defeat the interlock mechanism.
40. **DO NOT** use your container to heat ingredients.
41. **DO NOT** continuously use your machine for more than 2 minutes.

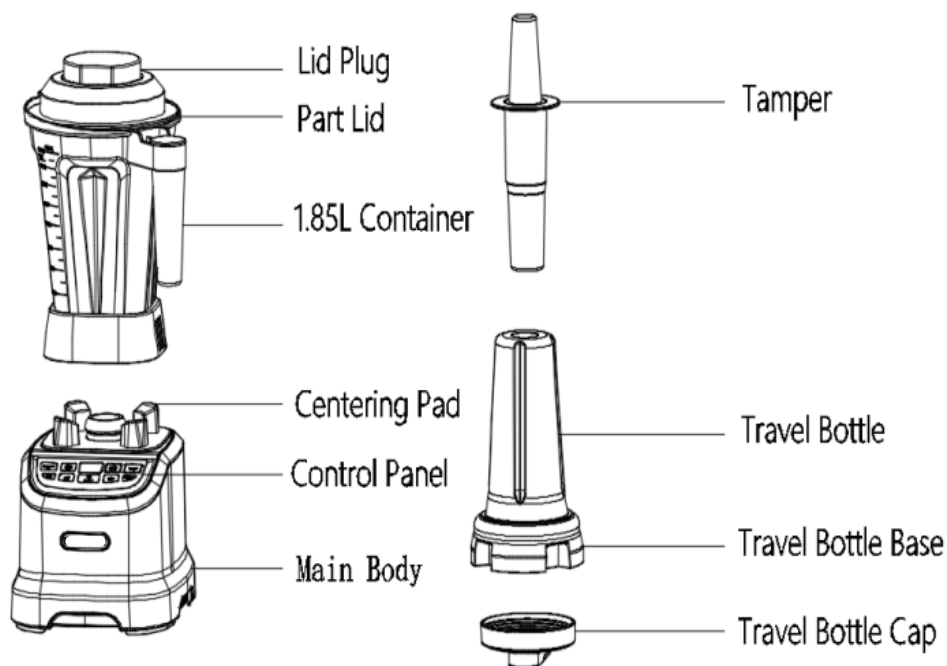
42. DO NOT attempt to sharpen blades.
43. DO NOT expose container to extreme temperature changes.
44. Appliance accessories are not intended to be used in the microwave. Do not place the container or the lid in the microwave as it may result in damage to the accessories.
45. Extension cords are not recommended for use with this product.
46. If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 1 hour before using again.
47. DO NOT store ingredients before or after blending them in the container with the blades attached. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury.
48. Never handle the plug with wet hands.
49. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
50. Flashing light indicates ready to operate. Avoid any contact with blades or moveable parts.
Save this manual for future reference.
51. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

SAVE THESE INSTRUCTIONS
Household use only

 WARNING			
	Before using the product, please read the manual and all explanations carefully.		The voltage to use should be 220V-240V.
	Please don't use the product beyond its functions.		Please don't let children use the product.
	Please stop using the product when power line or plug damage or other functions failure.		Please don't let power line touch sharp edge or high temperature surface.
	The product must be operated on stable reliable worktable.		Hold the plug tightly when pulling it, don't pull its line.
	The product is household use only.		Don't put the product into water or any other liquids
	To ensure safety, please don't disassemble the product privately. If there is abnormal situation, please contact customer service which contact information is printed on the manual. It must be repaired by manufacturer or special technician of after-sale service center appointed by manufacturer.		

Specifications				
Product Model	Voltage	Frequency	Power	Capacity
ZM5003	220V-240V	50Hz	1200W	1.85 L

PARTS&FEATURES



2-Part Lid: The 2-part Lid is easy to put on and take off and easy to clean.

Always use the complete 2-part lid when blending, especially when blending hot ingredients (unless the tamper is inserted through the lid plug opening). **Never** operate the blender without the lid securely latched during operation.

Lid Plug: Insert through the lid plug opening and secure by turning clockwise. Turn counterclockwise and lift it to remove the lid plug for using the tamper or adding ingredients.

Container: Ounces/milliliters/cups are clearly marked.

Blades: Blades are made of ultra-sharp stainless steel. The container is designed to be completely cleanable without removing retainer nut and blades. **DO NOT** attempt to remove the retainer nut or blades from the container.

Centering Pad: The container must be aligned over the centering pad. Never attempt to operate with the centering pad removed.

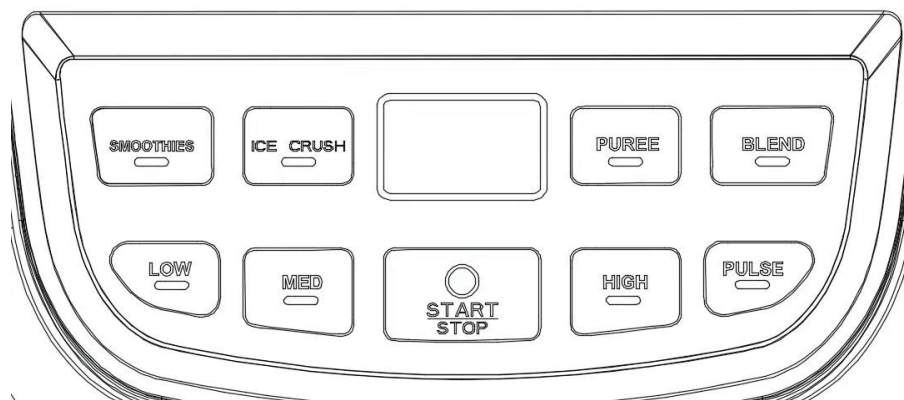
Motor Base: The motor is designed with dual protection circuits to prevent overheating and an overload.

Tamper: Used to process thicker mixtures and keep ingredients moving towards and through the blades.

CAUTION 1: The tamper can only be used only when the main part of the lid is in place. Hold the container while using the tamper.

CAUTION 2: Lids and tampers are not interchangeable between different container styles, types, and sizes.

PANAL CONTROL



SMOOTHIES/ ICE CRUSH / PUREE/ PULSE/ LOW/MED/HI GH/ BLEND	In the standby state, click the "START/STOP" button to enter the selection interface, click the desired function, such as "SMOOTHIES/BLEND/", etc. After selecting the function, click the "Start" button to enter the working state. After starting work, the LED counts down.
PULSE	In the standby state, click the "START/STOP" button to enter the selection interface, directly press the "PULSE" button, the product will run at the highest speed, the display starts to count in seconds, and the default work is 1 minute. Release the button and the product will stop working , the display shows "0:00"
START/STOP	The "START/STOP"key is used to turn "START/STOP" the power of the machine, and it can also be used to start/stop the machine. Press the "START/STOP" key while the machine is working , and the machine will stop working.

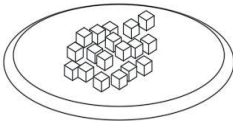
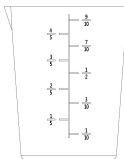
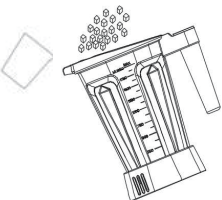
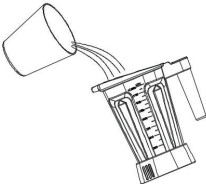
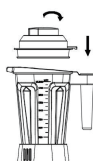
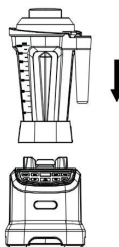
FUNCTION

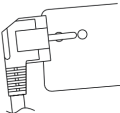
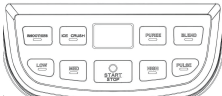
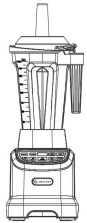
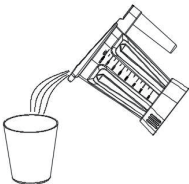
No.	Mode	Function
1	SMOOTHIES (120s)	Soft fruits and vegetables can be mixed with milk to make a smoothie.
2	ICE CRUSH (30s)	The production is mainly crushed ice, and no more than 13 ice cubes are placed in the mixing glass.
3	PUREE (120s)	Smash the chopped fruits and vegetables into puree.
4	BLEND (150s)	Put in the chopped fruits and vegetables and add the right amount of water to make juice
5	PULSE (60s)	After the program ends, if you feel that the fruit and vegetables are not chopped finely enough, you can press this button to stir several times. After the product is used, put it in clean water and press this button to clean the mixing cup and the accompanying cup.
6	LOW (150s)	Mix on low speed, only for jams.
7	MED (150s)	Mix on medium speed, only for soft fruits and vegetables.
8	BLEND (150s)	Blend on high speed for blending hard fruits and vegetables and dry grinding. (Example: carrots, grated dry soybeans)
9	START/STOP	Starts and stops the currently selected function program.

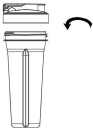
Notice:

1. If you need to add ingredients or ingredients during operation, you can perform related operations by opening the Lid plug (small cover assembly) (do not pour hot water to avoid burns);
2. The total amount of ingredients and water added should not exceed the 1850ml mark on the cup body, and there will be a problem of overflowing juice.
3. If this product needs to continuously stir fruit and vegetable juice, it is recommended to use any function for 3 times in total. If you need to continue to use it, use it after an interval of 10 minutes. During operation, if the main engine is found to be overheated, it should be shut down for about 30 minutes, and the operation can be continued after it cools down.

INSTRUCTION AND STEPS:

	1	Cut the ingredients into pieces about 2 cm in size. (meat diced and tendon removed)
	2	Use Lid Plug (or electronic scale) and measure out the right amount of ingredients according to personal taste.
	3	Pour the weighed ingredients into the blender jar.
	4	Add an appropriate amount of water to the blender jar.
	5	Align the handle on the side of the lid with the handle of the jar, and press the lid into the jar. Finally, align the protrusions of the small measuring cup with the two grooves in the center of the lid, and screw it on the lid.
	6	Put the mixing jar on the main body in the correct position, and the main unit should be placed on a flat surface. (If the mixing cup cannot be put down, please rotate the main unit connector 15° and put it down.)

	7	Connect the power cord to the socket, when the power is turned on, all the backlight lights flash once, the buzzer sounds once, and the START/STOP button flashes (if the mixing jar is not in place, it will not be powered on)
	8	Select the corresponding function key. (eg: ULTRA BLEND, etc.) Hit the "START/STOP" button and start working! (It is normal for the sound to be fast and slow at work)
	9	When the work is completed, the buzzer sounds 5 times and returns to the standby state.
	10	When using crushed ice, jam, or dry-grinding ingredients, remove the lid of the small cup and add the stirring rod to stir the ingredients, and the stirring effect will be more delicate.
	11	Remove the blender jar, pour out the juice, and add seasonings to taste. (Do not be too hasty when pouring the juice to prevent the juice from splashing).
	12	Clean the inside of the jar in time, and clean the outside of the jar with a wrung, damp cloth.
	13	After wiping the water stains on the surface of the machine, separate the main body and the mixing jar in a cool and ventilated place to air dry to prevent odor. Pour the weighed ingredients into the accompanying cup and add an appropriate amount of water.

	14	Align the accompanying cup holder with the mouth of the cup, and then tighten the cup holder to the right.
	15	Put the mixing jar on the main body in the correct position, and the main unit should be placed on a flat work surface. (Note: When using the accompanying cup, you need to press the cup body with your hand to avoid the cup body from bouncing at high speed). Connect the power cord to the socket, and when the power is turned on, all the backlights will flash once, the buzzer will sound once, and the START/STOP button will flash.
	16	Select the corresponding function key. (eg: ULTRA BLEND, etc.) Hit the "Start/Stop" button and get to work! (It is normal for the sound to be fast and slow at work)
	17	When the work is completed, the buzzer sounds 3 times and returns to the standby state. Remove the travel cup and twist the knife holder to the left. Then place the accompanying cup cover at the mouth of the cup, and turn it to the left to tighten it.
	18	After tightening the lid of the accompanying cup, check whether the lid is tight (if the lid is not tight, there will be water seepage problems), and pull up the shaft to carry it with you.

CLEANING AND MAINTENANCE :



CAUTION :

*To avoid inadvertent activation, unplug from outlet before assembling or disassembling parts, and before cleaning.

* **DON'T** submerge the motor base into water or any other liquids.

DON'T let any liquid enter the motor.



Please refer to all instructions included in this book.

IMPORTANT: To ensure continued and effective performance, do not put the container, lid, or lid plug in the dishwasher. Clean the appliance after every use.

1.To clean container, lid, lid plug, tamper and centering pad:

Self-Cleaning:

(without removing the container, lid and lid plug):

(1) Fill the container half full with warm water and add a couple of drops of dishwashing liquid.

(2) Make sure the 2-Part lid is securely snapped onto container.

(3) Perform one of the following procedures:

Run the machine .For best results,using Pulse function several times. Rinse clean under running water and dry thoroughly.

Hand Wash:

(remove the container, lid, and lid plug)

a. Wash the container, lid, and blades in warm soapy water. Rinse clean under running water and dry thoroughly. Centering pad can be removed for more thorough cleaning.

CAUTION:

blades with care to avoid laceration caused by contact with sharp edges.

2. To clean motor base:

Clean the motor base with a soft, damp cloth to prevent scratching.

Do not submerge the motor base into water and or other liquids. Do not let any liquid enter the motor

HOW TO STORE?

1. Unplug the appliance.

2. Make sure all parts are clean & dry and placed in a clean and dry place.

3. Store the blender upright with the lid secured on top.

Any other servicing should be performed by an authorized service representative.

TROUBLESHOOTING

WARNING:

To reduce the risk of shock and unintended operation, turn off power and unplug unit before troubleshooting.

Fault type	Reason	Solve Method
The display does not light up	The power cord is not plugged in properly	Check the power cord and make sure it is powered on
	Machine failure	Contact customer service for maintenance
	The blending jar is not placed properly and the safety switch cannot be triggered.	Put the blending jar upright
The display is on and the product does not work	After selecting the function, the start button is not activated	After selecting the function, the start button is activated.
	Machine failure Select and unplug the power supply	then turn on the power and operate according to the normal working steps
	Machine failure	Contact customer service for maintenance
	The power-off interval is short, and the system is not reset.	Power on for 3 minutes after power-off
The button does not respond	The product is already executing a program	The function can be used after returning to the standby state.
	There is water on the panel, which affects the sensitivity	Wipe the panel dry
	Machine failure	Contact customer service for maintenance
The ingredients cannot be broken	There are too many ingredients or too little water.	Please increase the water according to the actual situation.
	Machine failure	Contact customer service for maintenance
	Wrong selection of function keys	Reusable function to whip again
Water leakage customer service for maintenance	The sealing ring of the mixing cup knife shaft is not installed properly Contact	Reinstall the sealing ring.
	The sealing ring of the accompanying cup holder is not installed properly.	Reinstall the sealing ring.
	Check whether the lid of the accompanying cup lid is pressed tightly	Re-cover the lid
Spilled juice	Excessive amount of ingredients or water Use	according to the amount required by the instructions
Display E2	The product is running under high load, and the motor is overheated to protect the product	when it is powered off and placed at room temperature for 30 minutes before powering on.



The device meets the requirements of Regulation 2014/30/EU as well as the applicable standards EN55014-1:2017, EN55014-2:2015, EN61000-3-2:2014, EN61000-3-3:2013

Manufacturer: Zhongshan Jimi Electrical Appliance Co., Ltd.

ADD.: No.3, Taimin Road, Xiaolan Town, Zhongshan City, Guangdong, China

Contact: Emily Tel: +1 (838) 910 8317 E-Mail: info01@iamzchef.com



Name: EUREP GmbH

Add.: Unterlettenweg 1a 85051 Ingolstadt Germany

Contact: Wells Yan Tel: +49 841 8869 7744

E-Mail: eurep@eurep-gmbh.com

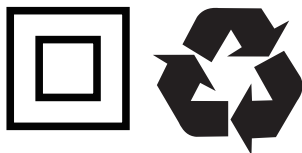 


This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human

health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Please send your Amazon order number to our email (**info01@iamzchef.com**) to register AMZCHEF super member.

Once the email is successfully sent:

- ① The warranty is automatically upgraded from 12 months to 24 months after you send the email.
- ② If anything goes wrong with your product, we will provide you with a brand new unit as a replacement, or provide you with a full refund.
- ③ If there is a problem with your parts and accessories, you can replace them for free.



Send: info01@iamzchef.com

Subject: Warranty

Amazon Order ID: _____

Please note: Please send us your order number within 2 weeks of receiving the goods to ensure successful registration.