



 **AMZCHEF**



COFFEE GRINDER

User Manual

Model: CG209
220-240V~ 50/60Hz 150W



The device meets the requirements of Regulation 2014/30/EU as well as the applicable standards EN60335-2-14:2006+A1:2008+A11:2012+A12:2016; EN 60335-1:2012+ A11:2014+A13:2017+A1: 2019 +A14: 2019+A2: 2019 + A15: 2021; EN 62233: 2008



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Manufacturer: Foshan Mycoffee Electrical Appliance Co.,Ltd
Address: The 2nd Floor, No.1 Building, No.1, Chengye Road, Gujian,Daliang, Shunde,Foshan City, Guangdong Province, China
Contact: Emily Tel: +1 (838) 910 8317 E-Mail: info01@iamzchef.com



Name: Gavimosa Consultoria, Sociedad Limitada
Address: CASTELLANA 9144, 28046 Madrid
Contact: Jorge Wilson Tel: +34688185858
Email: compliance.gavimosa@outlook.com



Company: Sea&Mew Accounting Ltd
Address: Electric Avenue Vision 25, Enfield EN3 7GD, London, United Kingdom
Contact: Billy Han Tel: +447399648608 E-Mail: info@seamew.net



SCAN QR CODE
Activate Warranty
Get Support

1 Introduction

This Burr Coffee Grinder has a simple design for easy grinding, with a stainless steel burr that maintain coffee bean oils and provide a consistent grind for optimal flavor. It offers different grind settings, ranging from fine for espresso to coarse for French press, allowing you to customize your brewing experience.

2 Safety Precaution



 
1. Do not immerse this coffee grinder in water or any other liquid, and do not rinse it under the faucet; otherwise, it may be in danger of electric shock.



6. Do not clean any part of the coffee grinder in a dishwasher except the coffee container.




2. Do not allow the main cable to dangle, touch the plug with wet hands, rest on a hot surface, or come into contact with oily liquids.



7. Always use a soft brush to clean the coffee grinder. Do not use water or soap for cleaning.



 
3. Do not let children play with the coffee grinder.



8. Do not open the bean hopper lid until the grinder has come to a complete stop.



 4. Make sure the coffee grinder is never turned on when empty of beans.



9. When the power cord is broken or damaged or the plug-in part becomes loose, do not operate it.

 


5. To prevent overheating, do not grind for more than 3 minutes; and let it cool down for 10 minutes.



10. The appliance is for household use only.


3 Product Introduction

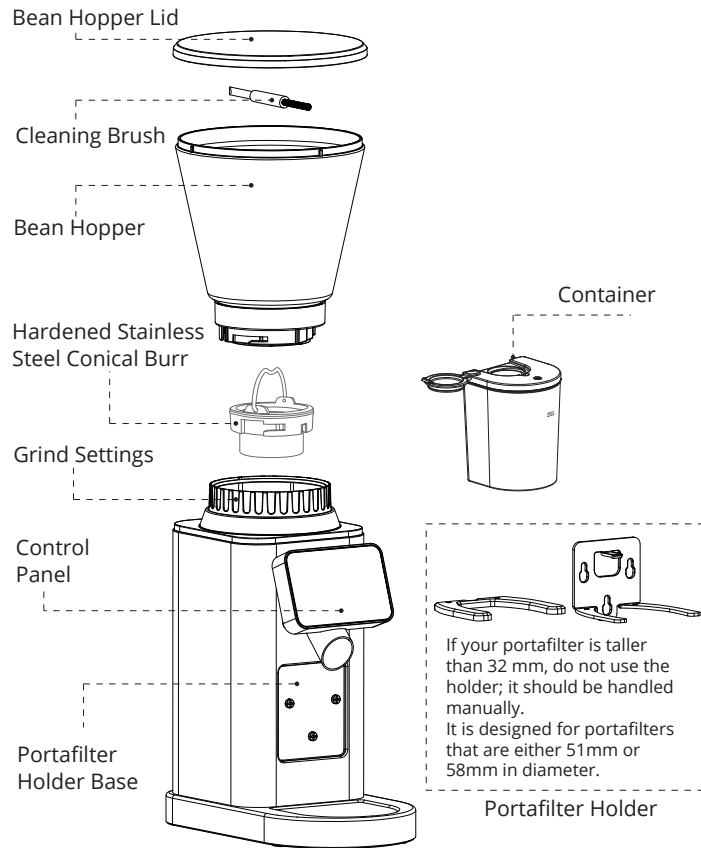

Use the cleaning brush for routine cleaning of the bean hopper and the grinding chamber.

4 Preparation

 4-1 Clean the Parts

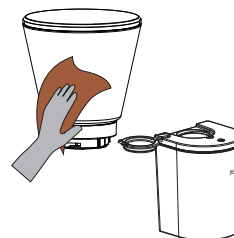

Rinse and thoroughly dry the hopper and container.

 
Check that the grinding chamber is dry and clear of any residue.

4-3 Pour the Beans




Fill the hopper with coffee bean.

4-2 Assemble the Hopper

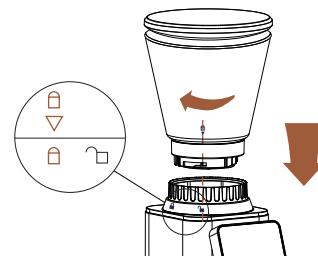

Rotate the hopper and secure it until you hear a "CLICK" sound.

 4-4 Set the Grind Size

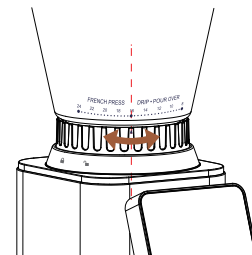

Rotate the hopper to set the grind size.

1. The coffee grinder is only suitable for grinding coffee beans. Make sure that there are no other objects or food inside the appliance.
2. To ensure that the grinder works properly, do not use caramel coffee beans. Please do not fill the bean container with ground coffee.

5 Operation Instruction

5-1 Power Connection

- Connect the coffee grinder to a suitable power supply.
- Prevent the cable from dangling freely (to avoid tripping).
- Do not use this product if the machine is not operating normally, or if it is visibly damaged.

5-2 Control Panel

 


5-3 Product Usage

STAND BY

Stand-by Mode

1. The coffee grinder is in Stand-by Mode after turned on.
 2. Pressing + or - directly to initiate the time function.
 3. Use + and - buttons to set the preferred grinding time.
Hold down the button for quick scrolling.
 4. Press ► button to start grinding.
- Time setting range: 1-40 sec.

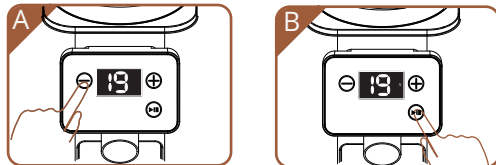

Cup Setting (American Coffee)

1. Keep pressing the button to set the cup number by twos.
2. Press ► button to start grinding.

Cup setting range: 2-12 cups.

Recommended: 2-8 cups.



1-Shot / 2-Shot Setting (Espresso)

1. Press the 1-Shot or 2-Shot button as you like.
2. Use + and - buttons to set the preferred grinding time.

Hold down the button for quick scrolling.



3. Press ► button to start grinding.

Setting range: 1-shot: 0.5-20 sec; 2-shot: 10-30 sec.

Recommended: 1-shot: 7-8 sec; 2-shot: 14-16 sec.



1. The grinding can be stopped at any time by pressing the ► button.
2. The grinder will switch off if left idle for 150 seconds.

5-4 Tips for Use

	Espresso	Pour-Over, Filter Coffee, Cold Brew	French Press
Suggested Grinding	Fine	Medium	Coarse
Grind Size	1-16	16-32	32-48



The following tips for use can help you make better coffee ground:

- ★ Fresh beans will yield the best flavor and aroma.
- ★ Only fill the bean container with the quantity of coffee beans that you intend to use in the near future.
- ★ The amount of grinding needed is determined by the quantity of coffee and how it will be prepared. As you become more familiar with it, you will uncover the setting that caters to your taste, brewing technique, and individual coffee-making preferences.

5-5 Tips for Coffee Beans

Choose your beans wisely. It is best to use premium whole beans from a trusted brand or roaster.

Arabica beans provide the best flavors and have less caffeine and while Robusta beans are easier to grow and less expensive, they have less flavor and higher caffeine content. Robusta beans are sometimes used in blends to add a particular bitterness to the brew.

Beans can be roasted very lightly to provide a smooth aromatic taste or roasted dark to provide stronger flavors, and anywhere in between.

A good roaster will be able to describe the flavors that the beans will impart to your brewed coffee.

Note: Experiment with different beans and different roasts to identify one or several that suit your tastes.

★ Air, light, and moisture are damaging to the delicate oils that give the coffee beans their great flavor.

★ Buy your beans in small batches to always have the freshest possible beans available.

★ Store the coffee in an opaque, airtight container and keep in a cool dry place.

6 Safety Usage

- Do not operate the appliance if it is damaged. Send it to the nearest authorized service facility for inspection and repair.
- This appliance is intended for use up to a maximum height of 2000 meters above sea level.
- Do not touch any charged part and rotating parts of the appliance, which may cause injury.
- Be sure to unplug the plug from the wall socket when not using the appliance or before cleaning it; please cool the parts before installing or removing them.
- It is only allowed to use the professionally installed power socket to operate the appliance with a correct voltage. Do not use an extended power cord.
- Do not use any damaged cable or plug for operating the appliance. If its power cord is damaged, it is a must to entrust the manufacturer or its service agency or a similar professional for replacement in order to prevent any danger.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- The appliance can be used only with the supplied base.
- Be sure not to operate the appliance on any uneven surface.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- If you intend to render the appliance obsolete, it is forbidden to discard it at will; please first disconnect its power supply and then send it to the officially designated garbage dump.
- The use of any accessory not recommended by the electrical appliance manufacturer may cause fire, electric shock or personal injury.
- Do not hang the power cord on the edge of table or counter, or make it contact any hot place.
- Do not place it nearby a position with hot air or an electric stove or in a heating oven.
- In case of any damage caused by improper use or failure to comply with these instructions, we will not undertake any responsibility.

7 Technical Specification


CG209	
Voltage	220-240V~ 50-60Hz
Power	150W
Product Size	195x115x350 mm 7.7x4.5x13.78 inch

8 Cleaning & Maintenance

Before you clean the appliance, make sure to disconnect the mains plug.


DO NOT immerse the housing in water.

 For the best coffee results, we recommend that you clean the bean hopper, conical burr and grinding chamber regularly. Clean when the grinder is completely empty.

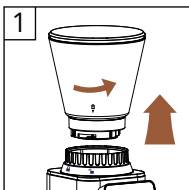



Clean the bean hopper:

 1. Rotate the hopper anti-clockwise to unlock it.
 2. Remove it from the machine.
 3. Remove coffee residues from the bean container with a soft, damp cloth.
 4. Dry it thoroughly before assembling.
- DO NOT put it in a dishwasher.

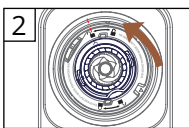

Clean the conical burr:

  1. Lift up the handle.
 2. Rotate the conical burr anti-clockwise and remove it from the grinding chamber.
 3. Clean it with the brush provided. Keep it away from water.
- DO NOT put it in a dishwasher.

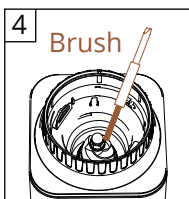

Clean the grinding chamber and grind outlet:

1. Clean the grinding chamber and grind outlet with the brush provided.
 2. Remaining coffee residues can be shaken out or removed by a vacuum cleaner.
- DO NOT put the grinder in a dishwasher or immerse it in water.

9 Troubleshooting

Trouble	Possible Cause(s)	Solution(s)
Product does not work	- The power cord may not be plugged in, or it has poor contact - The power switch may not be turned on	- Plug in the power and make good contact - Press the button to power on
The appliance fails to work after being used for a period	Grinder is blocked by foreign objects	Unplug the grinder and remove the objects by as per the cleaning instructions
The quantity of ground powder is either very small or nearly absent	The grinding chamber or the grind outlet is clogged	Clean the grinding chamber and grind outlet with the brush provided.
Flying powder around the grind outlet	Static cling due to coffee residues accumulated	Clean the grinding chamber and grind outlet with the brush provided.
Error Code E1	Grinder overheats	Turn it off and let it cool down for 10 minutes
Error Code E3	The bean hopper is not installed correctly	Follow the user manual and reinstall it.

If after reviewing the Troubleshooting section, the problem is not resolved, do not attempt to repair or disassemble the unit yourself.

Please contact the after-sales service for assistance.