 


ANLAN

Wireless Hair Straightener Comb User Manual



Thank you for purchasing ANLAN Hair Straightener Comb. Please read this manual carefully before using it to ensure proper use and safe. In addition, this manual is also available as a guarantee, please safe keeping.

ANLAN BRAND PROMISE

Exclusive Customer Service

Official email: service@anlan.co
12 hours online service on weekdays.

1 Year Warranty

30 days no reason to return and refund
1 year return and refund with product quality problems.

Quality Guarantee

Professional R&D team
9 test processes before shipment.

 service@anlan.co

We can answer all the following questions

- ✓ How to clean and maintain Anlan products
- ✓ Regarding returns, changes, or repairs
- ✓ Packaging damage
- ✓ Product usage and installation issues
- ✓ Dissatisfaction or improvement suggestions for products or services
- ✓ New products

Thank you for choosing Anlan. We look forward to working with you to improve our quality


Warm Tips



- Please use this product at the rated voltage to ensure that the plug is fully inserted, otherwise it may cause personal injury such as electric shock.
- Do not use this product in the bath or shower. Do not use this product near a bathtub, shower, washbasin or other utensils containing water.
- Do not use if you are slow to feel the heat, as it may cause burns or scalds.
- In the following cases, please unplug the power first, otherwise it may lead to an accident or even personal injury:
 - When not using this product
 - The product is working abnormally
 - Before cleaning
 - After each use
- Do not use this product when your hands are wet, or on top of a bathtub, shower, or washbasin filled with water. If the product accidentally falls into the water, please unplug the power immediately.
- When this product is connected to the power supply, it must be kept away from the water environment.




Product Introduction

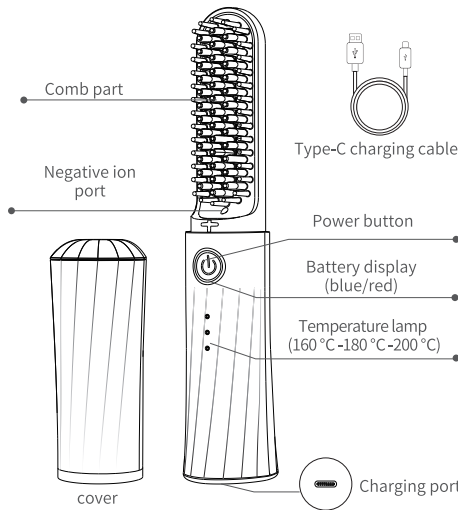

Specification


Product name	Wireless Hair Straightener Comb
Product model	KR024
Product weight	211g
Product size	198*35*33mm
Temperature	3 level (160°C-180°C-200°C)
Input	5V==2A
Power	46W
Battery capacity	4000mAh
Smart timer	20 min
Charging time	About 2 hours
Using time	About 40 min (max heat)
Negative ion emitter	2 million launched
Waterproof performance	Not waterproof

Packing included

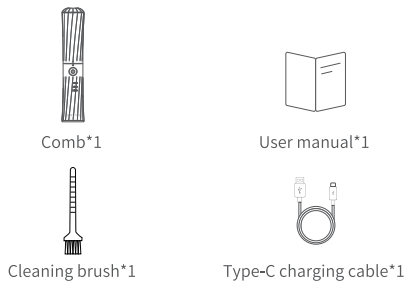

Recommended Operating Instructions

- Power on/off operation: Press and hold for 3 seconds to turn on or off the power of the device.

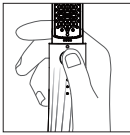

- Temperature adjustment: Short press the button to switch levels.




※The flashing white of the level light is a sign of preheating or heating up. After reaching a certain temperature, it will automatically turn white.

- Hair styling
Take a small amount of hair, comb it slowly, and repeat.
※The effect of use varies by hair type.



- Turn off the power
After use, press and hold the power button to turn off the power. Store after the main unit has cooled sufficiently.

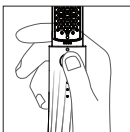


About How To Use

Please wash your hair before use to remove tangles, looseness, etc. Using basic styling agent or water to make the hair slightly moist will make it easier to style.
※If the hair is too wet, it may cause burns or damage to the hair. Please moisten the hair lightly.


【Straight Hair】

Take a small amount of hair bundle and comb it from the inside of the hair towards the ends, then comb it from the outside towards the ends as well.

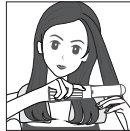


【Curly Hair Ends】

Take a small amount of hair and press the brush firmly against the hair. At the same time, turn the brush towards the ends of the hair and rotate the brush half a turn where you want to curl it. If it is curled inward, rotate the ends of the hair half a turn, if it is curled outward, rotate the ends of the hair half a turn.

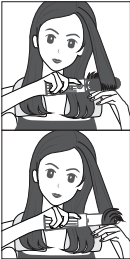

【Top Hair Fluffy】

Take a small amount of hair bundle and pull the brush up half a turn from the root of the hair.

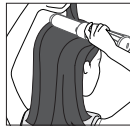

【Bangs Curl】

Pull the bangs forward from the inside while rotating the brush half a turn.



Note

- Do not use immediately after hair coloring. If the pigment or ingredients of the hair coloring agent adhere, the brush part may be damaged. Please use after 2 to 3 days.
- If you dyed your hair with a hair manicure, rinse it thoroughly with shampoo and dry your hair thoroughly before using. If your hair is wet, it will fade and pigments may adhere and damage the product. If you have straightened hair, do not use it as it may damage your hair.
- Do not use in combination with household perm agents or those labeled as "ammonium thioglycolate" or "cysteine." It may damage the cuticles.
- Do not use on wigs or false hair. There is a risk of deterioration, discoloration, and deformation.
- Do not use on severely damaged hair.

About Charging

- When using for the first time or when not using for a long time, please charge again before using. Also, for battery protection, please charge once a month when not using for a long time.
- You can use the included USB cable, or you can use a computer or mobile power supply to charge. When charging with a wall socket, please use a socket adapter such as a mobile phone to charge with the cable included with the comb.
- It cannot be used while charging. Unplug the cord from the main unit except during charging.
※The main unit may get a little hot during charging, but it is not abnormal.
- When there is a low battery, the battery lamp (red) and the temperature level lamp (white) blink at the same time.
- The battery lamp blinks red during charging. (The brightness becomes stronger from weak.)
- The standard for full charge is about 2 hours. When it is fully charged, the green light of the comb will remain lit.
- Continuous use time is about 40 minutes. The comb has an automatic power-off function, which will automatically power off after about 20 minutes.

About Caring

Press and hold the power switch (⏻) to turn off the power, and after the body has cooled, take care of it.

- Remove hair and dust from the comb with a care brush.
- Wipe off any dirt on the body with a dry, soft cloth.
- If it is difficult to remove dirt, soak neutral detergent diluted with water or soap water in a soft cloth and wipe it off with a firm squeeze.

Notice

- Please do not wash with water. It may cause malfunction.
- Do not leave in places where water splashes, such as bathrooms, or where there is a lot of moisture. (Cause of growth of mold and bacteria / cause of failure due to condensation and rust inside the main body.)
- Do not store or use in a place within reach of infants.
- Do not use alcohol, thinner, benzene, polish remover, etc. (It may cause failure, cracking of parts, discoloration, etc.)
- Do not leave hair dressing or hair stains on the brush part. The brush part may change color or cause malfunction.

Q&A

- Q: Can I use it immediately after straightening my hair (curly hair correction), dyeing my hair, and manicure?
- A: Straight hair (curly hair correction): Do not use, otherwise it may damage the hair.
After using the hair dye: Adhesion of the pigment and ingredients of the hair dye to the hair may damage the brush part. Please use after 2-3 days.
For hair manicure: Rinse thoroughly with shampoo and dry your hair thoroughly before use.

- Q: What effect will the coating peeling off the brush part have on the hair?
- A: A: If the coating peels off, it may damage the hair due to poor sliding.
- Q: I feel that the machine has an unpleasant smell
- A: There will be a slight smell occasionally after purchase, but it will gradually reduce with use. All goods have been inspected at the time of shipment, and there is no adverse effect on the human body, please don't worry.

Recycling



This product uses lithium-ion rechargeable batteries. Lithium-ion rechargeable batteries are a valuable recyclable resource. When disposing of used products, please take out the lithium-ion rechargeable battery according to the regulations in your area. Take it to the recycling partner store or a specific collection window.