

# ANMITE A160W04 Φορητή οθόνη 16"

Anmite · EAN 6920233416581

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

## MONITOR

support@anmite.com User Manual

RoHS

Before using the installation, please read the manual carefully.

Table of Contents

1. Using the Monitor

01

Using the On-Screen Display (OSD)

05

Using the Mode

11

Duplicating/Extending/Second Screen

12

Supported Devices and Models

14

3. Troubleshooting

15

Troubleshooting

15

support@anmite.com support@anmite.com

01. Using the Monitor 3. Laptop/PC with (mini) DisplayPort, e.g., Surface Pro

Connecting the Monitor

Connection of Laptop/PC Adapter (Mini)DP to HDMI

1. Laptop/PC with Type-C port HDMI Cable

Laptop Portable Monitor

Type C Cable

Laptop Portable Monitor Type C Cable

Power and Display NOTE: Use a wall charger to power on the monitor and avoid

black or flickering screen when the power is insufficient.

NOTE: Use a wall charger to power on the monitor and avoid black or flickering screen when the power is insufficient.

Adapter (Mini)DP to HDMI

HDMI Cable Portable Monitor

Type C Cable Laptop Usb To Type C

Laptop Portable Monitor Usb To Type C

Power and Display

The Type-C port of some devices does not support display and is only used for NOTE: The (Mini)DP to HDMI adapter is not included in the package.

charging. If you see the message "No Cable", please contact us for ( support@anmite.com ) assistance.

( support@anmite.com )

2. Laptop/PC with HDMI port Connection PS5/PS4/Xbox

HDMI Cable HDMI Cable

Laptop Portable Monitor Portable Monitor

Type C Cable Type C Cable

NOTE: Use a wall charger to power on the monitor and avoid NOTE: Use a wall charger to power on the monitor and avoid black

black or flickering screen when the power is insufficient. or flickering screen when the power is insufficient.

HDMI Cable

Usb To Type C

HDMI Cable Portable Monitor

Laptop Portable Monitor Usb To Type C

01 02

support@anmite.com support@anmite.com

Connection Switch Connection iPhone with Lightning to HDMI adapter

Type C Cable

Portable Monitor Usb To Type C

Portable Monitor

## **Type-C Power**

NOTE: The Switch console is unable to provide sufficient power for the monitor. Use the original PD charger of the Switch console and connect it to the Type-C port of the monitor. It may not work with other chargers. (If other PD power supplies are used, it is recommended to use a PD power supply of 65 W or greater.) 3. Connect the monitor to the adapter using the cable

Do you want

Connection of Android Phone to HDMI. to trust  
the computer

Do you want

to trust this  
computer? Yes

Type C Cable Yes

Phone with Portable Monitor Usb To Type C

Android

NOTE:

- Phones may not provide sufficient power for a high-brightness monitor. Connect the power adapter to the Type-C port to turn on the monitor, and then connect the Type-C cable linked to the phone to the second Type-C port.
- Some phones, such as Google Pixel, do not support video output. 1. Use the charger to power the adapter. 2. Connect the adapter to your iPhone.
- Android phones that are not fully compatible must be used with a Phone to HDTV cable to achieve the same screen effect.

WARNING: Also connect the power charger to the Lightning port of the adapter to turn on the adapter and enable its operation.

03 04

support@anmite.com support@anmite.com

Using the On-Screen Display (OSD) Picture

Brightness/Volume Menu

Picture

Brightness Volume

Brightness 100

Contrast 50

Black Level

Brightness 50

OSD

Volume Game Mode Standard

50 50

- Scroll up using the Menu button to open the brightness menu. - Brightness: Allows adjustment of the brightness or luminance of the backlight (Range: 0–100).
- Scroll down using the Menu button to open the volume menu. - Contrast: Set the contrast between objects and the background (Range: 0–100).

Main Menu - Black Level: Adjust the black level of the monitor (Range: 0–100).

- Game Mode: Set the game mode: Standard, RTS, FPS.

Picture

OSD Settings

Brightness 100

Contrast 50

Black Level

50 OSD Settings

Game Mode Standard

Horizontal Position 100

- Press the Menu button to open and display the OSD menu. Vertical Position 100
- Scroll up and down to switch between options. Menu Time 10
- Press the Menu button to select the highlighted item. Transparency 0
- Scroll up and down to select the desired parameter.
- Press the Menu button to enter the options bar.
- Press the Exit button to return to the previous menu without saving the current settings, or press the Menu button to confirm the settings.

05 06

support@anmite.com support@anmite.com

Options

- Horizontal Position: Set the horizontal position of the menu window.
- Vertical Position: Adjust the vertical position of the menu window. Options
- Menu Time: The menu window disappears automatically after a few seconds.
- Transparency: Set the level of transparency of the menu window.

Source Off

Language Off

Aspect Ratio Off

Temperature Volume

50

Picture

Temperature 6500 - Source: Select the signal source.

Red 50 - Language: 10 languages are available.

Green

50 - Aspect Ratio: Set the image scaling (16:9 / 5:4 / 4:3).

Blue - Volume: Adjust the volume while displaying the image (Range: 0 to 100).

- Temperature: Adjust the screen tint to 9300K, 7500K, Advanced

6500K, 5800K, RGB, or User.

Advanced

Auto

Ultra HDR Mode

Eye Protection Off

3D Sound Off

Crosshair Off

07 08

support@anmite.com support@anmite.com

Color Effect

- Ultra HDR Mode: Turn HDR on/off or automatic

- Eye Protection: Turn eye protection on/off Picture

- 3D Sound: Turn on/off 3D sound

- Crosshair: Turn on/off crosshair

Resetting Saturation 50

Hue

50

Sharpness link

Resetting Wy

Resetting

Automatic color adjustment

Automatic image adjustment

- Saturation: Range 0-100

- Hue: Range 0-100

- Sharpness: Turn sharpness on/off

- Reset: Reset all display settings

Information

Information

HDMI

3840x2160@30.0Hz

H:67.5KHz PCLK:296.8MHz

09 10

support@anmite.com support@anmite.com

Using the Duplicate/Extend/Print Second Screen Options Mac OS

Windows - Select Apple menu > System Preferences, click Displays. - Click the Arrangement tab

- Right-click on the desktop and select "Display Settings". - Make sure the Mirror Displays checkbox is unchecked in extension mode or checked in mirror mode. - Scroll down to the "Multiple Displays" option. - Select "Duplicate these displays", "Extend these displays", or "Show only on 2" depending on the mode. Built-in Retina Display Search

Multiple Displays

Display Arrangement Color Night Mode

Duplicate these displays To rearrange displays, drag them to the desired position. To move the menu bar, drag it to another display. Extend these displays

Show only on 1

Show only on 2

How to extend the second screen to the left

- Right-click on the desktop and select Display Settings. Mirror Displays

“

- In the top section of this window, you will see an image of each screen with numbers.

AirPlay Display Off

√Show mirroring options in the menu bar when available

- Hold down the left mouse button and drag this image to the opposite side, then release the mouse cursor. - Click Apply. “ ” Using Portrait/Landscape Mode

Rearrange Displays

Select the display below to change its settings. Hold (or select) the display, then drag to rearrange it.

2 1

Apply Cancel Identify Detect

11 12

support@anmite.com support@anmite.com

Mac OS Supported devices and models

- Select Apple menu > System Preferences
- Hold down Cmd+Option(Alt) and click "Displays" Phone
- Look for the newly visible dropdown menu "Rotation" Brand Model

SAMSUNG DEX, S8/s9/s10/s20 Series, Note 8/Note 9/Note 10 Series

HUAWEI Mate 10/Mate 20/Mate 30 Series, Mate RS, P20/P30/P40 Series

Display Color

Razer Razer Phone, Razer Phone 2

Resolution: line for display

Default

Scaled HTC

U Ultra

Rotation ☐ Standard

LG G5, G6, G7

Frequency

90°

refresh rate

180°

ASUS

ROG Gaming Phone

Underscan 270°

More Brands

Turn Off More Updating

windows Laptop

- Right-click on the desktop and select Display settings Brand Model

MacBook 12 in, MacBook Pro 2016/2017/2018, MacBook Air 2018,

- Scroll down to the "Display orientation" option Apple iPad Pro 2018

- Select "Horizontal" or "Vertical" Chromebook Pixels, Pixelbook Pen

Google

Savior Y7000, Savior Y7000P, Savior Y9000K, YOGA 6 Pro. System

Lenovo

Display orientation ThinkPad X1 Carbon, Yoga 5 Pro, Miix 720

G3 Series, G5 Series, G7 Series, Inspiron 5000, Inspiron 7000,

DELL

Horizontal XPS 13, XPS 15

Notifications and actions

EliteBook 1050 G1, EliteBook Folio G1, Omen 4 Pro, Pavilion X2

Vertical HP

Surface Book 2

Focus Assistant Horizontal (flipped) Microsoft

Vertical (flipped)

Lingyao 3, U306, U321 Series, U4100, ROG Series

ASUS

Power and sleep Extend these displays

MateBook D

HUAWEI

Storage

Set this as my main display Razer Blade Stealth

More Brands Updating

13 14

support@anmite.com support@anmite.com

03. Troubleshooting Monitor flickers or continuously restarts

1. Flickering or continuous restarting is usually caused by

If you have any issues, please contact us. insufficient power.

(Recommended PD power supply of 30 W or higher). ( support@anmite.com )

If the monitor and device are connected with a single Type-C cable, some

Black screen or no signal laptops and phones may not provide sufficient power. Connect the power supply

to the outlet to ensure proper power supply. 1. Use the original Type-C 3.1 signal cable that we provide. If connecting via the USB-C port on the laptop:

Note: The Type-C 3.0 data transfer cable does not support video signal. One USB-C cable can transmit both power and signal (?)

2. Connect the power adapter to the Type-C port, wait for the screen to display single-cable dual system□ ), which allows powering the monitor directly from the laptop.

?no signal□ , then connect the USB-C cable to another Type-C port or

HDMI cable to the Mini HDMI port. If connecting via HDMI:

3. For devices such as HP EliteBook or Acer Aspire, some A connection with two cables is required, as the HDMI cable transmits

models do not support video output, only charging. Check if your only video signal and requires additional power.

laptop or phone supports Type-C 3.1 video output or Thunderbolt 3.0. Choose one of the following methods:

4. Set the display mode in Windows to □ Extend□ . a) Power from the power adapter connected to the outlet (recommended PD 30W or more).

5. Connect the monitor to another device to check if it works properly. b) Power from the USB port of the computer via a separate USB cable (insufficient power may cause dimming, flickering, or

6. Contact us for assistance. ( support@anmite.com ) black screen. Recommended PD 30W or more).

Note: Not all Android phones support video transmission

via the Type-C port. Many devices use the Type-C port only for charging or data transfer. To enable wired screen mirroring, the smartphone

How to connect this monitor to a laptop without an HDMI port (e.g., Microsoft Surface Pro, must support Type-C 3.1 and Thunderbolt 3.0 DisplayPort Alt Mode or MHL.

Required adapter (mini) DP to HDMI.

( support@anmite.com )

2. Contact us for assistance.

( support@anmite.com )

The stand is unstable □ how to use the monitor cover as a stand? Detailed instructions can be found on page 3. 15 16

support@anmite.com support@anmite.com

Before connecting your phone to the portable Type-C monitor Does this monitor work with an iPad? make sure that both of the following conditions are met: Yes. If the iPad port is Type-C, the monitor will work

correctly with a single Type-C cable. For iPads with

1. Your phone must support Type-C 3.1 video output or a Lightning port, a Lightning-HDMI adapter is required

Thunderbolt 3.0. for the monitor to work correctly. 2. Your phone must be compatible with

DP Alt mode or support the MHL protocol. ( support@anmite.com )

How to save brightness settings? If the phone does not support DP Alt Mode or MHL, the Type-C port will The monitor automatically saves all settings

not transmit video signal, even when connected to while using Type-C or HDMI connection.

In

the display. The device will display the message "No Signal" . Check the case of a single Type-C connection for power and

your device's specifications to ensure compatibility. In displaying, if the device does not provide sufficient

power, the monitor automatically resets the brightness to 30. Some phones have Type-C ports that do not support display functions, only charging. For example, Google Pixel phones do not support video output through the Type-C port. A cable Android™ HDTV is required for screen mirroring. See page 6 for instructions. ( support@anmite.com )

How to extend the second screen to the left? This device complies with part 15

1. See instructions on pages 11~ 12. of FCC regulations. Operation is subject to two conditions:

2. Contact us for assistance. ( support@anmite.com ) (1) The device must not cause harmful interference. (2) The device must accept any interference, including interference that may cause undesired operation. Does the monitor work with Apple iPhone? Yes. To make the iPhone work with the monitor, a Lightning-HDMI adapter is required. ( support@anmite.com )

17 18

## Warnings and safety information

All information regarding product usage can be found in the user manual. Before you start using it, familiarize yourself with its content and follow the instructions contained therein.

Also, review the following information before use:

### Usage warnings

#### Risk of eye damage:

- Avoid prolonged viewing of the monitor without breaks.
- Position the monitor at an appropriate distance and at eye level to minimize strain on the neck and eyes.

Risk of overheating:

- Ensure proper ventilation of the monitor to avoid overheating.
- Do not block ventilation openings and avoid placing the device in enclosed spaces that may restrict airflow.
- Do not use the monitor near heat sources, such as radiators, or in areas exposed to direct sunlight.

#### Risk of electric shock:

- Ensure that power cords are in good condition. If any damage is noticed, immediately stop

using the monitor and contact service. ●Connect the monitor only to appropriate grounded outlets and use cords provided or recommended by the manufacturer. Hazard to children:

●The monitor is not intended for children and should not be used as a toy. ●Ensure that the monitor is securely placed on a flat surface or mounted on a wall to prevent it from tipping over, which could pose a risk to children and pets. ●The product may contain elements that pose a risk of cuts or choking. Risk of product damage:

●Do not attempt to disassemble or modify the monitor. This may lead to irreversible damage. ●Avoid exposing the monitor to shocks, drops, impacts, and other factors that may cause damage. ●Do not place heavy objects on the monitor or its base. ●The monitor screen is delicate and prone to mechanical damage. Avoid pressing it with fingers, tapping, or striking to prevent it from cracking and being permanently damaged. ●Do not move the monitor by grabbing the screen. Always use the base or the frame for this purpose. ●Do not expose the monitor to contact with water. Risk to the user:

●Exercise caution when adjusting the position of the monitor. Avoid placing hands in moving mechanisms, such as the stand or mount, to prevent pinching fingers.

●Place the monitor on a stable surface to prevent it from tipping over, which could cause damage to the device or injury to the user. ●In case of screen damage, avoid contact with sharp glass fragments. Use protective gloves when removing the damaged monitor or its components. Wireless Connectivity

Data Protection:

●If the monitor supports Wi-Fi or Bluetooth connectivity features, ensure they are secured with a strong password. ●Regularly update the device's software to avoid security vulnerabilities. Access Management:

●Limit access to wireless features exclusively to authorized devices. ●Monitor the list of connected devices and remove those that are no longer needed. Information on Proper Use Installation and Configuration:

●Place the monitor on a stable surface or mount it on the wall using an appropriate bracket compatible with its specifications. ●Avoid placing the monitor on the edges of furniture where it may be prone to accidental tipping. ●Ensure that power and signal cables are properly connected. ●When mounting the monitor on a wall bracket or adjustable arm, ensure that the locking mechanisms are securely fastened to avoid sudden movement or tipping of the monitor. Maintenance, Storage, and Cleaning:

●Clean the monitor screen with a soft cloth. Do not use strong chemicals that may damage the screen. ●Store the monitor in a dry place, away from moisture, dust, and extreme

temperatures that may affect its performance. Safety During Use:

- Avoid using the monitor for extended periods in a dark room without additional lighting to reduce eye strain.
- Do not manipulate cables or other components of the monitor while the device is powered on to prevent the risk of short circuits or damage.

Additional Precautions  
Service and Repairs:

- If you notice any malfunction of the monitor, immediately disconnect it from the power supply and contact an authorized service center.
- Do not attempt to repair the device yourself to avoid further damage and loss of warranty.

Safe Disposal:

- Used monitors must be disposed of in accordance with local regulations regarding electronic waste.
- Do not throw the monitor in municipal waste. Take it to an electronic equipment collection point. If you need additional product information, contact customer service (email: [hurt@innpro.pl](mailto:hurt@innpro.pl), website: <https://innpro.pl/>) or another specialist.

Environmental Protection

Used electronic equipment marked according to the European Union directive must not be placed together with other municipal waste. It is subject to selective collection and recycling at designated points. By ensuring its proper disposal, you prevent potential negative consequences for the natural environment and human health. The collection system for used equipment complies with locally applicable environmental protection regulations regarding waste disposal. Detailed information on this can be obtained from the municipal office, cleaning facility, or the store where the product was purchased. The product meets the requirements of the so-called New Approach directives of the European Union (EU) regarding safety, health protection, and environmental protection, identifying hazards that should be detected and eliminated. This document is a translation of the original user manual created by the manufacturer. Detailed information about the distributor/manufacturer's warranty conditions is available on the website <https://serwis.innpro.pl/gwarancja>

The product should be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and scope. In the absence of information about necessary periodic or service maintenance actions in the user manual, the physical condition of the product should be assessed regularly, at least once a week, against that of a physically new product. If any deviation is detected or identified, urgent maintenance (cleaning) or service steps should be taken. Failure to perform proper maintenance (cleaning) and respond upon detection of a deviation may lead to permanent damage to the product. The guarantor is not responsible for damages resulting from neglect. ANMITE

Shenzhen Anmite Technology Co., Ltd

Room 3, 3F, Factory Bldg 1, No. 3 Dengxi Zone 1st Rd, Bantian Longgang Dist. 518129

Shenzhen, China

support@anmite.com

Responsible entity:

Importer: Name: Anmite

Full name: E-CrossStu GmbH

INNPRO Robert Błędowski sp. z o.o. Address: Mainzer Landstr 69, 60329 Frankfurt am Main,  
Germany

E-Crossstu@web.de

ul.

Rudzka 65c +49 69332967674

44-200 Rybnik, Poland

tel. +48 533 234 303

hurt@innpro.pl

www.innpro.pl