


Smart Video Projector

User Manual

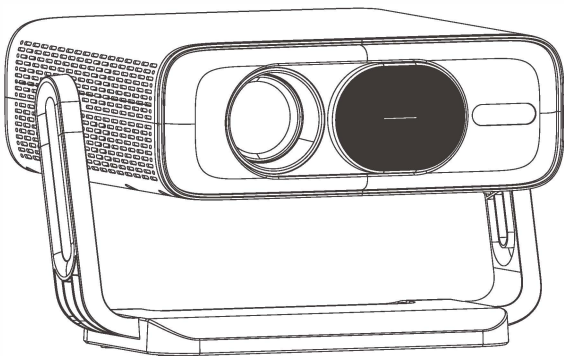

Please read this manual carefully before using the projector.

Contents

Precautions	01
Packing List	02
Product Introduction	03
Remote Control Instructions	04
Operating Instructions	05
Quick Setup	06
Sign In Account	07
Sign In Google Account	08
WIFI Connection	09
BT Connection	10
System And Playback-related Settings	11
Projector Image Settings	12
Input Signal Switching	13
Projection Size/Audio/Video Format	14
Support	15

Precautions

Install

1. For best results, use this unit in a darker room or with the curtains drawn.
2. Please use the machine with care, dropping or impact may damage parts or cause blurred images, Display is abnormal.

Pay Attention To Waterproof

3. This product does not have waterproof function, in order to prevent electric shock and short circuit danger, water should be avoided.
or water splashes, and objects containing liquids such as vases, drinking glasses, etc., should not be placed around the product.

Clean

4. Unplug the power cord first.
5. Regularly clean the case with a damp cloth, neutral detergent can be used; do not use strong detergent or solvent (such as alcohol or thinner).
6. The lens should be cleaned with glasses cloth or lens paper, be careful not to scratch or scratch the lens.
7. Please use a soft brush regularly to clean the vents and speaker parts of the unit, otherwise the ventilation The port will be clogged with dust causing the machine to overheat, causing the machine to malfunction.

Power Supply

8. Please turn off the product after 4 hours of continuous work, and turn off the power for 30 minutes before turning it on again use.
9. Please use the power cord or adapter of the specified specification.
If you need to replace it, please contact the supplier for line replacement.
10. Use the power cord with care and avoid excessive bending; damage to the power cord may result in electric shock and misfire.
11. After use, unplug the power cord from the power outlet.


Warn

12. The disconnecting device for this projector is the appliance input socket, appliance input socket on the product No other objects should be placed nearby to prevent the multimedia projector from being disconnected from the power supply.

This is a Class A product The product may cause radio interference in the living environment, in which case the user may be required to take practical measures against the interference.

Packing List

When opening the packaging box, please check the items inside against the following list. If anything is missing, please contact the seller promptly.

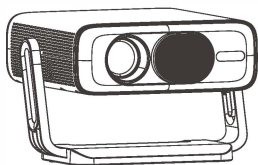


Projector




Remote Control



Manual

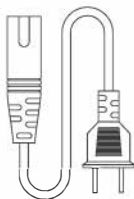

Power Cable

 

HD Cable





Dust-Free Cloth




Cotton Swab

Product Introduction

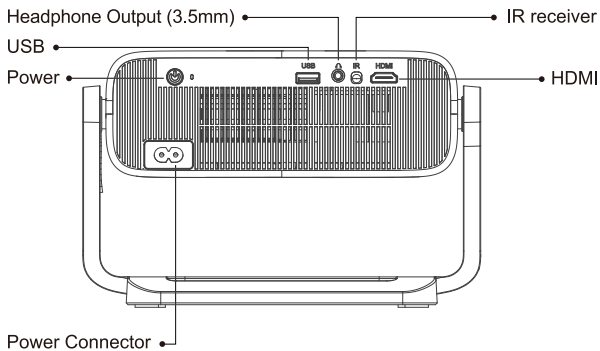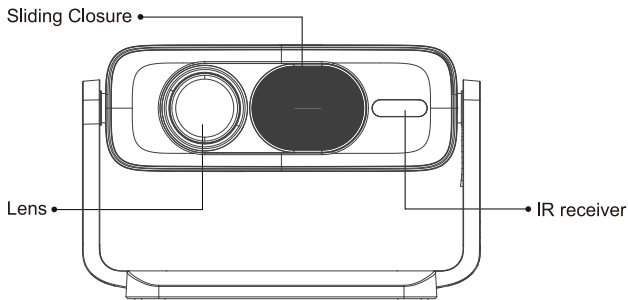


Remote Control Instructions

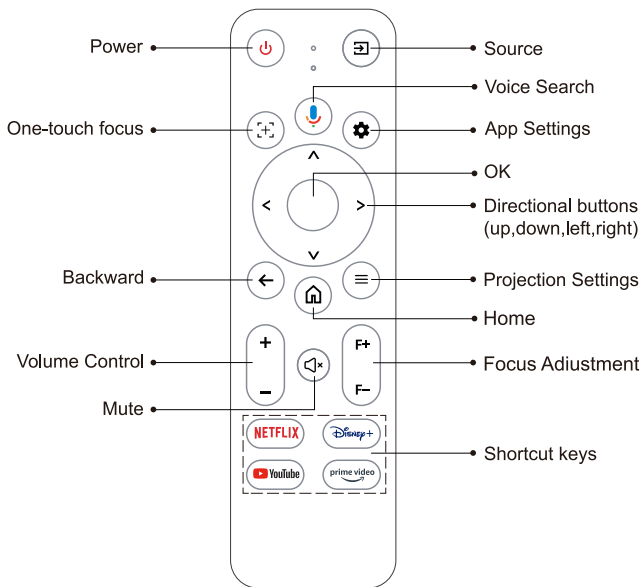

Note:

Please install 2 AAA batteries (not included) into the remote control before use.

Operating Instructions


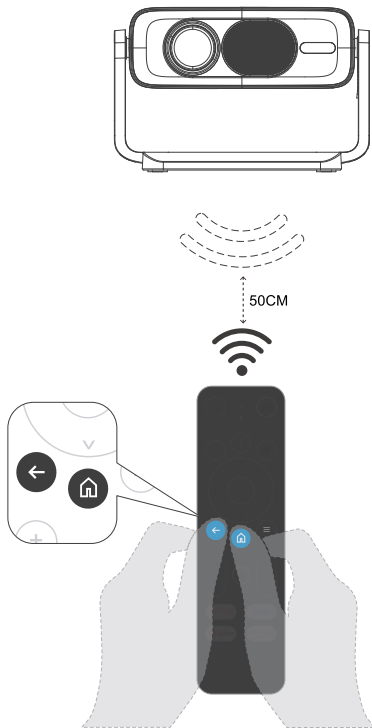


Press and hold the  +  buttons until the remote's indicator light blinks, indicating successful pairing.
Keep remote control near to Projector.

Operating Instructions

Quick Setup



Follow the steps on the screen to choose your preferred language, select your correct region, sign in with your Google Account, or set up basic TV.

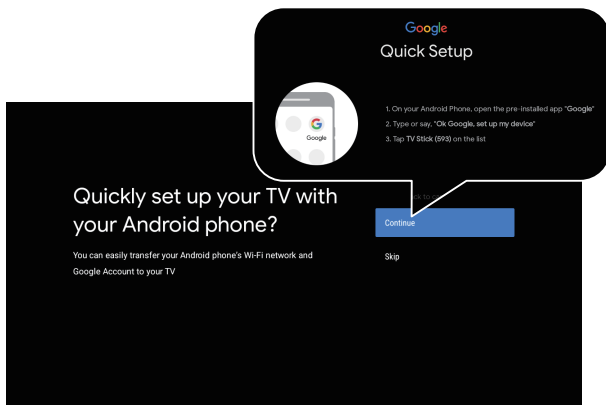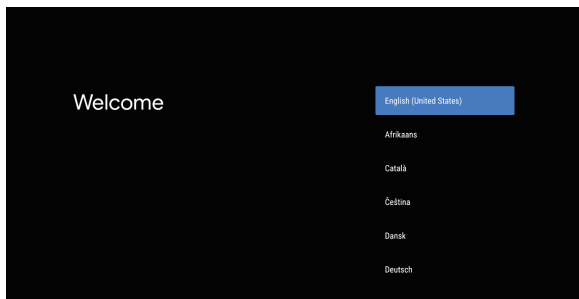

Operating Instructions

Sign In Account



Select the SKIP option, enter the Wi-Fi connection interface, select the Wi-Fi network and enter the password to connect to the network. After the network connection is successful, it will automatically jump to the login or register Google account interface.

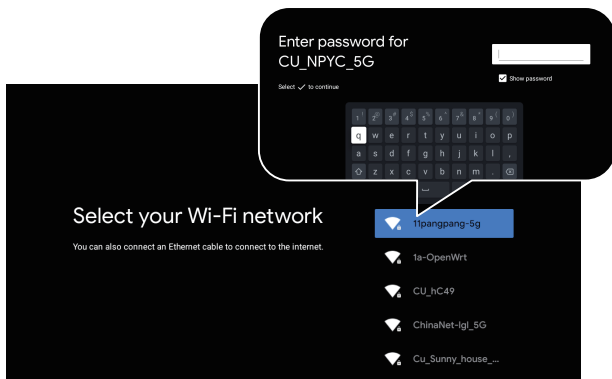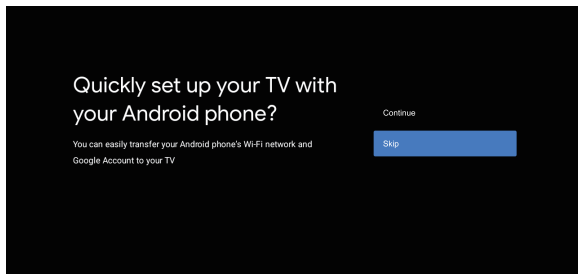

Operating Instructions

Sign In Google Account



Please sign in with your Google Account for a better experience. (The Failure to log in to a Google Account may cause this projector not working properly)

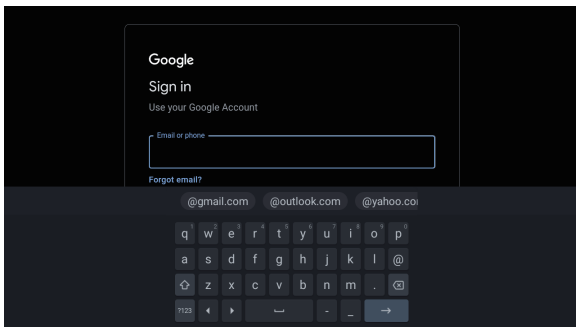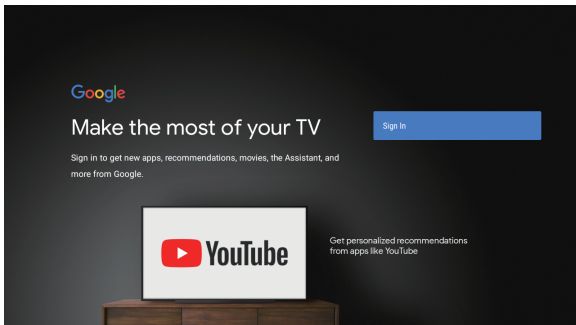

Operating Instructions

WiFi Connection



You can switch between wifi networks by going to the Settings button in the upper right corner of the home page or the Settings button on the remote control-> Settings-> Select Network and Internet.

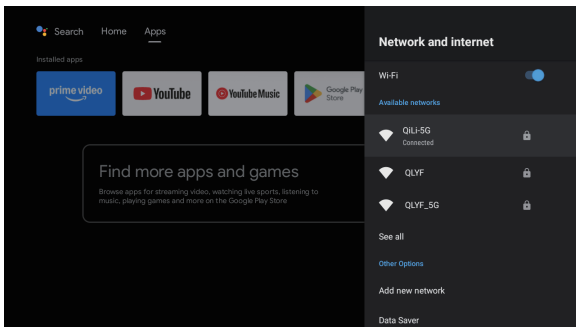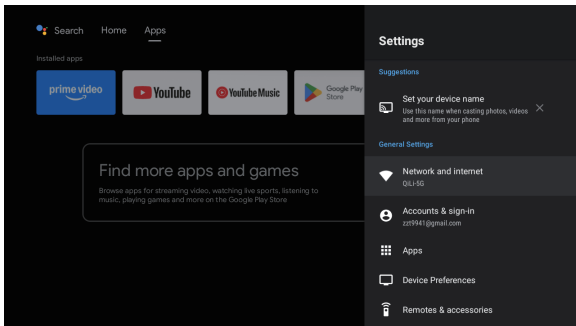

Operating Instructions

BT Connection



The device connects to other Bluetooth devices to play audio. Homepage -> Dashboard -> Settings -> Remotes&accessories>Add accessory to searchingfor your Bluetooth devices.

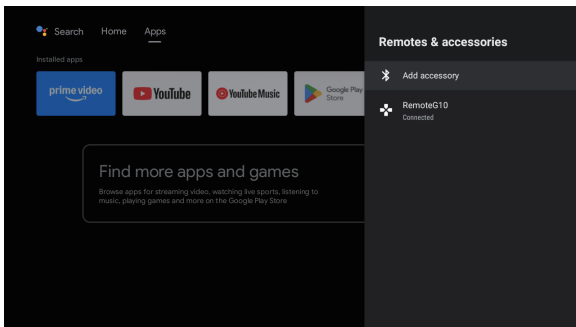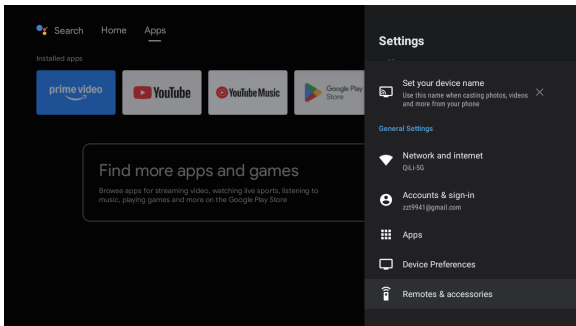

System And Playback-related Settings

Play Basic Settings



Press the (⊞) button on the remote control. Select the "Settings" option from the menu. You can choose sub-options like "Display" or "System." Adjust the settings as needed.

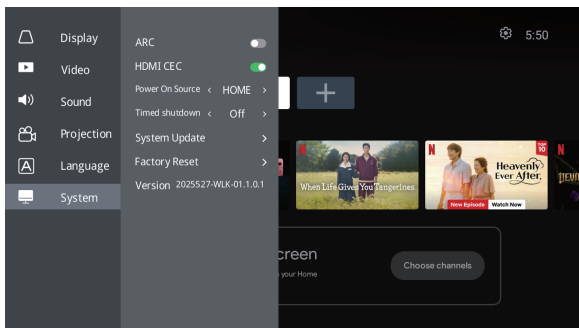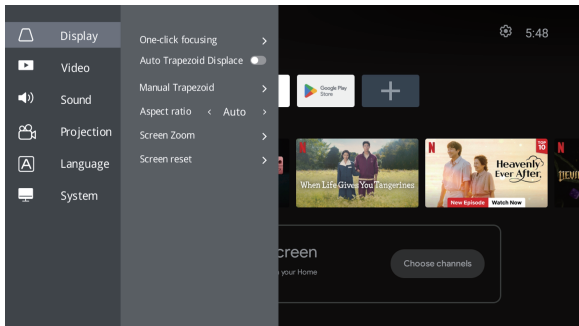


Projector Image Settings

Projection Settings


Press the (⊞) button on the remote control, select “Projection” from the menu, and then choose the projection method based on your installation type.

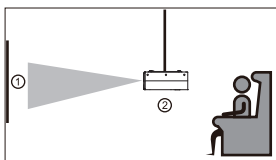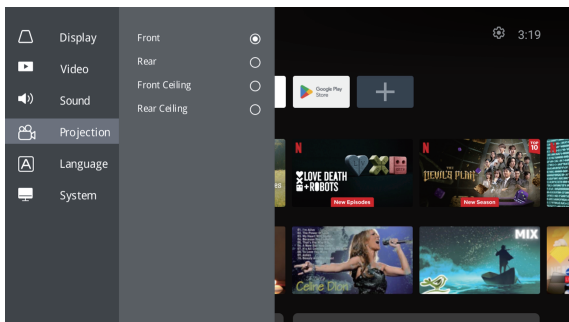


Front projection / ceiling mounting

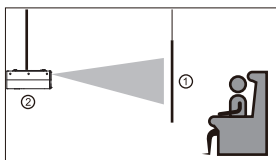

Rear projection / ceiling mounting

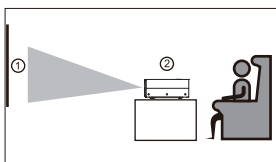



Front projection

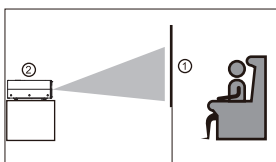

Rear projection

Input Signal Switching

Press the () button on the remote control and select the corresponding output terminal from the list that appears.

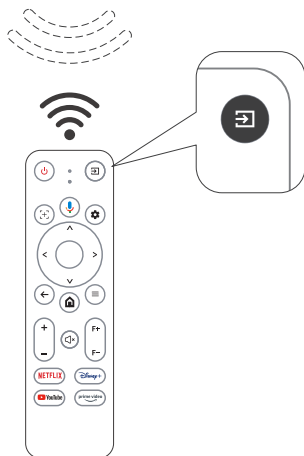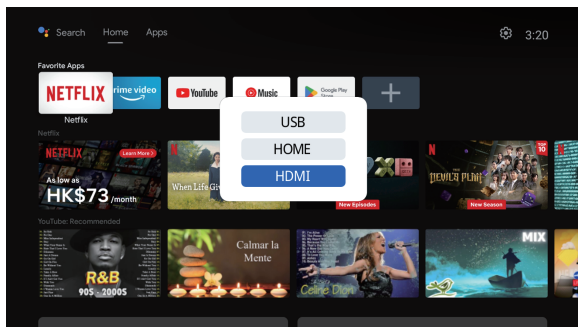

Projection Size/Audio/Video Format

Distance provided is measured from lens to projected surface, for default 16:9 ratio settings.

Projection Size	
Aspect Ratio	16:9
Screen Size	Projection Distance (m)
40"	1.13
50"	1.43
70"	1.96
100"	2.78
120"	3.31

Note: The above data is for reference only, please refer to the actual measurement

Recommended projection size: 40" - 150"

Recommended projection distance: 1.1 - 4 meters

► Multimedia File Specification

Image Format

Support	File Extension
JPEG,PNG,BMP	.jpg / .png / .bmp

Audio Format

Support	File Extension
MPEG1, MPEG2, MP3, AAC, WAV	.mpg/.mpeg/.m2v/.m2a/.mp3/.aac/.m4a /.m4b/.m4p/.wav

Doesn't Support: Dolby AC3, DTS, WMA, DivX, VC1, etc

Video Format(Bit Rate up to 30~40 Mbs)

Support	File Extension
MPEG1, MPEG2, MPEG4, H.263, H.264, AVS, VC-1, MJPEG, RV30, RV40	.mpg/.mpeg/.mpe/.dat/.m2v/.vob/.ts/.mp4 /.m4v/.3gp/.mkv/.avs/.wmv/.avi/.mov/.rm /.rmvb

Doesn't Support: MSVC/CRAM, MP42, GMC, IV32, RLE, cvid, RV20, DivX, RM, RMVB, VC1, FLV, etc.