 



TOPUMP

Bicycle Tire Inflator TB2

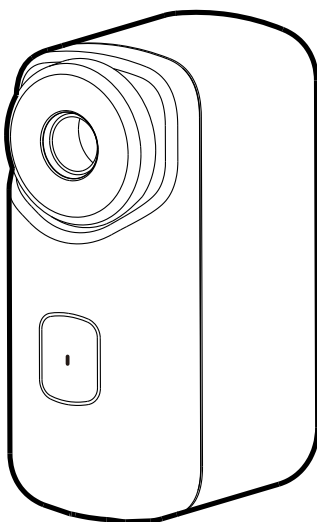


⚠ Warning

 - 1 For TPU inner tubes with resin valves, be sure to connect them with an extension air hose, or the valves may melt due to overheating.

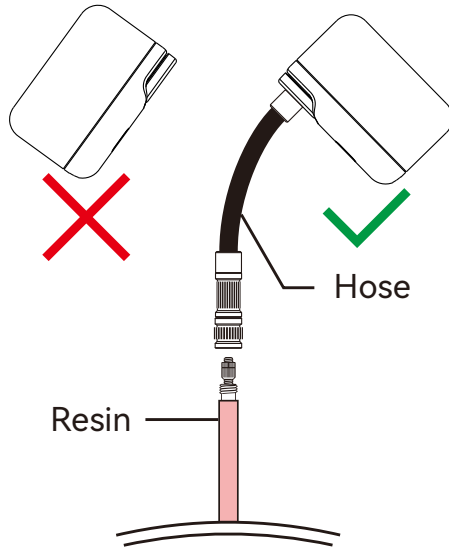


 - 2 The valve maybe very hot when just finished inflating. Be careful not to burn your fingers.

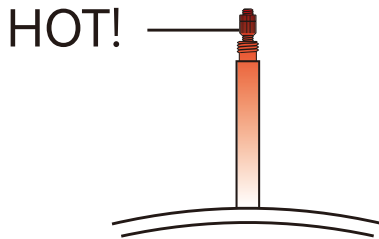


To continuously improve product functionality and user experience, we may make adjustments to the design, features, or accessories of the product. The actual item you receive may differ from the description in this manual. Please refer to the physical product as the final reference. We reserve the right to modify products without prior notice. Thank you for your understanding and support!

 Packing List

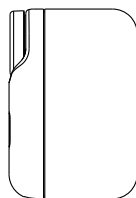

Inflator

 

Hose



Presta Valve
Converter



 
Pillar



Seal Part




Cable

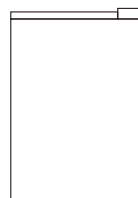


Waterproof Bag

 Details

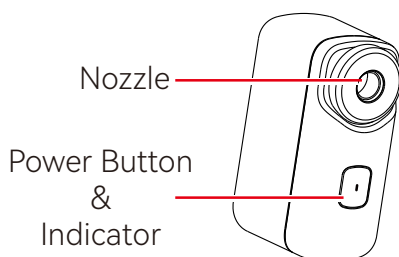

Nozzle

 Power Button
&
Indicator

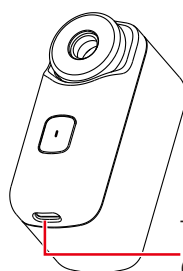

Type-C
Charging Port

Air Nozzle Adaptation

The inflator is ready for Presta valves right out of the box.
For Schrader valves, reassemble the nozzle as shown below.



 
Nozzle Cap

Seal Part

Small hole
outward



For Presta
Valve

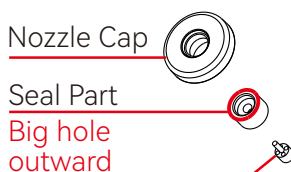

Nozzle Cap

Seal Part

 
Big hole
outward

Pillar
for Schrader



For Schrader
Valve

Operation

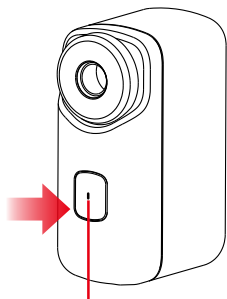

The color indicates the battery level:

Green: 80% - 100%

Yellow: 50% - 80%

 
Red: <50%

1 Press the **Power Button** to active the inflator, and the indicator will light up.


2 Press the **Power Button** twice within 3 seconds after activation to start inflating.



3 Thread the inflator onto the valve stem and hold tight.

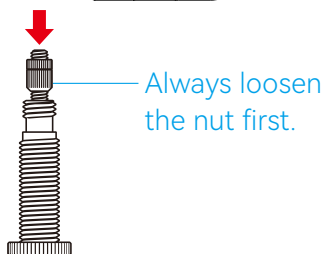

 4 Press the **Power Button** again to stop inflating and turn off the inflator.

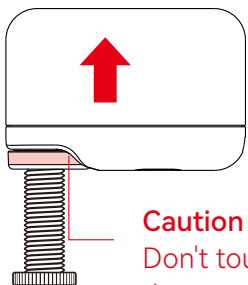

5 Remove the inflator.

 
Caution hot!
Don't touch the nozzle after inflation.

Notes

1. Fully charge the pump before use.
2. The pump may get hot during operation. Please be cautious of burns when using for an extended period.
3. When the tire pressure exceeds 80 PSI, the air pump may shut down upon activation. Please start the pump before connecting it to the tire, or reduce the tire pressure before inflating.
4. It is normal to feel a sense of traction when pulling the pump off a presta valve after inflation.

Charge

Charge it with a suitable charger. It takes about 25 minutes to fully charge the inflator, during which time the indicator light will keep flashing in red, and always on green when finished. It can pump for about 200 s on one full charge.



Indicator
Light

Working performance when full charged:

Tire Type	Pressure	Inflating Time	Available Times
700C25	0-80 PSI	45-55 sec	5
700C25	0-110 PSI	100-110 sec	2
700C28	0-80 PSI	65-75 sec	3
29x2.2	0-30 PSI	95-105 sec	3

The experimental data are for reference only.

Specifications

Size: 77 × 53 × 32 mm

Weight: 127 g

Battery: 450 mAh 7.4 V 3.33 Wh

Charging Port: Type-C 5V 2A; 7V 1.5A

Current: 2.5 - 7.5 A

Max Pressure: 120 PSI

Manufacturer Information

Company:

Chengdu Chendian Intelligent Technology Co., Ltd.

Address:

No. 88, Tianchen Road, Chengdu, Sichuan Province, China

Warranty:

Free repair or replacement within 2 years for damage not caused by human factors.

Contact: support@topump.net