




UV360 VISION SERIES

ALL-IN-ONE 360mm LIQUID CPU COOLER

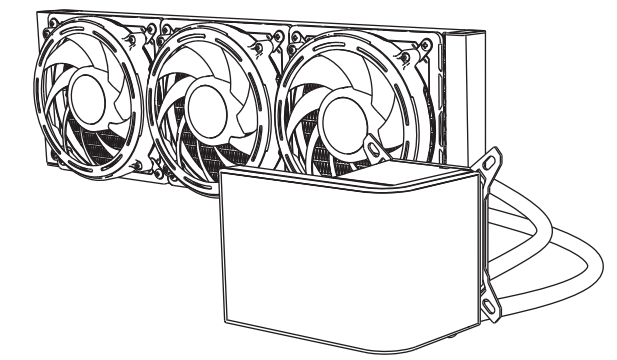

INSTALLATION GUIDE

Part List



 
A

Radiator Screw
x12



B

Intel Bracket
x1



C

AMD Bracket
x1



D

Intel Screw
x4



E

AMD Bracket Screw
x4



F

Mounting Screw
x4



 
G

LGA2011 Stud
x4




H

Thermal Grease
x1



I

 
USB-A to USB-C 750mm x1
USB2.0 to USB-C 750mm x1




J

6.67 inch display
x1


Intel / AMD

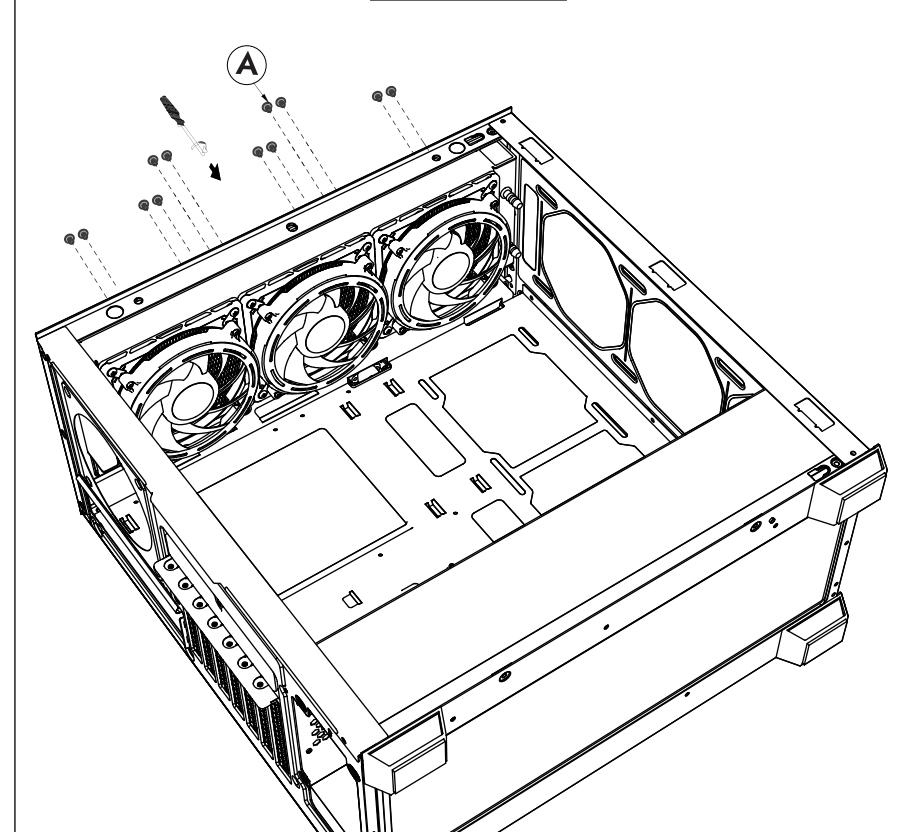

Intel / AMD

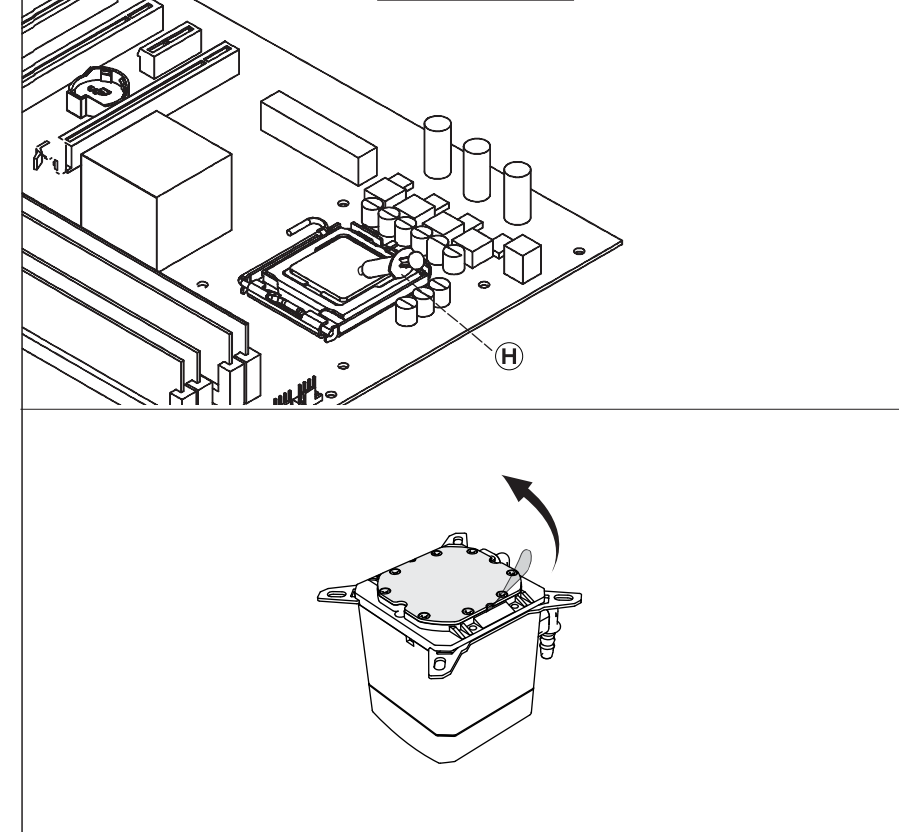

Intel 17XX / 18XX

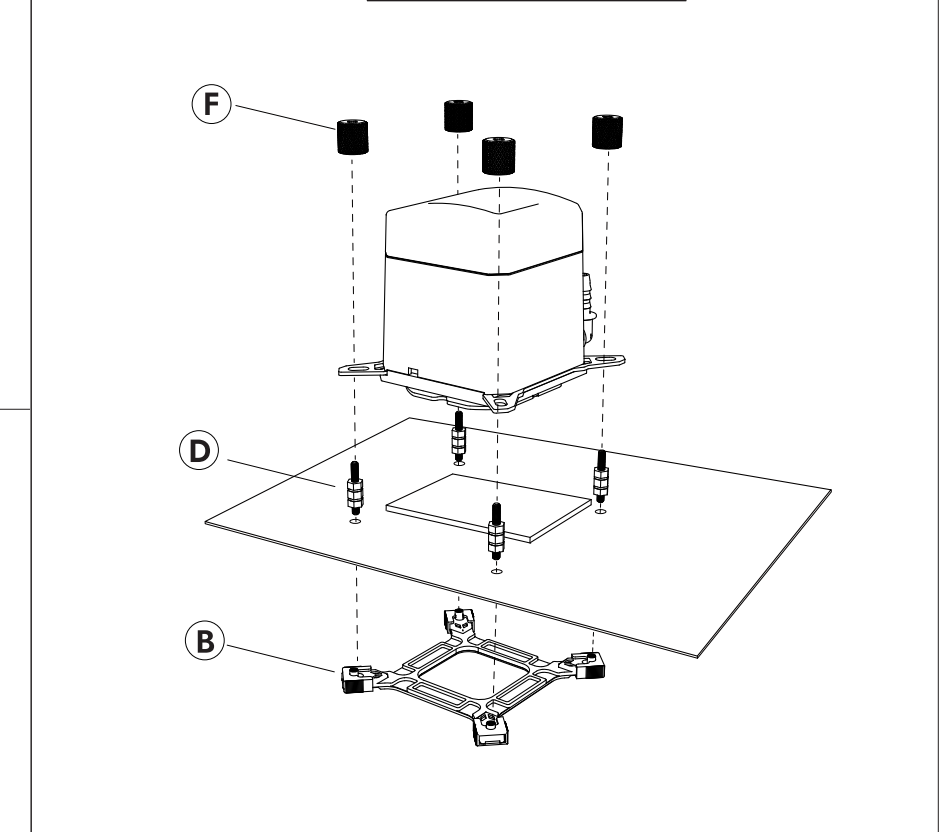

Fly beyond limits!




www.darkFlash.com




DARKFLASH INFOTECH Co., Ltd.
www.darkflash.com


Intel 2011

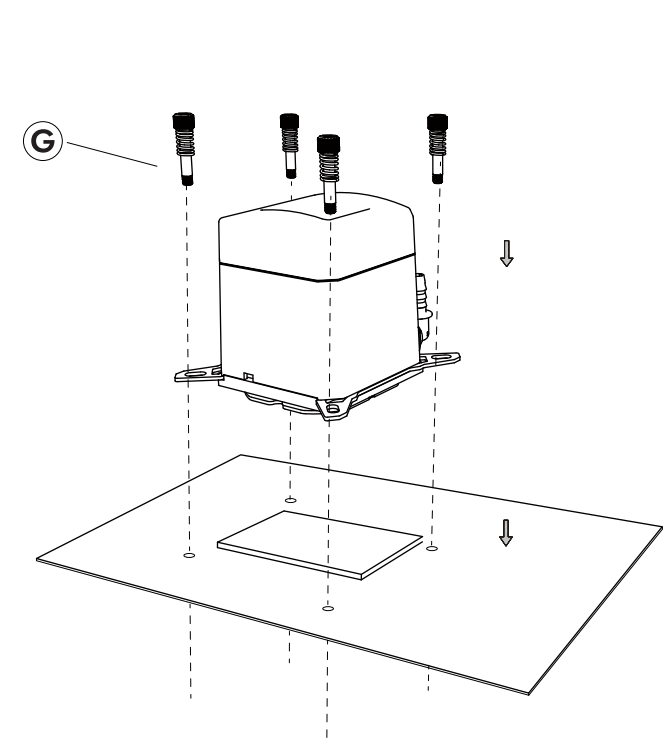

AM4/AM5

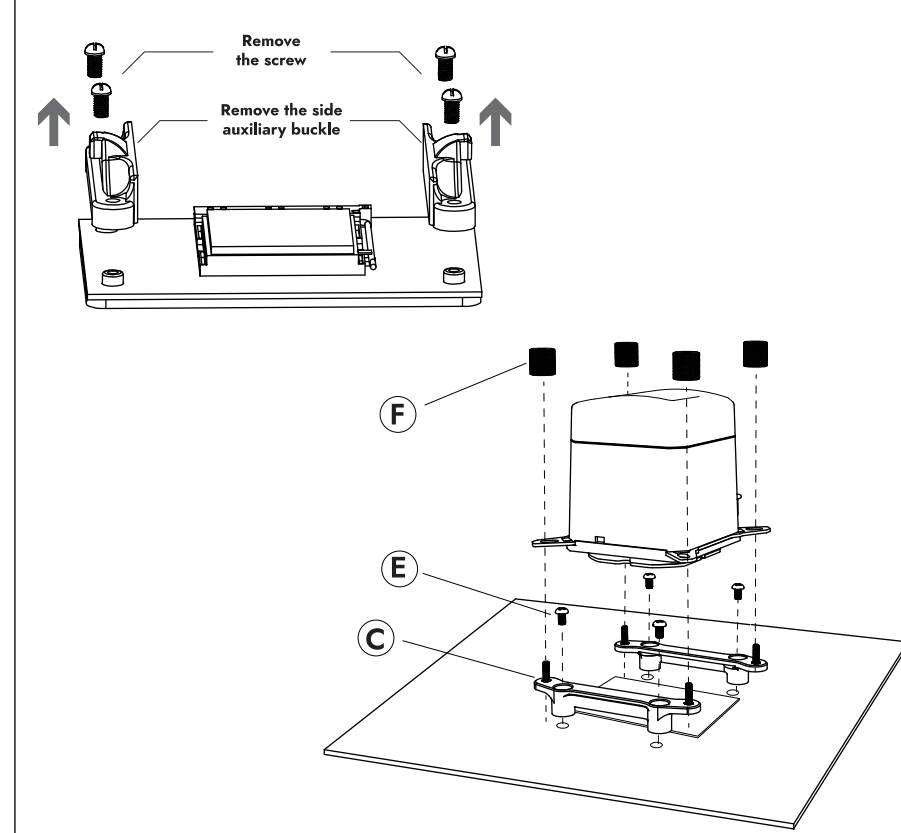


Wiring

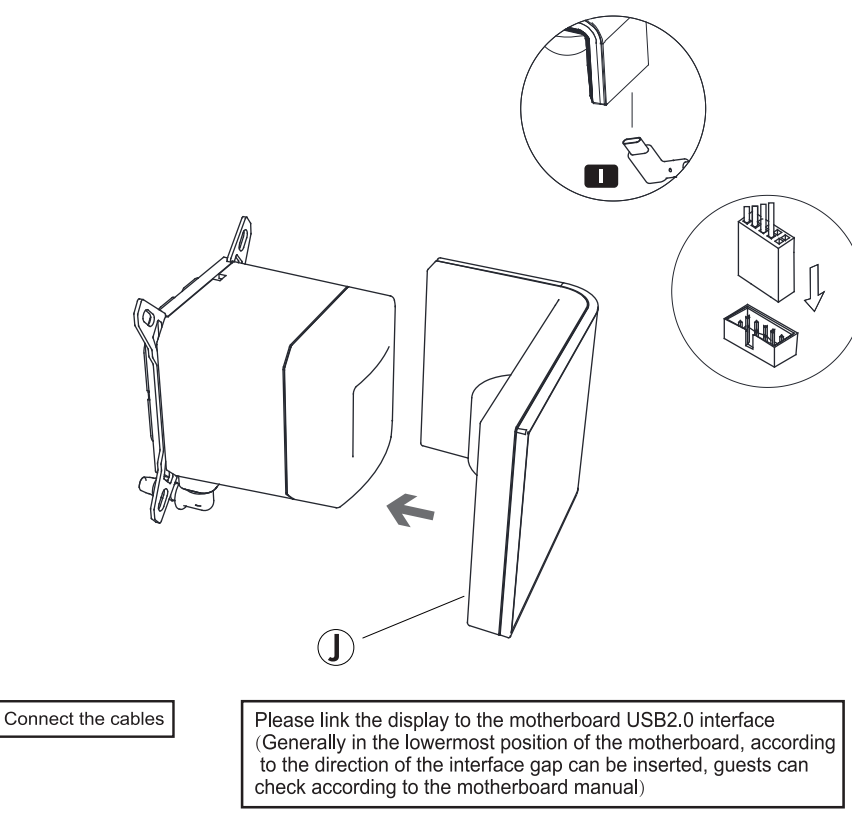

Connect the cables

Please link the display to the motherboard USB2.0 interface (Generally in the lowermost position of the motherboard, according to the direction of the interface gap can be inserted, guests can check according to the motherboard manual)

Wiring

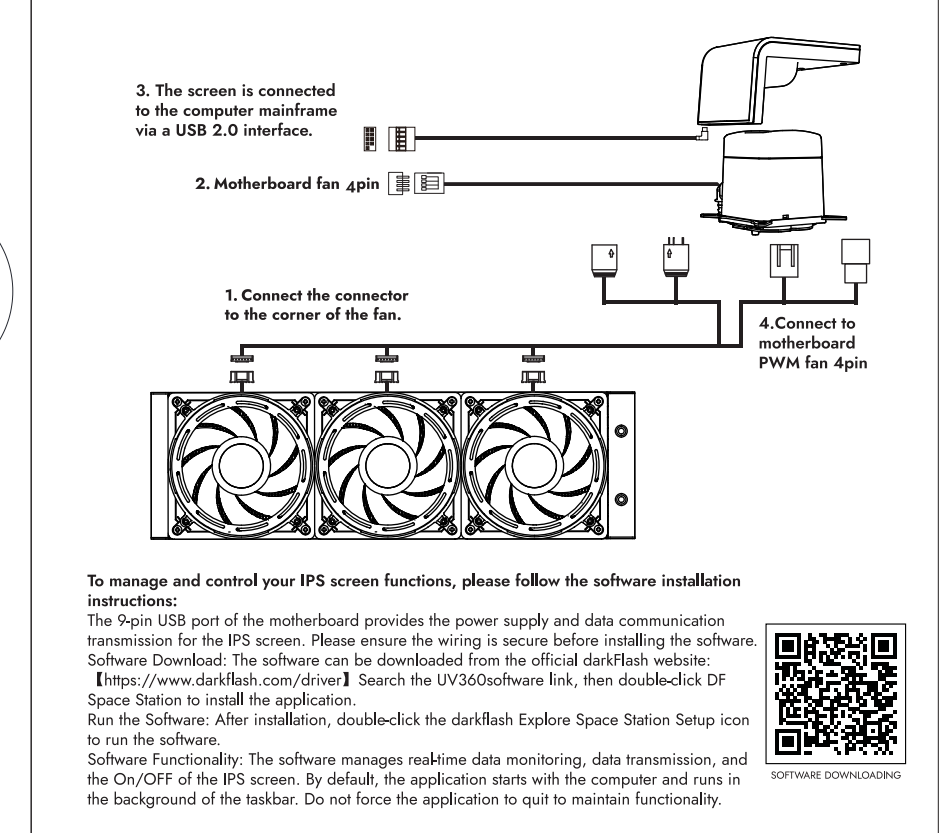

1. Connect the connector to the corner of the fan.

2. Motherboard fan 4pin

3. The screen is connected to the computer mainframe via a USB 2.0 interface.

4. Connect to motherboard PWM fan 4pin

To manage and control your IPS screen functions, please follow the software installation instructions:
The 9-pin USB port of the motherboard provides the power supply and data communication transmission for the IPS screen. Please ensure the wiring is secure before installing the software.
Software Download: The software can be downloaded from the official darkFlash website: <https://www.darkflash.com/drive/> Search the UV360software link, then double-click DF Space Station to install the application.
Run the Software: After installation, double-click the darkflash Explore Space Station Setup icon to run the software.
Software Functionality: The software manages realTime data monitoring, data transmission, and the On/OFF of the IPS screen. By default, the application starts with the computer and runs in the background of the taskbar. Do not force the application to quit to maintain functionality.



SOFTWARE DOWNLOADING