

# Darkflash Μονάδα ελέγχου ανεμιστήρα RC2 RGB PWM (Μαύρο)

darkFlash · EAN 6926170086948

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

RGB PWM Controller Module for Computer

Darkflash RC2

User Manual

Accessories

5V RGB Signal Cable (500 mm)\*1

RC2 Controller\*1

Double-sided Velcro\*1

PWM Signal Cable (500)\*1

Installation

Connection to

Reset Input/Output Cable

Connection to

PWM Signal of the Motherboard

Connection to Connection to

ARGB 5V Signal of the Motherboard SATA Power Cable

Connection to ARGB 5V Signal for the Product Connection to PWM Signal

(this port must be connected first to prevent signal errors).

1. The hub controller has 14 default modes that can be changed using the reset button.

2. Hold the reset button for 3 seconds to synchronize the device.

Precautions

Before proceeding with the installation or operation of the Darkflash RC2 fan controller/RGB PWM module, carefully read the user manual to familiarize yourself with the proper use of the product.

Electrical Safety: Ensure that the computer and other connected devices are disconnected from power before starting installation or maintenance.

Avoid Mechanical Damage: During installation and operation of the product, avoid unnecessary pressure, bending, or damaging cables, connectors, and other components.

**Caution Regarding Heat:** The Darkflash RC2 fan controller/RGB PWM module may generate heat during operation. Ensure that the device is installed in a properly ventilated area to avoid overheating.

**Proper Connection:** Connect the Darkflash RC2 fan controller/RGB PWM module according to the user manual and considering appropriate surge protection.

**Avoid Contact with Water:** The product is not water-resistant. Ensure that it is protected from flooding or moisture.

**Regular Maintenance:** Regularly check the condition of the product and clean it of dust or debris to ensure proper operation and safety.

**Do Not Tamper with Internal Components:** Do not attempt to open or repair the internal components of the Darkflash RC2 fan controller/RGB PWM module yourself. In case of failure, contact an authorized service center.

**Storage:** Store the Darkflash RC2 fan controller/RGB PWM module in a dry and safe place to avoid mechanical damage or exposure to external factors.

**Use of Original Parts:** If replacement parts or accessories are necessary, use only original parts recommended by the manufacturer to ensure compatibility and safe operation of the product.

Adhering to these precautions will help ensure the safe and effective operation of the Darkflash RC2 fan controller/RGB PWM module and minimize the risk of personal or material damage.

This document is a translation of the original user manual created by the manufacturer.

The product should be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and responsibility. In the absence of information regarding necessary periodic maintenance or service actions in the user manual, the physical condition of the product should be assessed regularly, at least once a week, against that of a physically new product. If any deviation is detected or identified, urgent maintenance (cleaning) or service actions should be taken. Failure to perform proper maintenance (cleaning) and respond promptly upon detection of a deviation may lead to permanent damage to the product. The guarantor is not responsible for damages resulting from negligence.

<https://serwis.innpro.pl/gwarancja>

INNPRO Robert Błędowski sp. z o.o.

ul. Rudzka 65c

44-200 Rybnik, Poland

tel. +48 533 234 303

[hurt@innpro.pl](mailto:hurt@innpro.pl)