

Deerma Υγραντήρας Αέρα Ultrasonic F500 (Λευκό)

DEERMA · EAN 6955578033544

Machine translation from Čeština. In case of doubt the manufacturer's original document prevails.

Humidifier

DEM-F500

User Manual

This manual has been carefully checked; however, the manufacturer acknowledges the possibility of printing errors and factual inaccuracies. The manufacturer reserves the right to make changes to specifications, functionality, and color of the device. Changes may be made without prior notice.

Product Design

Air nozzle Water tank Water level indicator

Tank lid Air outlet Control knob

Ultrasonic plate Main unit Indicator light

Note: The drawing is for illustrative purposes only; the design of the purchased unit may differ from the image.

Technical Specifications

Product Name Humidifier

Model DEM-F500

Rated Power 25 W

Rated Voltage 220 - 240 V

Rated Frequency 50 / 60 Hz

Capacity 5 L

Product Use

The humidifier uses ultrasonic waves that create 1.7 million high-frequency vibrations and disperse water into the finest particles. Thanks to the built-in fan, these particles are dispersed in the form of mist. The humidifier ensures maximum comfort in the environment throughout its use. Remove the nozzle. Disconnect the water tank from the main unit. Turn the tank upside down and carefully pour water into the tank. Unscrew the lid. Reconnect the tank to the main unit. Screw the lid back on. Place the nozzle into the water tank. Turning on: turn the knob clockwise. The more the knob is set, the greater the amount of mist will come out of the device. The blue indicator light signals that the humidification mode is on.

The red indicator light signals that there is too little water in the tank.

Recommendations

1. Do not connect the device to a power source with a voltage higher or lower than 220-240 V.
2. Before use, let the humidifier stand for 30 minutes at room temperature to avoid failure of the water tank due to temperature differences.
3. Use the humidifier at room temperature (5 °C to 40 °C).
4. The device should be placed on a flat and stable surface.
5. Do not place or use the appliance directly on wooden surfaces, as moisture may damage them.
6. The appliance should be at least 2 meters away from furniture and electrical appliances to prevent damage or destruction.
7. Keep the humidifier away from heat sources and sunlight.
8. Do not fill the tank with water at a temperature higher than 40 °C or lower than 5 °C, as this may damage the appliance.
9. Ensure that the air inlet is not blocked or filled with water. Wipe any water around the unit with a dry towel to prevent damage.
10. Empty the water tank when the room temperature drops below 0 °C to prevent damage to the device.
11. Do not pour chemicals or cleaning agents into the tank, as this may disrupt the spraying process.
12. Before emptying the water tank, turn off the device and disconnect it from the power source.
13. Turn off the device and disconnect it from the power source before cleaning.
14. Do not move the appliance while it is on. First, turn it off and disconnect it from the power source.
15. Do not allow water to enter the mist nozzle or air outlet.
16. Do not immerse the device in water, do not soak it, and do not pour too much water into the water tank.
17. Do not replace or modify original parts yourself.

Safety Precautions

1. When disconnecting the device, ensure that your hands are dry.
2. Do not disassemble the device or attempt to repair it yourself.
3. Do not touch the ultrasonic plate when the device is on.
4. Do not stretch, tie, or place heavy objects on the power cord, as this may cause a short

circuit.

5. Do not replace the power cord without authorization. If any abnormalities occur, immediately disconnect the plug and contact an authorized service center.
6. If the power cord is damaged, it must be replaced by the manufacturer, its service representative, or a similarly qualified person to avoid any danger.
7. Do not detach the water tank from the base and do not touch the water or parts of the base while the operating mode is on.
8. This appliance is intended for home use only. Do not use it in an outdoor environment.
9. If you do not use the device for an extended period or a storm is approaching, unplug it from the socket.
10. Do not turn the unit if it is powered and contains water, to avoid burning the electronic components in that part.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- 12.

It is important to realize that high humidity can promote the growth of biological organisms in the environment. 13. Do not allow the area around the humidifier to be damp or wet. If humidity is present, reduce the output of the humidifier. If the output of the humidifier cannot be reduced, use the humidifier intermittently. Do not allow absorbent materials, such as carpets, curtains, drapes, or tablecloths, to become damp. 14. When filling and cleaning the device, disconnect the power supply. 15. Never leave water in the tank when the device is not in use. 16. Before storing, empty and clean the humidifier. Clean the humidifier before the next use. **Warning**

1. Keep the appliance out of reach of children. Steam and boiling water can cause burns. 2. Microorganisms that may be present in the water or in the environment where the appliance is used or stored can multiply in the water tank and be blown into the air. If the water is not changed regularly and the tank is not cleaned, it poses very serious health risks. 3. Proper cleaning should occur every 3 days. 4. The tank should be emptied and refilled every three days. Before refilling, clean it with clean water or a cleaning agent. 5. If children are playing near the appliance, they should be supervised by an adult to prevent them from touching its components. **Cleaning and Maintenance**

1. During cleaning, turn off the appliance and disconnect it from the power supply. Clean the

water tank and ultrasonic plate at least once every seven days. 2. Remove stains using a mixture of lemon juice and water and a soft cloth, brush, or cotton swab. DO NOT USE cleaning agents, bleaches, or other cleaning products. DO NOT USE hard or abrasive items (e.g., steel brushes). DO NOT USE water with a temperature higher than 40 °C. 3. Change the water in the tank daily. 4. Before storing, empty and dry the water tank. Troubleshooting

The indicator light is off. Additionally, no mist or air is coming out. The appliance may be turned off or unplugged. Solution: Check if the power cord is properly connected. Check if the device is turned on. The indicator light is on, but no mist or air is coming out. The ultrasonic panel, water tank, and/or water may be contaminated. The water tank may also be improperly installed. Solution: Clean the ultrasonic panel and water tank and replace the water. Check if the water tank is properly installed. The device is making an unusual sound. There may not be enough water in the water tank for the appliance to operate. The appliance may be placed on an unstable or uneven surface. Solution: Pour water into the tank and move the unit to a flat, stable, and safe surface. Essential Oil Warning

Add only a few drops of essential oil to the aroma container. Avoid spilling, as this may cause mechanical problems with the appliance. Clean the aroma container before using any other essential oil to achieve the best effect. Environmental Protection

Electronic waste marked in accordance with European Union directives must not be disposed of with other municipal waste. It is subject to separate collection and recycling at designated locations. By ensuring its proper disposal, you prevent possible negative consequences for the environment and human health. The collection system for used devices complies with local environmental regulations for waste disposal. Detailed information on this topic can be obtained from the municipal office, processing plant, or store where the product was purchased. The product meets the requirements of the so-called new approach directives of the European Union (EU) regarding safety, health, and environmental protection, which specify hazards that should be identified and eliminated. This document is a translation of the original user manual issued by the manufacturer. The product must be regularly maintained (cleaned) by the user or a specialized service center at the user's expense. If the user manual does not provide information on necessary periodic maintenance or service procedures, the physical condition of the product must be evaluated regularly, at least once a week, for deviations from that of a physically new product. If any deviation is detected or found, maintenance (cleaning) or service measures must be carried out immediately. If proper maintenance (cleaning) is not performed and no action is taken in response to the identified condition of deviation, permanent damage to the product may occur. The guarantor is not liable for damages caused by negligence. The device is equipped with a

rechargeable battery, which ages over time and with use due to its physical and chemical structure. The manufacturer specifies the maximum operating time of the device under laboratory conditions, where optimal operating conditions for the device are present and the battery itself is new and fully charged. Actual operating time may differ from the time declared in the offer and is not a defect of the device, but a characteristic of the product.