 

Deerma Υγραντήρας Αέρα Ultrasonic F628W (Λευκό)

DEERMA · EAN 6955578034367

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

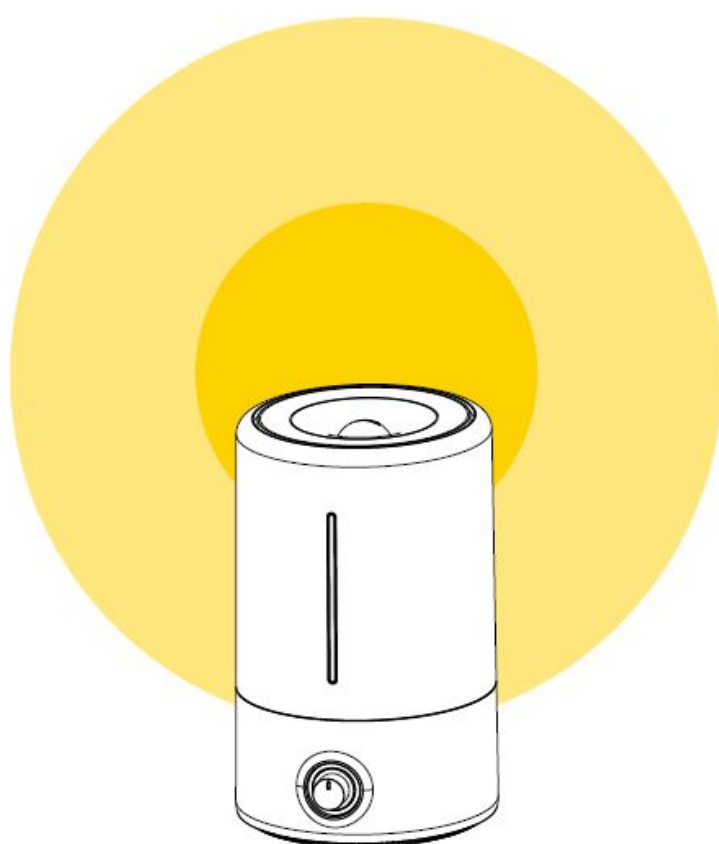

Deerma Humidifier

User manual for the air freshener.

DEM-F628W

Safety instructions

1. Do not disconnect the device from the power supply with wet hands to avoid electric shock.
2. Do not repair, modify, or disassemble the device without authorization.
3. When the device is running, do not touch the spray plate with bare hands - this may cause serious burns.
4. The power cord must not be scratched, damaged, or tangled in any way. It must not be pressed down by weight, pinched, or processed. Otherwise, it may cause electric shock, short circuit, or fire.
5. Please do not replace the power cord. In case of any irregularities, immediately disconnect the device from the power supply.
6. A damaged power cord must be replaced by the manufacturer.
7. The water tank should not be disconnected from the base or touched during the operation of the device.
8. The device is intended for indoor use only.
9. The device should be disconnected from the power supply during a storm or when not in use for an extended period.
10. The device must not be tipped over during operation, especially when it contains water - this may damage its internal electronic components.
11. For use only by competent adults.
12. The power cord should not be placed under carpets or other similar coverings. It is also prohibited to place the cord under furniture and other devices. The power cord should be placed away from high-traffic areas to prevent tripping.

Precautions


1. This product may only be used in electrical installations of 220-240V - 50/60Hz.
2. Before the first use of the humidifier, it should be left for about 30 minutes, and then used to avoid damage to the water tank due to sudden temperature changes.
3. The device should be used at normal room temperature.
4. The humidifier should always be placed on a flat surface.
5. This product is not designed for wooden surfaces, so in case of leakage, it may cause damage.
6. The product should be used at least 2 meters away from furniture and other electrical devices to avoid damage to these items.
7. The device must not be placed in a location with strong sunlight or near a heat source.
8. Do not fill the water tank with water at a temperature higher than 40°C to

avoid damaging the device.

9. Do not allow water to enter the air outlet. If this occurs, immediately dry and clean the device to avoid damage.
10. Do not allow the device to freeze, as this will cause damage.
11. Only water should be added to the tank - otherwise, the misting will be very weak.
12. To remove the water tank from the humidifier, the device must be turned off and also disconnected from the power supply.
13. The device should not be moved during operation. To do this, it must first be turned off and disconnected from the power supply.
14. Do not allow water to enter the air or spray outlets.
15. When cleaning the device, care should be taken not to wet any of its internal parts.
16. The device is not designed to be disassembled by anyone other than the manufacturer. Such action will void the warranty.
17. If water gets into the internal parts of the device, it must be wiped immediately.
18. No essential oils should be added to the water tank, as this may damage the device.

Product structure diagram

a) Diagram and assembly of product parts

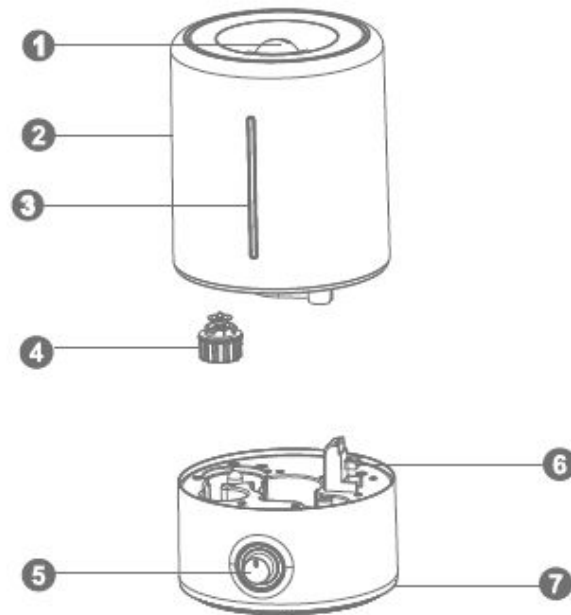


1. Nozzle
2. Water tank
3. Water level indicator
4. Water valve
5. Power button
6. Essential oil container
7. Motor base

Note: The above product diagram may differ from the one in the box.
The configuration of the purchased device takes precedence over the above image.

Product specifications and characteristics

Product name Humidifier	
Model name DEM-F628W	
Rated voltage 220-240V~ 50/60Hz	
Rated power 25W	
Capacity (L) 5L	
Overall dimensions of the machine 187*200*295mm	

Instructions for using the product

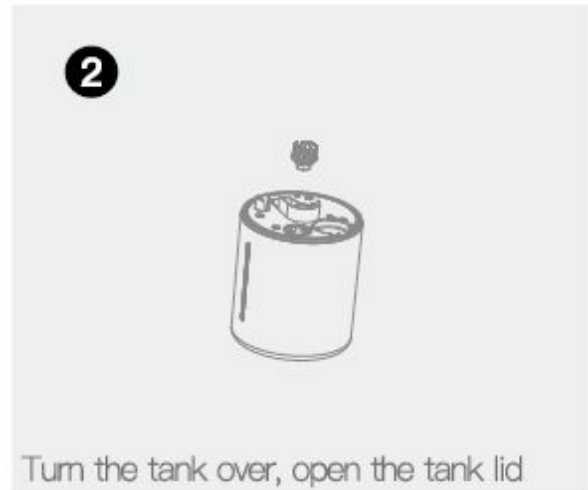

1. Remove the water container.
2. Turn the container upside down and open the tank lid.
3. Pour in water.
4. Close the tank lid.
1. Place the humidifier on a flat surface, disconnect the water tank, turn it upside down, and unscrew the lid on its bottom.
2. Pour clean tap water into the tank.
3. Screw the tank lid back on.
4. Properly fit the water tank onto the motor base, then connect the device to the power supply. Before turning it on, ensure that the operating voltage matches the rated voltage.

Operating principle

The Deerma humidifier sprays water into very fine particles (1µm-5µm) based on the principle that an ultrasonic wave generates 1.7 million high-frequency vibrations per second and, with the help of a pneumatic device, disperses a mist of water into the air to evenly humidify it. The humidifier can maintain ideal humidity in the room while preventing static electricity.

Cleaning and maintenance

- The water tank and spray plate should be cleaned regularly. Before cleaning, ensure that the device is turned off and the power cord is unplugged.
- It is recommended to repeat the cleaning every 5 days.
- Cleaning the outer surface of the humidifier: wipe the outer layer of the device with a damp cloth.
- Do not use any hard tools for cleaning to avoid damaging the humidifier.
- Do not use any chemical detergents to clean the device.
- Water in the tank should be changed frequently to avoid spoilage. The interior of the device should also be cleaned regularly.
- If the device will not be used for an extended period, ensure that it is completely dry.

Error analysis and troubleshooting

The indicator light is off, and no mist is coming from the device?

Cause analysis:

1. The power cord is not plugged into the socket.
2. The power cord is damaged.
3. If the humidity set by the user is lower than the ambient humidity, the humidifier will not start.
4. If the humidifier has reached the set humidity level, it will stop working.

Proposed solutions:

1. Check if the power cord is properly connected to the socket.
2. Set the humidity to a higher value for the humidifier to start producing mist.

The power indicator is on even when no air is coming out?

Cause analysis:

1. No water in the tank.
2. The spray or fan is damaged.

Proposed solutions:

1. Add water to the tank.

The sprayed mist smells bad

Cause analysis:

- The water in the tank is old, and the tank is dirty.

Proposed solutions:

- Empty the old water, clean the tank, and fill it with fresh water.

Less mist volume

Cause analysis:

- Too much scale is on the spray plate or the water is too contaminated.

Proposed solutions:

- Clean the spray plate and replace the old water with fresh water.

Environmental protection



Waste electrical and electronic equipment marked in accordance with the European Union directive must not be disposed of together with other municipal waste. It is subject to selective collection and recycling at designated points. By ensuring its proper disposal, you prevent potential negative consequences for the natural environment and human health. The waste collection system complies with locally applicable environmental protection regulations regarding waste disposal. Detailed information on this can be obtained from the municipal office, cleaning facility, or the store where the product was purchased. The product meets the requirements of the so-called New Approach directives of the European Union (EU) concerning safety, health protection, and environmental protection, identifying hazards that should be detected and eliminated.



This document is a translation of the original user manual created by the manufacturer.

Detailed information about the distributor/manufacturer warranty conditions is available on the website <https://serwis.innpro.pl/gwarancja>

The product should be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and responsibility. In the absence of information about necessary periodic or service maintenance actions in the user manual, the user should regularly, at least once a week, assess the physical condition of the product compared to a physically new product. If any deviation is detected or identified, urgent maintenance (cleaning) or service steps should be taken. Failure to properly maintain (clean) and respond upon detecting a deviation may lead to permanent damage to the product. The warranty provider is not responsible for damages resulting from neglect.

Importer:



INNPRO Robert Błędowski sp. z
o.o.
ul. Rudzka 65c
44-200 Rybnik, Poland
tel. +48 533 234 303
hurt@innpro.pl
www.innpro.pl