 

Deerma Στεγνωτήριο Παπουτσιών DEM-HX10W (Λευκό)

DEERMA · EAN 6955578034558

Machine translation from Čeština. In case of doubt the manufacturer's original document prevails.

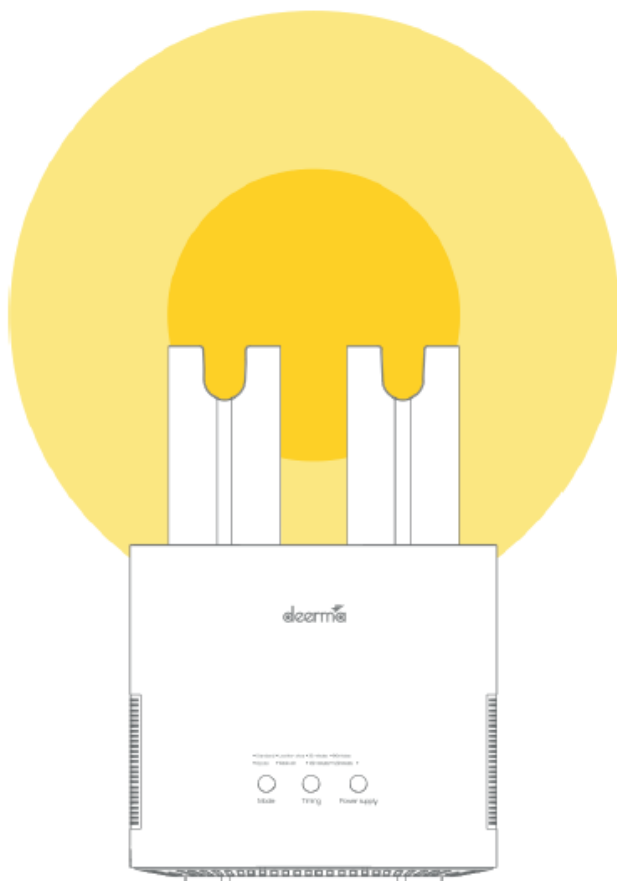


User manual

Shoe dryers

This manual has been carefully checked; the manufacturer acknowledges the possibility of printing errors and factual inaccuracies.


The manufacturer reserves the right to make changes to the specifications, functionality, and color of the device. Changes may be made without prior notice.

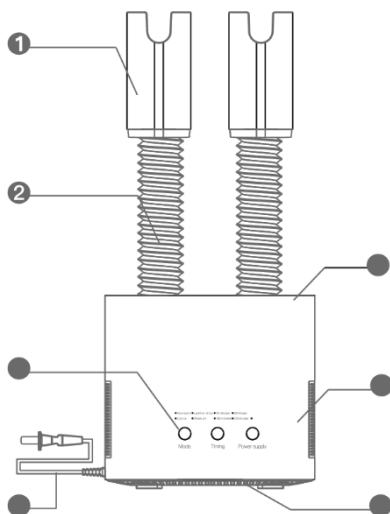


1. Air outlet
2. Adjustable tube
3. Function keys
4. Power cord
5. Top cover
6. Device
7. Bottom cover

The Deerma shoe dryer generates and blows out a stream of warm air. You can also activate the ozone generator which removes unpleasant odors from shoes.



1. Place the device on a stable surface, extend the tube, and insert the air outlet end as deeply as possible into the shoe.

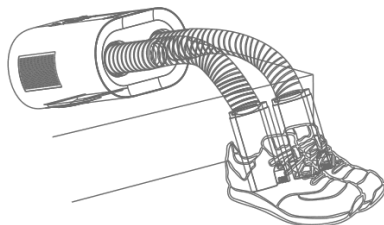

2. When drying shoes, footwear, etc., extend the stand.

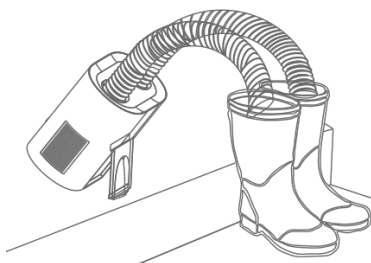

3. When drying two pairs of shoes at once, arrange the outlets at the edges of the left and right shoes as shown in the picture.

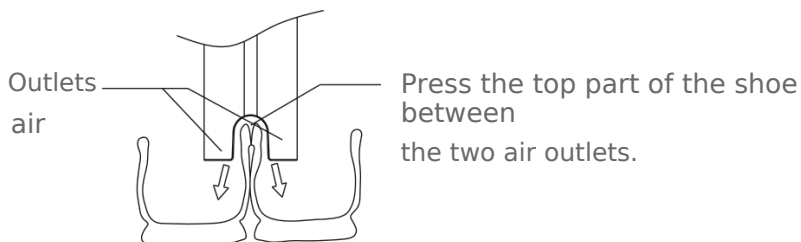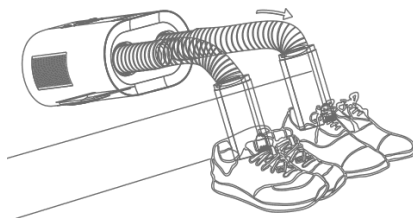

- Standard low
- Leather shoes - 30 minutes
- 60 minutes
- 120 minutes
- 180 minutes
- Ozone - poor air supply



MODE button - selection of operating mode

Each press of the MODE button changes the device's mode between standard mode, leather shoe mode, low air flow mode, and ozone mode.

TIMING button - selection of operating time

Each press of the TIMING button changes the operating time of the device between 30, 60, 120, and 180 minutes.

POWER button

When not in use, pressing this button starts operation. When the unit is in operation, pressing this button stops the operation. The device will stop after 30 seconds. The table below provides approximate

times. Type of footwear

Mode	
Wet	30min
Standard	
Flooding	120 minutes
Standard	
Leather shoes	30 minutes

Leather shoes Caution: • If the footwear is damp, select the low air flow mode or standard mode.

Time

Drying time should be adjusted to actual conditions.

- If your footwear has a specific odor, you can select the ozone mode and adjust the drying time according to the current situation.

Product name:

Model: DEM-

HX10W

Rated power:

235 W

Rated voltage VOLUME! 220-240V 50-60Hz

Overall dimensions:

Construction material: 211 x 117 x 280 mm:

MATERIAL: ABS

1. To maintain optimal performance of the device, it should be stored in its original packaging and in a dry place after use.

2. Never use solvents, gasoline, cleaning agents, or polishing powders to clean the appliance. It is recommended to use clean water.

3. Use a soft cloth to clean the components of the unit.

4. Use voltage and frequency (220-240V 50-60Hz) compatible with this appliance.

5. Never attempt to disassemble or repair the device yourself.

6. A damaged power cord should be repaired at an authorized service center to avoid hazards.

7. If unusual phenomena occur, immediately unplug the device from the socket and contact an authorized service center.

8. Regularly clean the plug from dust.

9. Before cleaning or moving the appliance, disconnect the power and unplug it from the socket.

10. When unplugging the plug from the socket, always grasp the plug,

not the power cord. Do not use the device as a toy. Keep it out of reach of children and infants to prevent accidents. Never place it in a crib or stroller, or take it to a playground, etc.

11. Never use this appliance in the kitchen. The appliance should be placed away from heat sources, direct sunlight, and furniture, and at least 1 m away from other appliances.

12. Never spray substances such as insecticides, hairspray, lubricating oil, etc., near the appliance.

13. Never use the product near flammable substances (lamp oil, essential oil, banana oil, etc.) or flammable objects.

14. Never use this device outdoors.

15. Never use this appliance near sources of water, showers, or places where steam is present.

16. Never immerse or submerge the device in water.

17. Do not unplug the plug with wet hands.

18. During operation, never touch the air outlet, as it may cause burns.

19. Never use this unit to dry heat-sensitive footwear.

20. Never use this unit to dry footwear contaminated with oil or solvent.

21. When cleaning, prevent water from entering the appliance.

23. When the safety system is activated due to overheating, all LED indicators will start flashing and an audible alarm will sound from the unit. If the unit turns off due to the activation of the safety system, it can be restarted separately after cooling down. After 30 seconds of cooling, the unit will turn off.

' The appliance makes strange noises or emits a strange odor (ozone smell is normal).

' The plug and/or power cord become excessively hot.

• Power issues occur when moving the cord. ' Power issues occur during use.

•

Touching the device may give the user an electric shock.

In the event of the above situations, immediately stop using the appliance and contact an authorized service center. Disassembly of the appliance is prohibited for unqualified persons.

This document is a translation of the original user manual issued by the manufacturer.

Environmental protection
heat.

21. Never use this unit to dry footwear.
contaminated with oil or solvent.

22. When cleaning, prevent water from entering the device.

23. When the safety system is activated due to overheating, all LED indicators will start flashing and an audible signal will sound from the unit.
After 30 seconds of cooling, the unit will turn off.

24. If the unit turns off due to the activation of
the safety system, it can only be restarted after it has cooled down.

' The appliance makes strange noises or emits a strange
odor (ozone smell is normal).

' The plug and/or power cord become excessively hot.

• Power issues occur when moving the cable. ' Power issues occur during use.

•

In the event of any of the above situations, immediately stop using the appliance and contact an authorized service center. Disassembly of the appliance is prohibited for unqualified persons.

Electronic waste marked in accordance with European Union directives must not be disposed of with other municipal waste. It is subject to separate collection and recycling at designated locations. By ensuring its proper disposal, you prevent potential negative consequences for the environment and human health. The used equipment collection system complies with local environmental protection regulations for waste disposal. Detailed information on this topic can be obtained from the municipal office, processing plant, or the store where the product was purchased. The product meets the requirements of the so-called new approach directives of the European Union (EU) regarding safety, health, and environmental protection, which specify hazards that should be identified and eliminated.

Ochrana životního prostředí



This document is a translation of the original user manual issued by the manufacturer.



The product must be regularly maintained (cleaned) by the user or a specialized service center at the user's expense. If the user manual does not provide information on necessary periodic maintenance or service actions, the physical condition of the product must be evaluated regularly, at least once a week, against that of a physically new product. If any deviation is detected or found, maintenance (cleaning) or service measures must be taken immediately. Failure to perform proper maintenance (cleaning) and not responding to the identified state of deviation may result in permanent damage to the product. The guarantor is not liable for damages caused by negligence.

The device is equipped with a rechargeable battery, which ages over time and with use due to its physical and chemical structure. The manufacturer specifies the maximum operating time of the device under laboratory conditions, where optimal operating conditions are provided for the device and the battery itself is new and fully charged. Actual operating time may differ from the time stated in the offer and is not a defect of the device, but a characteristic of the product.

Environmental protection.

Záruka

Při změnách a/nebo modifikacích výrobku zanikne záruka. Při nesprávném používání tohoto výrobku výrobce nenese odpovědnost za vzniklé škody.

Likvidace

- Likvidaci tohoto produktu provádějte v příslušné sběrně. Nevyhazujte tento výrobek s komunálním odpadem.
- Pro více informací se obraťte na prodejce nebo místní orgány odpovědné za nakládání s odpady.

Dokumentace

Tento produkt byl vyroben a je dodáván v souladu se všemi příslušnými nařízeními a směrnicemi platnými ve všech členských státech Evropské Unie. Splňuje také veškeré relevantní specifikace a předpisy v zemi prodeje. Oficiální dokumentaci lze získat na vyžádání. Oficiální dokumentace zahrnuje také (avšak nejenom) Prohlášení o shodě, Bezpečnostní technické listy materiálu a správu o testování produktu.

Vyloučení zodpovědnosti

Design a specifikace výrobku mohou být změněny bez předchozího upozornění. Všechna loga a obchodní názvy jsou registrované obchodní značky příslušných vlastníků a jsou chráněny zákonem.