

Σκούπα Deerma DX700s (γκρι)

DEERMA · EAN 6955578034992

Machine translation from Čeština. In case of doubt the manufacturer's original document prevails.

Deerma

Vacuum Cleaner

MODEL NO.: DX700/DX700S

IMPORTANT SAFETY INSTRUCTIONS

The appliance must not be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children under supervision should not be allowed to play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. When using an electrical appliance, basic safety precautions should always be followed, including the following. READ ALL INSTRUCTIONS BEFORE USING THE STICK VACUUM AND SAVE THEM. WARNING! Read all instructions and understand them. Failure to follow all of the instructions listed below may result in electric shock, fire, or serious injury to persons. The warnings, cautions, and instructions in this manual cannot cover all possible conditions and situations that may occur. 1. DO NOT RECOMMEND THAT YOU CONTACT THE MANUFACTURER IF NECESSARY:

- a) Use the vacuum outdoors. It is intended for household use only.
- b) Allow the vacuum to be used as a toy. Increased supervision is necessary when used by or near children.
- c) Use the vacuum with a damaged cord or plug, if it has been dropped, damaged, left outdoors, or submerged in water. Return it to a service center for inspection, repair, or adjustment.
- d) Attempt to change accessories while the vacuum is running.
- e) Use the vacuum without the dust container attached.
- f) Collect liquids with the vacuum or use it on wet floors.
- g) Handle the plug or vacuum with wet hands.
- h) Insert any objects into openings. Do not use the vacuum with a blocked opening. Keep free of dust, lint, hair, and anything that may restrict airflow. Do not pick up anything

burning or smoking, such as cigarettes, matches, or hot ashes.

i) Use the vacuum to collect string or cloth pieces or to clean frayed carpets or carpet fringes.

j) Use the vacuum on concrete, tar, or similar rough surfaces.

k) Use the vacuum to suck up flammable or combustible liquids, such as gasoline, or use it in areas where they may be present.

l) Abuse the power cord. Never carry the vacuum by the power cord or pull the cord to disconnect the plug from the outlet; instead, grasp the plug and pull to disconnect.

m) Leave the appliance plugged into the outlet. If the appliance is not in use, unplug it before servicing.

n) Pull or carry by the cord, use the cord as a handle, close doors on the cord, or pull the cord around sharp edges or corners, or run the appliance over the cord.

2. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.

3. Use the vacuum only in the manner intended in this manual. Use only the attachments recommended by the manufacturer.

4. Read and follow all operating instructions.

5. Store the vacuum indoors. After use, store it to prevent accidents.

6. Before connecting the suction brush, floor tool, and crevice tool, unplug the unit from the outlet.

7. Turn off all controls before unplugging from the outlet.

8. When cleaning stairs, exercise extreme caution.

ELECTRICAL POWER

If the electrical circuit is overloaded with other appliances, the vacuum may not operate properly. The vacuum should be operated on a separate electrical circuit from other appliances in use.

SAFETY WARNING

Although the vacuum is easy to operate, the following cautions must be observed for your safety:

1. Do not place the vacuum near a heat source.

2. Do not disconnect the vacuum from the outlet by pulling on the power cord.

3. The vacuum must be disconnected from the outlet:

A. Before any cleaning or maintenance

B. If it appears to be faulty. THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. SAVE THIS MANUAL

MAIN PARTS

a. Product parts diagram and assembly

,,, _ _ 0

-+-- -

-- -0

8 Power switch

\$ Power cord 0 Main body C, HEPA filter

0 Foam filter

Ci) Dust container f) Power cord hook () Hose assembly

Ci) Floor brush

ASSEMBLY

1. Press the release button on the bottom to release the dust container.
2. Remove the dust container.
3. Ensure that the HEPA and filter cotton are securely in place.
4. Return the filter back into the collection container and attach the collection container to the machine.
5. Attach the hose assembly to the main body.
6. Hold the brush in line with the hose interface and slowly insert it.
7. Plug the cord into the outlet and ensure the connection is secure. Switch the vacuum on by sliding the "ON/OFF" switch forward.
8. To turn off the vacuum, slide the switch back and unplug the power cord after use.
- 9.

Remove the HEPA filter and empty the dirt from the dust container into the trash bin. If you are not using the power cord and during storage, wrap it around the cord holder. 11. Remove the connecting tube, insert the floor brush into the device, and use it as a handheld vacuum cleaner.

USER MANUAL

1. Ensure that the vacuum cleaner is turned off and unplugged from the power supply during assembly. After assembling the vacuum cleaner, make sure the HEPA filter is in place. 2. Plug the power cord into an electrical outlet. 3. Turn on the vacuum cleaner by sliding the ON switch located on the front of the main body near the top. 4. Turn off the vacuum cleaner by sliding the OFF switch. 5. After each use, unplug the power cord from the outlet.

CLEANING AND MAINTENANCE

WARNING: Always ensure that the vacuum cleaner is OFF and UNPLUGGED from the outlet before cleaning or attempting to store the device. NEVER SUBMERGE THE MOTOR in water or any other liquid. NEVER operate the vacuum cleaner without the dust container and HEPA filter in place. Never leave the appliance unattended; it may automatically restart. Even if the appliance stops working due to overheating, ensure that the appliance is turned off and unplugged from the power source. Wait until the appliance has completely cooled down, and then reconnect it to the power source. If the appliance stops functioning, take it to the nearest authorized service center for repair.

HOW TO CLEAN THE DUST CONTAINER

1. Press the dust container release button to remove the dust container. 2. Remove the HEPA filter and empty the dirt from the dust container into the trash bin. 3. Shake the HEPA filter over the trash bin to remove dirt from the filter. 4. Replace the HEPA filter into the dust container and securely attach the dust container to the main body.

HOW TO CLEAN THE VACUUM CLEANER

1. Wipe the outer side of the main body and handle with a damp soft cloth. 2. The dust collection container (without the HEPA filter) can be submerged in water for cleaning. However, do not use abrasive cleaning agents or place it in a dishwasher. Allow it to dry completely before reattaching it to the main body. 3. Shake the HEPA filter over the trash bin to remove dirt from the HEPA filter. If necessary, the HEPA filter can be rinsed with water. Allow it to dry completely before reinserting it back into the dust container. 4. Insert the HEPA filter into the dust container and securely attach the dust container to the main body.

Environmental Protection

Electronic waste marked in accordance with the European Union directive must not be disposed of together with other municipal waste. It is subject to separate collection and recycling at designated locations. By ensuring its proper disposal, you prevent potential negative consequences for the environment and human health. The system for collecting used equipment complies with local environmental protection regulations for waste disposal. More detailed information can be obtained from the municipal office, waste processing facility, or the store where the product was purchased. The product meets the requirements of the so-called new approach directives of the European Union (EU) regarding safety, health protection, and environmental protection, which specify hazards that should be identified and eliminated. This document is a translation of the original user manual created by the

manufacturer. The device is equipped with a rechargeable battery, which ages over time and with use due to its physical and chemical structure. The manufacturer specifies the maximum operating time of the device under laboratory conditions, where optimal operating conditions are provided, and where the battery is new and fully charged. Actual operating time may differ from the time declared in the offer and is not a defect of the device or product. The product must be regularly maintained (cleaned) by the user or a specialized service center at the user's expense. If the user manual does not specify information about necessary periodic maintenance or service actions, the user should regularly, at least once a week, evaluate the deviation of the physical condition of the product from that of a physically new product. If any deviation is detected or found, maintenance (cleaning) or service measures must be carried out immediately. If proper maintenance (cleaning) is not performed and no action is taken regarding the identified condition of deviation, permanent damage to the product may occur. The guarantor is not responsible for damages caused by negligence. Detailed information about the warranty conditions of the distributor/manufacturer is available at <https://serwis.innpro.pl/gwarancja>.