

Deerma Ηλεκτρική Σκούπα Stick DX700 PRO (Μαύρο)

DEERMA · EAN 6955578044069

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

Vertical Vacuum Cleaner Deerma DX700 PRO

Before use, carefully read the user manual. Additionally, this manual is available at the following website:

<http://www.deerma.com>

Warnings

Product Description

1. The vacuum cleaner is an electrical device. It should be used according to the operating conditions specified in the user manual. The manual should be stored properly for future reference.
2. Check and confirm that the vacuum cleaner's voltage must match the power supply voltage.
3. It is strictly forbidden to vacuum the following items, as it may cause damage to the vacuum cleaner or fire, which may lead to bodily injury or other accidents:
 - A. Heating objects, such as charcoal, etc.
 - B. Large pieces of sharp objects, such as glass, etc.
 - C. Harmful substances and water or other liquids (solvents, corrosive substances, etc.);
 - D. Flammable and explosive materials, such as gasoline or alcoholic products.
4. When the device is being cleaned, repaired, or temporarily not in use, the power supply must be disconnected. When the power is off, do not pull on the power cord; unplug it by holding the plastic part of the plug.
5. Do not immerse the vacuum cleaner in water, avoid proximity to heating devices, heating, or exposure to sunlight.
6. Do not allow children to play with the vacuum cleaner to avoid accidents.
7. Do not use the vacuum cleaner in the following cases:
 - A. If it has fallen and shows obvious damage or malfunction;
 - B. If the power cord is damaged. In this case, do not turn on the vacuum cleaner and immediately send it to a service center.
8. Avoid prolonged operation in case of blockage in the suction inlet to prevent motor damage and overheating of the vacuum cleaner.

9. If the power cord is damaged, it must be replaced by the manufacturer, its service representative, or a similarly qualified person to avoid hazards.

10. This device can be used by children aged 8 years and older and by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, provided they are supervised or have been instructed on the safe use of the device and understand the associated hazards. Children should not play with the device. Cleaning and maintenance should not be performed by children without supervision.

11. Before cleaning or maintaining the device, unplug it from the socket.

1) Power switch

f) Power cord

0 Main body

Q HEPA filter

0 Cotton filter

0 Dust container

f) Power cord hook

0 Tube assembly

0 Floor brush

G) Storage stand

Connection Diagram

This diagram is for reference only and may be updated without notice. It is subject to the physical product. The final right to interpret the diagram is reserved by the Company. Power off

AC. F -------

0.33μF

220-240V~50-60Hz

Motor

275V

AC.H ------

Product Parameters

0

Product model: DX700 Pro

N

Rated voltage: 220-240V

Rated frequency: 50-60Hz

Rated power: 650 W

Dust container capacity (L): 0.8 L

Suction power (kPa): 215 kPa

Noise (dB): 85 dB(A)

Usage

5. Assemble the tube assembly.
6. Keeping the brush in line with the tube connector, slowly insert it.
1. Remove the dust container.
2. Check if the HEPA filter and cotton filter are complete.
7. Turn on the vacuum cleaner.
8. Turn off the vacuum cleaner.
3. Ensure that the HEPA filter and cotton filter are firmly seated in place.
4. Install the dust container.
9. Remove dust.
10. Wrap the power cord around the hook when not in use.

Troubleshooting

Note: Before troubleshooting, first disconnect the power and unplug the device from the socket.

Reduced suction power or unusual noise. Cause: Suction blockage or motor overheating.

Blockage of the floor brush or suction inlet. Solution: Clean the accessories.

Blockage of the HEPA filter or foam filter. Solution: Clean or replace.

11. Remove the connecting tube, insert the floor brush into the device and use it as a handheld vacuum cleaner.

Solution: Check if the plug is properly connected to the socket or if the power is on.

Press the button at the bottom of the dust container, and then pull out the container as shown in the illustration. The device is not working. 2. Remove the filter assembly as shown in the illustration to ensure that the HEPA filter and cotton filter are suitable for servicing. Solution: Turn off the power switch, unplug the power cord from the socket, and clean the dust container, wait for 30 minutes, and then use the device again. 4. Position the notches on both sides of the HEPA filter correctly for installation. 4. Install the dust container in the appropriate place on the vacuum cleaner, and then press it as shown in the illustration to secure it. 5. Insert the connecting hose into the main body as shown in the illustration to ensure that the connecting hose is installed correctly. 6. Keeping the brush aligned with the connecting hose interface, insert it slowly. 7. Firmly and completely insert the plug into the socket, turn on the power, and press the power switch to position "1", as shown in the

illustration, after which the vacuum cleaner will start working. 8. Press the on/off button to position "O" and disconnect the vacuum cleaner. 9. Press the release button under the dust container to remove the filter assembly from the dust container and empty the dust into the trash bin. 10. Wrap the power cord around the power cord hook, and then lean it against the wall. 11. Disconnect the connecting hose, insert the floor brush into the device, and use it as a handheld vacuum cleaner. 12. First, remove the protective film from the storage stand and install it at a height of about 1050 mm from the floor. Then place the vacuum cleaner in the mounting slots of the handle.

User Instructions

1. Ensure that the vacuum cleaner is turned off and unplugged during assembly. Make sure that the HEPA filter is in place.
2. Firmly and completely insert the plug into the socket.
3. Slide the switch on the front of the body up to turn on the vacuum cleaner.
4. Slide the switch to turn off the vacuum cleaner.
5. After each use, unplug the device from the power supply.

<https://serwis.innpro.pl/gwarancja>

Cleaning and Maintenance

Daily Maintenance

WARNING: Before cleaning, ensure that the vacuum cleaner is OFF and DISCONNECTED FROM THE SOCKET. The device should be unplugged from the socket during storage. Do not immerse the vacuum cleaner motor in water or other liquids. NEVER use the vacuum cleaner without the dust container and HEPA filter.

Functional button for removing the brush

Never leave the device unattended while it is on, even if it has stopped working. If the device stops working due to overheating, ensure that the device is turned off and unplugged. Wait for the device to cool down completely, and then plug it back into the power supply. If the device does not work, it should be sent to the manufacturer's service.

HOW TO CLEAN THE DUST CONTAINER

Installation socket for the cleaning brush with a sharp element

1. Press the dust container release button to detach it.
2. Remove the HEPA filter and empty it.
3. Shake the HEPA filter over the trash container to remove dust from the filter.
4. Insert the HEPA filter and securely install it in the vacuum cleaner.

HOW TO CLEAN THE VACUUM CLEANER

1. Remove the HEPA filter, rinse it with water, and let it dry naturally. (Figure 1)
2. If there is a lot of hair on the wheels of the motorized floor brush or if they obstruct the rotation of the wheels, remove the rotating brush by pressing the button in the direction indicated by the arrow. (Figure 2)
3. The dust container (without the HEPA filter) can be immersed in water for cleaning. However, do not use abrasive cleaning agents or place it in the dishwasher. Before reattaching the container to the body, allow it to dry completely.
4. Shake the HEPA filter over the trash bin to remove impurities. If necessary, the HEPA filter can be rinsed with water. Before reinserting the HEPA filter, allow it to dry completely.
5. Replace the HEPA filter and securely mount it in the vacuum cleaner.

Useful Tips

1. Clean the HEPA filter and the motorized brush at least once a month. After cleaning, dry the HEPA filter before using it.
2. The vacuum cleaner must be

used with the HEPA filter installed. 3. Always check that the HEPA filter and rotating brush are installed and not damaged before reuse. This document is a translation of the original user manual created by the manufacturer.

The product should be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and responsibility. In the absence of information regarding necessary periodic or service maintenance actions in the user manual, the user should regularly, at least once a week, assess the physical condition of the product against that of a physically new product. In the event of detecting or identifying any discrepancies, urgent maintenance (cleaning) or service actions should be taken. Failure to properly maintain (clean) and respond upon detecting a discrepancy may lead to permanent damage to the product. The guarantor is not responsible for damages resulting from neglect.