 


# EJEAS®

Ride the wind and chase the dream,  
with safety as the guard.

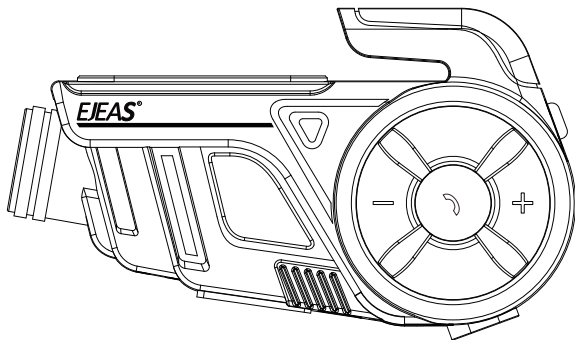

More  
Languages



 
| Certified Model | Version Model |
|-----------------|---------------|
| <b>K1</b>       | 4-Riders      |
|                 | Pro 6-Riders  |
|                 | Pro+ 8-Riders |

## User Manual


Mesh  
Group  
Intercom  
System

Q [www.ejeas.com](http://www.ejeas.com)

# Product Details

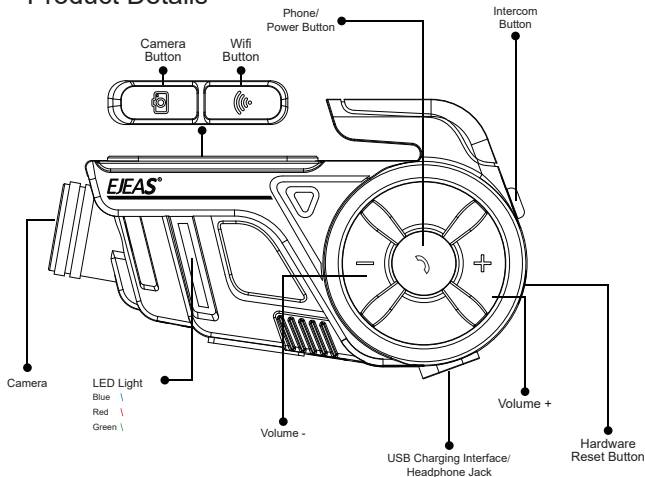


| Function<br>Model | Number of MESH Intercoms | Bluetooth Intercom | IP67 Waterproof | Voice Assistant | Use Intercom and Music Simultaneously | Music Share | FM Radio | 64G TF Card |
|-------------------|--------------------------|--------------------|-----------------|-----------------|---------------------------------------|-------------|----------|-------------|
| K1                | 4 People                 | ✓                  | ✓               | ✓               |                                       |             |          |             |
| K1Pro             | 6 People                 | ✓                  | ✓               | ✓               | ✓                                     | ✓           | ✓        |             |
| K1Pro+            | 8 People                 | ✓                  | ✓               | ✓               | ✓                                     | ✓           | ✓        | ✓           |

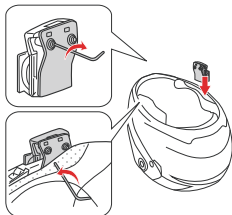 

Install the intercom onto the clip.

1

 Loosen the screw of the clip and install it on the helmet for fixation.

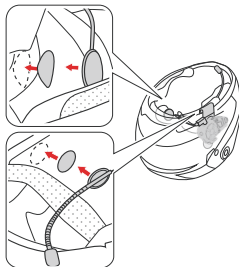


3

Use Velcro inside the helmet and adjust the Velcro/soft microphone to the appropriate position.


Organize the messy earphone cables inside and place them inside the helmet compartment for easy wearing.

 4

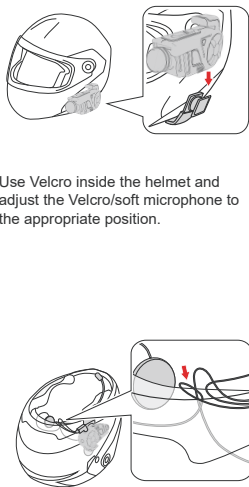


# Product Operation
 
## Operation Diagram

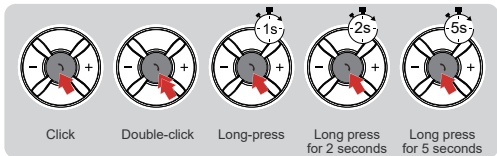


## Basic Operation

 **Power ON/OFF** Please charge it before using

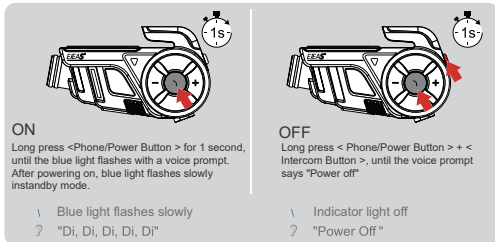

**Reset:** It will automatically power off while charging and can be used while charging after powering on.

### Low Battery Indication

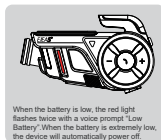 

### Charging Indication



### Hardware Reset



**Battery Inquiry:** After connecting to the phone via Bluetooth, you can see the power icon on the phone side.

## Mesh Intercom



 
When entering the Mesh intercom, Bluetooth music can be played at the same time .



Mesh intercom is a multi-hop technology mesh network intercom . On account of large number of participants and unrestricted location, people are able to move at will within the effective range. It is not only superior to the traditional Bluetooth chain intercom, but has a longer transmission distance and better anti-interference ability.

Features: The maximum number of intercoms for K1, K1pro, and K1pro+is 4 people, 6 people, and 8 people, respectively, for a total of 5 channels.If participating in campaign mode as a listener, there is no limit to the number of people who can join the intercom in a listen-only manner.

## Microphone Mute



When using Mesh Intercom, you can mute the microphone with a short press of the < Intercom Button >, so that the sound of your own voice will not be sent to others.


? "Microphone Mute"

Press <Intercom Button> to unmute.

? "Microphone unmute"


Note: Only valid for Mesh intercom.

## Pairing Steps as Members:

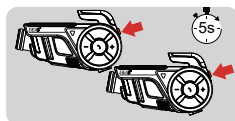 

- 1 All devices first enter the intercom pairing state, long press <Intercom Button> (about 5s) until you hear a prompt and the red light and green light flash alternately.

 \\ Red light and green light flash alternately  
? "Mesh Pairing"



- 2 Take one of them as the paired server, press <Intercom Button>, you will hear a beep and the red light and green light will flash alternately.


\\ Red light and green light flash alternately  
? "Bi"

Wait a moment and hear "Pairing Successful" from all devices, which means the pairing is successful.

? "Pairing Successful"

Wait a few moments and you hear the prompt "Channel n, xxx.x megahertz" from all the intercoms, you can start communicating and hear each other's voices.


## Intercom Reconnection

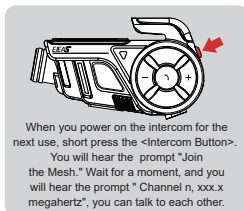 

When you power on the intercom for the next use, short press the <Intercom Button>.

You will hear the prompt "Join the Mesh." Wait for a moment, and you will hear the prompt "Channel n, xxx.x megahertz", you can talk to each other.

## Turn off MESH Intercom

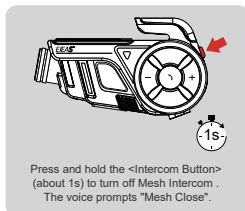 


Press and hold the <Intercom Button> (about 1s) to turn off Mesh Intercom. The voice prompts "Mesh Close".

If the device is powered off without turning the intercom off, the intercom will be automatically restored upon the next power-on.


## Pairing Steps as Listeners:

 In the case that other intercoms have formed a team, you can become the listener of the team through pairing.

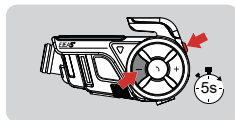

- 1 Take the intercom to be paired, enter listening mode pairing, long press <Intercom Button> + <Volume -> (about 5s), and prompt "Listen Mesh Pairing", the red light and green light will flash alternately.

 
\\ Red light and green light flash alternately  
? "Listen Mesh Pairing"



- 2 Take an intercom that has been paired as a paired server, entering listening mode pairing, and press and hold <Intercom Button> + <Volume -> (about 5s) to prompt "Listen Mesh Pairing".

Note: Unjoined machines can only be joined again through the server.

 ? "Listen Mesh Pairing"




- 3 Short press the <Intercom Button>, you will hear the prompt and the red light and green light will flash alternately.

\\ Red light and green light flash alternately  
? "Du"

Wait a moment and hear "Pairing Successful" from all intercoms. Wait a few more minutes and hear "Channel n, xxx.x MHz". This means that you have joined the intercom network and can communicate with others.

## Intercom Channel Switching

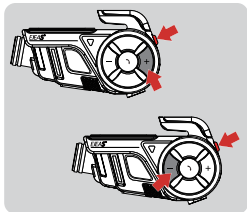 


There are 5 channels in total, short press <Intercom Button> + <Volume ->/<Volume +> to switch channels forward or backward. Note that the whole team needs to keep the same channel to talk to each other.

When the signal is unstable, you can switch channels to adjust.

? "Channel n, xxx.x MHz"

## Two-person Bluetooth Intercom
 
### How To Pair With The Device



- 1 After powering on the device, press and hold <Phone/Power Button> + <Volume +> (about 5s) until the red and blue lights flash alternately, and the pairing voice prompts "Intercom Pairing". Wait for connection to other intercoms.

\\ Red light and blue light flash alternately  
? "Intercom Pairing"




- 2 The other intercom enters the pairing state using the same operation. After the two intercoms discover each other, one of them will initiate the pairing connection.

The connection is successful and the intercom begins.

? "Pairing Successful"

### Pairing with The Old Models

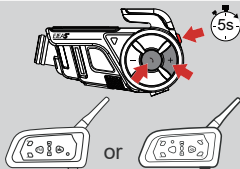 


- 1 Simultaneously press and hold <Phone/Power Button> + <Volume +> + <Intercom Button> for approx. 5 seconds to start pairing (red and blue lights flash alternately).

\\ Red light and blue light flash alternately  
? "Intercom Pairing"

- 2 For older models (V6/V4) follow the instructions to enter the search and wait for successful pairing.

### Intercom Connection

 

\\ Blue light flashes rapidly  
? "Intercom Connected"


### Intercom Disconnection



 
? "Intercom Disconnected"

## Pairing With Headsets or Other Branded Bluetooth Intercoms Search

Note: It is not guaranteed to be compatible with all Bluetooth headsets or intercoms on the market.

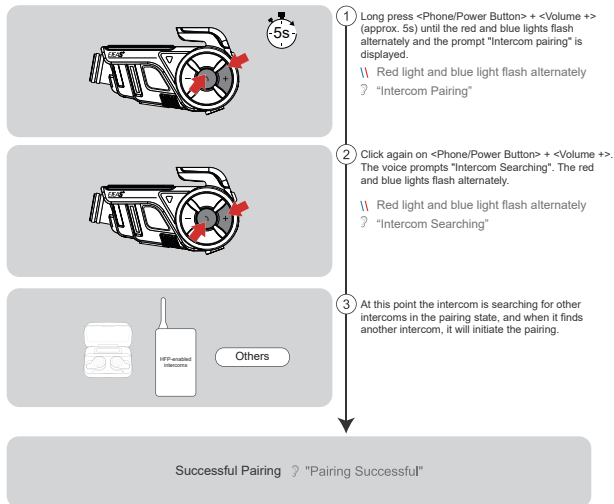


## Firmware Upgrades

 

Connect to the computer with a USB data cable. Download and open the "EJEAS Upgrade.exe" upgrade software. Click on the "Upgrade" button to start and wait for the upgrade to complete.

Note: Upgrading must use the standard data cable from EJEAS.

## Restore Default Settings

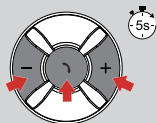 

Press and hold <Phone/Power Button> + <Volume +> + <Volume -> for about 5s, the voice prompts "Restore Default Settings" to delete the pairing record, and then automatically reboot the phone.

? "Restore Default Settings"

# Video Recording and Photography

## Camera On



- ① Short press the <Camera Button> and the voice prompt "Camera On" will appear.
- ② Wait for about 2-3 seconds before the camera is turned on and the voice prompt "Start Recording" is displayed.

## Camera Off



Long press and hold the <Camera Button>, and the voice prompt "Camera shutdown" will appear.

## Photograph



After turning on the camera, click the <Camera Button> and hear the sound "click", indicating that the camera has been taken.

## SD Card



The camera uses a Micro SD (tf) card and supports the format FAT32. Maximum supported capacity: 256GB (only cards with a capacity of 32GB are supported when camera firmware upgrade is required). It can be formatted through the APP.

- ① If no card is inserted or an unsupported format is used, photos and videos cannot be taken, and the voice prompt "No SD card" is displayed.
- ② If the SD card storage is full, the voice prompt "SD full" will appear.

## Roadcam APP

 
Before using the app, you need to first turn on the camera.



- ① Download and install the Roadcam app, click the <WiFi Button> to open WiFi, and the voice prompt "WiFi open" will appear.
- ② Then open the WiFi/WLAN settings on the phone and search for the WiFi name as K1\_XXXX, click to connect, and the default password is 12345678.
- ③ Open the RoadCam App and click on the middle camera icon to view the images captured by the camera, manage recording and photos, and other settings.

## Mobile Phone Pairing

This intercom supports connection to mobile phones for playing songs, making calls, and waking up voice assistants. Up to 2 mobile phones can be connected at the same time.

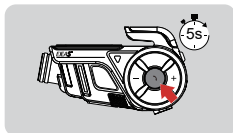

- 1 After powering on the device, press and hold (approx. 5s) the <Phone/Power Button> until the red and blue lights flash alternately and the voice prompts "Phone Pairing".

Red light and blue light flash alternately  
"Phone Pairing"



- 2 The phone searches for the device named "K1/K1Pro/K1Pro+" using Bluetooth. Click on it to connect.

**Connection successful** Blue light double flashes slowly  
"Pairing Successful, Connected"




Current battery level is displayed on the phone's Bluetooth icon

(Mobile phone HFP connection required)

### Bluetooth Reconnection With Mobile Phones

 
After switching on, it automatically connects back to the last connected phone Bluetooth. When there is no connection, click on the < Phone/Power Button > to reconnect with the last mobile device that was connected to Bluetooth.




## Mobile Control

### Call Answering

 When a call comes in, click on the <Phone/Power Button>



### Call Rejection

 


When a call come, press the <Phone/Power Button> for about 1s

### Hang Up



 
During a call, click on the <Phone/Power Button>

### Call Redial



When standby/playing music, quickly double-click the <Phone/Power Button>.


### Cancel Redial

 

During redial, click on <Phone/Power Button>


## Phone Priority

 When a call comes in, it will interrupt Bluetooth music, FM radio, intercom, and resume after hanging up.

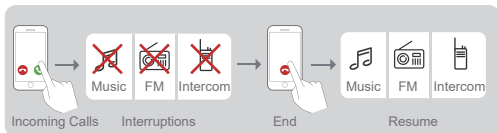

## Voice Assistant

 When in standby/playing music, press and hold <Phone/Power Button>, it depends on your mobile phone.

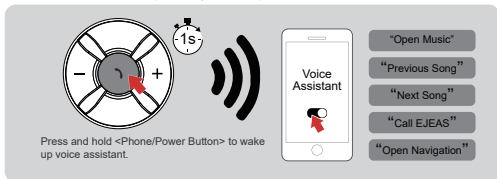

## Music Control

 
### Play/Pause




Music Playing




### Previous Song




Volume -

 

### Next Song

 


Volume +

 

## FM Radio

### FM On/Off 76~108MHz

 After turning on the FM radio, it will automatically search for stations and play the found station. FM can be turned on during the intercom, and you can listen to the radio while talking.

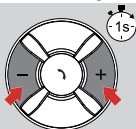


Press and hold <Volume +> + <Volume -> (approx. 1s). The prompt "FM Radio".

? "FM Radio"


Press and hold <Volume +> + <Volume -> (approx. 1s). The prompt "FM Radio Off".

? "FM Radio Off"

### Switching Channels

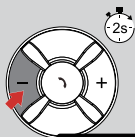 


Frequency -

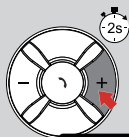 


Frequency +

### Volume Adjustment FM with a total of 7 volume levels

 When using FM alone




Volume-

 


Volume+

 When FM + Intercom



Volume-

 


Volume+


## Music Share

 Share the music played by Bluetooth on your phone to another device, and this function cannot be used during Bluetooth intercom.

This function cannot be used when two phones are connected simultaneously.

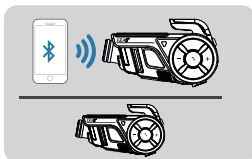

 - ① Take an intercom as the host, connect it to the phone, and the other one is the slave.




- ② Press the <Phone/Power Button>+<Volume -> at the same time between the host and slave to enter the music sharing search connection state.

? "Music Share"

After the connection is successful, play the phone music of the host, and the music can also be played from the speaker.

 ? "Music Share Connected"




Press the <Phone/Power Button>+<Volume -> again to exit music sharing.

? "Music Share Disconnected"

## Mobile App

 APP provides intercom group, music control, FM control, switch off, check authenticity and other functions.

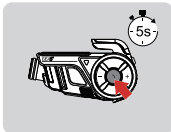


- ① Download and install EJEAS mobile APP for the first time.
- ② Press and hold (approx. 5s) <Phone/Power Button> until the red and blue lights flash alternately to enter phone pairing.  
// Red light and blue light flash alternately
- ③ Open the APP, click on the Bluetooth icon in the top right corner, the interface shows the name of the intercom device searched, select the intercom device to be connected, click to connect.  
(IOS system need to enter the phone pairing again, in the system settings->Bluetooth, connect audio Bluetooth).
- ④ Open the APP the next time you use it. Click the Bluetooth icon in the top right corner and click to select Intercom for connection from the paired devices.

# EUC Remote Controller (Optional)

 
## Buttons Introduction

| Buttons      | Actions                                              | Function                                                                                                                                                                 |
|--------------|------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Volume +     | Short press<br>(Music Alone<br>or FM Alone)          | Intercom Volume +/-<br>Music Volume +/-<br>FM Volume +                                                                                                                   |
|              | Long press                                           | Next song when<br>music is playing.<br>Increase the frequency<br>when FM is on                                                                                           |
|              | Double click<br>(Simultaneous Music<br>and Intercom) | Intercom Volume +/-<br>Music Volume +/-<br>FM Volume +                                                                                                                   |
| Volume -     | Short press<br>(Music Alone<br>or FM Alone)          | Intercom Volume -/<br>Music Volume -/<br>FM Volume -                                                                                                                     |
|              | Long press                                           | Previous song when<br>music is playing.<br>Decrease the frequency<br>when FM is on                                                                                       |
|              | Double click<br>(Simultaneous Music<br>and Intercom) | Intercom Volume -/<br>Music Volume -/<br>FM Volume -                                                                                                                     |
| Phone Button | Short press                                          | 01. Answer a call<br>when it comes in<br>02. On call, hang up<br>03. Music play/pause<br>04. When no mobile<br>phone is connected<br>Connect the last<br>connected phone |
|              | Long press                                           | Reject calls<br>Voice assistant                                                                                                                                          |
|              | Double click                                         | Last number redial                                                                                                                                                       |
| A Button     | Short press                                          | 01. Turn on<br>mesh intercom<br>02. Mute/unmute<br>microphone when<br>mesh is connected                                                                                  |
|              | Long press                                           | Turn off<br>mesh intercom                                                                                                                                                |
|              | Double click                                         | Switch VOX sensitivity<br>during Mesh intercom                                                                                                                           |
| B Button     | Short press                                          | 01. Photograph<br>02. Turn on the camera                                                                                                                                 |
|              | Long press                                           | Turn off the camera                                                                                                                                                      |
|              | Double click                                         | None                                                                                                                                                                     |

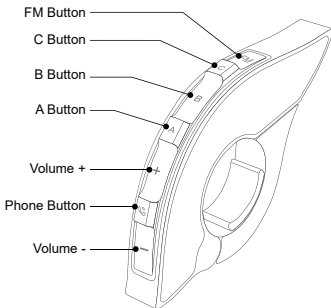

| Buttons                    | Actions             | Function                                  |
|----------------------------|---------------------|-------------------------------------------|
| C Button                   | Short press         | Initiate Bluetooth<br>Intercom Connection |
|                            | Long press          | Disconnect the<br>intercom                |
|                            | Double click        | Music sharing start/end                   |
| FM Button                  | Short press         | Turn FM on/off                            |
| Volume -<br>+<br>FM Button | Super<br>Long Press | Clear handle<br>pairing records           |


## EUC Pairing

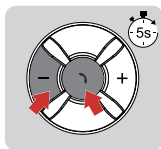 

- 1 Press and hold the <Phone/Power Button> + <Volume -> for about 5s to enter the pairing mode, the voice prompts "Remote Control Pairing", the red and blue lights flash alternately, if the pairing is not successful within 2 minutes, exit the pairing.

\\ Red light and blue light flash alternately

 ? "Remote Control Pairing"

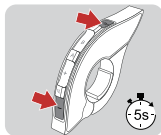

- 2 Press and hold the < FM Button >+ < Volume - > on the handle for about 5s to clear the record until the red and blue lights come on.

\\ Until the red and blue lights come on



- 3 Click any button of EUC

**Pairing Successful** ? "Pairing Successful"

(No successful pairing within 2 minutes, exit the pairing)


## EUC Handle Operation

 Mesh intercom reconnect/disconnect and mobile phone control are the same as on the machine.

**Bluetooth Intercom  
Connection**



**Bluetooth Intercom  
Disconnection**

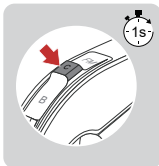

**FM  
On/Off**

