
Παγομηχανή Euhomey IM001, 1,2 l, 12 kg (μαύρη)

EUHOMY · EAN 5905156101289

Machine translation from Polski. In case of doubt the
manufacturer's original document prevails.

EUHOMY

IM001-B ICE MAKING DEVICE

User Manual

SKU: IM001-BBL-USEH



THANK YOU

for purchasing the Euhomy ice maker



Scan the QR code using your mobile device.

ACTIVATE WARRANTY.

<https://euhomy.com/pages/activate-warranty>



SAVE THIS INFORMATION

Model Number _____
Number 001-B _____
Serial Number _____
Number _____
Date of Purchase _____
Purchase _____
Store of Purchase _____
Purchase _____
(Keep receipt)
(Please keep the receipt)

TIP

Check the back or side of the device for the serial number on the nameplate.

For car refrigerators, it is usually located on the bottom or side. If you cannot find it, do not worry — it will not affect the warranty registration.

CUSTOMER SERVICE



1-833-362-2655
(US)



support@euhomy.com
<https://euhomy.com>



JOIN US

euhomyofficial



EuhomyOfficial



Euhomy_global

euhomy



SCAN HERE to share tips, get support, and connect with other users.

Table of Contents

Important Safety Instructions	01
Key Features and Construction	03
Get to Know Your Ice Maker	04
Installation Instructions	05
Cleaning the Ice Maker Before First Use	07
How to Operate the Ice Maker	08
Preparing the Ice Maker for Long-Term Storage or Moving	10
Cleaning the Ice Maker	11
Frequently Asked Questions	14
Troubleshooting	15
Warranty Policy	18

IMPORTANT SAFETY INSTRUCTIONS

-  Read and understand the instructions to know how to operate and use the product.

All safety messages will be preceded by the warning symbol and the words "DANGER" or "WARNING." This indicates the presence of a hazard that can cause bodily injury, death, or substantial property damage if the warning in this symbol is ignored.

WARNINGS

Failure to follow these instructions may result in electric shock, fire, or burns, which can lead to property damage, bodily injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Unplug the ice maker from the power source before cleaning, repairing, or servicing.
2. Exercise caution and provide proper supervision when using the appliance near children.
3. Do not use this or any other appliance with a damaged cord. If the power cord is damaged, it must be replaced by the manufacturer, service agent, or a similarly qualified person to avoid hazards. The ice maker must be positioned so that the plug is easily accessible.
4. For optimal performance and safety, place the ice maker in a location where the plug is easily accessible. Plug it into a polarized, dedicated outlet, avoiding circuit overload by sharing it with other appliances. To ensure a safe connection, fully insert the plug into the outlet.
5. Do not place the power cord on carpets or other heat-insulating surfaces. Do not cover the cord. Keep the cord away from high-traffic areas. Do not immerse the cord in water.
6. We do not recommend using an extension cord that may overheat and pose a fire hazard. If an extension cord is necessary, use a cord with a minimum gauge of 14 AWG and a rating of at least 1875 W.
7. Do not use the ice maker outdoors. The appliance is intended for indoor use only.
8. The ice-making device should be placed in an area not exposed to direct sunlight.
9. Maintain at least 15 cm (6 inches) of clearance between the back of the ice-making device and the wall.
10. Maintain at least 15 cm (6 inches) of clearance around the appliance.

11. Do not use liquids other than drinking water to make ice cubes.
 12. Do not clean the ice maker with flammable liquids. Vapors may create a fire or explosion hazard.
 13. Do not tilt the appliance.
 14. If the ice maker has been in a cold environment, wait a few hours before plugging it in to allow it to reach room temperature.
 15. The appliance must be grounded.
 16. To prevent hazards due to instability, the appliance must be placed on a flat and even surface.
- Before installing or servicing this product, read the repair manual/user manual. Follow all safety precautions.
- The appliance must be disposed of in accordance with federal or local regulations. Follow all instructions for handling the appliance to ensure safe disposal.
- DO NOT** use mechanical devices to defrost the ice maker.



DO NOT puncture the refrigerant tubing.

- Servicing may only be performed by trained personnel.
- The ice maker should comply with safety standards for refrigeration systems (ASHRAE15) and should not be installed in hallways or lobbies of public buildings.
- The appliance should be regularly cleaned and maintained according to the Cleaning section 8: Maintenance of this manual.
- Fire or explosion hazard – use of flammable refrigerant
- ①
- ②

Ice container;


- ④ Top cover (lid) with a transparent window;
- ⑤ Air outlet;
- ⑥ Drain plug at the back of the appliance;
- ⑦ Maximum water level indicator: remove the ice container to see the water level marking;
- ⑧ Handle.

4 6

5 5

Accessories

3 1x handle

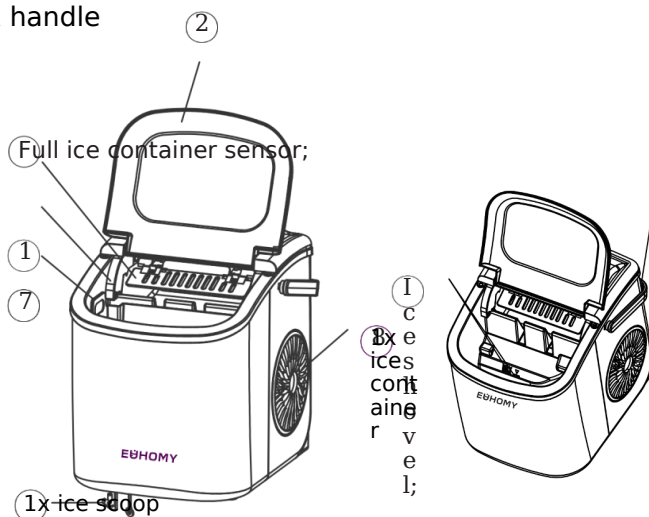

KEY ELEMENTS AND STRUCTURE

 
1x user manual

ice scoop
ice container
03



ADD WATER

04
ON/OFF

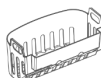

b. In standby mode, press and hold this button for 5 seconds to activate the self-cleaning function. The ADD WATER and ICE FULL indicators will flash. Press again to start the cleaning function.

B. POWER Indicator: In standby and ice-making mode, the POWER indicator remains green.

C. ICE FULL Indicator: This light turns on, signaling that the ice container is full. When this light is on, the appliance stops making ice.

D. ADD WATER Indicator: This light turns on, signaling that there is no water in the reservoir.

ADD WATER ICE FULL POWER

ON/OFF

A
B
C
D

05

INSTALLATION INSTRUCTIONS


1. Setting up the ice maker

A. Unpacking and Inspection

Remove all external and internal packaging. Check that all accessories are included in the set. If anything is missing, contact our customer service department.

B. Preparing the ice maker

Remove all tapes and straps from the appliance; take out the accessories located inside the ice maker. Clean the interior of the housing and the ice scoop with a damp cloth.

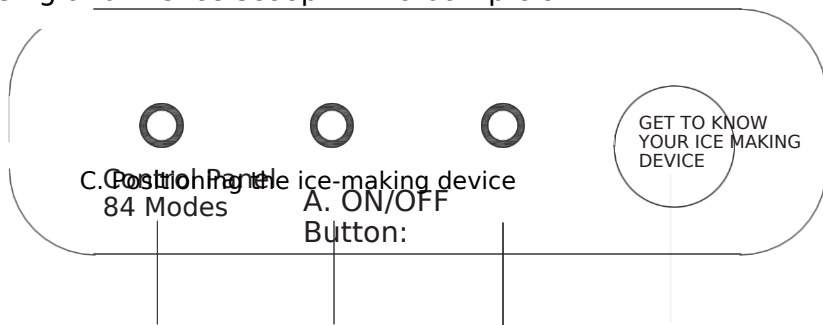

D. Allow the refrigerant to stabilize

E. Accessibility of the plug

Position the appliance so that the plug is easily and directly accessible.

Important Safety Warnings

Caution: The appliance must be grounded

- Plug the appliance into a grounded outlet; never remove the grounding pin.

DO NOT use an adapter or extension cord. Failure to follow these instructions may result in fire, electric shock, or death.

Electrical Connection

- Provide a dedicated outlet for the ice maker.
- Use outlets not controlled by a switch.
- For replacement of the power cord or plug, contact a qualified technician.

Requires a grounded outlet of 110-120 V, 60 Hz.

Grounding Method

For safety reasons, the appliance must be grounded. Use the provided grounding plug and connect it to an appropriate grounded outlet. If such an outlet is not available, contact a qualified electrician to have one installed.

06

2. Install the handle

Rotate the handle to fit it into the mounting hole in the machine, and then secure it.

07

CLEANING THE ICE MAKING DEVICE BEFORE FIRST USE

08

HOW TO OPERATE THE ICE MAKING DEVICE

3. Water addition indicator

If the ADD WATER indicator lights up and the appliance stops working, add water to the reservoir, and the appliance will automatically restart.

09


10

PREPARING THE ICE MAKING DEVICE FOR LONG-TERM STORAGE OR MOVING

If the ice maker will not be used for an extended period or needs to be moved to another

2. Install the bracket

Rotate the bracket to fit it into the mounting hole in the machine, and then secure it.

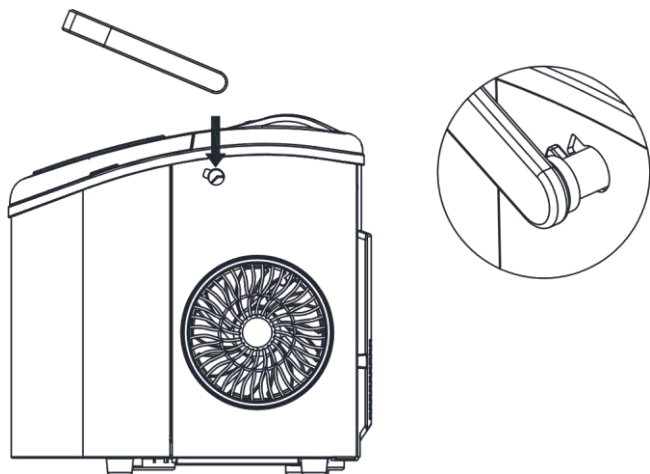

CLEANING THE ICE MAKER BEFORE FIRST USE

* We recommend using our cleaning agent for product maintenance.

1. Remove the ice container.
2. Clean the interior with warm soapy water and a soft cloth. We recommend using our cleaning agent.
3. Rinse the interior and internal parts with clean water. Drain the water by removing the drain plug located at the front bottom. Insert the ice basket and connect the power.
4. Press the ON/OFF button and hold it for 5 seconds. The device will start a 30-minute self-cleaning program, and the ICE FULL and ADD WATER indicators will blink simultaneously.
5. After the self-cleaning process is complete, disconnect the device from the power supply and drain the water. Don't forget to reinsert the drain plug.
6. Clean the exterior of the ice maker with a mild detergent and warm water.
7. Your ice maker is ready for use!

HOW TO OPERATE THE ICE MAKER

WARNINGS

- * Before first use or after a long break in using the ice maker, it is recommended to clean it beforehand.
- * Before starting ice production, ensure that the water drain plug is inserted into the device; otherwise, the ice-making function will not operate correctly.
- * Fill the device only with drinking water. Use only drinking or distilled water.

1. Starting the device

Step 1: Remove the ice container and fill the tank with drinking water.

Step 2: Place the ice container back in its position.

Step 3: Connect the device to the power supply, and the ice maker will enter standby mode, with the POWER light turning red.

2. Ice production process

-

Press the ON/OFF button to start the device. The device will begin making ice when the POWER indicator lights up green.

-

Press the ON/OFF button again to stop ice production.

3. Water addition indicator

-

If the ADD WATER indicator lights up and the device stops working, add water to the tank, and the device will automatically restart.

4. Ice full indicator

-

When the ICE FULL indicator lights up, the device will stop working. To resume operation, the ice must be removed.

-

When the cover detects that the ice has fallen, it will automatically reset and start a new ice production cycle.

5. Turning off the device

-

Step 1: Briefly press the ON/OFF button to stop ice production and enter standby mode.

-

Step 2: Disconnect the power supply to turn off the ice maker.

6. Automatic self-cleaning program

a. Default cleaning time: 30 minutes.

b. How to start self-cleaning

-

Insert the water drain plug into the ice maker.

-

Fill the tank with drinking water, not exceeding the MAX line.

-

Press the ON/OFF button for 3 seconds.

-

The ADD WATER and ICE FULL lights will blink alternately.

c. How to cancel self-cleaning

-

The program will automatically end after the cleaning is complete.

-

Press the ON/OFF button during the cleaning procedure to cancel it manually.

d. How to clean the top cover

-

After the cleaning procedure is complete, open the top cover and remove the ice basket. Rinse the main tank and the additional water tank.

e. How to drain dirty water

-

Slide the ice maker to the edge of the countertop or table. Ensure that the device is stable.

-

Make sure there is a container for water (e.g., a sink) under the device.

-

Remove the drain plug from the bottom. Allow the dirty water to flow into the water container. Then reinsert the drain plug.

Note: Hygiene precautions

-

To ensure proper hygiene, change the water in the tank every 24 hours.

-

+ If the ice maker will not be used for at least one day, drain all the water and dry the tank.

PREPARING THE ICE MAKER FOR LONG-TERM STORAGE OR TRANSPORT

If the ice maker will not be used for an extended period or needs to be moved to another place, it must be properly operated and maintained. Familiarize yourself with the following tips.

1. Daily usage tips

Fill the device only with drinking water. Use only drinking water. The ice maker is intended for indoor use only. Place the ice maker on a level, flat surface, away from direct sunlight and heat sources (e.g., stove, oven, radiator). Ensure at least 15 cm of clearance between the sides of the device and the wall.

2. Regularly drain water

To maintain optimal sanitary conditions, we recommend changing the water in the tank every 24 hours. To prevent potential issues such as mold or fungus growth, if the device will not be used for more than 24 hours, it is recommended to thoroughly empty the tank.

3. Cleaning and disinfection

Clean the ice maker at least once a week, and perform a thorough cleaning once a month. Disconnect the power before cleaning: Always disconnect the ice maker from the power supply before cleaning.

Avoid using strong chemicals: For best results, use a special ice maker cleaning solution. Avoid using strong chemicals, including alcohol, vinegar, or other acids, as they may damage the evaporator and shorten the lifespan of the device.

Thorough cleaning before use: If the ice maker has not been used for an extended period, it should be thoroughly cleaned before reuse.

4. Store properly

4. Store properly


Completely dry: Before storing, ensure that the ice maker is completely dry.

Cover: Cover the ice maker with a plastic bag to protect it from dust.

CLEAN THE ICE MAKING DEVICE

1. DAILY CLEANING

Step 1: Disconnect the ice making device from the power supply.

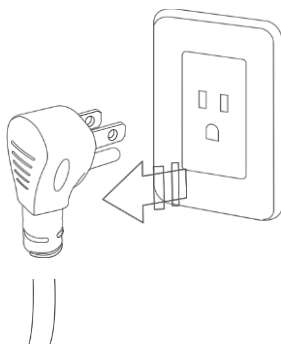


Step 2: Remove the lower drain plug and drain the water into the sink.

Step 3: Fill the tank with water until the maximum water level is reached.

Step 4: Plug the ice maker back in. Press and hold the ON/OFF button for

5 seconds to start the 30-minute cleaning process.

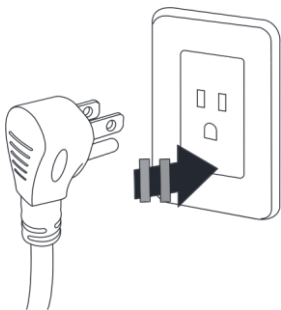

Step 5: After cleaning is complete, remove the drain plug and drain the water into


the sink. Don't forget to reinsert the drain plug at the bottom.

Step 6: Once finished, fill the device with drinking water. You can press the

ON/OFF button to restart the production of clean ice.

2. MONTHLY CLEANING

Step 1: Disconnect the ice making device from the power supply.

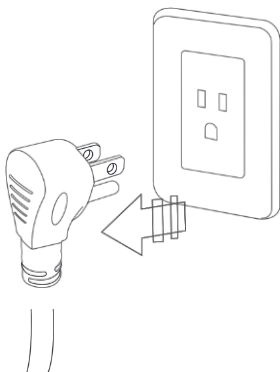

Step 2: Empty the ice cubes, remove the lower drain plug, and drain the water into


the sink, disconnecting the drain plug from the front at the bottom.

Step 3: Reinsert the drain plug. Rinse the interior and internal parts with clean water, then drain the water.



Step 4: Pour the cleaning solution into the tank up to the MAX level.

Step 5: Plug the ice maker back in. Press and hold the ON/OFF button for 5 seconds to activate the self-cleaning function.

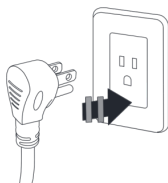

Step 7: Unscrew the drain plug and drain the water into the sink.
Step 8: Reinsert the drain plug at the bottom.
Step 9: If necessary, run the cleaning function for additional cycles.
Step 10: After completion, fill the device with fresh water. You can press the ON/OFF button to restart the production of clean ice.

Note:

1. Avoid strong chemicals: Do not use strong chemicals or abrasive cleaners directly on any part of the ice maker. They can damage the surface and affect the taste of the ice.
2. Regular cleaning: To ensure optimal performance, the ice maker should be cleaned regularly.
3. Although the self-cleaning mode is helpful, it does not replace manual cleaning. The ice maker still requires manual cleaning. Use a mild cleaning agent approved for food contact (e.g., vinegar solution or descaling agent approved by the manufacturer) and a soft brush to scrub all internal surfaces, including hidden corners and crevices.
4. Since the ice maker is constantly in contact with water, any moisture, if not properly removed, can lead to mold growth over time. After use, the device should be dried. Always drain any remaining water and wipe the interior after cleaning to prevent moisture buildup and mold growth.
5. By following these simple tips, you can keep the ice maker clean and hygienic, ensuring a constant supply of fresh and clean ice.

PROPER DISPOSAL OF THIS PRODUCT



When the device is taken out of service, its disposal and handling of materials must comply with national regulations.

FAQ

1. How often should the ice maker be cleaned?

To ensure optimal performance, the ice maker should be cleaned at least once a week, depending on usage intensity. Regular cleaning prevents the buildup of scale, which can block the pump over time and cause device failure.

2. How to clean the ice maker?

It is recommended to clean it daily once or twice a week and perform a monthly cleaning once a month. Immediately after cleaning, the device should be emptied and then rinsed with clean water.

To maintain optimal performance and ice quality, it is recommended to empty the water tank at least once every three days. This routine maintenance helps minimize water hardness, eliminate contaminants, and prevent scale buildup in the tank.

3. Why are the ice cubes cloudy?

Cloudy ice cubes often result from using water that is not suitable for ice production. To achieve clearer ice, use drinking or distilled water. If water quality remains low, consider installing a water filter kit.

4. Can I pour milk or juice into the tank?

No, we strongly advise against this. High concentrations of milk or juice can clog the pump and shorten its lifespan. Additionally, milk proteins can calcify and react with the internal PU water tube of the device, potentially causing damage.

5. Why do my ice cubes melt quickly?

The ice making device does not have a freezing function that would allow for ice storage. High ambient temperatures, especially in summer, can accelerate melting. To slow down melting, follow these tips:

- Close the top cover (lid) to maintain internal temperature.
- Place a fan near the device to disperse heat.
- For long-term storage, transfer ice cubes to the freezer.

6. Why do our ice cubes stick together?

- Too long of an ice making cycle: stop the ice making device and restart it after the ice blocks have melted.
- Low water temperature in the tank: Fill the tank with water at a temperature between 40°F and 90°F.

7. Why do the ice cubes I made smell like plastic or dirty water?

Ice cubes from this device should be tasteless and odorless. If you detect a plastic smell, try performing the following thorough cleaning steps:

- Disconnect the device from the power supply for 2 hours to allow the ice cubes in the ice maker to melt;
- Empty the device of water;
- Add about 600 ml/200 oz (approximately 2 and 1/2 cups or 0.6 liters) of the ice maker cleaning solution to the water tank.
- Run the cleaning function and wait for the cleaning to complete;
- Then wait 4 hours and empty the ice maker of the cleaning solution;
- Add clean drinking water to the tank and run the cleaning function again.

8. Why does my device make sounds during operation?

- During operation, the device may make a gentle sound. Closing the top cover (lid) may help minimize noise levels.
- If you notice excessive noise coming from the device, it is recommended to perform a thorough cleaning (see instructions in FAQ section 7). This may alleviate the noise issue.

9. Why is water leaking from my machine?

- Leaks may occur if the internal water tube inside the ice maker becomes disconnected during transport. If you are familiar with basic appliance repairs, remove the back cover and reconnect the tube. If you are unsure or do not want to open the machine, contact Euhomy customer support for detailed instructions.

10. Why does water flow but no ice is produced?

- Ensure that the ice maker operates at room temperatures between 50°F and 105°F. For

the ice maker to function, use water temperatures between 40°F and 90°F. To assist you further, please send us a video or photo showing the problem.

The Euhomy team

will be happy to provide you with tips and support.

If you need further assistance, contact the Euhomy support team!

1-833-362-2655(US)
support@euhomy.com
<https://euhomy.com>

16

Problem

TROUBLESHOOTING

Use distilled water

No water	Turn off the ice maker, fill the tank with water to the MAX level, and press the ON/OFF button again to restart the device.	Misaligned conductive pin
		Damaged pump
	Check if the tank contains water. If there is water in the tank and the pump is silent, contact the service team for assistance.	The "ICE FULL" indicator lights up
	The ice container is full Remove the ice from the ice container and press the "ON/OFF" button again.	Strong light caused sensor malfunction
Move the ice maker to a darker place to restart the ice making process.	The ice making device does not respond after power on.	
	The outlet is not powered	Ice maker motor failure
Try a different outlet	Please contact our after-sales team for replacement	The drain plug is not in place or is missing
	Water leak	Broken water pipe or pump
Check the lower drain plug. Remove the back panel and check the internal water lines and water pump.		Noise from the water pump: During water pumping
	Noise from the ice maker	Noise from the ice maker compressor: Quiet during self-cleaning
Use the ice maker cleaning solution to run the self-cleaning mode for 2-3 cycles. If the noise persists, contact the service team.	For replacement, please contact the after-sales service team.	MODEL
	17	IM001 -B

The ice full indicator is lit, but the ice maker does not stop.	Location of the ice bin blocking sensor	Ice level sensor failure
Check if the ice bin is blocking the bin full sensor and remove the obstruction.	Block the ice level sensor with your finger. If the indicator does not change, contact the service team.	The ice making cycle is too long.
	Ice cubes are sticking together	The water temperature in the internal tank is too low.
Turn off the ice maker and wait for the ice to melt. Then turn the device back on.	Replace the water. The recommended water temperature is between 40°F and 90°F.	Room temperature or the water temperature in the internal tank is too high.
	The ice making cycle is normal, but no ice is produced.	Refrigerant leak from the cooling system.
The pipe in the cooling system is blocked.		Technical specifications
	Please contact us at support@euhomy.com.	Type of protection

Power

Current during ice making

115V/60Hz	1.5A
Current during ice collection	1.8A
Refrigerant	R600a, 0.57 oz/16g Δ
Design pressure, high side	290psig
Design pressure, low side	88psig
Blowing agent	C 5 H10
Net weight	12.43 Lbs
Dimensions	9.3*11.6*11.4
Housing	SUS
''	Make only 2 or 3 ice cubes at a time.
18	https://euhomy.com
1-833-362-2655(US) support@euhomy.com	

WARRANTY POLICY

Euhomy makes every effort to deliver products of the highest quality and provide excellent customer service. We 100% believe in our products and are ready to support you at every stage. To activate the warranty, please visit <https://euhomy.com>. For customer service assistance, please contact us at any time.

If you need additional assistance, contact the Euhomy support team!



1-833-362-2655(US)
support@euhomy.com

<https://euhomy.com>

Business hours: Monday to Friday, from 9:00 AM to 6:00 PM (Eastern Time)

Euhomy Limited One-Year Warranty

The one (1) year limited warranty applies to purchases made on this website or through official Euhomy sales channels such as Amazon, TikTok, and Walmart. It covers only the original owner and product and is not transferable. For purchases made through unauthorized sellers, we recommend contacting them directly. Euhomy guarantees that the device will be free from material and workmanship defects for one year from the date of purchase, provided it is used under normal household conditions and maintained according to the user manual. The warranty is subject to the following conditions and exclusions:

What does the warranty cover?

If the original device or non-wear parts are deemed defective by Euhomy, we will arrange for repair or replacement within one year from the date of purchase. In the case of receiving a replacement device, the warranty will remain in effect for the remainder of the original warranty period.

What is not covered by the warranty?

- (a) Normal wear and tear of the device or parts, as well as any parts lost or damaged due to user fault after delivery; spare parts are available for sale. Please contact us using the methods below.
- (b) Damage caused by improper use, incorrect handling, accidents, or failure to follow the user manual.
- (c) Damage caused by contact with liquids other than water or foreign substances.
- (d) Repairs or modifications not carried out by Euhomy.
- (e) Use in commercial conditions or outside the household (except for commercial models).

How to get technical support?

If your device is not functioning properly or you need assistance, we offer several ways to contact us. You can reach us by calling 1-833-362-2655 or sending an email directly to support@euhomy.com. For certain product categories, we also offer the option to extend the warranty to our VIP service. Our phone lines are open Monday to Friday from 9:00 AM to 6:00 PM (Eastern Time), and we typically respond to emails and forms within 24 business hours. To help us assist you better, we recommend registering your product online at 1-833-362-2655 and preparing the device before contacting us. If you contact us via email, our messages may end up in your spam folder, so please check that folder to avoid missing our response. When reporting a warranty service, proof of purchase will be required. In addition to the one-year warranty, we offer lifetime technical support. After the warranty expires, service can be ordered for an additional fee.

If you have any problems, please contact us at any time.

Environmental Protection



Waste electrical and electronic equipment marked in accordance with the European Union directive must not be disposed of together with other municipal waste. It is subject to selective collection and recycling at designated points. By ensuring its proper disposal, you prevent potential negative consequences for the natural environment and human health. The waste collection system complies with locally applicable environmental protection regulations regarding waste disposal. Detailed information on this can be obtained from the municipal office, waste management facility, or the store where the product was purchased. The product meets the requirements of the so-called New Approach directives of the European Union (EU) concerning safety, health protection, and environmental protection, identifying hazards that should be detected and eliminated.



This document is a translation of the original user manual created by the manufacturer.

Detailed information on the warranty conditions of the distributor/manufacturer is available at <https://serwis.innpro.pl/gwarancja>

The product should be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and responsibility. If there is no information about necessary periodic or service maintenance actions in the user manual, the user should regularly, at least once a week, assess any deviation of the physical condition of the product from that of a physically new product. If any deviation is detected or noted, urgent maintenance (cleaning) or service steps should be taken. Failure to properly maintain (clean) and respond upon detecting a state of deviation may lead to permanent damage to the product. The warranty provider is not responsible for damages resulting from neglect.

Importer: **INNPRO**

INNPRO Robert Błędowski sp. z o.o.
ul. Rudzka 65c
44-200 Rybnik, Poland
tel. +48 533 234 303
hurt@innpro.pl
www.innpro.pl

Manufacturer
Ningbo Hoome Information Technology Co., Ltd.
Room 602-2, Building 1-2, Qianyang Star Plaza, No. 996,
Changxing Road, Jiangbei District, 1-2 / 602-2
31500 Ningbo, Zhejiang,
China
support@euhomy.com

Responsible entity in the EU
SUCCESS COURIER SL
CALLE RIO TORMES NUM. 1, PLANTA 1, DERECHA, OFICINA 3,
Fuenlabrada 3
28947 Madrid
Spain
successservice2@hotmail.com

Warnings and Safety Information

All information regarding the operation of the device can be found in the user manual. Before you start using it, familiarize yourself with its content and follow the instructions provided.

Before use, also familiarize yourself with the following information:

Usage Warnings

1. **Child Safety:**

- Products in this category are not intended for use by children. Keep them in places inaccessible to young children to avoid accidental activation, swallowing small parts, or contact with hot surfaces.
- Do not leave operating devices, such as shoe dryers or fabric shavers, unattended in the presence of children.

2.

Risk of Injury and Damage:

- For devices with blades (e.g., fabric shavers), exercise caution during use and maintenance to avoid cuts.

3. **Electrical Safety:**

- For electrical devices, such as shoe dryers, fabric shavers, or dehumidifiers, connect them only to electrical outlets that comply with their technical specifications.
- Do not use devices if the power cord, plug, or housing is damaged.
- Never immerse electrical devices or their parts in water unless the manufacturer explicitly recommends such action (e.g., for specific components).

4. **Safe Use of Water and Moisture:**

- For dehumidifiers, ensure they are placed in areas with elevated humidity but away from water sources, such as showers or sinks.
- Shoe dryers intended for wet footwear should be used according to the instructions to avoid short circuits or damage to the device.

5.

Overheating Protection:

- Heat-generating devices (e.g., shoe dryers) should be used according to the maximum operating time recommended by the manufacturer to prevent overheating.
- Ensure that devices are placed on a stable surface, away from flammable materials.

Information on Proper Use

1. **Preparing the Device for Operation:**

- Before first use, read the user manual, ensuring that all device components are correctly assembled or prepared.

2.

Operating the Device:

- Use products according to their intended purpose and the manufacturer's recommendations. Do not use them on materials or surfaces that may be damaged (e.g., delicate fabrics or uneven surfaces).
- Products such as fabric shavers or shoe dryers should be used on materials that comply with their specifications.

3. **Cleaning and Maintenance:**

- Regularly clean devices, such as fabric shavers, from fiber residue or dust to ensure their long-lasting effectiveness.
- Before cleaning, disconnect electrical devices from the power supply and ensure they are completely cooled down (for heat-generating devices).

4. **Storage:**

- Store devices in a dry and safe place, protecting them from moisture and mechanical damage.
- For self-adhesive products, ensure that spare parts are stored in their original packaging to maintain their adhesive properties.

EUHOMY

Live the *cool life*



support@euhomy.com



<https://euhomy.com>



1-833-362-2655 (US)