

Παγομηχανή Euhomy IM001, 1,2 l, 12 kg (ασημί)

EUHOMY · EAN 5905156101296

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

IM001-B

ICE MAKER

User Manual

SKU: IM001-BSI-USEH

support@euhomy.com <https://euhomy.com> 1-833-362-2655 (US)

THANK YOU

for purchasing the Euhomy ice maker

Scan the QR code with your mobile device.

ACTIVATE WARRANTY.

SAVE THIS INFORMATION

IM001-B

Model Number _____

Serial Number _____

Check the back or side of the device for the serial number on the nameplate.

Date of Purchase _____

Store of Purchase _____

(Keep receipt)

CUSTOMER SERVICE

1-833-362-2655 (US) support@euhomy.com <https://euhomy.com>

JOIN US

euhomyofficial

EuhomyOfficial

Euhomy_global euhomy

SCAN HERE to share tips, get support, and connect with other users.

Table of Contents

Important Safety Instructions 01

Key elements and construction 03

Get to know your ice maker 04

Assembly instructions 05

Cleaning the ice maker before first use 07

How to operate the ice maker 08

Preparing the ice maker for long-term storage or relocation 10

Cleaning the ice maker 11

Frequently asked questions 14

Troubleshooting 15

Warranty policy 18

IMPORTANT SAFETY INSTRUCTIONS

Read and understand the instructions to comprehend the operation and usage of the product.

All safety messages will be preceded by a warning symbol and the words "DANGER" or "WARNING." This indicates the presence of a hazard that could result in bodily injury, death, or significant property damage if the warning in this symbol is ignored.

WARNINGS

Failure to follow these instructions may result in electric shock, fire, or burns, which could lead to property damage, bodily injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Before cleaning, repairing, or servicing the ice maker, disconnect it from the power supply.
2. Exercise caution and provide appropriate supervision when using the device near children.
3. Do not use this or any other device with a damaged cord. If the power cord is damaged, it must be replaced by the manufacturer, service agent, or a person with similar qualifications to prevent hazards. The ice maker must be positioned so that the plug is easily accessible.
4. To ensure optimal performance and safety, place the ice maker in a location where the plug is easily accessible. Connect it to a polarized, dedicated outlet, avoiding circuit overload by sharing it with other devices. For a safe connection, fully insert the plug into the outlet.
5. Do not place the power cord on carpets or other heat-insulating surfaces. Do not cover the

cord. Keep the cord away from areas with high traffic. Do not immerse the cord in water.

6. We do not recommend using an extension cord, which may overheat and pose a fire hazard. If it is necessary to use an extension cord, use a cord with a gauge of at least 14 AWG and a rating of no less than 1875 W.

7. Do not use the ice maker outdoors. The device is intended for indoor use only.

8. The ice-making device should be placed in a location not exposed to direct sunlight.

9. Ensure at least 15 cm (6 inches) of clearance between the back of the ice-making device and the wall.

10. Maintain at least 15 cm (6 inches) of clearance around the device.

11. Do not use liquids other than drinking water to make ice cubes.

12. Do not clean the ice maker with flammable liquids. Vapors may create a fire or explosion hazard.

13. Do not tilt the device.

14. If the ice maker has been in a cold environment, wait a few hours before plugging it in to allow it to reach room temperature.

15. The device must be grounded.

16. To prevent hazards due to instability, place it on a flat and even surface.

Fire or explosion hazard – use of flammable refrigerant

Before installing or servicing this product, read the repair manual/user manual. Follow all safety precautions.

- The device must be disposed of in accordance with federal or local regulations. Follow all instructions for handling the device to ensure safe disposal.

- DO NOT use mechanical devices to defrost the ice maker.

- DO NOT puncture the refrigerant tubing.

- Servicing may only be performed by trained personnel.

- The ice maker should comply with the safety standard for refrigeration systems (ASHRAE 15) and should not be installed in hallways or lobbies of public buildings.

- The device should be regularly cleaned and maintained according to the Cleaning and Maintenance section of this manual.

KEY COMPONENTS AND STRUCTURE

- Ice scoop;

- Full ice container sensor;

- Ice container;

- Upper cover (lid) with a transparent window;

- Air outlet;

- Drain plug at the back of the device;
- Maximum water level indicator: remove the ice container to see the water level marking;

Fire or explosion risk – using flammable refrigerant □ Handle.4

1
8
2
3 7
5
5
6
6

Accessories

1x handle 1x ice container
1x ice scoop 1x user manual
ice scoop ice container

03
03

GET TO KNOW YOUR ICE MAKER

Control panel 84 Modes

A. ON/OFF button:

- a. In standby mode, press the ON/OFF button briefly to start the ice-making process, and then press it again to stop ice production.
- b. In standby mode, press and hold this button for 5 seconds to activate the self-cleaning function. The ADD WATER and ICE FULL indicators will flash. Press again to stop the cleaning function.

B. POWER indicator light: In standby mode and ice-making mode, the POWER indicator light remains green at all times.

C. ICE FULL indicator light: This light turns on, signaling that the ice container is full. When this light is on, the device stops making ice.

D. ADD WATER indicator light: This light turns on, signaling that there is no water in the tank.

ON/OFF

OFF

ADD WATER ICE FULL POWER

ADD WATER ICE FULL POWER

A B C D

04

INSTALLATION INSTRUCTIONS

1. Ice maker configuration

A. Unpacking and inspection

Remove all external and internal packaging. Check if all accessories are included. If anything is missing, contact our customer service department.

B. Preparing the ice maker

Remove all tapes and straps from the device; take out the accessories located inside the ice maker. Clean the interior of the casing and the ice scoop with a damp cloth.

C. Positioning the ice-making device

Place the device on a level, flat surface, away from direct sunlight and heat sources (e.g., stove, oven, heater). Ensure there is at least 15 cm (approximately 6 inches) of free space between the sides of the device and the wall.

D. Allow the refrigerant to stabilize

If the device was tilted during transport, leave it upright for 24 hours so that the refrigerant can stabilize before plugging it in.

E. Accessibility of the plug

Position the device so that the plug is easily and directly accessible.

Important safety warnings

Caution: The device must be grounded

- Plug the device into a grounded outlet; never remove the grounding pin.
- DO NOT use an adapter or extension cord. Failure to follow these instructions may result in fire, electric shock, or death.

Electrical connection

- Provide a dedicated outlet for the ice maker.
- Use outlets not controlled by a switch.
- For replacement of the power cord or plug, contact a qualified technician.
- Requires a grounded outlet of 110-120 V, 60 Hz.

Grounding method

For safety reasons, the device must be grounded. Use the provided grounding plug and connect it to an appropriate grounded outlet. If such an outlet is not available, contact a qualified electrician to have one installed.

05

2. Install the handle

Rotate the handle to fit it into the mounting hole in the machine, and then secure it.

06

CLEANING THE ICE MAKER

BEFORE FIRST USE

* We recommend using our cleaning agent for product maintenance.

1. Remove the ice container.
2. Clean the interior with warm soapy water and a soft cloth. We recommend using our cleaning agent.
3. Rinse the interior and internal parts with clean water. Drain the water by disconnecting the drain plug located at the front bottom. Insert the ice basket and connect the power.
4. Press the ON/OFF button and hold it for 5 seconds. The device will initiate a 30-minute self-cleaning program, and the ICE FULL and ADD WATER indicators will flash simultaneously.
5. After the self-cleaning process is complete, disconnect the device from the power supply and drain the water. Do not forget to reinsert the drain plug.
6. Clean the exterior of the ice maker with a mild detergent and warm water.
7. Your ice maker is ready for use!

07

HOW TO OPERATE THE ICE MAKER

WARNINGS

* It is recommended to clean the device before first use or after a long break in using the ice-making device.

* Before starting to make ice, ensure that the water drain plug is inserted into the device; otherwise, the ice-making function will not work properly. * Fill the device only with drinking water. Use only drinking or distilled water. 1. Starting the device Step 1: Remove the ice container and fill the tank with drinking water. Step 2: Place the ice container back in position. Step 3: Connect the device to power, and the ice maker will enter standby mode, with the POWER indicator lighting up red. 2. Ice-making process

- Press the ON/OFF button to start the device. The device will begin making ice when the POWER indicator lights up green.
- Press the ON/OFF button again to stop ice production. 3. Water addition indicator
- If the ADD WATER indicator lights up and the device stops working, add water to the tank, and the device will automatically restart. 4. Full ice container indicator
- When the ICE FULL indicator lights up, the device will stop working. To resume operation, the ice must be removed.

- When the cover detects that the ice has fallen, it will automatically reset and start a new ice production cycle.

5. Turning off the device

- Step 1: Briefly press the ON/OFF button to stop ice production and enter standby mode.

- Step 2: Disconnect the power to turn off the ice maker.

08

6. Automatic self-cleaning program

a. Default cleaning time: 30 minutes.

b. How to start self-cleaning

- Insert the water drain plug into the ice maker.

- Fill the tank with drinking water, not exceeding the MAX line.

- Press and hold the ON/OFF button for 3 seconds.

- The ADD WATER and ICE FULL lights will flash alternately.

c. How to cancel self-cleaning

- The program will automatically end after the cleaning is completed.

- Press the ON/OFF button during the cleaning procedure to cancel it manually.

d. How to clean the top cover

- After the cleaning procedure is completed, open the top cover and remove the ice basket.

Rinse the main tank and the additional water tank.

e. How to drain dirty water

- Move the ice maker to the edge of the countertop or table. Ensure that the device is stable.

- Make sure there is a container for water (e.g., a sink) under the device.

- Remove the drain plug from the bottom. Allow the dirty water to flow into the water container. Then reinsert the drain plug. Note: Hygiene precautions

- To ensure proper hygiene, change the water in the tank every 24 hours.

- If the ice maker will not be used for at least one day, drain all the water and dry the tank.

09

PREPARING THE DEVICE FOR ICE PRODUCTION FOR LONG-TERM STORAGE OR TRANSPORT

If the ice maker will not be used for an extended period or needs to be moved to another location, it should be properly handled and maintained. Refer to the following tips.

1. Daily usage tips

Fill the device only with drinking water. Use only drinking water. The ice maker is intended for indoor use only. Place the ice maker on a level, flat surface, away from direct sunlight and heat sources (e.g., stove, oven, heater). Ensure at least 15 cm of space between the sides of the device and the wall.

2. Regularly draining water

To maintain optimal sanitary conditions, we recommend changing the water in the tank every 24 hours. To prevent potential issues such as mold or fungus growth, if the device will

not be used for more than 24 hours, it is recommended to thoroughly empty the tank. 3.

Cleaning and disinfection

Clean the ice maker at least once a week, and perform a thorough cleaning once a month.

Disconnect the power before cleaning: Always disconnect the ice maker from power before cleaning. Avoid using strong chemicals: For best results, use a special ice maker cleaning solution. Avoid using strong chemicals, including alcohol, vinegar, or other acids, as they may damage the evaporator and shorten the device's lifespan. Thorough cleaning before use: If the ice maker has not been used for an extended period, it should be thoroughly cleaned before reuse.

4. Proper storage

Completely dry: Before storing, ensure that the ice maker is completely dry. Cover: Cover the ice maker with a plastic bag to protect it from dust. 10

CLEANING THE ICE MAKER

1. DAILY CLEANING

Step 1: Disconnect the ice maker from power. Step 2: Remove the lower drain plug and drain the water into the sink. Step 3: Pour water into the tank until the maximum water level is reached. Step 4: Plug the ice maker back in.

Press and hold the ON/OFF button for 5 seconds to start the 30-minute cleaning process.

Step 5: After the cleaning is complete, remove the drain plug and drain the water into the sink. Don't forget to reinsert the drain plug at the bottom. Step 6: After finishing, fill the device with drinking water. You can press the ON/OFF button to restart the production of clean ice.

2. CLEANING EVERY MONTH

Step 1: Disconnect the ice maker from the power supply. Step 2: Empty the ice cubes, remove the lower drain plug, and drain the water into the sink by disconnecting the drain plug from the front at the bottom. Step 3: Reattach the drain plug. Rinse the interior and internal parts with clean water, then drain the water. Step 4: Pour the cleaning solution into the tank up to the MAX level. Step 5: Plug the ice maker into the power supply. Press and hold the ON/OFF button for 5 seconds to activate the self-cleaning function. Step 7: Unscrew the drain plug and drain the water into the sink. Step 8: Reattach the drain plug at the bottom. Step 9: If necessary, run the cleaning function for additional cycles. Step 10: After finishing, fill the device with fresh water. You can press the ON/OFF button to restart the production of clean ice. Note:

1. Avoid strong chemicals: Do not use strong chemicals or abrasive cleaning agents directly on any part of the ice maker. They may damage the surface and affect the taste of the ice.

2. Regular cleaning: To ensure optimal performance, the ice maker should be cleaned regularly.
3. Although the self-cleaning mode is helpful, it does not replace manual cleaning. The ice maker still requires manual cleaning. Use a mild cleaning agent approved for food contact (e.g., a vinegar solution or a descaling agent approved by the manufacturer) and a soft scrubbing brush to clean all internal surfaces, including hidden corners and crevices.
4. Since the ice maker is constantly in contact with water, any moisture, if not properly removed, can lead to mold growth over time. The device should be dried after use. Always drain any remaining water and wipe the interior after cleaning to prevent moisture accumulation and mold growth.
5. By following these simple tips, you can keep the ice maker clean and hygienic, ensuring a constant supply of fresh and clean ice. **PROPER DISPOSAL OF THIS PRODUCT** After the device is decommissioned, its disposal and handling of materials must comply with national regulations. **FAQ**

1. How often should the ice maker be cleaned? To ensure optimal performance, the ice maker should be cleaned at least once a week, depending on usage intensity. Regular cleaning prevents the buildup of scale, which can block the pump and cause device failure over time.
2. How to clean the ice maker? It is recommended to clean it daily once or twice a week and to perform a monthly cleaning once a month. Immediately after cleaning, the device should be emptied and then rinsed with clean water. To maintain optimal performance and ice quality, it is recommended to empty the water tank at least once every three days. This routine maintenance helps minimize water hardness, eliminate contaminants, and prevent scale buildup in the tank.
3. Why are the ice cubes cloudy? Cloudy ice cubes often result from using water that is not suitable for ice production. To achieve clearer ice, use drinking or distilled water. If water quality is consistently low, consider installing a water filter kit.
4. Can I pour milk or juice into the tank? No, we strongly advise against this. High concentrations of milk or juice can clog the pump and shorten its lifespan. Additionally, milk proteins can calcify and react with the device's internal PU water tubing, potentially causing damage.
5. Why do the ice cubes melt quickly? The ice-making device does not have a freezing function that would allow for ice storage. High ambient temperatures, especially in summer, can accelerate melting. To slow down melting, follow these tips:
 - Close the top cover (lid) to maintain internal temperature.

- Place a fan near the device to disperse heat.
- For long-term storage, transfer the ice cubes to the freezer.

6. Why do our ice cubes stick together?

- Too long operation of the ice-making cycle: stop the ice maker and restart it after the ice blocks have melted.
- Low water temperature in the tank: Fill the tank with water at a temperature between 40°F to 90°F.

7. Why do the ice cubes I made smell like plastic or dirty water? Ice cubes from this device should be tasteless and odorless. If you detect a plastic smell, try performing the following thorough cleaning steps:

- Disconnect the device from the power supply for 2 hours to allow the ice cubes in the ice maker to melt;
- Empty the device of water;
- Add about 600 ml/200 z (approximately 2 and 1/2 cups or 0.6 liters) of cleaning solution to the water tank of the ice maker.
- Start the cleaning function and wait for the cleaning to be completed;
- Then wait 4 hours and empty the ice maker of the cleaning solution;
- Add clean drinking water to the tank and restart the cleaning function.

8. Why is my device making sounds while operating?

- While operating, the device may emit a gentle sound. Closing the top cover may help minimize the noise level.
- If you notice excessive noise coming from the device, it is recommended to perform a thorough cleaning (see instructions in FAQ section 7). This may alleviate the noise issue.

9. Why is water leaking from my machine?

- Leaks may occur if the water tube inside the ice maker disconnects during transport. If you are familiar with basic appliance repairs, remove the back cover and reconnect the tube. However, if you are unsure or do not want to open the machine, contact Euhomy technical support for detailed instructions.

10. Why is water flowing but not producing ice?

- Ensure that the ice maker operates at room temperature between 50°F and 105°F. Use water with a temperature between 40°F and 90°F for the ice maker to function. To assist you further, please send us a video or photo showing the problem. The Euhomy team will be happy to provide you with guidance and support. If you need further assistance, contact the

TROUBLESHOOTING

Problem	Likely Cause	Solution
---------	--------------	----------

Because distilled water contains		
----------------------------------	--	--

few electrons, it is difficult to		
-----------------------------------	--	--

Use distilled water activate the sensors inside		
---	--	--

the ice maker, so it is recommended		
-------------------------------------	--	--

to use purified or bottled water. Turn off the ice maker, fill		
--	--	--

No water the tank with water to the MAX level and		
---	--	--

press the ON/OFF button again to		
----------------------------------	--	--

restart the device. The “ADD If the silver conductive needle on		
---	--	--

WATER” indicator lights up. the right side of the evaporator is misaligned,		
---	--	--

Misaligned needle use a thin tool (e.g., screwdriver) to set it		
---	--	--

conductive vertically down. Check if the tank contains water. Damaged pump If there is		
--	--	--

water in the tank and the		
---------------------------	--	--

pump makes no sound,		
----------------------	--	--

contact the service team,		
---------------------------	--	--

who will assist you. Ice container is full Remove the ice from the ice container and		
--	--	--

The “ICE FULL” indicator lights up. press the “ON/OFF” button again. Strong light caused		
--	--	--

Move the ice maker to a darker place to		
---	--	--

malfunctioning restart the ice-making process. Ice production device The outlet is not		
--	--	--

powered Try another outlet		
----------------------------	--	--

does not respond after turning on Please contact our		
--	--	--

the power. Ice maker motor failure after-sales service team for		
---	--	--

replacement.		
--------------	--	--

Drain plug is not in place Check the lower drain plug. or is missing Remove the back panel		
--	--	--

and check		
-----------	--	--

the internal water lines and		
------------------------------	--	--

the water pump. Broken water pipe Remove the back panel and check the internal		
--	--	--

or pump water lines and the water pump. If		
--	--	--

any part is damaged, contact our		
----------------------------------	--	--

after-sales service team, who		
-------------------------------	--	--

will help you obtain it. Use ice maker cleaning		
---	--	--

Water pump noise: solution to run the self-cleaning

During water pumping mode for 2-3 cycles. If the noise persists, contact the

Ice maker noise service team. Ice maker compressor noise: For replacement, please contact the after-sales self-cleaning service team.

16

Run the ice maker for 2-3

cycles to ensure that each

Make only 2 or 3 evaporator column receives

Problem with internal the appropriate amount of ice cubes at once. refrigerant. If the problem persists, contact the service team to request a replacement.

Sensor location Check if the ice bin is not blocking blocking the ice bin the bin full sensor and remove

Indicator light for full the obstruction. The ice

bin is on, but the Level sensor failure bin sensor is blocked ice maker does not stop. with a finger. If the indicator

Ice production cycle is does not change, contact the too long. service team. Turn off the ice

Ice cubes are sticking maker and wait for the ice to together. melt. Then turn the device

Replace the water. Recommended

Water temperature in

the internal tank water temperature is between 40°F is too low. and 90°F. Room temperature or water temperature in

the internal tank

Ice production cycle is too high. Ideal room is too high. temperature is between 50°F and 105°F. Ideal

water temperature is between 40°F and 90°F.

The ice forms normally, but ice does not form. The cooling system's pipe is blocked. If you encounter any problems that cannot be resolved using basic troubleshooting methods, please contact the Euhomy technical support team for assistance. Technical parameters

MODEL IM001-B

Type of protection I

Power 115V/60Hz

Current while making ice 1.5A

Current while collecting ice 1.8A

R600a, 0.57 oz/16g Δ

Refrigerant

290psig

Design pressure, high side

88psig

Design pressure, low side

Blowing agent C H

5 10

Net weight 12.43 Lbs

Dimensions 9.3*11.6*11.4"

Housing SUS

17

WARRANTY POLICY

Euhomy makes every effort to deliver high-quality products and provide excellent customer service. We 100% believe in our products and are ready to support you at every stage. To activate the warranty, please visit

<https://euhomy.com>. For customer service assistance, please contact us at any time. If you need additional help, contact the Euhomy support team! 1-833-362-2655(US)

support@euhomy.com <https://euhomy.com>

Working hours: Monday to Friday, from 9:00 AM to 6:00 PM (Eastern Time)

Euhomy One-Year Limited Warranty

A one (1) year limited warranty applies to purchases made on this website or through Euhomy's official sales channels, such as Amazon, TikTok, and Walmart. It covers only the original owner and the product and is not transferable. For purchases made through unauthorized sellers, we recommend contacting them directly. Euhomy guarantees that the device will be free from material and workmanship defects for one year from the date of purchase, provided it is used under normal household conditions and maintained according

to the user manual. The warranty is subject to the following conditions and exclusions:

What does the warranty cover? If the original device or non-wear parts are deemed defective by Euhomy, we will arrange for repair or replacement within one year from the date of purchase. In the case of receiving a replacement device, the warranty is valid for the remaining period of the original warranty.

What is not covered by the warranty? (a) Normal wear and tear of the device or parts, as well as any parts lost or damaged due to user fault after delivery; replacement parts are available for sale. Please contact us using the methods below. (b) Damage caused by improper use, incorrect handling, accidents, or failure to follow the user manual. (c) Damage caused by contact with fluids other than water or foreign substances. (d) Repairs or modifications not performed by Euhomy. (e) Use in commercial conditions or outside of household use (except for commercial models).

How to get technical support? If your device is not functioning properly or you need assistance, we offer several ways to contact us. You can reach us by calling 1-833-362-2655 or by sending an email directly to support@euhomy.com. For some product categories, we also offer the option to extend the warranty to our VIP service. Our phone lines are open Monday to Friday from 9:00 AM to 6:00 PM (Eastern Time), and we typically respond to emails and forms within 24 business hours. To help us assist you better, we recommend registering the product online at 1-833-362-2655 and preparing the device before contacting us. If you contact us via email, our messages may end up in the spam folder, so please check that folder to avoid missing our response. When submitting a warranty service request, proof of purchase will be required. In addition to the one-year warranty, we offer lifetime technical support. After the warranty expires, service can be ordered for an additional fee. If you have any problems, please contact us at any time.

19

Environmental Protection

Used electronic equipment marked in accordance with the European Union directive must not be placed together with other municipal waste. It is subject to selective collection and recycling at designated points. By ensuring its proper disposal, you prevent potential negative consequences for the natural environment and human health. The system for collecting used equipment complies with locally applicable environmental protection regulations regarding waste disposal. Detailed information on this topic can be obtained from the municipal office, cleaning facility, or the store where the product was purchased. The product meets the requirements of the so-called New Approach directives of the

European Union (EU) concerning issues related to user safety, health protection, and environmental protection, which define hazards that should be detected and eliminated. This document is a translation of the original user manual created by the manufacturer. Detailed information about the distributor/manufacturer warranty conditions is available on the website <https://serwis.innpro.pl/gwarancja>

The product should be regularly maintained (cleaned) by the user or by specialized service points at the user's cost and scope. In the absence of information about necessary periodic or service maintenance actions in the user manual, the user should regularly, at least once a week, assess the deviation of the product's physical condition from that of a physically new product. If any deviation is detected or identified, urgent maintenance (cleaning) or service steps should be taken. Failure to properly maintain (clean) and respond upon detecting a state of deviation may lead to permanent damage to the product. The warranty provider is not responsible for damages resulting from neglect.

Importer:

INNPRO Robert Błędowski sp. z o.o.

Manufacturer

Ningbo Hoome Information Technology Co., Ltd.

ul. Rudzka 65c

Room 602-2, Building 1-2, Qianyang Star Plaza, No. 996,

44-200 Rybnik, Poland

Changxing Road, Jiangbei District, 1-2 / 602-2

tel. +48 533 234 303

31500 Ningbo, Zhejiang,

hurt@innpro.pl

China

www.innpro.pl

support@euhomy.com

Responsible entity in the EU

SUCCESS COURIER SL

CALLE RIO TORMES NUM. 1, PLANTA 1, DERECHA, OFICINA 3,

Fuenlabrada 3

28947 Madrid

Spain

successservice2@hotmail.com

Warnings and Safety Information

All information regarding the operation of the device is contained in the user manual. Before you start using it, familiarize yourself with its content and follow the instructions provided. Before use, also review the following information:

Usage Warnings

1. Child Safety:

- Products in this category are not intended for use by children. Keep them in places inaccessible to young children to avoid accidental activation, swallowing small parts, or contact with hot surfaces.
- Do not leave operating devices, such as shoe dryers or fabric shavers, unattended in the presence of children.

2. Risk of Injury and Damage:

- In the case of devices with blades (e.g., fabric shavers), exercise caution during use and maintenance to avoid cuts.

3. Electrical Safety:

- For electrical devices, such as shoe dryers, fabric shavers, or dehumidifiers, connect them only to electrical outlets that comply with their technical specifications.
- Do not use devices if the power cord, plug, or housing is damaged.
- Never immerse electrical devices or their parts in water unless the manufacturer explicitly recommends such action (e.g., for specific components).

4. Safe Use of Water and Moisture:

- For dehumidifiers, ensure they are placed in areas with increased humidity but away from water sources, such as showers or sinks.
- Shoe dryers intended for wet footwear should be used according to the instructions to avoid short circuits or damage to the device.

5. Overheating Protection:

- Heat-generating devices (e.g., shoe dryers) should be used according to the maximum operating time recommended by the manufacturer to prevent overheating.
- Ensure that devices are placed on a stable surface, away from flammable materials.

Information on Proper Use

1. Preparing the Device for Operation:

- Before first use, familiarize yourself with the user manual, ensuring that all components of the device are correctly assembled or prepared.

2. Operating the Device:

- Use products according to their intended purpose and the manufacturer's recommendations. Do not use them on materials or surfaces that may be damaged (e.g.,

delicate fabrics or uneven surfaces).

○ Products such as fabric shavers or shoe dryers should be used on materials that are compatible with their specifications. 3. Cleaning and maintenance:

○ Regularly clean devices such as fabric shavers from lint or dust to ensure their long-lasting efficiency. ○ Before cleaning, disconnect electrical devices from the power supply and ensure they are completely cooled down (in the case of heat-generating devices). 4.

Storage:

○ Store devices in a dry and safe place, protecting them from moisture and mechanical damage. ○ For self-adhesive products, make sure that spare parts are stored in their original packaging to maintain their adhesive properties. support @ euhomy .com [https :// euhomy .com](https://euhomy.com) 1-833-362-2655(US)