

BR009-55 BEVERAGE REFRIGERATOR

User Manual

SKU

BR009-55BL

Model Number

BR009-55



THANK YOU

for purchasing the Euhomy Beverage Refrigerator



**ACTIVATE
YOUR
WARRANTY**

Scan the QR code using a mobile device

<https://euhomy.com/pages/activate-warranty>



RECORD THIS INFORMATION

Model Number _BR009-55

Serial Number _____

Date of Purchase _____

Store of Purchase _____

(Keep receipt)

TIP

Check the back or side of the machine for the serial number on the nameplate.

For car refrigerators, it's usually on the bottom or side. If you can't find it, don't worry — it won't affect your warranty registration.



1-833-362-2655(US)



support@euhomy.com



<https://euhomy.com>

JOIN US



euhomyofficial



EuhomyOfficial



Euhomy-global



euhomy



SCAN HERE to share tips, get support, and connect with fellow enthusiasts!

Contents

Important Safety Instructions	01
Key Components and Structure	04
Installation Guide	05
Door Reversal Instructions	07
Getting To Know Your Beverage Refrigerator	10
Cleaning And Maintenance	12
FAQs	13
Troubleshooting	15
Specs	17
Warranty Policy	18

IMPORTANT SAFETY INSTRUCTIONS

 Read and review instructions to understand the operation and use of the product.

 Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.

WARNINGS

Failure to follow these instructions could result in electric shock, fire, or burn hazards, which could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:


1. Read all instructions before using the appliance.
2. Only use this appliance for its intended purpose as described in this user manual.
3. Please ensure that this product is properly installed in accordance with the installation instructions before use.
4. **DO NOT** pull on the power cord when disconnecting the power plug of the appliance. Firmly grasp the plug and pull it out from the socket directly.
5. Please repair or replace immediately any electrical cords that are frayed or damaged. **DO NOT** use cords that show cracks or abrasion along their length, on the plug, or at the connector end.
6. Please unplug the appliance before cleaning or servicing. If the appliance requires repair for any reason, we strongly recommend that it be serviced by a certified technician.
7. If you will not use the appliance for an extended period, plan to store it, or dispose of it, please remove the doors and keep the shelves in place to prevent children from easily climbing inside and reduce the risk of entrapment.
8. This appliance is designed for freestanding installation only and should not be recessed or built into an enclosed cabinet.
9. **DO NOT** use the device in the presence of flammable gases.
10. This appliance is not designed to store perishable foods. Store only bottled or canned beverages.

11. Before plugging in the appliance, please allow it to stand upright for **at least 24 hours** to let the refrigerant settle. If the appliance has been tilted for any reason, wait **24 hours** before plugging it in.
12. This appliance is for indoor use only.
13. To avoid the risk of electric shock, always unplug the appliance before cleaning. Failure to do so may result in serious injury.
14. Before using cleaning products, be sure to carefully read and strictly follow the operating instructions and safety warnings to avoid personal injury or product damage.
15. **DO NOT** use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL-listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord is 115 volts and at least 15 amperes.
16. Make sure there is a suitable power outlet (115V/60Hz, 15A) with proper grounding to power the appliance.
17. **DO NOT** use an adapter or cut off the grounding prong to fit a two-prong outlet, as this is a dangerous practice that eliminates proper grounding and may result in electric shock.

Risk of Fire or Explosion-Flammable Refrigerant Used

Dispose of the appliance following federal or local regulations. Follow all handling instructions to ensure safe disposal.

- **DO NOT** use mechanical devices to defrost the unit.
- **DO NOT** puncture refrigerant tubing.
- Servicing must be performed by trained personnel only.
- Clean and maintain the appliance regularly according to this manual's Cleaning & Maintenance section.

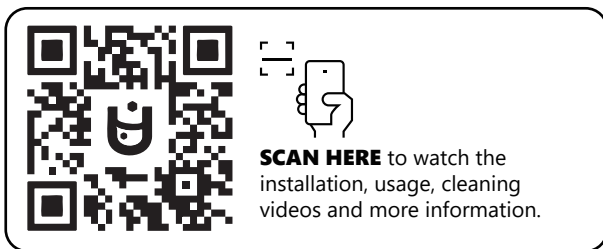


KEY COMPONENTS AND STRUCTURE

- ① Hinged Cover
- ② Operation Panel
- ③ Shelf
- ④ Adjustable Leveling Legs
- ⑤ Double-Pane Transparent Glass Door
- ⑥ Protective Film

(The machine is covered with a protective film that does not affect its functionality.
You may remove it if desired.)

- ⑦ Drip Tray in Back

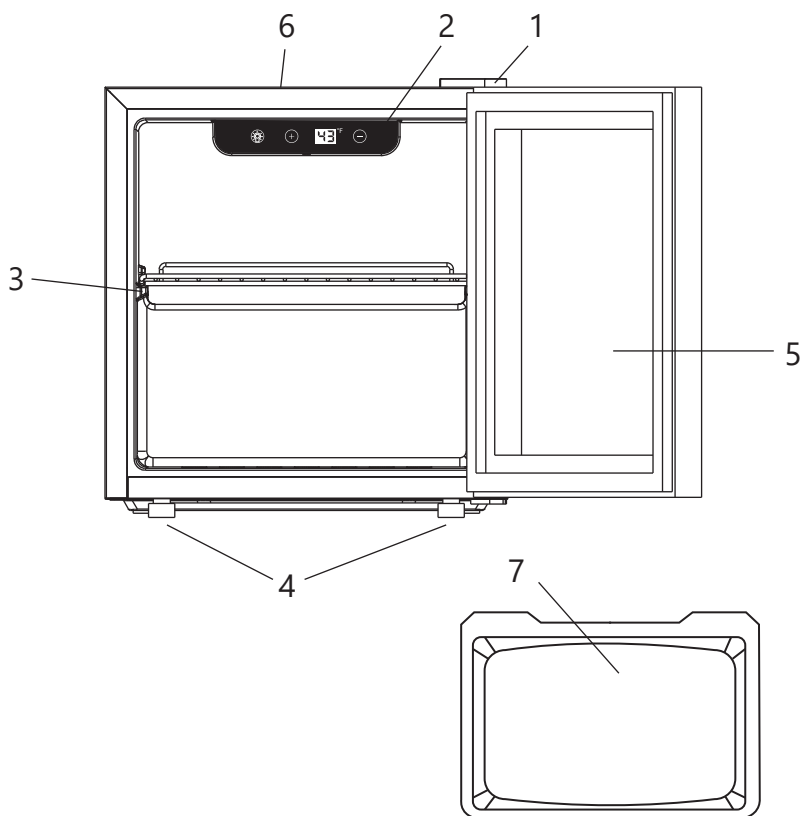


INSTALLATION GUIDE

Unpack

1. Carefully remove all packing materials, including the foam base and any adhesive tape securing accessories both inside and outside the appliance.
2. Inspect and remove any remaining packing materials, tape, or printed materials before powering on the beverage refrigerator.
3. Before connecting the appliance to the power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.

Level the device

1. The beverage refrigerator is equipped with two leveling legs located at the front bottom corners. Once the appliance is properly positioned in its final location, you may level it as needed.
2. Please turn the leveling legs clockwise to lower the appliance or counterclockwise to raise it.

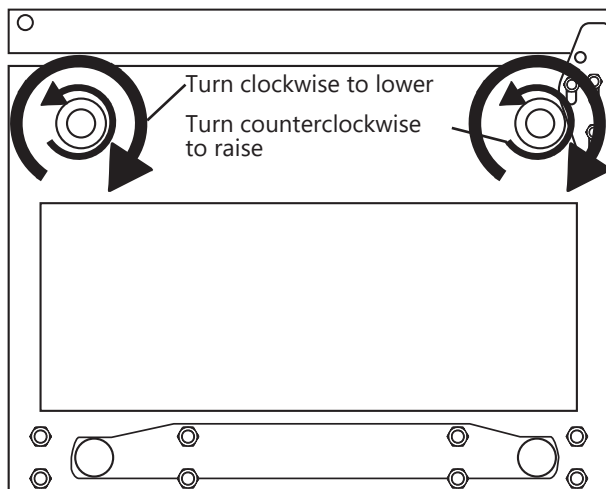

Proper Installation and Air Circulation

To ensure this beverage refrigerator performs at its best, please follow these guidelines:

1. Freestanding Installation

This appliance is designed for freestanding use. It can be placed in any location, as long as the recommended clearances are maintained.

2. Ventilation Requirements

Always install the appliance in an open and well-ventilated area. **DO NOT** place it in an enclosed space (such as a closed cabinet).

To ensure proper air circulation, maintain the following minimum clearances around the unit:

Sides: 5 cm (**2 inches**)

Top: 5 cm (**2 inches**)

Back: 5 cm (**2 inches**)

3. Avoid Overloading

DO NOT overfill the beverage refrigerator, as this may restrict airflow and affect cooling performance.

4. Drip Tray

Check the drip tray screws through the ventilation metal cover at the rear of the device to see if they are loose, missing, or misaligned.

Installation Limitations

1. **DO NOT** install the appliance in any area that is not properly insulated or heated (e.g., a garage).
2. This appliance is designed to operate in ambient temperatures between **10°C(50°F)** and **32°C(90°F)**.
3. Place the appliance on a hard, level surface, away from direct sunlight or heat sources (such as radiators, baseboard heaters, or cooking appliances). If the floor is uneven, use the leveling legs located at the front bottom corners to make adjustments.

DOOR REVERSAL INSTRUCTIONS

Tools Required


- 1.#2 Phillips screwdriver
- 2.Flat head screwdriver
- 3.Hex wrench



#2 Phillips
screwdriver



 Flat head
screwdriver



Hex wrench


Precautions Before Reversing the Door

1. The beverage refrigerator is shipped with the door hinge bracket installed on the right side by default, allowing the door to open from the left. However, if necessary, the door can be reversed to open from the right side.
2. **DO NOT** plug the beverage refrigerator into the power outlet prior if you plan to reverse the door hinge
3. Remove the shelf before beginning the door reversal process.
4. **DO NOT** place the beverage refrigerator upside down during installation, as this may cause damage to the appliance.


Door Reversal Procedure

Before operation, please take care to **store all parts** properly for later use.

Step 1: Gently remove the four plastic plugs from the left side of the top of the beverage refrigerator using a flat-head screwdriver.

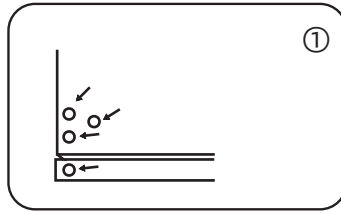

Step 2: Please first push the the hinge cover on the top right backward, lift it up, and slide it forward to remove. Next, use a #2 Phillips screwdriver to unscrew the three screws, and then remove the upper hinge.

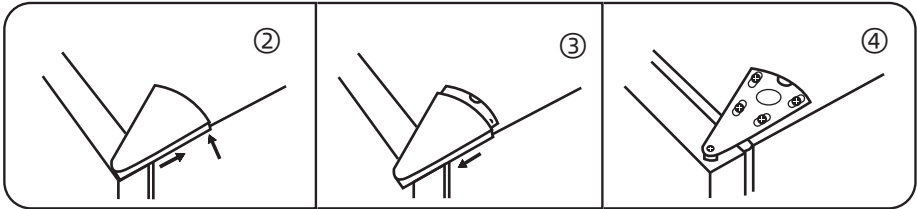


Step3:

First, gently tilt the appliance 90° so that the door is facing upwards, use a #2 Phillips screwdriver to remove the 3 screws from the bottom right hinge and take off the hinge.

Then, use a hex wrench to turn the hinge shaft counterclockwise and remove it. Rotate the hinge shaft 180° and reinstall it into the hinge.

Next, use the #2 Phillips screwdriver to remove the 2 screws from the left side and install them into the corresponding holes on the right side.

Finally, rotate the hinge 180° and attach it to the left side using the 3 screws previously removed from the right side.

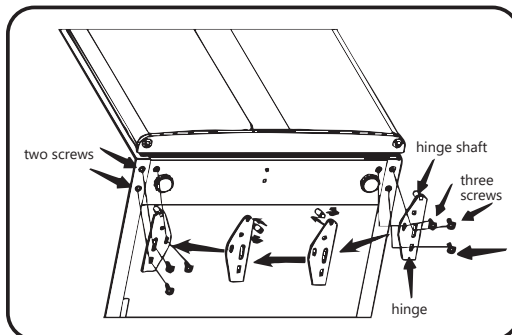


Step4:

Reinstall the top right hinge that was previously removed onto the left side, aligning its holes with the holes on the top of the cabinet. Tighten the three screws to secure it. Then, press down on the hinge cover to complete the installation.

Step5:

Finally, insert the plastic plug (previously removed from the left side) into the hole on the upper right side of the appliance and place the appliance upright.

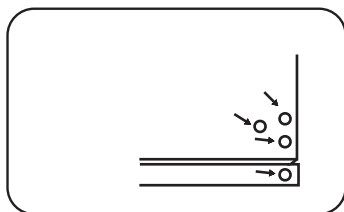

IMPORTANT

After completing the door reversal process, **DO NOT** plug in the beverage refrigerator for **at least 24 hours**. During the reversal procedure, the refrigerant and compressor oil may become mixed.

It is essential to allow sufficient time for these fluids to separate and settle, ensuring the compressor functions properly.

Failure to follow this instruction may result in serious mechanical damage—including potential failure of the compressor or motor—and will void the product warranty.

GETTING TO KNOW YOUR BEVERAGE REFRIGERATOR



Startup

Connect the power cord to a standard wall outlet. Once connected, you will immediately hear a short beep.

Display Controls

The default temperature is 6°C (43°F). Use the ⊕ and ⊖ buttons to set the desired temperature between the range of 4°C (40°F) – 16°C (61°F).

The display will flash while the temperature is being set. The temperature display shows the actual internal temperature of the beverage refrigerator, and the digital display will adjust as the unit cools.

While the unit is adjusting to the new setting, press the ⊕ or ⊖ buttons to view the selected temperature setting.

If there is a power outage, the unit will revert to the last temperature setting once power is restored.

Led Light

Press the  button to turn the LED light on or off.

To extend the lifespan of the LED light and conserve energy, it is recommended to turn on the light only when selecting or placing beverages. At other times, keep the light turned off.

Loading Beverages

When first filling the beverage cooler to full capacity, we recommend the following steps to effectively cool a large number of beverages.


1. Use the Adjustable Thermostat Control to set the temperature to 6°C (43°F) (also the default temperature).
2. Allow the beverage Refrigerator to cool for a minimum of two hours.
3. Load the beverages.
4. After initially filling with beverages, the internal temperature will rise as indicated on the display.
5. Once the beverage refrigerator has cooled the beverages to 6°C (43°F), use the Adjustable Thermostat Control to select a desired cooler internal temperature, please note that the lowest temperature setting is 4°C (40°F).
6. Allow several hours for the beverage cooler to cool to the desired lower temperature.

Note:

Temperature variations inside the unit are normal. Areas near the door may be slightly warmer than the interior.

Removing or Reinserting the Shelf

1. To remove the shelf, gently tilt it upward and slide it forward until it is completely removed.
2. To reinsert the shelf, gently slide it back into its original position.

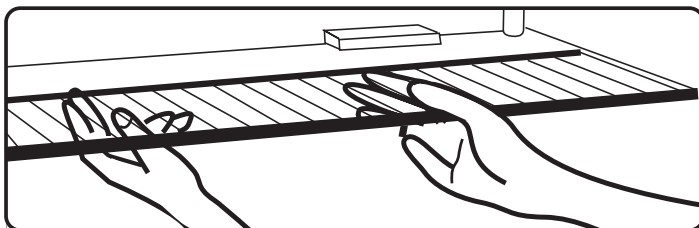

CLEANING AND MAINTENANCE

Cleaning the machine

Disconnect the plug: Always unplug the power plug from the socket to disconnect the appliance before cleaning.

Clean the machine: Dissolve 3-4 teaspoons of baking soda in warm water. Use it to moisten a sponge or soft cloth and wipe the unit. Rinse with clean, warm water and dry with a soft cloth. Please avoid using hard brushes, wire brushes, abrasives, organic solvents, boiling water, or acidic or alkaline substances, as they may damage the surface and interior of the appliance.

Clean the door seal: Clean the door seal every three months. Apply a thin layer of petroleum jelly on the hinge side to keep it soft and ensure a proper seal.

Defrosting the Appliance

1. The appliance is equipped with a defrosting system.
2. After unplugging the power cord, the surface will defrost automatically. The water inside is directed to the drip tray located on the compressor, where it evaporates due to the compressor's heat.

Handling Power Interruptions

1. Occasional power interruptions may occur due to storms or other causes.
2. When a power interruption happens, unplug the power cord from the AC outlet. Once power is restored, plug the power cord back into the AC outlet.
3. After any power interruption, the appliance will resume the last set temperature. Please reset your temperature settings if needed.

Maintenance Preparation Before Holidays and Relocation

1. For extended holidays or when the beverage refrigerator is empty, unplug the power cord and clean both the interior and the door seal.
2. Keep the door open to ensure proper air circulation.
3. When moving the appliance, always keep it upright, as lying it flat may damage the sealed system.

1. Is this rated for outdoor use? I see pictures in an outdoor island.

No, this beverage refrigerator is primarily designed for indoor use. You can place it on a balcony or near a door, but please avoid using it in open outdoor environments to ensure its proper operation and longevity.

2. Has anyone installed this under the counter? And does that void the warranty?

This model is not designed for under-counter installation. Placing it under the counter may affect its performance.

3. What is the temperature range of a wine cabinet?

The temperature of the beverage refrigerator can be set between **4°C (40°F) – 16°C (61°F)**, but due to the influence of internal and external environment, there may be slight variations in the actual displayed temperature.

4. Is this unit quiet enough to keep in a bedroom?

This beverage refrigerator features a low-noise design that produces only 36 dB of noise when running, so it's quiet enough to put in your bedroom or any other quiet environment without disturbing your sleep.

5. Is it possible to change the direction of the door?

Yes, the orientation of the beverage refrigerator door can be changed. Our manual contains detailed tutorials.

6. Does this beverage refrigerator need to be installed?

No, the beverage refrigerator does not require installation. After receiving the unit, let it stand for 24 hours before powering it on.

7. What are the warranty specifications?

We provide a **12-month** warranty and lifetime technical support for this beverage refrigerator. If you would like to learn more, please contact our customer service team.

8. Can the shelves inside the wine cabinet be moved?

The shelf can only be left inside the beverage refrigerator or removed entirely.

9. Is it normal for a wine cabinet to get hot outside?

Yes, it is normal for a beverage refrigerator to emit some heat on the outside. This happens because beverage refrigerators work by transferring heat from inside the unit to the outside, keeping the inside cool.

10. Does it keep food securely cold?

Hi there, our beverage refrigerator is primarily designed to store drinks, especially for chilling wine, beer, and other beverages. It features different temperature settings to keep drinks at their ideal temperatures.

It can also be used to store some food items that **DO NOT** require specific temperature settings.

However, for food items that need to be frozen, we recommend the safest practice is to use a freezer that is specifically designed for food storage.

For further support, feel free to reach out to the Euhomy support team!



1-833-362-2655(US)



support@euhomy.com



<https://euhomy.com>

TROUBLESHOOTING

Problem	Possible cause(s)	Solution
The appliance does not operate	There is a power failure, or the appliance is not plugged in	Ensure the appliance is plugged in and the power outlet has power
	A house fuse has blown, or the circuit breaker is tripped	Replace the broken fuse or reset the breaker
The appliance is not cold enough	The appliance is placed too close to a heat source	Adjust the temperature. Keep the appliance away from sunshine or other heat sources
	The door is opened too often, or the door is not closed completely	Close the door tightly and DO NOT open the door too frequently or for a long period of time
	The door gasket does not seal properly	Ensure the door gasket is not loose
The appliance makes too much noise	The noise may come from the flow of the refrigerant, and expansion of the inside walls may cause popping and crackling noises	It is normal that as each cooling cycle ends, you may hear rattling or gurgling sounds caused by the flow of refrigerant in the appliance. The high-efficiency compressor may make a pulsating or high-pitched sound
	Contraction and expansion of the inside walls may cause popping and crackling noises	Some popping or cracking noises are normal . They are caused by the expansion and contraction of the inside walls due to temperature changes
The door does not close properly	The appliance is not level	Ensure the unit is placed on a hard, level surface. Avoid placing it on carpeted or soft surfaces, and level the unit properly
	Something might be blocking the door	Check the door for any obstructions and remove them
Moisture build-up on interior or exterior of the unit	Ambient temperature or humidity is high	Lower the room humidity by a dehumidifier or air conditioner
	Open the door frequently	Open the door less frequently
	Poor door seal	Check door gaskets for proper seal

Problem	Possible cause(s)	Solution
The temperature is too low	The temperature setting is too low	Adjust the temperature control to a higher setting and wait a moment until the temperature stabilizes
The unit is running too frequently	More cooling is required for the environmental conditions	In high temperature and high humidity environments, it may be normal for the unit to run continuously to maintain a constant temperature
	Frequent opening of the door allows warm air to enter	Reduce the frequency of opening the door
	Poor sealing causes cold air to leak	Check that the door seal is properly sealed
	A door that is not completely closed increases the running time	Make sure that the door is completely closed

SPECS

SKU	BR009-55BL
MODEL	BR009-55
VOLTAGE	115V~60HZ
RATED CURRENT	1.0A
REFRIGERANT	R600A,0.49Oz/14g
FOAMING	Cyclopentane
DIMENSIONS	16.9*16.2*18.5 in
NET WEIGHT	32.7LBS
GROSS WEIGHT	38.0LBS

WARRANTY POLICY

Euhomy is dedicated to delivering top-notch products and outstanding customer service. We back our products 100% and are here to support you every step of the way.

To activate your warranty, please Scan the QR code at the beginning or visit

<https://euhomy.com>

To request customer service, feel free to contact us anytime!

For further support, feel free to reach out to the Euhomy support team!



1-833-362-2655(US)



support@euhomy.com



<https://euhomy.com>

Business Time: Mon to Fri, 9 AM-6PM (ET)

Euhomy 1-Year Limited Warranty

The One-Year (1) Limited Warranty is valid for purchases from this website or official Euhomy purchase channels such as Amazon, TikTok, and Walmart. It covers the original owner and product only and isn't transferable. For purchases made through unauthorized resellers, we recommend you contact them directly.

Euhomy guarantees the unit is free of material and workmanship defects for one year from the purchase date, as long as it's used under normal household conditions and maintained per the User Manual. This is subject to certain conditions and exclusions as follows:

What is covered?

If the original unit or non-wearable parts are found defective, as determined by Euhomy, we will arrange repair or replacement within one year from the purchase date. If you receive a replacement unit, the warranty lasts for the remainder of the original warranty.

What is not covered?

- (a) Normal wear and tear on the unit or parts, as well as any parts lost or damaged due to human factors after delivery; replacement parts are available for purchase. Feel free to contact us using the methods provided below.
- (b) Damage from misuse, mishandling, accidents, or not following the operating instructions.
- (c) Damage caused by exposure to liquids other than water or foreign substances.
- (d) Repairs or modifications not performed by Euhomy.
- (e) Use in commercial settings or non-household environments (except for commercial models).

How to get service?

If your appliance isn't working properly or if you need any assistance, we offer several ways for you to get in touch with us.

You can reach us by calling +1-833-362-2655 (US) or emailing support@euhomy.com directly. For specific product categories, we also offer potential upgrades to enhance your warranty to our VIP service.

Our phone lines are open from Mon to Fri, 8 AM - 4 PM (PT), and we normally respond to emails and forms within 24 business hours. To help us assist you better, we recommend that you register your product online at +1-833-362-2655 (US) and have the appliance with you when you call us.

If you reach out via email, sometimes our emails might end up in your spam folder, so please check there to make sure you don't miss our response. The proof of purchase will be needed when you request a warranty service.

In addition to our one-year warranty, we offer lifetime technical support. After the warranty expires, you can arrange for service at an additional cost.

Feel free to contact us anytime with any issues.

EUHOMY

Live the *cool life*



support@euhomy.com



<https://euhomy.com>



1-833-362-2655(US)