 


# Car Refrigerator / Refrigerador De Auto

Instruction Manual / Instrucciones De Uso

SKU: CF004-18BL-MXEH

Model/Modelo : C18

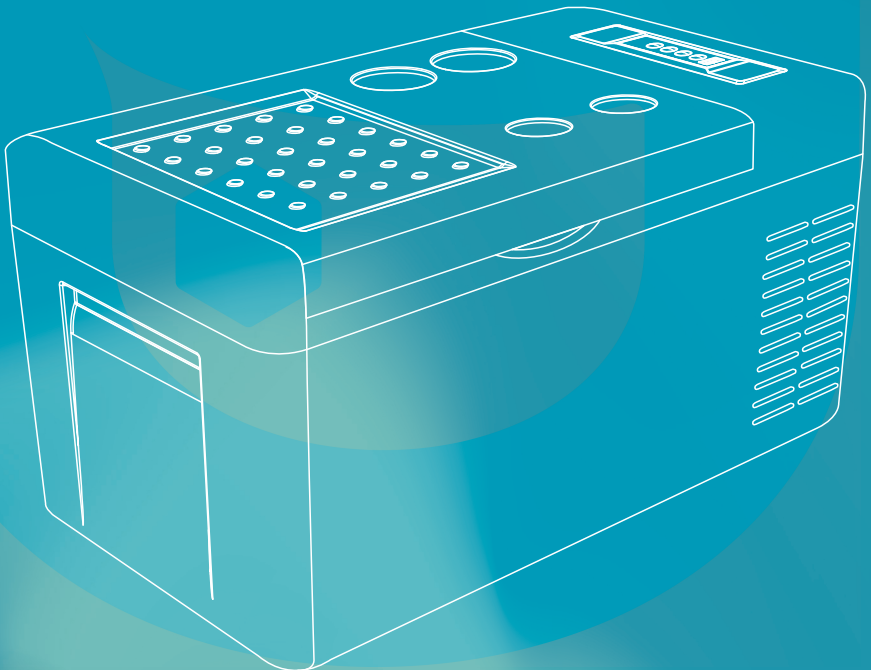

To ensure your safety and the proper use of this appliance, please read the following instructions completely before operating this appliance  
/Para garantizar la seguridad y el uso adecuado de este equipo,  
lea íntegramente las siguientes instrucciones antes de ponerlo en funcionamiento.

# Congratulations

Dear Customer:

Welcome to the Euhomy family. Thank you for purchasing one of our products.

Our goal is to provide you with superior service. If there is anything missing from or wrong with your order, or if you have any questions about using our ice maker, PLEASE contact us.

Email : [support@euhomy.com](mailto:support@euhomy.com)

Facebook : [@Euhomy.Official](#)

The Euhomy team is available 24/7 to address your questions, comments, and concerns. Your satisfaction is our ultimate goal. We want to make everything right so you'll share your positive experience with other shoppers on Amazon.

If you experience any problems, please send an email to [support@euhomy.com](mailto:support@euhomy.com).

Our mission:

\* To be the most trusted appliance brand.

\* To create practical, compact appliances that better your life.

*Be sure to register at*

**[www.euhomy.com/register](http://www.euhomy.com/register)**

*for updates, warranty, and other relevant information.*



[euhomyofficial](#)



[EuhomyOfficial](#)



[euhomy\\_us](#)



[euhomy](#)

**EÜHOMY**

# Live the *cool life*

# I Introduction to Product Functions

## ▲ Before using the refrigerator, please read this manual carefully. Keep the manual for future reference.

 
- Before using your refrigerator for the first time, clean it inside and out with a damp cloth.
- Do not fill the refrigerator with corrosive liquids. Do not pour liquids directly into the refrigerator.
- When the refrigerator will not be used for a long time, please disconnect the power supply and keep the refrigerator dry.
- Please clean the inner compartment regularly to prevent bacteria and odors from forming, and to ensure food safety.
- Shut down the refrigerator and battery (if used) before pulling the refrigerator by the handle.

## ▲ Connect the power supply.

- Find the DC power cord in the box. Connect the DC plug to the power outlet of the car refrigerator.
- Please place the refrigerators in the back-up of the car, seats, etc....
- Lay out power cords to suit the interior space of your car. Insert the cigarette lighter plug (one side of the power cord) into the car cigarette lighter hole.
- Long-press the power button for 3 seconds to start the refrigerator.



Connect the car cigarette lighter



DC power cord



Connect the car refrigerator (Standard Style)

- The refrigerator can be connected to more than one source of power.
- The refrigerator can be directly connected to the 12V/24V DC power supply.
- If the refrigerator is used with a 100–240V power supply, an AC adapter should be used.

# Car Refrigerator Operation

## Car battery protection: voltage reference

 
- The built-in Eco electronic control module can automatically monitor your car battery's voltage. The refrigerator will automatically shut off when excessive power is consumed, thereby preventing draining the battery or interfering with starting your car.

| Voltage | Factory Default Protection Value H Level |                    |                    |
|---------|------------------------------------------|--------------------|--------------------|
|         | H high level                             | M Medium level     | L Low level        |
| 12 V    | 11.3V OFF,12.5V ON                       | 10.1V OFF,11.4V ON | 9.6V OFF,10.9VON   |
| 24 V    | 24.6V OFF,26V ON                         | 22.3V OFF,23.7V ON | 21.3V OFF,22.7V ON |



- Note: When the refrigerator is running, "off" or "on" indicates the stop or start of the compressor.

## ▲ Parts schematic

- ① Compressor cooling hole
- ② Power interface
- ③ Fuse
- ④ Handle
- ⑤ Digital control panel
- ⑥ sealing rubber strip
- ⑦ Refrigerator cabinet

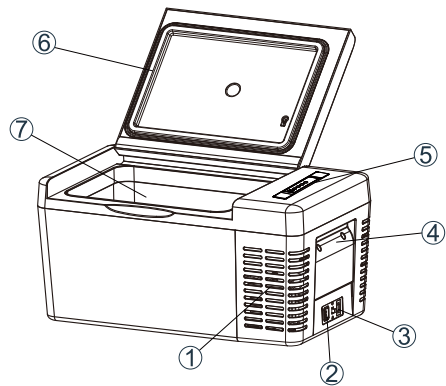

# I Optional Operation Method

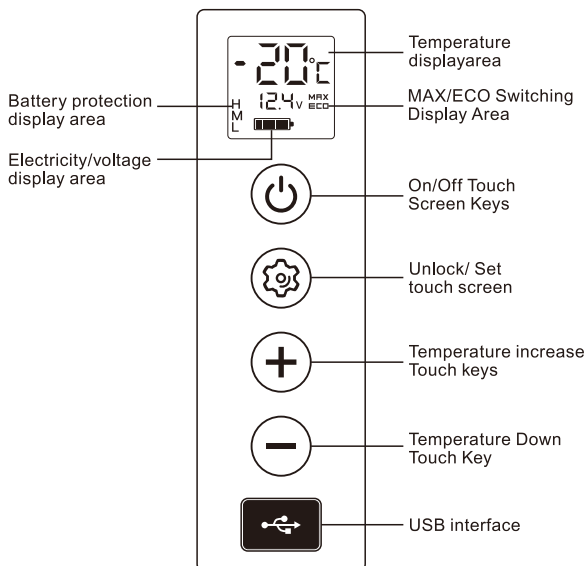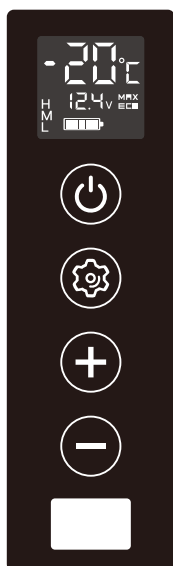  

| Item                                                                                | Description                 | Explanation                                                                                                                                                                                                                                                                                                                            |
|-------------------------------------------------------------------------------------|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Power button                | Press (ON/OFF) key for 3 seconds to turn on/standby the fridge.                                                                                                                                                                                                                                                                        |
|   | Settings button             | Press the button to select MAX or ECO mode. <ul style="list-style-type: none"> <li>• In MAX mode, the compressor runs quickly to reduce temperature.</li> <li>• In ECO mode, the compressor runs slowly to save energy.</li> </ul>                                                                                                     |
|  | Temperature increase button | Press the button once to increase the set temperature by 1 degree. Press and hold the button to increase the set temperature quickly.                                                                                                                                                                                                  |
|  | Temperature decrease button | Press the button once to decrease the set temperature by 1 degree. Press and hold the button to decrease the set temperature quickly.                                                                                                                                                                                                  |
|  | Temperature scale selection | Press  and  simultaneously for 3 seconds to change the temperature units between °F and °C. Please be sure no any symbol is flashing when you use this function. |

# I Optional Operation Method

## ▲ Temperature Adjustment Settings

- ⊙ **Adjust the internal temperature of the car refrigerator by touching the smart touch screen.**
- ⊙ **Operation Method:**
  - ① Press and hold the On/Off button for 3 seconds to turn the refrigerator on/off.
  - ② Use the {+or-} key to adjust the temperature.
  - ③ Press and hold the {+or-} button to adjust the temperature linearly with a speed of 2 °C. The number won't flicker during adjustment.
  - ④ If no key operation is detected within 3 seconds, the temperature display will stop flashing and exit the temperature setting, saving the currently set temperature.
  - ⑤ The temperature display shows the actual temperature inside the box.
  - ⑥ In the standby mode, only the {ON/OFF} button is on, and the temperature display and button are off.
  - ⑦ In working status, press the Set button to switch between MAX and ECO modes.
  - ⑧ Temperature adjustment function: can be set between -20 °C ~ 20 °C.
  - ⑨ Temperature conversion: press and hold the Set and + buttons for 3 seconds to switch between Celsius (°C) and Fahrenheit (°F)
  - ⑩ Power protection mode: press the Set button for 3 seconds to enter the battery protection setting, then click the Set button to switch between H, L, and M. The corresponding gear flashes for 5 seconds, then exits and saves. We recommend the high-level setting for car battery.
  - ⑪ The car refrigerator has a power-off memory function that automatically restores the working state (power on/off state and working mode) before the power off after the next power on, eliminating the need to set it again.

**ECO: Energy-saving cooling**

**MAX: Powerful cooling**

# I Problems and Troubleshooting

Advice: In the case of any abnormal situation that cannot be resolved through simple fault analysis, please contact Customer Service for assistance.

## ▲ Car refrigerator does not work

- Check that the power is connected properly. (Check if the plug is loose or positive and negative poles are reversed.)
- Check that the power button on the control panel is turned on.
- Check that the cooling ventilation is normal.
- Check if the fuse is blown.

## ▲ Poor cooling performance

- Check that the lid is closed properly.
- Check if the door seal is damaged or deformed.
- Check if there is poor ventilation around the fridge.
- Check that the temperature is set properly.

## ▲ Abnormal noise

- Refrigerator is not set on a flat, level surface.
- Check for vibrations in surrounding objects.
- Parts inside the refrigerator have come loose or fallen off.

## ▲ Refrigerator condensation

- It is normal for some condensation to collect on the surface of the refrigerator when humidity is more than 75%.

## ▲ Definition of error codes

| Error Code | Error Type                                                             |
|------------|------------------------------------------------------------------------|
| E1         | Low input voltage                                                      |
| E2         | Fan fault                                                              |
| E3         | Input voltage fault due to compressor starting and stopping frequently |
| E4         | Low rotational speed of compressor                                     |
| E5         | Overheating of controller chip                                         |
| E6         | Temperature sensor wire disconnected                                   |

Refrigerator is not put on a flat level surface.  
Check for vibrations in surrounding objects.

# I Failures and Solutions

## ▲ E1: Low input voltage

- Failure 1: Refrigerator power cord was inserted into cigarette lighter before the car started.  
Solution 1: Wait to connect the fridge until after the car is started.
- Failure 2: Input voltage of the adapter is too low.  
Solution 2: Adjust the battery protection level to M or L. If this does not work, replace the adapter.

## ▲ E2: Fan fault

- Please replace the fan when a fan malfunction has been indicated.

## ▲ E3: Input voltage fault due to compressor starting and stopping frequently

- When the refrigerator is used in a car and E3 appears:
  - ① Please shut down the refrigerator for 5 minutes and then restart it.
  - ② If this does not work, please see E1 for solutions.
- When the refrigerator is connected via adapter and E3 appears:
  - ① Please adjust battery protection level to M or L.
  - ② If this does not work, please replace the adapter.

## ▲ E4: Low rotational speed of compressor

- Please adjust the input voltage and restart the refrigerator.

## ▲ E5: Overheating of controller chip

- Please power off the refrigerator for 5 minutes. Check to see if the overheating may be caused by poor ventilation around the compressor.

# I Technical Parameters

|                     |                             |
|---------------------|-----------------------------|
| <b>SKU</b>          | <b>CF004-18BL-MXEH</b>      |
| <b>MODEL</b>        | <b>C18</b>                  |
| Input voltage       | DC12V/24V,AC100-240V        |
| Temp control range  | -4°F to 68°F(-20°C to 20°C) |
| Cryogen             | R134a (22g)                 |
| Rated power         | 60W                         |
| Current             | 5A                          |
| Net weight          | 21lbs                       |
| Product size(L*W*H) | 22.5x12.6x11.2in            |
| Packing Size(L*W*H) | 24.2x14.4x13.0in            |

# Standard Packing List

- 1.Car Refrigerator
- 2.DC cable
- 3.AC cable and adapter

## Safety Notice

- Ensure that the refrigerator is connected to the proper voltage at all times.  
(Specs label shows the approved voltage for the car refrigerator).
- Do not pour any liquid directly into the car refrigerator.
- Never modify the refrigerator on your own. To do so may be hazardous to your health.
- Do not expose the refrigerator to rain or other sources of water.

# I Applications



By keeping a battery on hand, you can ensure that the refrigerator maintains its set temperature in any situation.



When storing ice cream, please set the refrigerator to the lowest temperature and keep the power on constantly.



Prevent health problems from bottled water deterioration caused by high temperatures.



Keep fresh or frozen foods-even luxurious seafood-safe during long trips.



Your car refrigerator effectively preserves the freshness of tea leaves. You can enjoy fresh and delicious tea anytime during your road trip.



The ideal storage temperature for red wine is 50°F -64°F. The precise temperature control of your Euhomy car refrigerator guarantees the proper storage temperature.



Fruits will not keep in a hot car for more than 2 hours, even with the air conditioning running. But your car refrigerator can keep fruit fresh for a longtime.

 


Did you know? The coating on some sunglasses will peel off at high temperatures! Your car refrigerator is the best place to store your sunglasses.



Cosmetics easily melt and go bad at high temperatures. Keep makeup and other beauty products fresh and safe in your car refrigerator.

# | Car Refrigerator Electrical Schematic

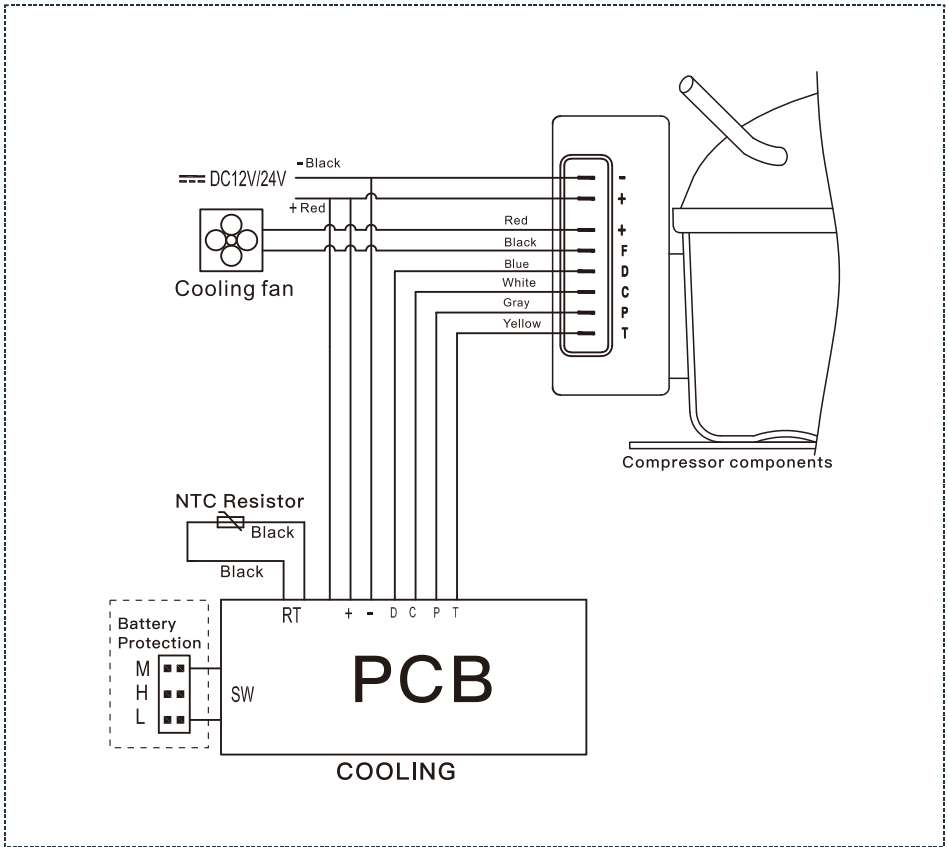

**EUHOMY**  
# Live the *cool life*