

Fanttik

A10 APEX

3in1 Laser Tape Measure

User Manual



IMPORTANT: Please read these instructions before operating the product.

1. GENERAL SAFETY RULES

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE

The label on your tool may include the following symbols.

V ————— Volts

mW ————— Milliwatts



————— Laser warning symbol

nm ————— Wavelength in nanometers

2 ————— Class 2 Laser

WARNING: Read all instructions. Failure to follow all instructions listed below may result in hazardous radiation exposure, electric shock, fire and/or serious injury.

- Do not operate the laser in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Store idle laser out of reach of children and other untrained persons. Lasers are dangerous in the hands of untrained users.
- Do not use tool if switch does not turn it on or off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- Do not use optical tools such as a telescope or transit to view the laser beam. Serious eye injury could result.
- Do not place the laser in a position which may cause anyone to intentionally or unintentionally stare into the laser beam. Serious

eye injury could result.

- Do not position the laser near a reflective surface which may reflect the laser beam toward anyone's eyes. Serious eye injury could result.
- Turn the laser off when it is not in use. Leaving the laser on increases the risk of staring into the laser beam.
- Do not modify the laser in any way. Modifying the tool may result in hazardous laser radiation exposure.
- Do not operate the laser around children or allow children to operate the laser. Serious eye injury may result.
- Do not remove or deface warning labels. If labels are removed user or others may inadvertently expose themselves to radiation.
- Position the laser securely on a level surface. Damage to the laser or serious injury could result if the laser falls

WORK AREA

- Keep your work area clean and well lit. Cluttered benches and dark areas invite accidents.
- Do not operate laser tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children and bystanders away while operating a laser tool. Distractions can cause you to lose control.

PERSONAL SAFETY

- Stay alert, watch what you are doing and use common sense when operating a laser tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Do not overreach. Keep proper footing and balance at all times. Proper footing and balance enables better control of the tool in unexpected situations.
- Use safety equipment. Always wear eye protection. Dust mask, non-skid safety shoes, hard hat, or hearing protection may be required for appropriate conditions.

TOOL USE and CARE

- Do not use tool if switch does not turn it on or off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- Store idle tools out of reach of children and other untrained persons. Tools are dangerous in the hands of untrained users.
- Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one tool, may become hazardous when used on another tool.

SERVICE

- Tool service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel could result in a risk of injury.
- When servicing a tool, use only identical replacement parts. Follow instructions in the Maintenance section of this manual. Use of unauthorized parts or failure to follow Maintenance Instructions may create a risk of electric shock or injury.

DISPOSAL / RECYCLE

- Do not place equipment and its accessories in the trash. Items must be properly disposed of in accordance with local regulations. Please see epa.gov/recycle for addition

2. PACKAGE CONTENT



Laser Tape x 1



Charging Cable x 1



 
User manual x 1



Storage bag x 1

3. FEATURES DETAILS

1. IPS Display
2. Power Button
3. Return Button
4. Up Arrow
5. Down Arrow
6. Receiver Lens
7. Laser Window
8. Tape
9. Tape Lock Button
10. Copper Nut(1/4"-20)
11. Charging Port
12. Cross Laser Window

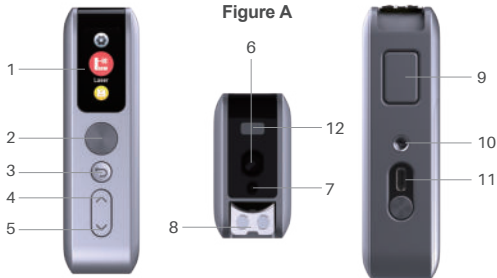

4. MENU'S SYMBOL OVERVIEW

Figure B



Laser



Settings



Records

Figure C



Dist. meas.



Cont. meas.



Area meas.



Vol. meas.



Cross laser

Figure D



Units



Ref. plane



Offset



Font



Orientation



Brightness



Language



Reset

5. OPERATION AND FUNCTION

Button and function(See Figure A)

- Power Button (2)

- Hold the button to power on/off.
- Press to select the highlighted option or enter submenu.
- Press to record the measurement value In tape measurement mode.

- Return Button (3)

- Press to back to the previous menu.
- Press the button to quit the operation before confirmed.

- Up Arrow (4)/Down Arrow (5)

- Press to scroll up/down in menu options.
- Press to turn it on/off if option is a switch.
- Press to increase/decrease parameter to reach the desired preset value,

NOTE: After completing the selection with the arrows, if you wish to abandon the changes, press the return button; if you want to confirm your selection, press the power button.

Primary Menu (see Figure B)

- Press power button to turn on the device, and the system will automatically access the primary menu. the interface has three menu symbols:



Measure Mode



Settings Mode



Records Mode

Tips: Press the up/down arrow keys to scroll to the desired mode, then press the power button to access the next-level menu. In large font mode, the values for distance measurement, continuous measurement, area measurement, and volume measurement will be magnified for better viewing.

Measurement Mode

 
Choose measure icon and press power button, then entering next interface, there are five measurement options to choose.

WARNING: Failure to follow the guidelines below may result in inaccurate measurements or no reading at all.


- Hold the device steady and avoid shaking during measurement.
- Position the measured surface perpendicular to the laser for optimal accuracy.
- Avoid measuring reflective surfaces (e.g., glass), as they may interfere with readings.

- Distance Measurement

- To measure, press the power button. The measurement will be shown on the bottom of the display.
- Press the power button again, and the previous measurement will move to the middle line.
- Press the power button for a new measurement on the bottom line.
- Press the power button again, and the measurement from the middle line will move to the top line, while the measurement from the bottom line will move to the middle line.
- In large font mode, the measurement value will be magnified, and only two results will be retained: the top one is the historical measurement result, and the bottom one is the current measurement result.




Standard Font

 

Large Font

- Continuous Measurement

 - During Cont. Meas. the measured values will be updated continuously. Press the power button, and the final measurement result will be displayed at the bottom of the display.
- Press the power button again, the previous measured value will move to the middle, and a new continuous measurement will start.
- In large font mode, the measurement value will be magnified, and only two results will be retained: the top one is the historical measurement result, and the bottom one is the current measurement result.
- Tips: During continuous measurement, the laser flickers to make the real - time measurement results more accurate. This is normal.




Standard Font



Large Font

- Area Measurement

 - To measure the width and length one after the other, as with a length measurement.
- The first measured value will be shown at the top of the display. The laser beam remains switched on between the two measurements.
- After the second measurement has been completed, the area will be automatically calculated and displayed. The end result will be shown at the bottom of the display, while the current measured value will be shown above it.
- In large font mode, the measurement value will be magnified. After the second measurement is completed, the first measurement value will be covered by the second measurement value, and the final result will be displayed at the bottom.




Standard Font



Large Font

- Volume Measurement

 - To measure the width, length, and depth one after the other, as with a length measurement.
- The first measured value will be shown at the top of the display. The laser beam remains switched on between the three measurements.
- After the third measurement has been completed, the volume will be automatically calculated and displayed. The end result will be shown at the bottom of the display, while the current measured value will be shown above it.
- In large font mode, the measurement value will be magnified. After the second measurement is completed, the first measurement value will be covered by the second measurement value. Similarly, the third measurement value will also cover the second measurement value, and the final result will be displayed at the bottom.

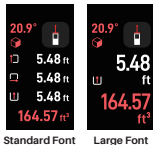

- Cross Laser

This feature is designed to assist you with various DIY tasks, such as leveling surfaces or hanging pictures.

- First, mount the device onto a tripod with a 1/4" screw adapter.
- Activate the Cross Laser function, then adjust the projected laser lines to your desired angle using the built-in bubble level for reference.



6. SETTINGS MENU

Choose settings icon in primary manu(Figure B) and press power button , then entering next-level menu(Figure C)

- Changing the Unit of Measure

Select the "unit"  in the settings menu. Unit of measure "ft" is set by default. Set the required unit of measure and confirm by pressing power button, To exit the menu item, press the return button.

- Changing the Refer Plan of Measure

Select "Ref. Plane"  and press the power button to enter the laser and tape measure selection interface. Select "Laser" and press the power button. You'll see three options: Front reference, Center Reference, and Rear Reference. Choose your desired setting, then press the power button to confirm. Select "Tape" and press the power button. You'll see two options: Front reference and Rear Reference. Choose your desired setting, then press the power button to confirm.

- Setting the Offset

Select the "offset"  and press power button in the settings menu. press up/down arrow button to increase/decrease offset value then press the power button to confirm. .Note: Offset settings only for distance compensation; errors could be caused to use it in normal scenarios!

-Setting the Font

Select "Font"  and press the power button in the settings menu, then press the up/down arrow buttons to switch the font mode then press the power button to confirm. In the large-font mode, the measured values will be enlarged for better visibility.

- Setting the Orientation

Select the "Orientation"  and press power button in the settings menu, then press up/down arrow button turn on/off the switch, then press the power button to confirm. the icon indicates orientation is in the "on" state.

- Setting the Brightness

Select the "Brightness"  and press power button in the settings menu, Set the required brightness by pressing up/down arrow button to increase/decrease display illumination then confirm by pressing power button .

- Setting the Language

Select the "language"  and press power button in the settings menu, Set the required language and confirm by pressing power button .

 
Memory Value Display or Delete

A maximum of 30 values can be retrieved.

Select the "Records"  and press power button to entering a value list. A short press of the power button allows you to view the original measurement value.

In large font mode, for area and volume measurements, you can use the up/down keys to view the measured side length and results.

Holding the power button opens a dialog box, giving you the option to delete a single record or clear all records.

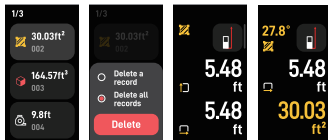

7. TAPE MEASURE OPERATION GUIDE

1. Top Measuring (See Figure E)

With a movable magnetic hook, this tape ensures precise measurements by having the claw directly touch the target surface, eliminating hook errors. It uses the tape's top as the zero point for accuracy.

2. Hook Measuring (See Figure F)

Hook the target and slide the ruler hook to the right to avoid hook errors. It still uses the tape's top as the zero point for accurate results.

Tips: When powered on, pull out the tape to activate the tape measurement mode on the display.

The measurement reference is set to the front reference by default.

In large font mode, the measurement value will be magnified, and only two results will be retained: the top one is the historical measurement result, and the bottom one is the current measurement result.

- Press the power button to save the value after measurement.
- Press lock button 9 to retract the tape.
- Press return button 3 to exit the tape measure display mode



Figure E



 


Figure F

 

Standard Font

 

Large Font

Precautions

- Keep the tape measure level or straight to avoid tilting errors.
- Retract the tape after use to prevent damage.

Maintenance and Care

- Clean the tape regularly to avoid dust or dirt buildup.
- Avoid impacts or bending to maintain accuracy.
- Store in a dry place to prevent rust.

8. SPECIFICATIONS

Laser Measuring Range	0.2-165ft(0.05-50m)
Tape Measuring Range	9.8ft(3m)
Distance Accuracy	1/8in@30ft(3mm@10m)
Tilt Measurement Range	±90°
Angle Accuracy	±1°
Measure Function	Distance/Area/Volume/Level
Screen	1.47" IPS Color Screen
Laser Class	Class II, <1mW
Laser Type	630~670nm
Storage size	30 Records

Auto Shutdown time	120 seconds
Operating Temperature	32°F-104°F(0°C-40°C)
Storage Temperature	-4°F-140°F(-20°C-60°C)
Storage Humidity	≤80%
Battery	3.7V 500mAh Lithium Battery

9. TROUBLESHOOTING

When the device displays "Err x," it indicates that the instrument may not be able to perform measurements correctly. Below are possible error messages and their solutions.

Code	Cause	Corrective Measure
Err 1	Reflected signal is too weak.	Use a reflector.
Err 2	Reflected signal is too strong.	Test on a different reflective surface.
Err 3	Battery voltage is too low.	Charge the battery.
Err 4	Memory error.	Return to repair.
Err 5	Temporary is overheating	Turn off the device and allow it cool down before reuse
Err 6	Measurement range exceeded.	Measure the distance within measurement
/	The length measurement result differs from the correct value by a constant value.	check if the setting of reference plan or offset is correct

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARRANTY INFORMATION

This product is covered by a **12-month** limited warranty for manufacturing defects.

929-693-6066 MON-FRI 9AM-5PM(ET)

www.fanttik.com

support@fanttik.com

METASEE LLC

12 GREENWAY PLZ STE 1161A HOUSTON, TX 77046-1203

Made in China

