

 
 
FLEXTAIL™



**ZERO POWER BANK
5000M**


— ZPB5000MIN0601 —

PRODUCT INTRODUCTION

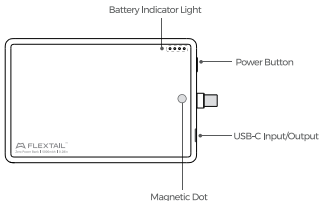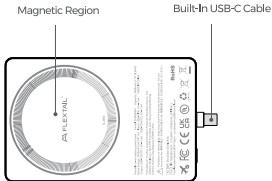

DISPLAY INSTRUCTIONS

 Charging Indicator

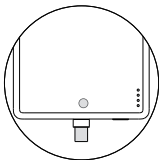


Type-C: 5V  1.6A

25~0% 100%



OPERATING INSTRUCTIONS

 Charging the Power Bank

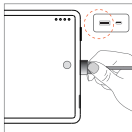

To charge the power bank, connect the built-in cable of the power bank to the USB-C port of the charger.

The LED indicator on the power bank will blink and charging will commence.

Alternatively, you can use another USB-C cable to connect to the input port of the power bank for charging.

Charging Devices with the Power Bank's Built-in Cable




Simply connect the power bank's built-in cable to the device you wish to charge, such as a phone or other digital device, to begin charging.

Charging Devices with the Power Bank's Output Port



Using an appropriate cable, connect one end to the USB-C port of the power bank and the other end to the device you wish to charge, such as a phone or other digital device, to begin charging.

Power Bank Button Function Description

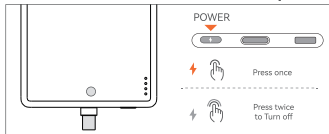

Press the power button once to power on, and display the current power of the power bank supply.

Press the power button twice to shut down and turn off the power display.

PARAMETERS

Name	Portable Li-ion battery power bank
Model	ZPB5000M
Weight	102g $\pm$ 2g (3.6oz)
Size	101*65*7(mm)
Input	5V  1.6A
Output	5V  1.6A
Capacity	5000mAh(3.7 V, 18.5Wh)
Rated Capacity	2950mAh
Package Contents	Pocket Power Bank *1 User Manual and Warranty Card *1

NAMES & CONTENTS OF HAZARDOUS SUBSTANCES IN THE PRODUCT

Component Name	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Internal Metal Parts	O	O	O	O	O	O
Internal Non-metallic Parts	O	O	O	O	O	O
Circuit Board	X	O	O	O	O	O
Lithium Battery	O	O	O	O	O	O
USB Charging Cable	O	O	O	O	O	O
Other Components	O	O	O	O	O	O

This table is prepared in accordance with the provisions of SJ/T11364-2014.
O: Indicates that the content of the hazardous substance in all homogeneous materials of this component is within the limit requirements specified in GB/T26572-2011.

X: Indicates that the content of the hazardous substance in a certain homogeneous material of this component exceeds the limit requirements specified in GB/T26572-2011. Due to production processes and technical reasons, certain hazardous substances in the aforementioned components may exceed the limit requirements; however, they are included in the EU's exemptions for hazardous substance control. Please use with confidence.

EN WARNING

- Damage caused by using a charger with incompatible specifications is not covered under warranty and may pose safety risks.
- When the battery temperature reaches 45°C, the product activates a charging protection function and stops charging. Recommended charging temperature: 0°C–30°C.
- Do not disassemble or modify this product.
- Do not store this product in a humid environment.
- Do not allow water or other liquids to enter the internal ports of the product, as this may cause damage.
- Avoid direct sunlight exposure.
- Keep out of reach of children and pets to prevent accidental ingestion.
- Stop using if overheating occurs.
- Clean with a dry, soft cloth. Do not use harsh chemicals or strong detergents.

EN TROUBLESHOOTING GUIDE

- Plug in the charger to check if the battery is charged.
- Check if there is water or other liquid on the product surface.
- Please repeatedly press the switch to observe if the product starts.
- If you have any questions, please contact FLEXTAIL distributor or email support@flectail.com

EN WARRANTY POLICY

- FLEXTAIL warrants its products against defects in raw materials and manufacturing processes for a period of two years from the date

of purchase to customers who have purchased the product from an authorized retailer. For this product, the warranty period is two years. If customer discovers a hidden defect in the product, please return it to the place of purchase. If cannot return it to the dealer, please return it to the address we provide. We will repair or replace the product in accordance with the warranty terms. We will undertake the due obligations during warranty period based on warranty terms. The service will no longer be provided after the warranty expires. We reserve the right to request proof of your warranty claim.

EN PRODUCT DISCLAIMER

- Our warranties do not cover problems such as those caused by ordinary wear, modification or alteration of the product[®], failure to follow directions, improper maintenance, accidental damage, abuse, misuse, intentional damage or off-design use. This warranty gives you specific legal rights, and you may also have other rights which vary from purchase place. This warranty is expressly in lieu of all other warranties, express or implied, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose (If sales area prohibits exemption or limitation liability for incidental or consequential damages, or prohibits limitation of implied warranties, the above limitations or exclusions may not apply to you.)
- Both FLEXTAIL and FLEXTAILGEAR are legally registered trademarks of our company. The registered trademark FLEXTAIL and FLEXTAILGEAR are used for products in different batches. Both trademarks do not affect the use of the product.

Guarantee Card

Product Information

Model _____

Purchase Date _____

Color _____

Purchase Area _____

Client Information

Name _____

Tel _____

E-mail _____

Address _____



This package is made with recyclable materials. This package may not be recyclable in your area. Please support recycling efforts in your community.

EU REP SUCCESS COURIER SL

CALLE RJO TORMES NUM. 1, PLANTA 1, DERECHA, OFICINA 3, Fuenlabrada Madrid, 28947
Spainsuccessservice2@hotmail.com



RoHS

