

FNIRSI™

LCR-P1

TRANSISTOR TESTER



CATALOG

NOTICE TO USERS	>>>	10
------------------------	---------------------	----

1.PRODUCT INTRODUCTION	>>>	10
-------------------------------	---------------------	----

2.PANEL INTRODUCTION	>>>	11
-----------------------------	---------------------	----

3.PARAMETER INTRODUCTION	>>>	12
---------------------------------	---------------------	----

4.OPERATING INSTRUCTIONS	>>>	14
---------------------------------	---------------------	----

5.FIRMWARE UPDATE	>>>	17
--------------------------	---------------------	----

6.PRECAUTIONS	>>>	18
----------------------	---------------------	----

7.CONTACT US	>>>	19
---------------------	---------------------	----


NOTICE TO USERS

- This manual provides detailed instructions on how to use the product, precautions, and relevant information. Please read the manual carefully before using the product to ensure optimal performance.
- Do not use the instrument in flammable or explosive environments.
- Dispose of used batteries and discarded instruments according to national or local regulations; they should not be disposed of with household waste.
- If there are any quality issues with the instrument or if you have any questions about its use, please contact "FNIRSI" online customer service or the manufacturer. We will resolve your issue promptly.

1.PRODUCT INTRODUCTION

The Transistor Tester is a high-precision, multifunctional electronic testing device designed specifically for electronic engineers, technicians, and enthusiasts. This device is intended for detecting and analyzing the performance and characteristics of semiconductor components such as transistors, diodes, triodes, and field-effect transistors (FETs). Equipped with a color screen, it allows for multi-parameter measurement of various components, automatically identifies the type and pin arrangement of the tested component, simplifying the operation process and enhancing testing efficiency.

2.PANEL INTRODUCTION

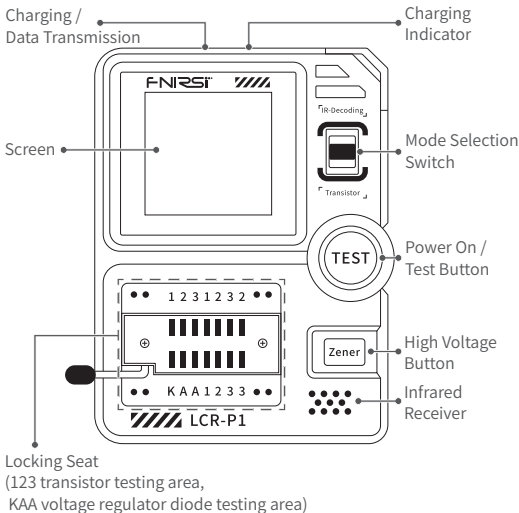

3.PARAMETER INTRODUCTION

【 3.1 】 Host parameters

Product Model	LCR-P1
Display Screen	1.44 inches
Battery Capacity	300mAh lithium battery
Charging Specification	USB Type-C, 5V/1A
Product Size	71×87×28mm

【 3.2 】 Component Test Parameters


Category	Range	Explanation
Transistor	$10 < \beta < 600$	DC current gain h_{fe} , base-emitter voltage drop U_{be} , I_c/I_e , collector-emitter reverse cutoff current I_{ceo} , I_{ces} , forward voltage drop U_f .
Diode	Forward voltage drop $< 4.5V$	Forward voltage drop, junction capacitance, reverse leakage current.
Voltage Regulator Diode	0.01-4.5V 0.01-32V	(1-2-3 Testing Area) Forward voltage drop, reverse breakdown voltage. (K-A-A Testing Area) Reverse breakdown voltage.

Category	Range	Explanation
Field-Effect Transistor	JFET IGBT MIOSTET	· Gate capacitance C_g, drain current I_d at V_{gs}, forward voltage drop of protective diode U_f. · I_d at V_{gs}, forward voltage drop of protective diode U_f. · Threshold voltage V_t, gate capacitance C_g, drain-source resistance R_{ds}, forward voltage drop of protective diode U_f.
Unidirectional SCR Bidirectional SCR	Turn-on voltage $< 5V$, gate trigger current $< 6mA$	Gate voltage
Capacitor	25pF~100mF	Capacitance value, loss coefficient V_{loss} , equivalent series resistance ESR.
Resistor	0.01 Ω -50M Ω	Resistance value.
Inductor	10uH-1000uH	Inductance value, DC resistance.
Battery	0.1-4.5V	Voltage value, polarity.
Infrared Remote Control Decoding	NEC protocol infrared code	Display user code and data code, and display corresponding infrared waveform.

***SCR:**Silicon Controlled Rectifier

4. OPERATING INSTRUCTIONS

【 4.1 】 Power On / Power Off

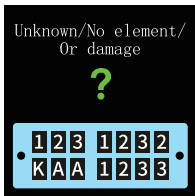


Power On: Press the TEST button while in the power-off state to enter the testing interface.

Power Off: Long press the TEST button on any non-measurement screen to power off.



【 4.2 】 Testing of Two-pin Components such as Capacitors, Resistors, Inductors, Diodes, and Batteries

 Insert the component pins into two different numbered test holes (e.g., 1, 3 or 1, 2 or 2, 3), press down and lock the clamping rod, then press the TEST button to initiate testing. Upon completion of the measurement, the corresponding test parameters and pin sequence will be displayed.





【 4.3 】 Testing of Three-pin Components such as Transistors, MOSFETs, etc

Insert the three pins into test holes numbered 1, 2, and 3 respectively. Press down and lock the clamping rod, then press the TEST button to initiate testing. Upon completion of the measurement, the corresponding test parameters and pin sequence will be displayed.

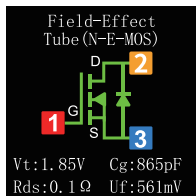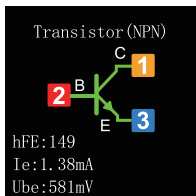


【 4.4 】 Testing of Zener Diodes

Press the Zener button to enter Zener diode testing mode. Insert the anode of the Zener diode into test hole A, and the cathode into test hole K (there will be a reverse connection prompt). Press down and lock the clamping rod, then press the TEST button to initiate testing. The measurement results will be displayed accordingly.

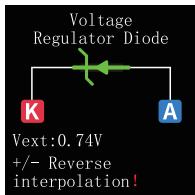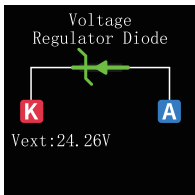

【 4.5 】 Infrared Decoding

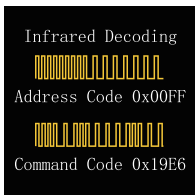


Switch the mode selection switch upward to enter Infrared decoding test mode. Aim the device at the Infrared receiver and send an Infrared signal. The device will automatically decode the signal. After decoding, it will display the address code, user code, and waveform.

5.FIRMWARE UPDATE

- Power off the device, then press and hold the **Zener** button (high voltage button) followed by the **TEST** button (power button) to enter the firmware upgrade interface.
- Connect to a computer via Type-C cable.
- Select the firmware and COM port of the current device, then click 'Start Upgrade'.
- The upgrade will succeed and the device will automatically restart.

固件更新中
update

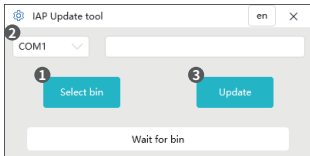

6.PRECAUTIONS

- When measuring capacitors without prior discharge, sparks may occur at the moment of insertion and locking, which can discharge the capacitor. This function serves as a safety measure to prevent forgetting to discharge capacitors before testing. However, it is still recommended to manually discharge capacitors before testing for proper usage.
- During non-measurement processes, the 1-2-3 locking interface is in a conductive state, which prohibits direct insertion of batteries.
- Testing component parameters outside the specified range may result in incorrect identification of component types.

7.CONTACT US

Any FNIRSI's users with any questions who comes to contact us will have our promise to get a satisfactory solution +an extra 6 months warranty to thanks for your support!

By the way, we have created an interesting community, welcome to contact FNIRSI staff to join our community.

Shenzhen FNIRSI Technology Co., LTD.

Add.: West of Building C , Weida Industrial Park , Dalang Street , Longhua District , Shenzhen , Guangdong , China

Tel: 0755-28020752

Web: www.fnirsi.cn

E-mail: business@fnirsi.com (Business)

E-mail: service@fnirsi.com (Equipment Service)

Warnings and safety information

For all information on handling and use, please refer to the instruction manual or product label. Before using the products, read its contents and follow the instructions contained therein.

Also read the following information before use:

Safety of use

1. Use measuring tools for their intended purpose. Do not use measuring tools for tasks for which they were not designed to avoid damage or erroneous measurement results.
2. Always make sure a tool is in good working condition before using it. Damaged tools, such as cracked cases or damaged displays, can lead to incorrect measurements or risk of accidents.
3. Calibrate measuring tools regularly to ensure accuracy and reliability of measurements. Incorrectly calibrated devices can lead to erroneous results.

Precautions

1. Use appropriate eye protection, especially when working with measuring tools that may emit radiation.
2. Keep measuring tools away from children and untrained people to prevent accidental damage or misuse.
3. Avoid using measuring tools in extreme conditions of temperature, humidity or in an atmosphere with a high concentration of dust, which can affect their accuracy and functionality.
4. Be careful not to damage delicate measuring components (e.g., sensors, probes) when working with measuring tools.

Safe use

1. Always make sure that the measuring tool is properly aligned and fixed to avoid measurement errors or damage.
2. Use measuring tools only in designated areas that provide adequate stability and minimize the risk of accidents, such as slippery or uneven surfaces.
3. Never take measurements on live components or in conditions that may pose a safety hazard.

Rules for use in appropriate conditions

1. Store measuring tools in a dry, cool place, away from moisture and direct sunlight, which can damage the devices or affect their accuracy.
2. When using measuring tools, make sure they are well seated and will not be subjected to shocks or impacts that can damage them.
3. Avoid using measuring tools in areas with extreme conditions, such as high vibration, hot surfaces, dust, or moisture, unless the tool is rated for this by the manufacturer.

Maintenance instructions

Regularly check the condition of measuring tools, especially measuring components (e.g., sensors, probes, displays) and batteries.

4. Follow the cleaning instructions provided by the manufacturer. Use appropriate cleaning materials (e.g., soft cloths) to avoid damaging delicate components.

Calibrate measuring tools regularly, according to the manufacturer's recommendations, to maintain measurement accuracy.

Safe disposal

5. Dispose of used or damaged measuring tools in accordance with current environmental and electronics recycling regulations.
6. Do not dispose of measuring tools in regular waste containers, as they may contain elements harmful to the environment.
7. Contact local authorities or recycling companies for information on proper disposal of used measuring tools.

Statement of compliance

The products have been designed in accordance with the safety requirements of Regulation (EU) 2023/988 on general product safety, ensuring their compliance with applicable standards for the safety and health protection of users.



下载用户手册&应用软件
Download User manual&APP&Software