

FNIRSI 菲尼瑞斯

HRM-10

高精度内阻测试仪

HIGH-PRECISION INTERNAL RESISTANCE TESTER



NOTICE TO USERS


- This manual provides detailed instructions on how to use the product, safety precautions, and relevant information. Before using the product, please read the manual carefully to ensure optimal performance of the product.
- Do not use the instrument in flammable or explosive environments.
- Disposed batteries and obsolete instruments should not be disposed of with household waste. Please follow the relevant national or local laws for disposal.
- If there are any quality issues with the instrument or if you have any questions about using the instrument, please contact "FNIRSI" online customer service or the manufacturer. We will promptly assist you.

1.PRODUCT INTRODUCTION

The "HRM-10" is our company's first handheld high-precision internal resistance meter. It is a true four-wire measurement internal resistance meter, designed with precision, convenient to carry. The device can automatically test internal resistance and voltage values simultaneously, with measurement results displayed on the screen. Users can also manually adjust the voltage and resistance range. The product features a sorting mode, automatically filtering the good and bad batteries based on user-set thresholds. It also supports historical records and exporting data tables of historical measurements.

2.PANEL INTRODUCTION



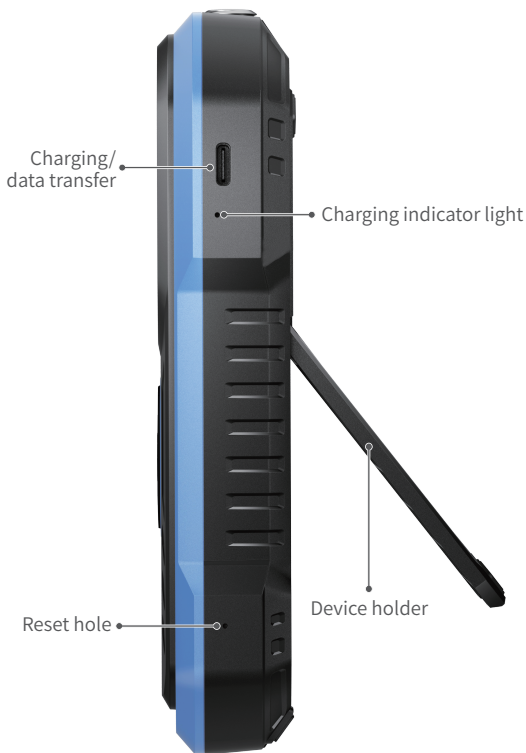

3.PARAMETER INTRODUCTION

	VOLTAGE	RESISTANCES
MEASURING RANGE	0— $\pm 100\text{V (DC)}$	0 — 200Ω
ACCURACY	$\pm 0.5\%$	$\pm 0.5\%$
GEAR	Automatic, 1V, 10V, 100V	Automatic, $20\text{m}\Omega$, $200\text{m}\Omega$, 2Ω , 20Ω , 200Ω
INSTRUMENT TEST SIGNAL FREQUENCY	AC 1Khz	
RECHARGEABLE	TYPE-C interface (5V/1A)	
BUILT-IN BATTERY	1000mAh lithium battery	
USER CALIBRATION	Support	
SORTING MODE	Support	
HISTORY RECORD	Support	
RECORDED DATA EXPORT	Support	
WORKING ENVIRONMENT	-10°C —— $+45^{\circ}\text{C}$, relative humidity<80%	
STORAGE ENVIRONMENT	-20°C —— $+80^{\circ}\text{C}$, relative humidity<80%	
SIZE	$158.7 \times 80.5 \times 28.4\text{mm}$	
WEIGHT	225g	

4. OPERATING INSTRUCTIONS

- ①**Power on:** Short press  to power on.
- ②**Shut down:** long press  to shut down.
- ③**Adjust voltage:** short press **V** |  to select voltage, then short press  /  to switch range.
- ④**Adjust the resistance:** short press **R** |  to select resistance, then short press  /  to switch the range.
- ⑤**Sorting Mode:** Long press  to enter the menu, select Sorting Mode and click  to enter Sorting Mode. In sorting mode, there are 8 groups of customized threshold data groups, short press **V** |  / **R** |  to switch data groups, and  /  to select the threshold value to be set. In the sorting mode, the test results will be automatically evaluated and compared with the set threshold interval to judge whether they pass or fail, so as to filter out the qualified devices, and the evaluation will also be automatically saved in the history record.
- ⑥**Export data to the computer:** the device through the USB to TYPEC cable connected to the computer, it will pop up a U disk, at this time the U disk inside the table is the recorded data.
- ⑦**Voltage and resistance calibration:** Long press  to enter the menu, choose whether to calibrate voltage or resistance, click  to enter, follow the instructions to select the gear calibration. Each range is calibrated manually separately and does not affect each other. Restoring the machine to factory settings will restore the factory calibration parameters.



下载用户手册&应用软件
Download User manual&APP&Software