 


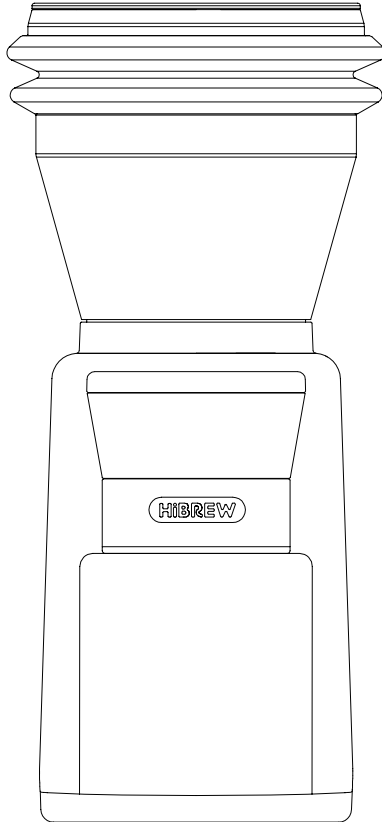

USER MANUAL



EN

AE

RU

CN

FR

DE

ES

IT

PT

KR

JP

COFFEE GRINDER

SKU / G3

Please read this owner manual carefully before using the coffee bean grinder to avoid personal injury, damage or misuse of the product.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed.

1. Read all the instructions.
2. To protect against fire, electric shock and injury to persons, do not immerse cords, plugs or the machine in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To unplug, grasp plug and pull from electrical outlet. Never pull cord.
5. Avoid contact with moving parts.
6. To reduce the risk of severe injury to persons or damage to the appliance, keep hands and utensils out of the coffee bean box while grinding, and when the appliance is plugged in.
7. Do not operate the grinder with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. In this case, return the appliance to the approved Service Center for examination, repair, or electrical or mechanical adjustment.
8. The use of attachments not recommended or sold by may cause fire, electric shock or injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
11. Check the coffee bean box for the presence of foreign objects before using.
12. Always operate the burr grinder with the lid securely in place.
13. Do not place on or near a hot gas or electric burner or in a heated oven.
14. This product has been designed for household use only. Any commercial use, inappropriate use or failure to comply with the instructions will void the manufacturer's Warranty.
15. This appliance is only used for roasted coffee beans grinding. Do not use the appliance for other intended use (such as hard seeds, spice, nuts, etc..).
16. Every appliance is inspected strictly during mass production, and is tested with coffee beans for grinding, which may cause slight traces of use or residual coffee powder.
17. All machines are subject to stringent quality control. Practical tests using machines taken at random are conducted and this may explain any slight marks or coffee residue showing prior to use.
18. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved.

SAVE THESE INSTRUCTIONS

CAUTION

This appliance is for household use only. Any servicing other than cleaning and user maintenance should be performed by the nearest authorized Service Center.

■ Do not immerse the appliance into water.

■ To reduce the risk of fire or electric shock, do not dismantle the appliance. Repair should be done by an authorized Service Center only.

SHORT CORD INSTRUCTIONS

Regarding your Cord Set:

A. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

B. Extension cords should be used with caution.

C. If an extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, (2) if the appliance is of the grounded type, the extension cord should be of a grounded type and (3) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other), to reduce the risk of electrical shock. This plug will fit into a polarized outlet only one way.

If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.


ABOUT GRINDING COFFEE

The proper grind gives the most flavorful cup of coffee. The grind size and amount depend on the method by which the coffee is to be brewed. Generally, the finer the grind the more quickly the coffee should be prepared. That is why coffee ground for espresso machine extraction is much finer than coffee to be brewed in a drip system.

Coffee that is ground too fine for a particular brewing process - (for example, fine espresso grind used in a filter drip coffee machine) will result in over-extraction and bitter, pungent tasting coffee. Conversely, coffee that is too coarse for a particular brew method will result in under-extraction and weak, watery coffee. If the correct grind is used, adding more coffee simply makes a brew stronger without making it bitter.

In addition to providing a range of grind settings, coffee grinders provide a consistent grind. This is important to ensure the extraction is consistent across all of the ground coffee particles.

A.	Bean box lid
B.	Air blower
C.	Bean box
D.	Upper conical burr
E.	Control panel
F.	Housing
G.	Brush
H.	Powder box lid
I.	Coffee powder jar

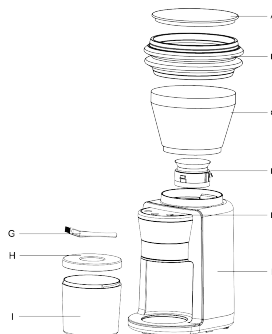 

Caution:

Power saving mode: If without operation over 3 minutes, the unit enters Power saving mode automatically, press any button, it restarts.

 
BEFORE FIRST USE

Before using the coffee grinder, wipe the housing and coffee bean box with a clean damp cloth. Wash the coffee powder jar and the coffee powder jar lid in hot soapy water, then rinse and dry.

SET THE COFFEE BEAN BOX

To remove the Coffee bean box


1. Make certain the coffee grinder is unplugged.
2. With your other hand, turn the Coffee bean box counter-clockwise until the arrow is aligned with the sign below and lift it up.

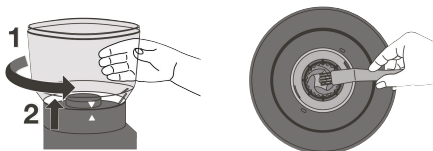

To replace the Coffee bean box

1. Make certain the top part of the conical burr is clear of coffee grind residues. If not, you can use the brush provided to clean around the top part of the burr.
2. With your other hand, make sure the Coffee bean arrow is aligned with the sign below on housing, and turn the Coffee Bean Box clockwise.

 
NOTE: If the coffee bean box is not set properly the coffee grinder won't start.

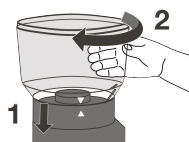

SET AND USE THE AIR BLOWER


To set the air blower

 1. Put the air blower into the bean box. Please note the A side should be placed face up, like the picture below.

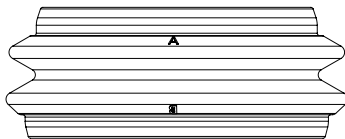


2. Cover the lid.

 3. Put your hand above the box lid, then press it up and down to blow the coffee powder out of the machine.

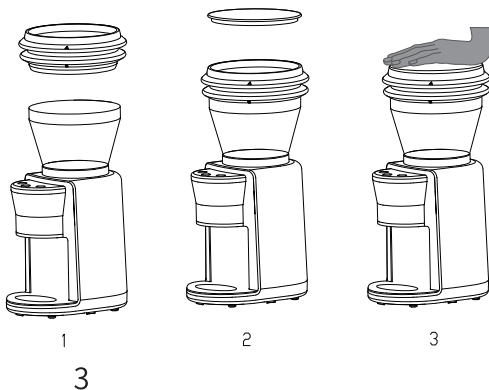

OPERATION INSTRUCTIONS

 1. Control panel instruction

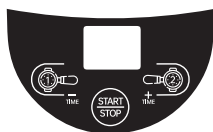

2. Button instruction

Button symbol			
Name	Start / stop button	1-cup button	2-cup button
Instruction 1	Press for manual operation.	Press this button to make powder for 1 cup of coffee.	Press this button to make powder for 2 cups of coffee.
Instruction 2	Press and hold for factory setting.	Press and hold to enter time setting mode then press again to lessen the powder amount.	Press and hold to enter time setting mode then press again to increase the powder amount.

Instructions

1. Add a suitable amount of coffee beans into the Porta filter.

2. Select appropriate coffee bean grinding fineness by rotating the bean box.

3. Connect the machine to supply power. Once the machine is turned on, the machine beeps sharply and the LED display shows "51", which means entering stand by mode and it prepares for the amount of a 51mm holder.

4. Instructions for switching from different holder sizes, which are 51mm, 54mm and 58mm.

(1) Press and hold the 1-cup button and 2-cup button simultaneously to change the target size for your coffee powder holder. Then the LED display shows 51, 54 and 58, which are the sizes for different holders.

(2) Default grinding time for 51mm portafilter: 9s for 1 cup, 15s for 2 cup.

(3) Default grinding time for 54mm portafilter: 11s for 1 cup, 16s for 2 cup.

(4) Default grinding time for 58mm portafilter: 13s for 1 cup, 18s for 2 cup.

5. How to customize grinding time for 51/54/58mm portafilter?

To change the default setting of the 1-cup button for 51 portafilter, press "1" and hold it for 2 seconds to enter the setting mode: the grinding time can be adjust by pressing TIME - to decrease 1s or pressing TIME + to increase 1s, the new setting will be memorized automatically in 3 seconds and quite the setting mode. Repeat the same process to customize grinding time for 2-cup button.

Switch to 54 or 58mm portafilter to customize your favorite grinding time if required.

6. Instructions for manual operation. Press the Start / stop button shortly, then the machine starts running. Then press again, it stops. The default manual operation time is 25 seconds at most, which can not be customized.

7. How to make factory reset. Press and hold the Start/ stop button for 3 seconds, then the machine returns to factory setting.

8. Energy Saving Mode. When the machine is idle for 3 minutes, the machine will be shut off automatically.

SET COFFEE GRIND SIZE

1. Fit the coffee powder jar and its lid in their correct positions. Check that the assembly is correctly positioned in the body.
 2. Open the lid of the coffee bean box and fill the coffee bean box with desired whole coffee beans. Close the lid, you can now adjust the coffee grind size.
 3. Your coffee grinder has 31 grind size options. To adjust the grind size, rotate the coffee bean box and adjust from fine to coarse depending on the type of coffee you are brewing.
- NOTE: Avoid adjusting the grind size during operation as it will affect the coffee ground coarseness.

See chart below: **GRIND SIZE SETTING RECOMMENDATIONS**

Coffee Type	Fine	Espresso	Moka	Drip Coffee	Pour Over
					
Grind Setting	1-3	3-11	11-16	16-23	23-31



IMPORTANT!

For your appliance to run correctly, please follow the rules below.

- The lid to the coffee bean box is correctly closed.
- The coffee powder jar and its lid are correctly placed in the body of the appliance.
- This appliance is equipped with an overheat protective device. If the appliance overheats, it will switch off automatically. In this case let it cool down for 30 minutes then restart.

 
 
 
 
 
CLEANING AFTER EACH USE

Regular cleaning helps the burr achieve consistent grinding results, always recommend to clean with the air blower to remove residual powder.



To keep all your coffee's aroma and to avoid degradation of the ground coffee, empty the ground coffee container after each use.

- Always unplug from the power outlet before cleaning.
- Never place the grinder, power supply cord or plug in water or under running water.
- Do not use strong detergents or abrasive pads to clean the appliance.
- Clean the lids and the ground coffee holder in warm, soapy water.
- Please follow the steps to cleaning conical burr as below.

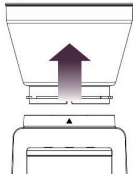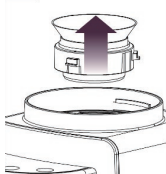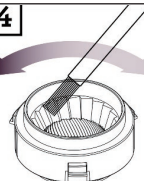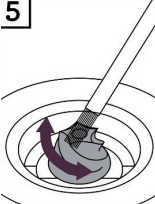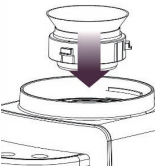1	2	3	4
			
Run Grinder Until Empty	Remove Bean Box	Remove Upper Burr	Clean Upper Burr with Cleaning Brush
5	6	7	8
			
Clean Bottom Burr with Cleaning Brush	Push Upper Burr Firmly into Position	Align Bean Box into Position	Lock Bean Box

NOTICE: Regular cleaning helps the burr achieve consistent grinding results, which is especially important.

TROUBLESHOOTING GUIDE

Code in display	Problem description	Solution
E1	No bean holder or bean holder is not connected tightly.	Assemble the bean holder or tighten the bean holder until the micro switch is closed. Once the bean holder is closed, the error code E1 in display disappears.
E2	Total operating is 10 cycles, it powers off automatically to protect the unit.	Unplug the power cord, then wait for the motor to cool down for over 30 minutes and restart.
	Motor is overheating.	
	The air blower does not match the bean box.	Turn the air blower up side down, then install again.
	The bean box can not be installed.	Make sure the "STOP" mark is aligned with the calibration mark "I".
	Coffee outlet get clogged	Clean with the air blower after each use.
	The grinding size is too fine or too coarse	Clean the the upper burr part

Technical Data

- 100g ground coffee jug capacity;
- 40mm Stainless steel conical burr;
- 210g coffee bean holder capacity;
- 200W powerful motor;

WARRANTY

WARRANTY INFORMATION ONE YEAR LIMITED WARRANTY

MANUFACTURER warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. MANUFACTURER, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or repaired product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will invalidate this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. MANUFACTURER'S dealers, service centers, or retail stores selling MANUFACTURER products do not have the right to alter, modify or any way change the terms and conditions of this warranty. This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, dis-assembly, repair or alteration by anyone other than MANUFACTURER or an authorized MANUFACTURER service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on MANUFACTURER'S Liability?

MANUFACTURER shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. MANUFACTURER disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise. MANUFACTURER shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or Loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above Limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

Children shall not play with the appliance.

Correct Disposal of this product



This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



Manufacturer:

FOSHAN SHUNDE BENE APPLIANCE TECH CO.,LTD

Address:

Huicong Electric Appliance Zone, Beijiao Town, Shunde District, Foshan City, Guangdong, China.

Service INFO:

service@hibrew.com

EC	REP	eVatmaster Consulting GmbH Bettinastr.30 60325 Frankfurt am Main, Germany Contact@evatmaster.com +496995179070
----	-----	--

