 


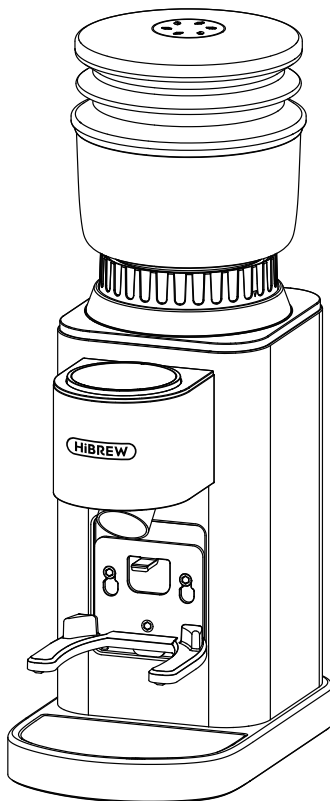

EN

CN

RU

AE

DE

IT

ES

FR

KR

PT

JP

NL

HU

Coffee Grinder

SKU G7

Read this manual thoroughly before using and save it for future reference

I: Safe use and precautions

To avoid fire, electric shock and personal injury, the following basic safety precautions should be observed when using household appliances.

1. Read all the relevant instructions.
2. **WARNING:** In case of fire or electric shock, do not remove the bottom cover of this grinder. There are no user-serviceable parts inside this coffee grinder. Repairs should only be performed by authorized service personnel.
3. This appliance is intended for domestic and similar applications such as:
 - Staff kitchen areas in offices, stores and other work environments;
 - House;
 - Used by travelers in hotels, motels and other residential type environments;
 - As well as bed and breakfast type environment occasions.
4. This appliance is not intended for use by the following persons (including children): persons with limited mobility, persons with mental or intellectual deficiencies, persons lacking experience and common sense, unless they are under the close supervision and guidance of a guardian to ensure safety.
5. To avoid fire, electric shock and personal injury, do not immerse the cord, plug or coffee grinder in water or other liquids.
6. Children are not allowed to apply.
7. The coffee grinder must be operated on a flat surface, away from the edge of the table to prevent it from tipping over accidentally.
8. Do not use the product when the power cord or plug is damaged, when the appliance is malfunctioning, or when the appliance is damaged in any other way. Call our after-sales service number for information on checking, repairing or adjusting the appliance. If the power cord is damaged, it must be replaced by a specialist from the manufacturer, its service department or similar in order to avoid danger.
9. Use of mating accessories not recommended by the appliance manufacturer may result in fire, electric shock or personal injury, so do not use them.
10. Do not use outdoors.
11. Do not place the power cord on the edge of the table or in contact with hot surfaces, including heaters.
12. When disconnecting the power supply of the coffee grinder, first turn off the switch button of the machine, grab the plug end and pull it from the socket, it is forbidden to pull the power cord directly.
13. Do not use this product for other than its intended purpose. Misuse will result in personal injury.
14. The coffee grinder must not be placed in a cabinet while in use.
15. Cleaning and maintenance of use shall not be carried out by children without supervision.
16. Disconnect the coffee grinder from the power supply when not in use and before removing it and cleaning it.
17. Disconnect the coffee grinder from the power supply when removing the blade for cleaning.


Additional user safety information

This appliance is for home use only

The length of the power cord for this appliance has been specially designed to prevent the cord from tangling or tripping over others. If a longer cord is required, an approved power extension cord may be used. The power rating of the extension cord must be equal to or greater than the power rating of the appliance. Take special care when using the power extension cord to prevent it from being attached to a table, which could cause children to pull it or trip others. To prevent overloading of the circuit, do not use other high power appliances on the same circuit as this appliance.

If the power supply cord is damaged, to avoid danger, it must be replaced by the manufacturer and its service department or a professional in a comparable department.

II: Product Component Description

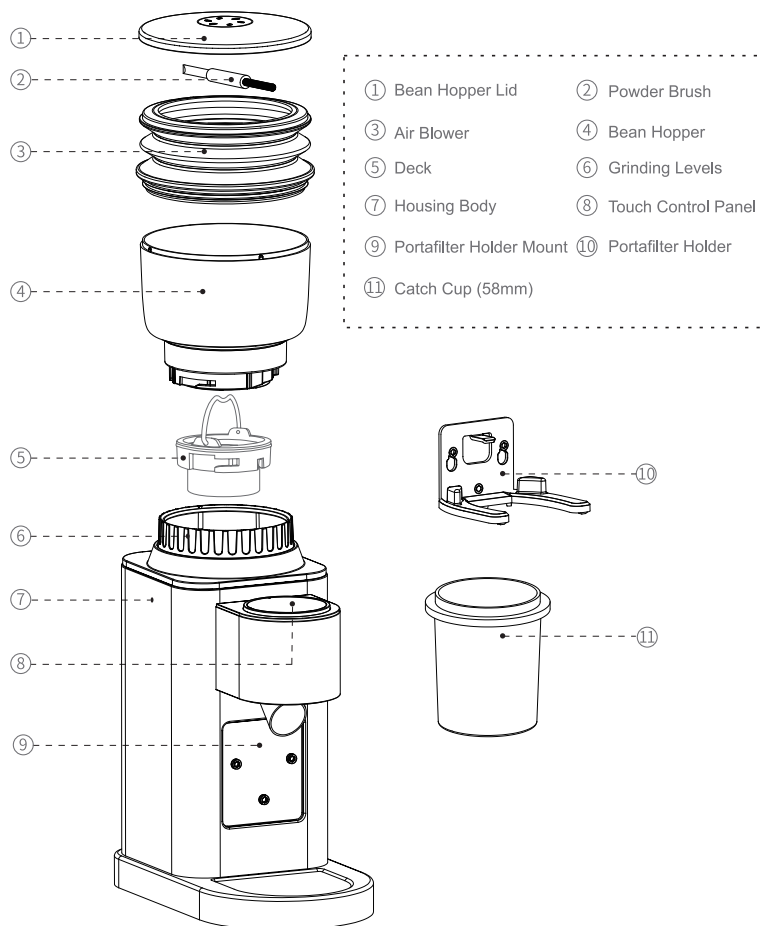


EN

Product Name	Coffee Grinder	
Model No.	CG213BZ	
Voltage & Frequency & Power	AC 220-240V, 50/60Hz, 150W (EU/UK)	AC 120V, 60Hz, 150W (US)
Bean Hopper Capacity	160g	
Powder Container Capacity	45g	
Net Weight	2.0kg	
Machine Dimension	180×115×350mm	

III: Usage


▪ Bean Box Installation

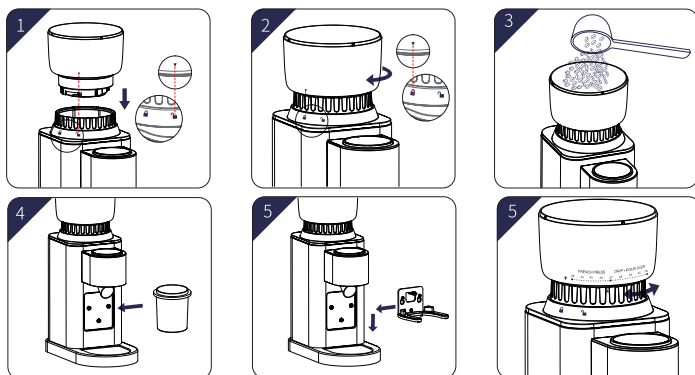

Bean Box Installation

1. Place the bean hopper in the correct position for the machine, with the arrow ▼ on the bean hopper twisted to line up with  on the grinder.
2. Turn the bean hopper clockwise, the arrow ▼ of the bean hopper is twisted until it is aligned with the  of the grinder, changing the locking of the bean hopper and entering the state of grinding.
3. Open the lid of the bean hopper and place the coffee beans into the bean hopper.
4. Place the powder container into the product.
5. Snap the portafilter holder onto the machine, you can use the coffee portafilter directly to catch the powder, depending on the size of the portafilter choose whether to install the holder pad or not.
6. Use the grinding gear adjuster to adjust your desired level.

▪ Product Usage

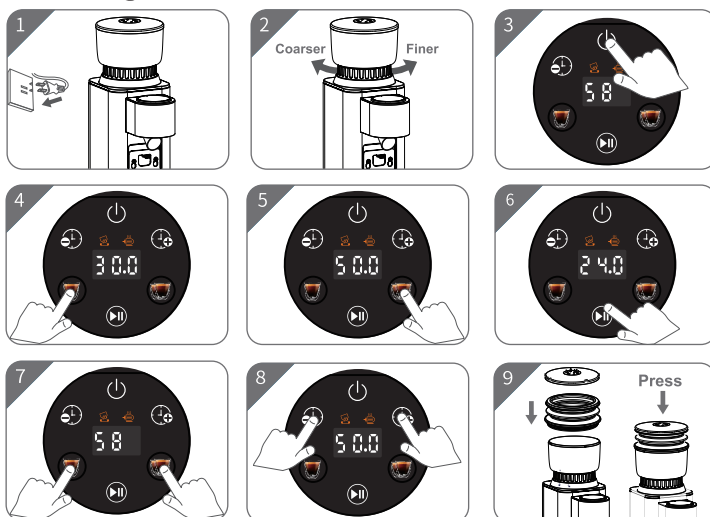

Icon Description:

 Power button (on/off)	 Plus and minus time adjustment buttons	 Bean box installation reminder light, the light indicates that the light is not installed
 Manual grinding Button	 Single/Double Coffee Button	 Machine overheating protection reminder light, light indicates overheating

Product Use:

1. Plug the power cord into a power outlet.
2. Turn the grind setting ring to obtain your preferred size, from 1 (fine) to 48 (coarse). Refer to the Grinding Settings chart.
3. Press the power button  to turn on the machine, the display shows 58 by default, which represents the use of a 58-size portafilter to catch the powder.

4. Single-cup coffee:

Press  button the machine starts to grind, the default time is 8 seconds, the display counts down to show that the machine automatically stops working at the time; you can long press  2 seconds to set the time, the display flashes, press  for plus or minus to adjust the time, after setting, press  button or wait for the display is always on for the setting is complete, can set the time for 1-30 seconds.

5. Double-cup coffee:

Press  button machine start grinding, the default time of 11 seconds, the display countdown shows, to the time the machine automatically stops working; you can long press  2 seconds to set the time, the display blinks, press  for plus or minus adjust the time, set up and then press the  button or wait for the display is always lit for the setting is complete, can be set up for a period of time of 1-50 seconds.

6. Manual grinding:

Press the  button machine start grinding, the default time 24 seconds, the display countdown shows, to the time the machine automatically stops working; you can long press the  key for 2 seconds to set the time, the display blinks, press  for plus or minus adjusting the time, set up and then press the  button or wait for the display is always lit for the setup is complete, can be set up for the time of 10-50 seconds.

7. Switching portafilter sizes: Press and hold the  and  buttons at the same time for 2 seconds to cut 58/54/51 portafilter of different sizes.

8. Restore to factory settings: Press and hold the  button and the  button at the same time for 2 seconds to clear all settings and restore to factory settings.

9. A powder blower and bean hopper lid can be fitted after grinding, and pressing can be done to clean the residual powder from the coffee channels.

NOTE: During the grinding process, the machine will pause the grinding by pressing the selected function button.

10. When the bean box is not in place and the locking is unsuccessful in activating the grinding function, the machine does not work and the display  lights up.

11. When the machine on the time continuous work,  light, the machine overheating can not work, need to stop for more than 10 minutes.

Notes:

- The bean hopper cannot be used for long term storage of coffee beans and the powder container cannot be used for long term storage of ground coffee. After use, please empty the bean hopper of coffee beans and empty the powder container of ground coffee.

Attention:

- Do not grind continuously for more than 3 minutes as this may cause the appliance to overheat (after 3 minutes of continuous grinding, allow the appliance to cool for at least 10 minutes before grinding again).

IV: Grinding settings

The coffee grinder has 48 coarseness settings to meet the various brewing needs of the user. From the finest setting for espresso to the coarsest setting for French press coffee.


Grinding Settings:

Coffee Type	FRENCH PRESS	DRIP-POUR OVER	ESPRESSO
Coarseness	Coarse	Medium	Fine
Grinding Settings	24-48	8-24	1-8
Timing	1-30S	10-50S	8-20S

(This chart is for reference only)

V: Cleaning and maintenance

Product Usage

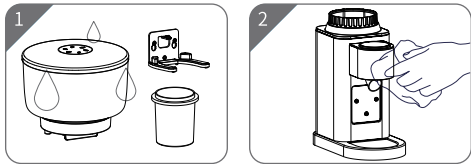


Warning.

Unplug before cleaning. (It is prohibited to immerse the main body of the coffee grinder or the power cord in water or other liquids for cleaning to avoid danger)

1. You can clean the coffee bean box, bean box lid, powder box, funnel holder, powder catch ring with water, rinse it well and then dry it with a rag.
2. Wipe the main body with a damp cloth and dry with a dry cloth.

Cleaning of Knife Discs.

It is recommended to clean the knife plate regularly to maintain optimum grinding performance. Prevents clogging of the grinding passages.

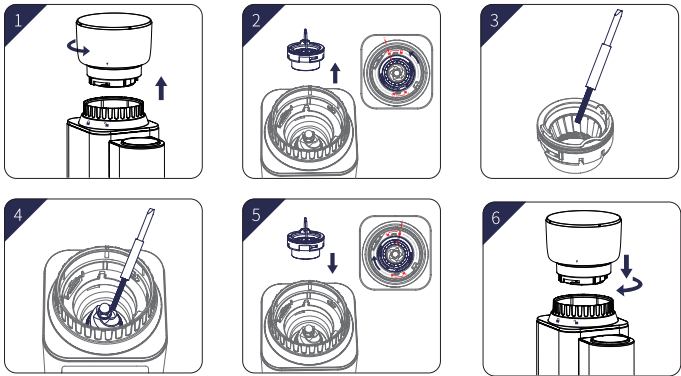

1. Remove the coffee bean hopper.
2. Remove the upper blade of the grinder.
3. Clean the upper blade with a brush.
4. Clean the lower blade with a brush to remove the ground coffee residue.
5. Attach the upper cutter plate.
6. Attach the bean hopper.

VI: Troubleshooting

Failure	Solution
Coffee grinder won't start	1. Plug the coffee grinder into an electrical outlet. 2. The appliance overheats. Cool for 10 minutes, then plug in and operate.
Coffee grinder runs but doesn't grind beans	1. Damaged grinding disc. Contact customer service for replacement parts. 2. Need to clean the grinding disc. 3. Coffee beans are damp, need to use dry coffee beans.
Coffee grinder operates normally but suddenly stops working	Grinding disk clogged, need to shut down the machine to disassemble the grinding disk for cleaning.
 Indicator light alarm	Bean hopper not in place, check bean hopper and screw down.
 Indicator light alarm	Appliance is used continuously for 3 minutes and the appliance overheats. Cool down for 10 minutes before use.

EN

WARRANTY

WARRANTY INFORMATION ONE YEARS LIMITED WARRANTY

MANUFACTURER warrants that for a period of one years from the date of purchase, this product will be free from defects in material and workmanship. MANUFACTURER , at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or repaired product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will invalidate this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. MANUFACTURER'S dealers, service centers, or retail stores selling MANUFACTURER products do not have the right to alter, modify or any way change the terms and conditions of this warranty. This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, dis-assembly, repair or alteration by anyone other than MANUFACTURER or an authorized MANUFACTURER service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on MANUFACTURER'S Liability?

MANUFACTURER shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. MANUFACTURER disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise. MANUFACTURER shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or Loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above Limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

To ensure your product warranty, please register your product at www.hibrew.com/warranty.



Environmental protection

You can help protect the environment!

Strictly abide by the regulations: Please put the discarded electrical equipment into the corresponding waste station for disposal

EN



Made in China