 


INSTRUCTION MANUAL

HUANUO

HNDS8

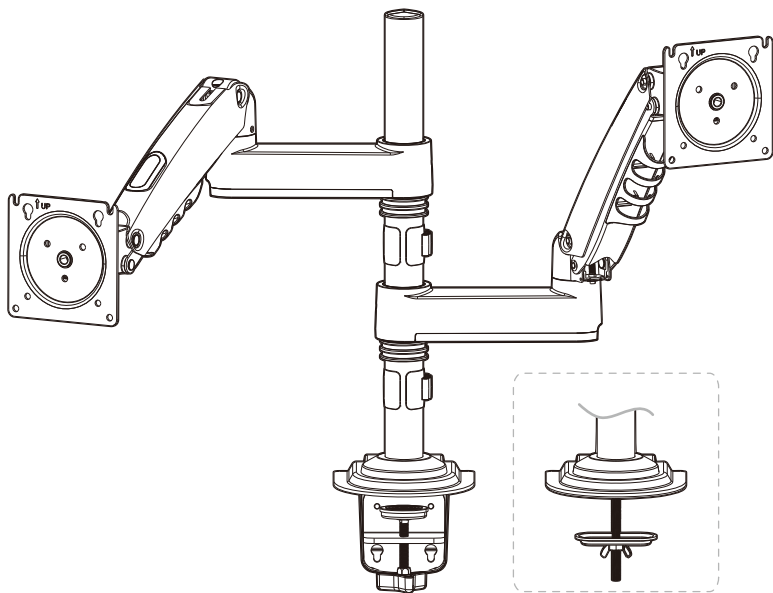

1-800-556-0533 (US/CA) Mon-Fri 8am – 8pm (CST)
44-808-196-3874 (UK) Mon-Fri 2pm – 10pm (UTC)
03-4446-2735 (JP) 10:00 – 17:00 (平日のみ)

 
 


support@huanuo.com




www.huanuo.com

Product Features

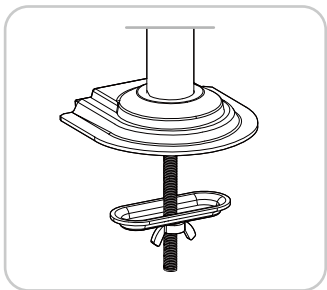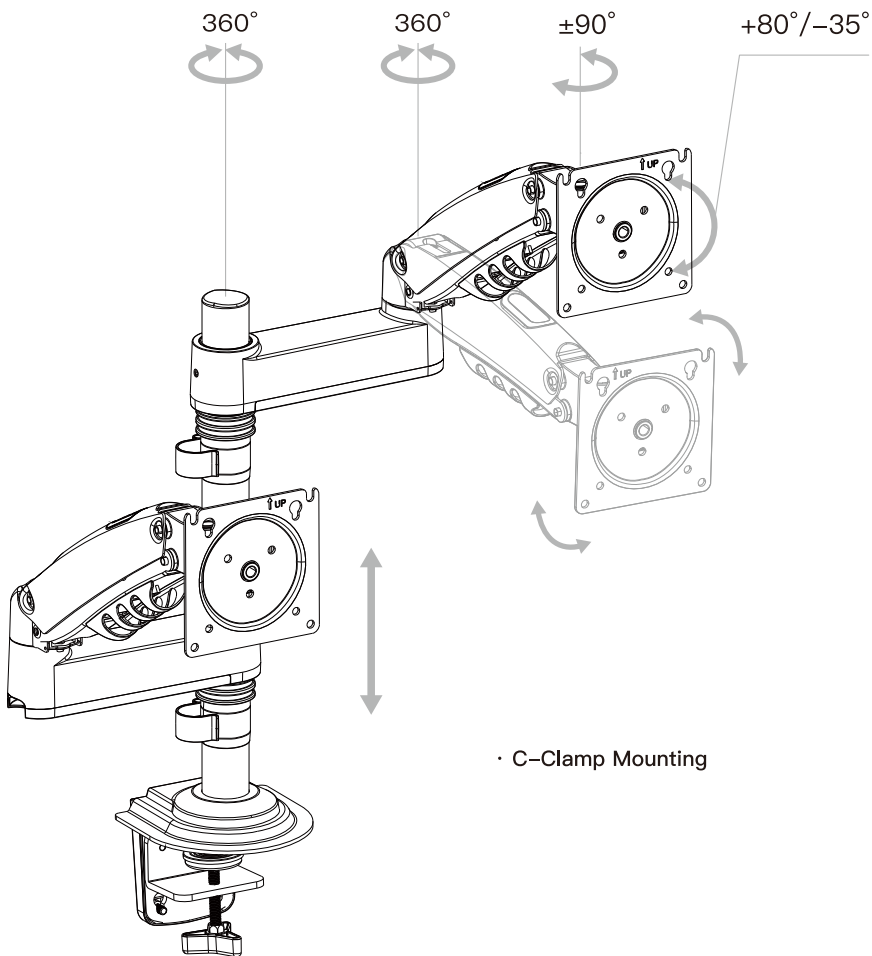

Before getting started, let's make sure this mount is compatible.

 - 1** Is the VESA pattern of your monitor 75 x 75mm (3 x 3") or 100 x 100mm (3.9 x 3.9")?

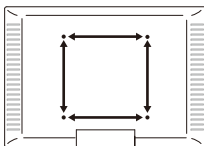

- ☐ Yes – Perfect!
- ☐ No – This mount is NOT compatible.

- 2** Tools Needed
(Not Included)



Electric Drill (Optional)



7/16–7/8" (11–22mm)
Drill Bit (Optional)

NOTE

- Please carefully read all instructions before attempting installation. If you do not understand the instructions or if you have any questions or concerns, please call technical support or email customer service.
- Not all hardware included in this package will be used.

CAUTION

Avoid potential injuries and property damage!

- Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We are not liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.
- Before starting assembly, verify all parts are included and undamaged. Do not use damaged or defective parts. If you require replacement parts, please call technical support or email customer service.

⚠ WARNING

 
- This product contains small parts that may pose a choking hazard.
- This product contains gas spring arms which are under high pressure. Do not puncture these arms or expose the arms to fire or flame. If product is defective, please call technical support or email customer service.
- The information contained in this manual does not cover all possible conditions or variables in relation to the installation of this product.

- 3** Important Safety
Information

TENSION ADJUSTMENT SHOULD ONLY BE DONE AFTER MONITOR INSTALLATION

⚠ ATTENTION

Do not adjust tension without monitor attached.
Ensure monitor has been securely attached to the mount.

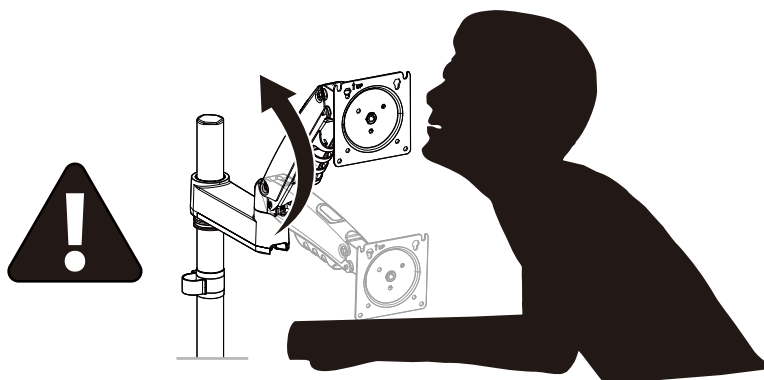


⚠ WARNING:

- Gas spring arm is under pressure and should be handled with care.
- Failure to follow the instructions may result in damage to the mount and/or personal injury.

Supplied Parts and Hardware

 01 x 1

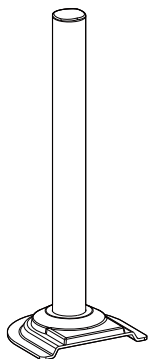

Pole Assembly

02 x 1



C-Clamp

03 x 1



Decorative Cover

04 x 2



 
Arm Support

05 x 2




Cable Clip

06 x 2

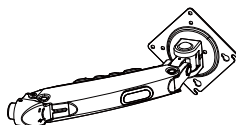


Upper Arm

 07 x 2




Lower Arm

 A x 8




M4 x 12mm
Bolt

 B-1 x 8



M4 x 30mm
Bolt

 B-2 x 8



Spacer

C x 4



M6 x 12mm
Bolt

D1 x 1



Nut

D2 x 1



 
Grommet Bolt

E x 1



Locking Plate

F1 x 1



5/32" (4mm)
Allen Key

F2 x 1



3/16" (5mm)
Allen Key

 
F3 x 1



1/8" (3mm)
Allen Key


Step 1 Install the Base

For C-Clamp Mounting,
follow Option A on this page.



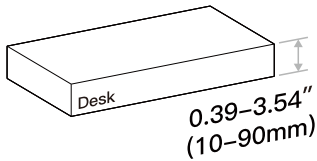


OR

 
For Grommet Mounting,
skip to Option B on Page 06.

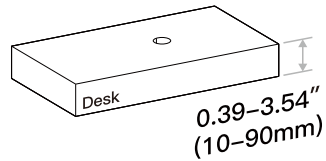

Option A: For C-Clamp Mounting

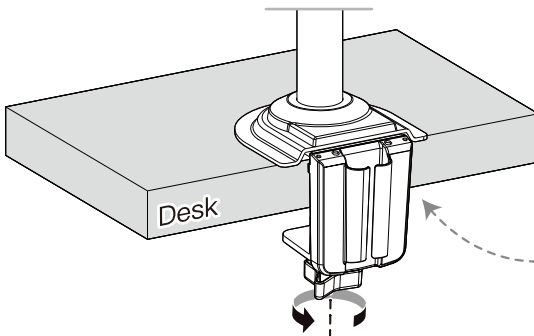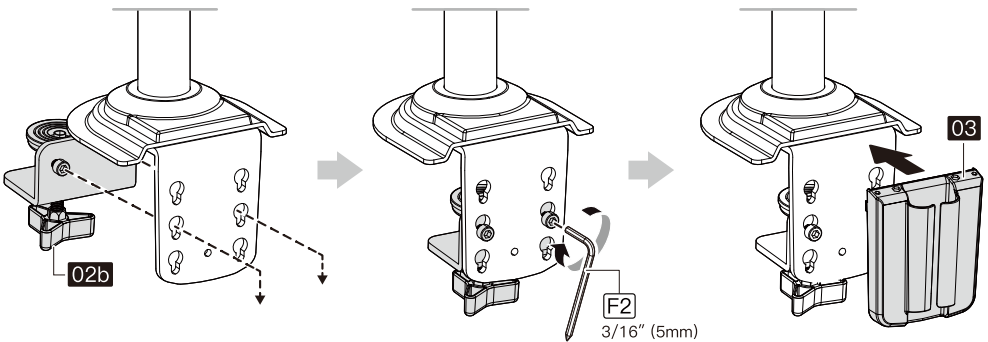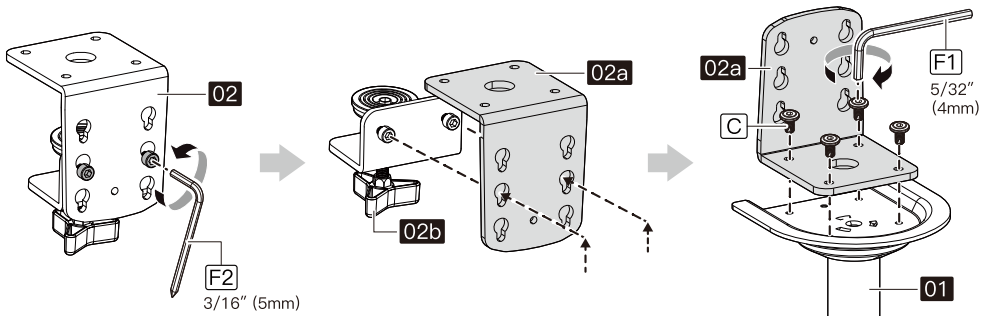   

 
Note: The C-clamp should contact the desk and the locking knob should be secured vertically against the bottom of the desk.

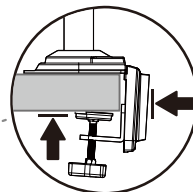


If your desktop does not fit properly, you may be able to use a wood board or block as a spacer. Please note that the oval C-clamp plate must make full contact with the desk and/or wood spacer.

Example 1

 If there is a crossbar underneath the desk, you need to use a spacer that is the same height as the crossbar.

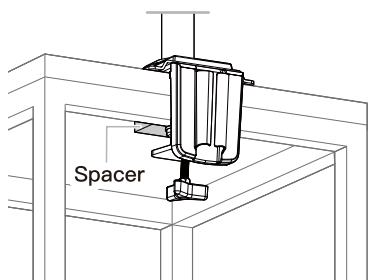


OR

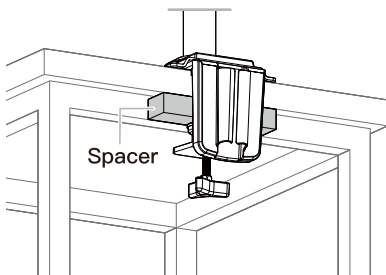 


Example 2

 A spacer can be placed underneath the desk to fulfill the required dimensions.

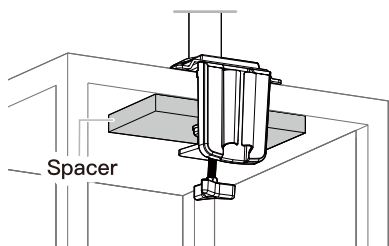



Example 3

 A spacer can also be placed on top of the desk to maximize installation height.

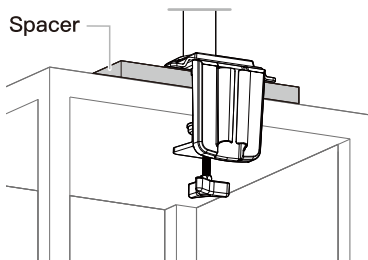


Option B: For Grommet Mounting

  
Note: If there is no grommet hole on your desktop, mark a hole in the desired position. Be sure to leave 2" (50mm) from the edge of the desktop. Drill a hole using a drill bit in the diameter of 7/16-7/8" (11-22mm).

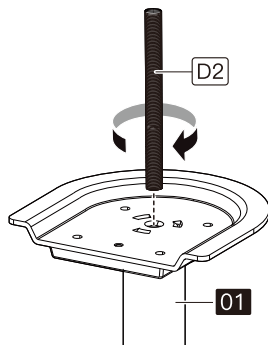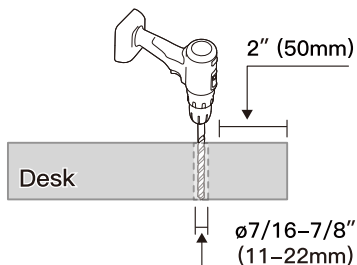

 Note: Ensure the grommet bolt is screwed securely.



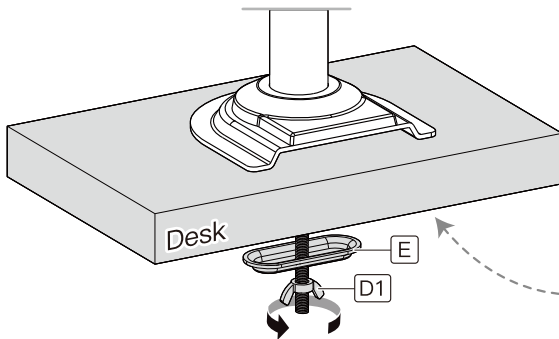


 Note: Fully tighten to secure the locking plate to the bottom of the desk.


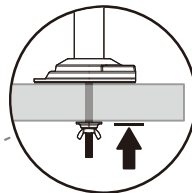



Step 2 Install the Arms

   Note: Fully tighten the bolt.

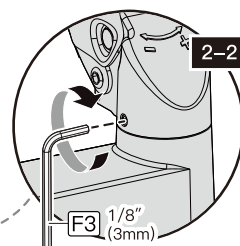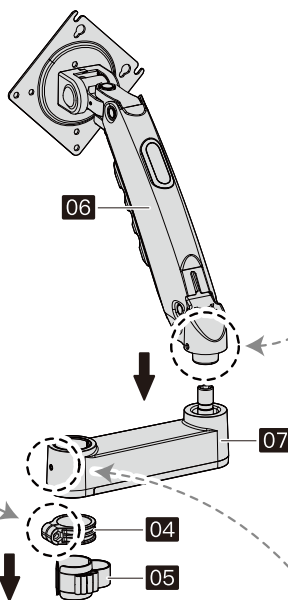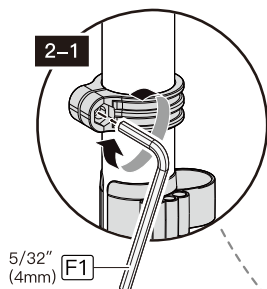

   
Note: Do not overtighten, as this may affect the rotation of the arms.

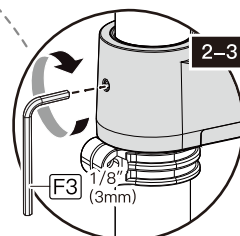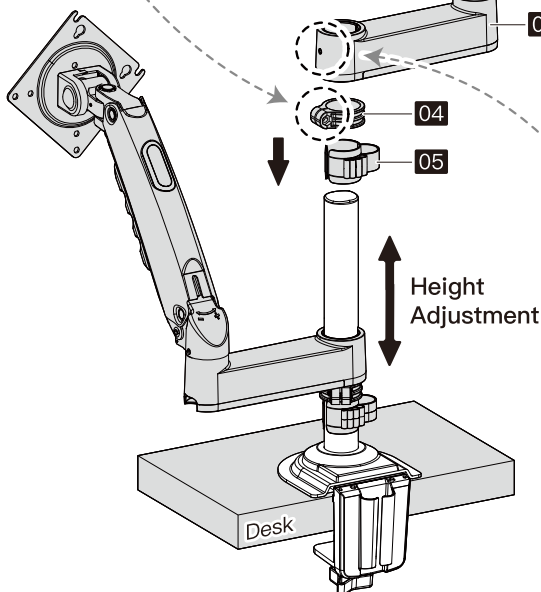

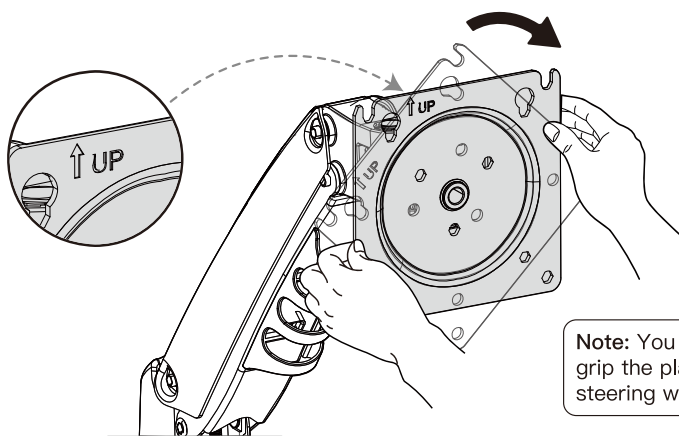


Note: You may need to grip the plate like a steering wheel to rotate.

 Step 3 Hang the Monitors on the Mount

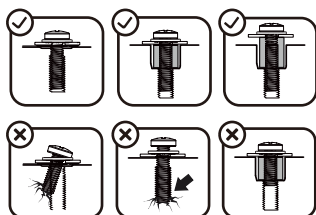


Only one bolt size fits the monitor.

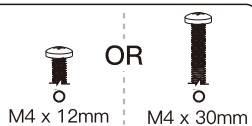 


Choose the bolt and spacer configuration that fits your monitor type. Thread in the top bolts, but do not tighten all the way yet.

 For Flat Back Monitor

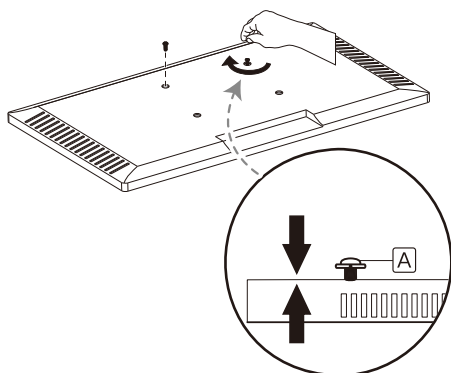


For Curved Back Monitor

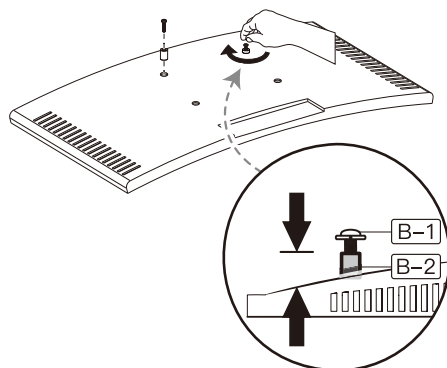 


OR

 With the top bolts attached, hang the monitor onto the VESA plate using the top 100mm slots or 75mm holes. Thread in the bottom bolts, then firmly tighten all bolts to secure the monitor to the mount arm.

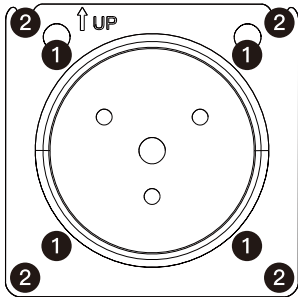


For VESA hole pattern:

 - 1 75 x 75mm (3 x 3")
- 2 100 x 100mm (3.9 x 3.9")

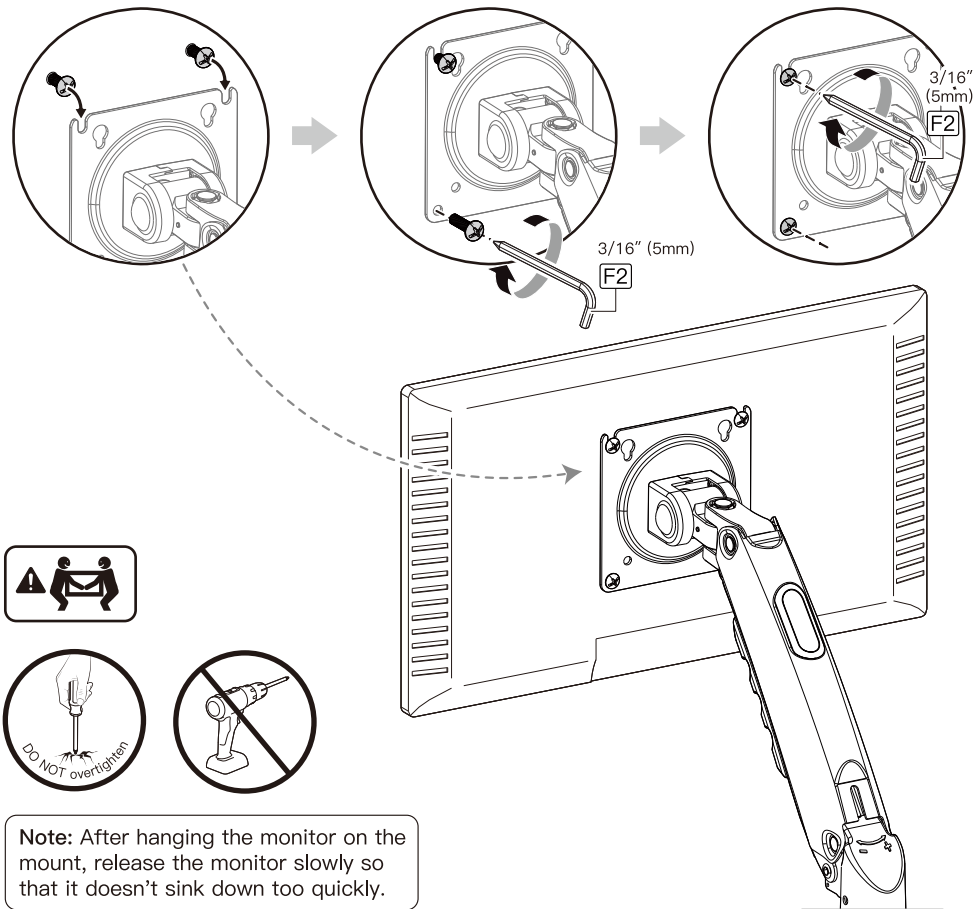


Step 4 Adjust Monitor Height

 - 1 Press the upper arm down into a horizontal position to access the gas spring tension bolt. Adjust the bolt to raise or lower the upper arm so the monitor stays in a proper position.

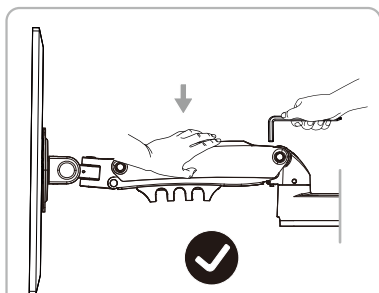

⚠ CAUTION:

 To avoid damage to monitor or mount, always keep the arm in a horizontal position while making adjustments. You may need assistance with this step.

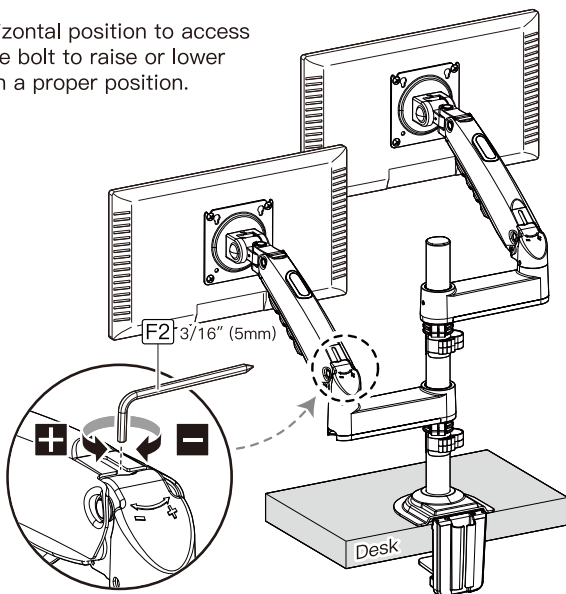


- 2 Use the large Allen key to adjust the height of the upper arm until the monitor stays in position.

Scan the QR code to watch the arm adjustment video.




 If Arm
Falls Down

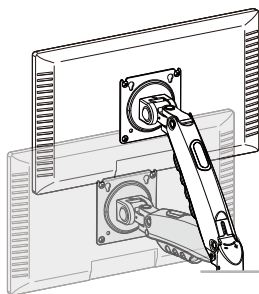

If the upper arm falls and you cannot raise it, turn counterclockwise ("+" direction) until the monitor can stay at the desired height by itself.

 
If Arm
Rises Up

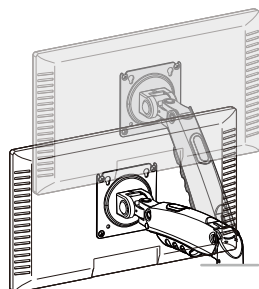


If the upper arm rises and you cannot lower it, turn clockwise ("-\" data-bbox="567 855 892 922"/>

Step 5 Adjustment

 5-1 Monitor Rotation

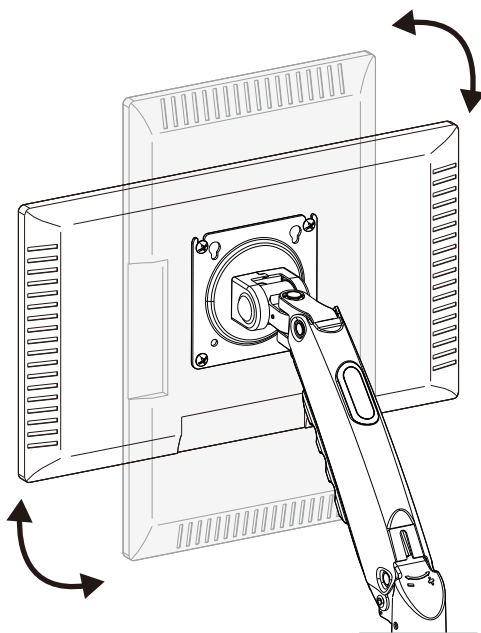


5-2 Swivel Adjustment

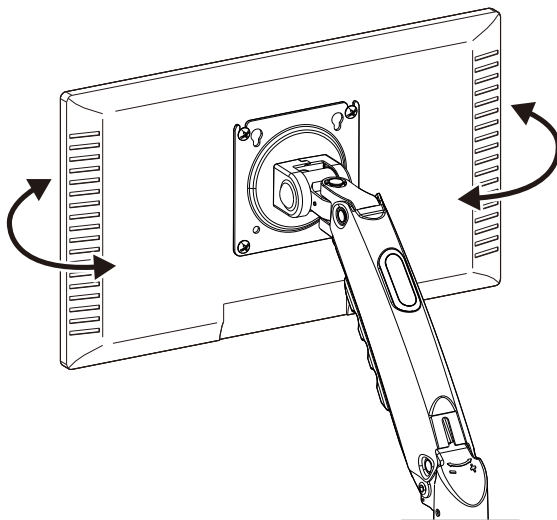 


5-3 Tilt Adjustment

 Tilt the monitor to the desired angle. If it is difficult to tilt, slightly turn the tilt bolt counterclockwise to loosen it, then tilt the monitor. Turn the tilt bolt clockwise to hold the monitor in position.

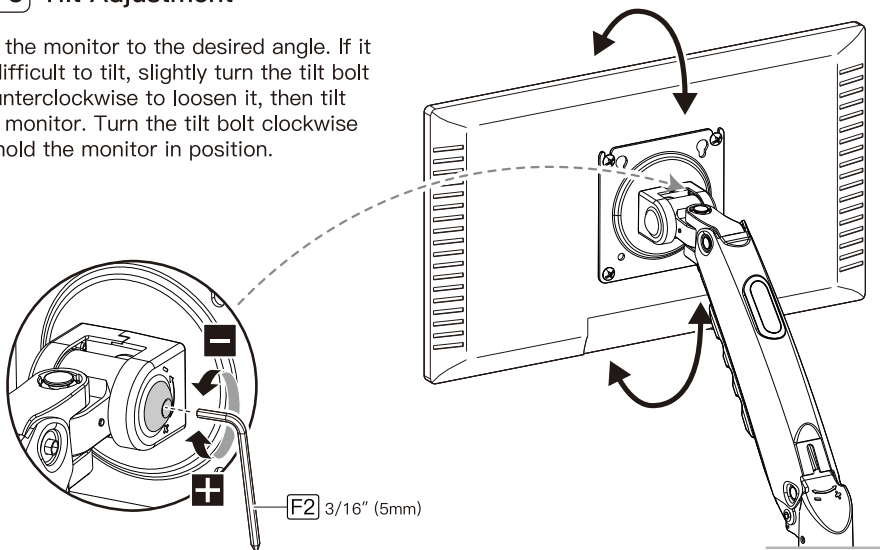


 Step 6 Swivel Restriction

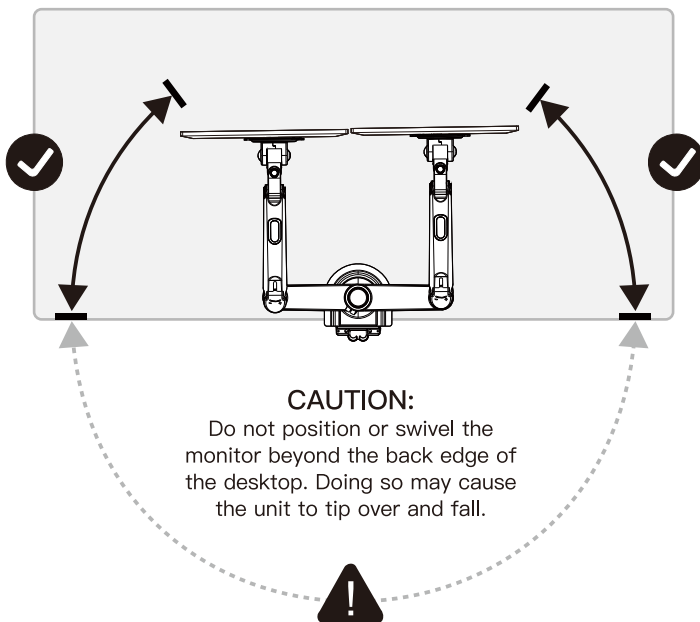

Step 7 Cable Management

 Open one side of the upper cable cover. Route the cables along the arms. Lock the upper cable cover back into place.

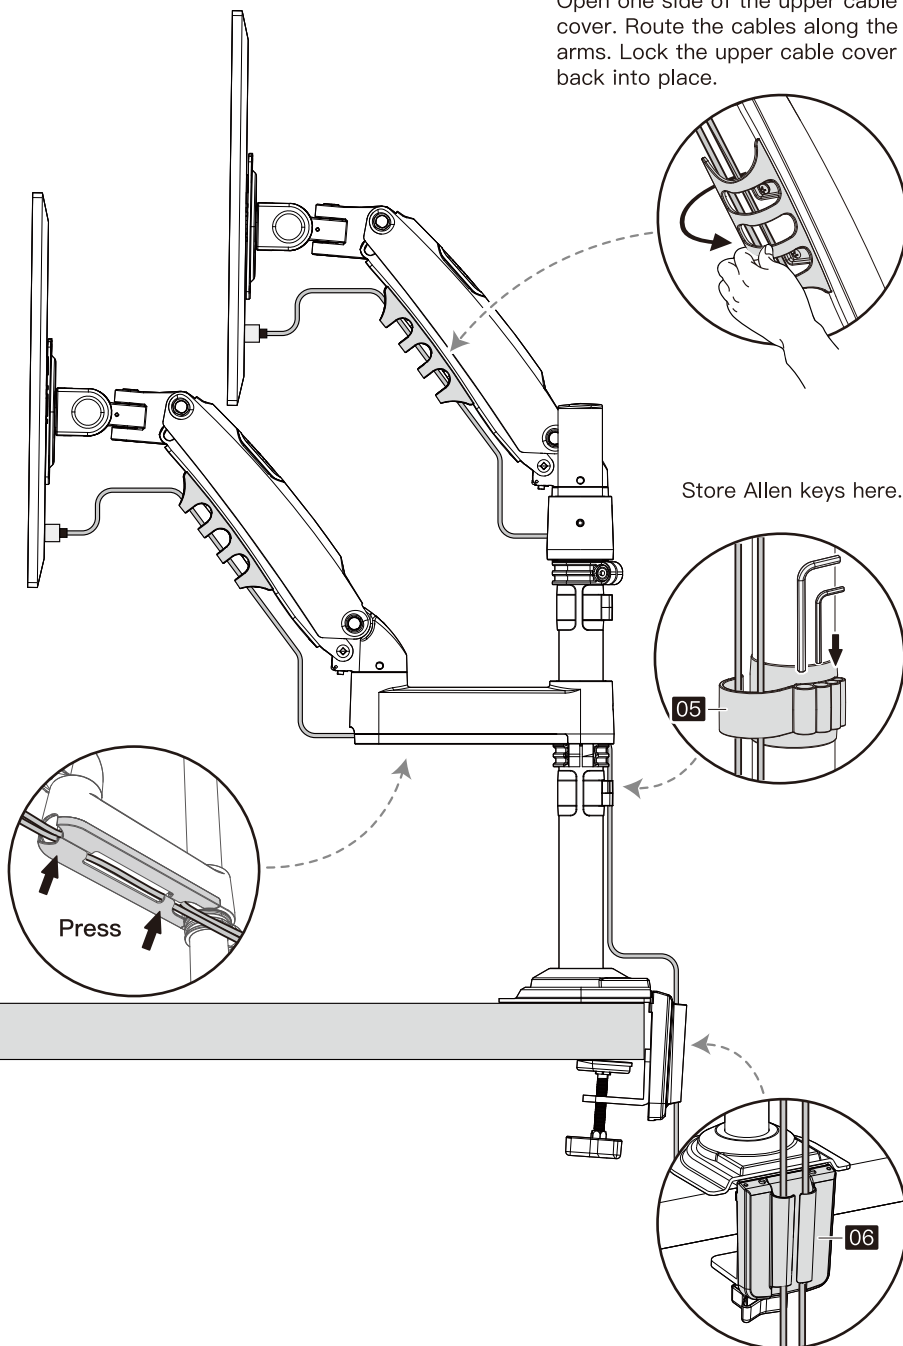

HUANUO



1-800-556-0533 (US/CA) Mon-Fri 8am – 8pm (CST)
44-808-196-3874 (UK) Mon-Fri 2pm – 10pm
03-4446-2735 (JP) 10:00 – 17:00 (平日のみ)



support@huanuo.com



www.huanuo.com