


Contents

Product Overview	2
Tablet Introduction	2
Product and Accessories	2
Product Connection	4
Driver and Setting	6
Install Driver	6
Driver Interface Preview	17
Pen Tablet Setting	19
Dial Function Setting	26
Digital Pen Setting	29
Driver Setting	35
Digital Pen Basic Operation	38
Specifications	42
Troubleshooting Solutions	43

Product Overview

Tablet Introduction

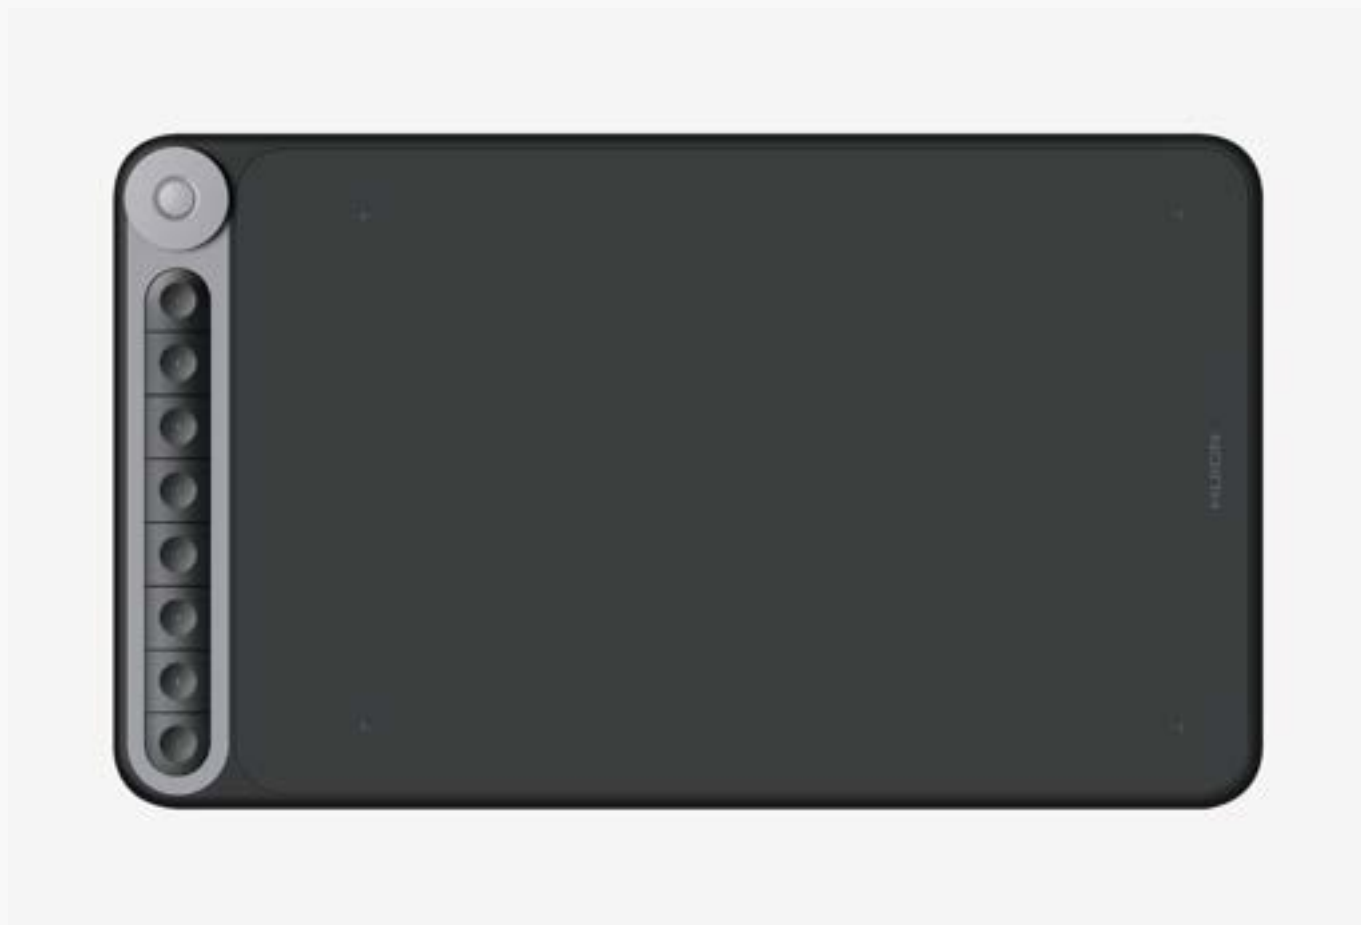


Thanks for choosing HUION INSPIROY Dial Q620M creative pen tablet. This is a new generation of professional battery-free drawing tablet, which can greatly improve your work efficiency of painting and creation, and full of fun. You can freely painting and writing, depicting different lines and colors, just as the pen writes on the paper, which brings you a real shock experience.

To give you a better understanding and using of your tablet, please read this user manual carefully. The user manual only shows the information under Windows, unless otherwise specified, this information applies to both Windows and Mac systems.

Note: The pictures in the User Manual are for reference only.

Product and Accessories

Please see the detailed product introduction.

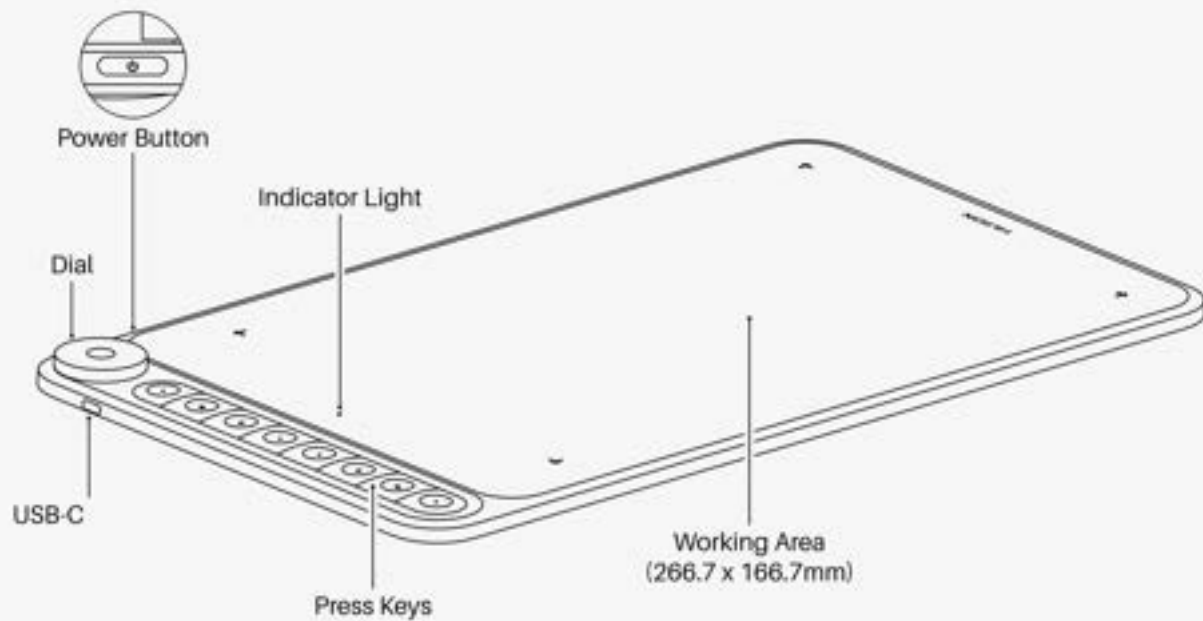

*Multi-purpose LED indicators

There is a LED light embedded in the eight press keys respectively, which can indicate the remaining battery power, low battery and the consumption of the power in real time. When you power the pen tablet on, 8 LED lights will turn on one after another, while lights will go off subsequently if you turn the pen tablet off.




Battery Status Self-check

State of Battery Charge



Low Battery Warning

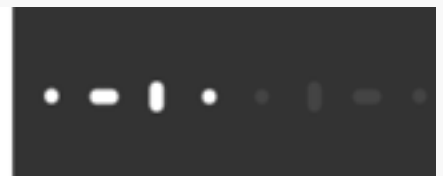

After unboxing your package, make sure that you have the following items:

- Tablet*1
- Battery-free Pen*1
- Pen Holder*1
- Replacement Nibs(Inside the Pen Holder)*8
- USB Cable*1
- Wireless Receiver*1
- Quick Start Guide*1
- Warranty Card*1



Digital Pen



Pen Holder



Pen Nib Clip
(inside the pen holder)



Replacement Nibs
(inside the pen holder)



USB-C Cable



Wireless Receiver



Quick Start Guide



Warranty Card

Product Connection

The tablet supports the connection of a computer and a mobile phone.


Wired Connection

Connect the tablet to your computer with USB cable. Please follow the steps below:

1. Take out the USB cable from the package, then connect tablet to your computer.

2. Open the driver interface, the device picture will be displayed on the interface, indicating that the tablet is successfully connected to the computer. You can start use the tablet.
3. Restart the computer after the driver is installed.


[See Section](#)

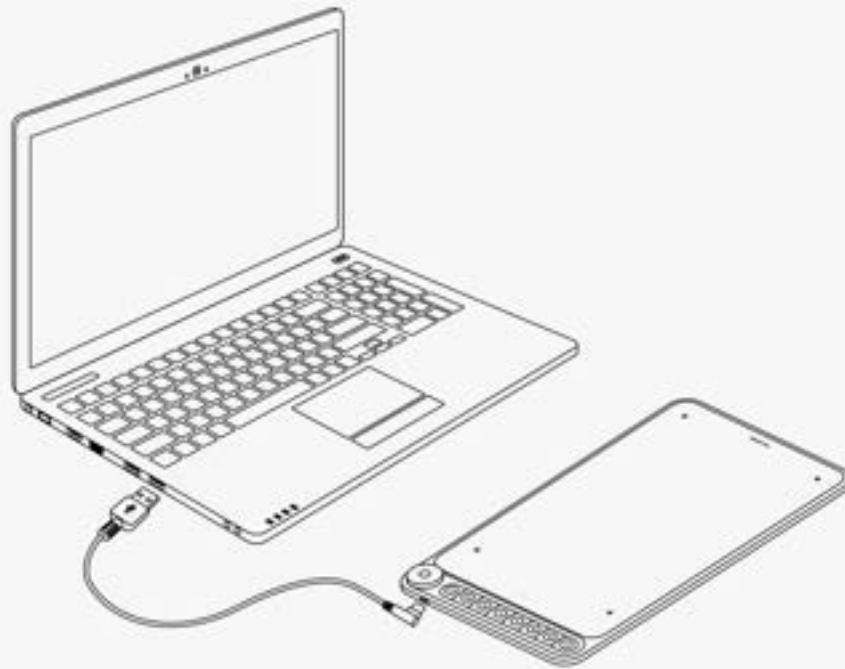

Wireless Connection

Please follow the steps below:

1. Insert the wireless receiver to your computer.
2. Switch the power button on to power on the tablet.
3. Not using 15 mins, the tablet will enter sleep mode. In this case, you need to switch the power button on again to wake the tablet up.

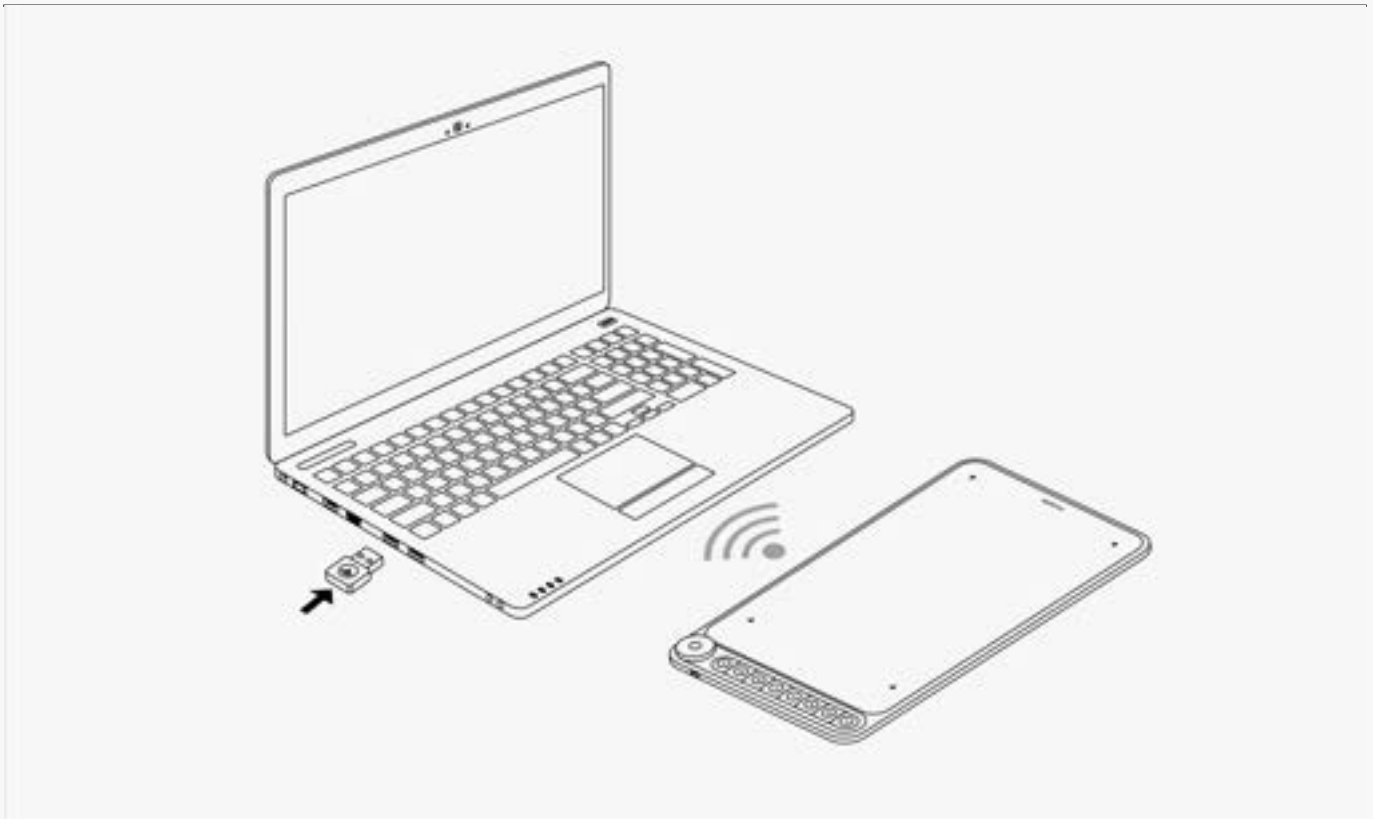

Driver and Setting

Install Driver

How to Install and Uninstall the Drivers on Windows/Mac Device

Notice:


1. Before installing driver, please close all graphic software and antivirus program.
2. If you have installed other pen tablet driver, please uninstall it before you install this driver.
3. Please make sure your computer OS are as following: Windows 7 or later, macOS 10.12 or later.
4. Run the tablet driver program and complete the installation according to the instruction.


After the download is successful, double-click to open the driver, Connect the device to your computer.

If the connection fails, please reconnect the computer to the device, or restart the driver or computer.

Here are the step-by-step instructions for installing the driver:

1. Please choose the correct driver for your device from our website: [Driver-Q620M](#)
2. Click Driver-Inspiroy Giano to download it.
3. Follow the instructions to complete the installation.

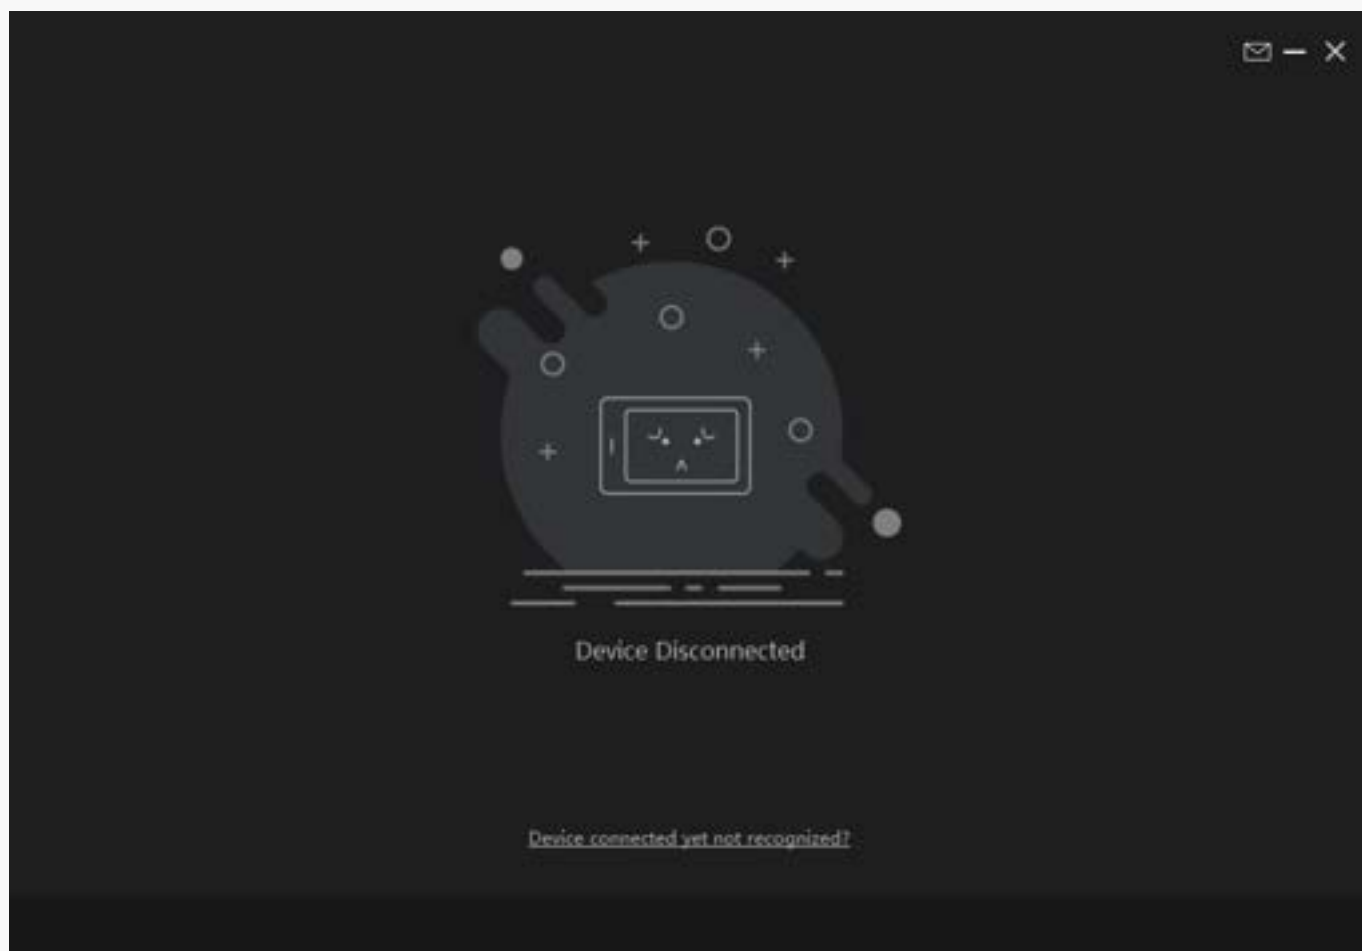

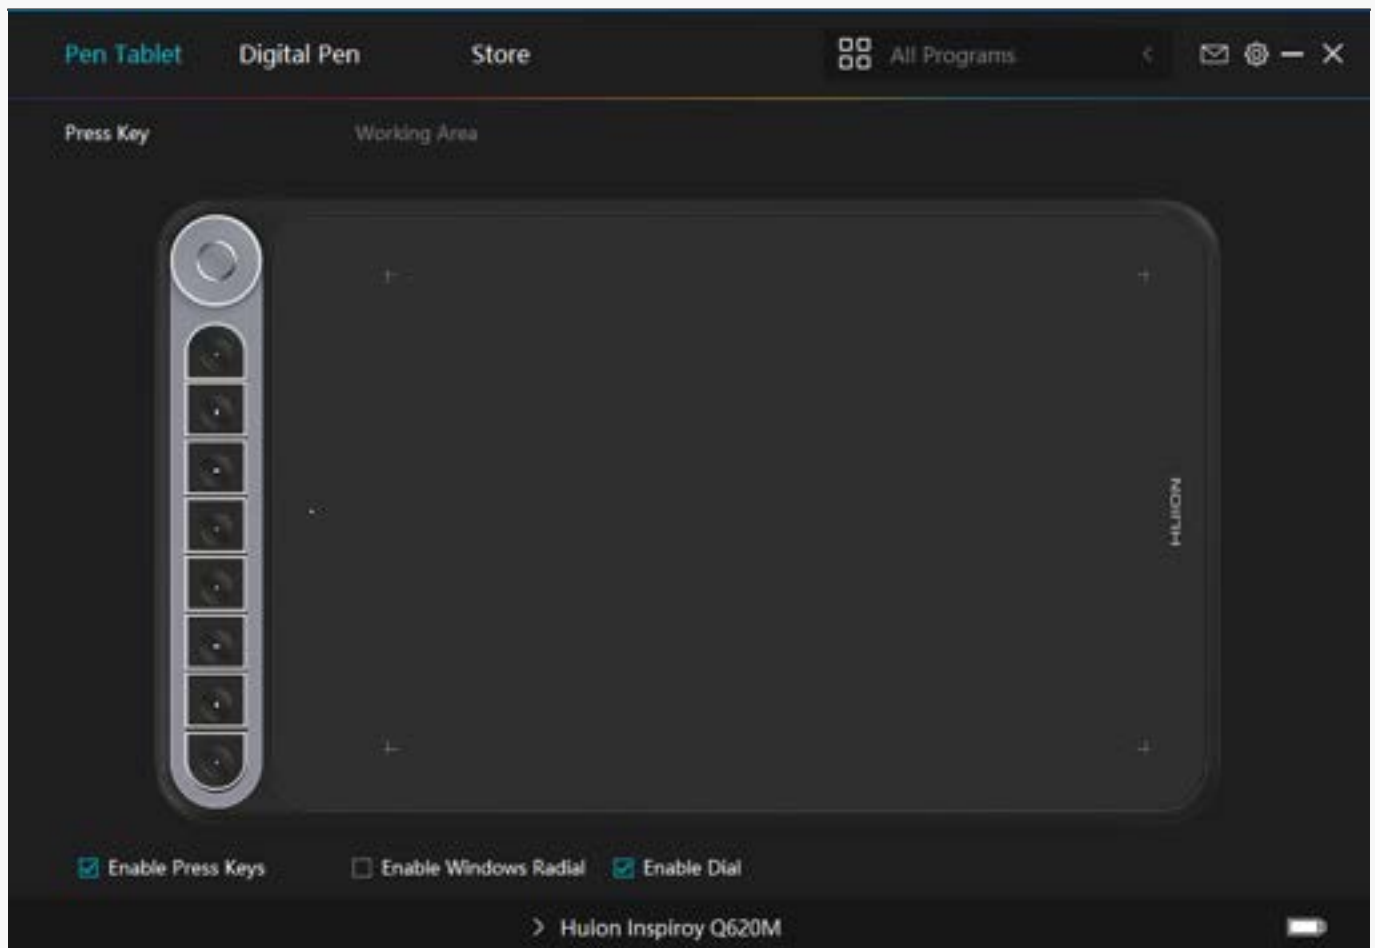

How to Install and Uninstall the Drivers on Linux Devices

Notice:

1. Please remember to close the command window and reboot your Linux device after installing the driver, or the driver will not be useful. After rebooting the device, you can access the system main menu to find the Huion Tablet driver and then open it to finish some settings.
2. If you are running Linux operating system on VMware, you must use the VMware Workstation Pro version. And the Play version of VMware Workstation doesn't support the Huion Tablet driver.
3. Some versions of the Ubuntu operating system don't support using more than one monitor simultaneously. And we recommend you upgrade your system to 20.04 LTS or later if you want to use a Huion painting device on multiple display screens simultaneously smoothly.

Huion Tablet Driver installation packages in 2 different formats are available for Linux devices:

- tar.xz (file format)

- deb (file format)

Here are the step-by-step instructions for installing the driver packages in different file formats respectively:

1. Instructions for installing the driver package file in tar.xz format.


Linux operating systems supported:

Ubuntu


Steps to Install:

1. Extract the contents of the driver file, huiontablet_XXXX.tar.xz, into a folder.


2. Open the command window in the folder.

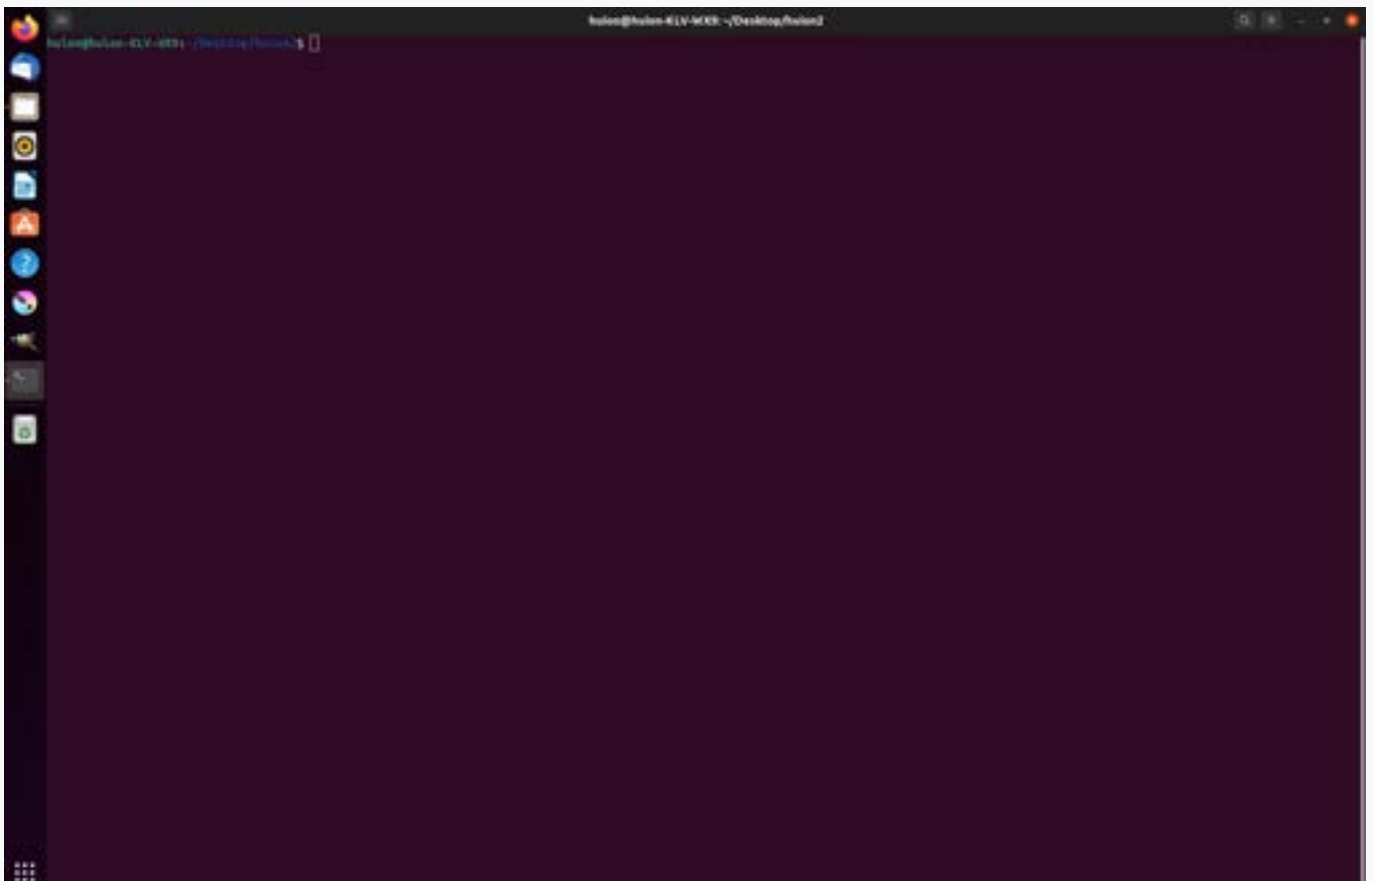


3. Input the following command: "sudo sh install.sh", and press the enter key on the keyboard to make your Linux device execute it.

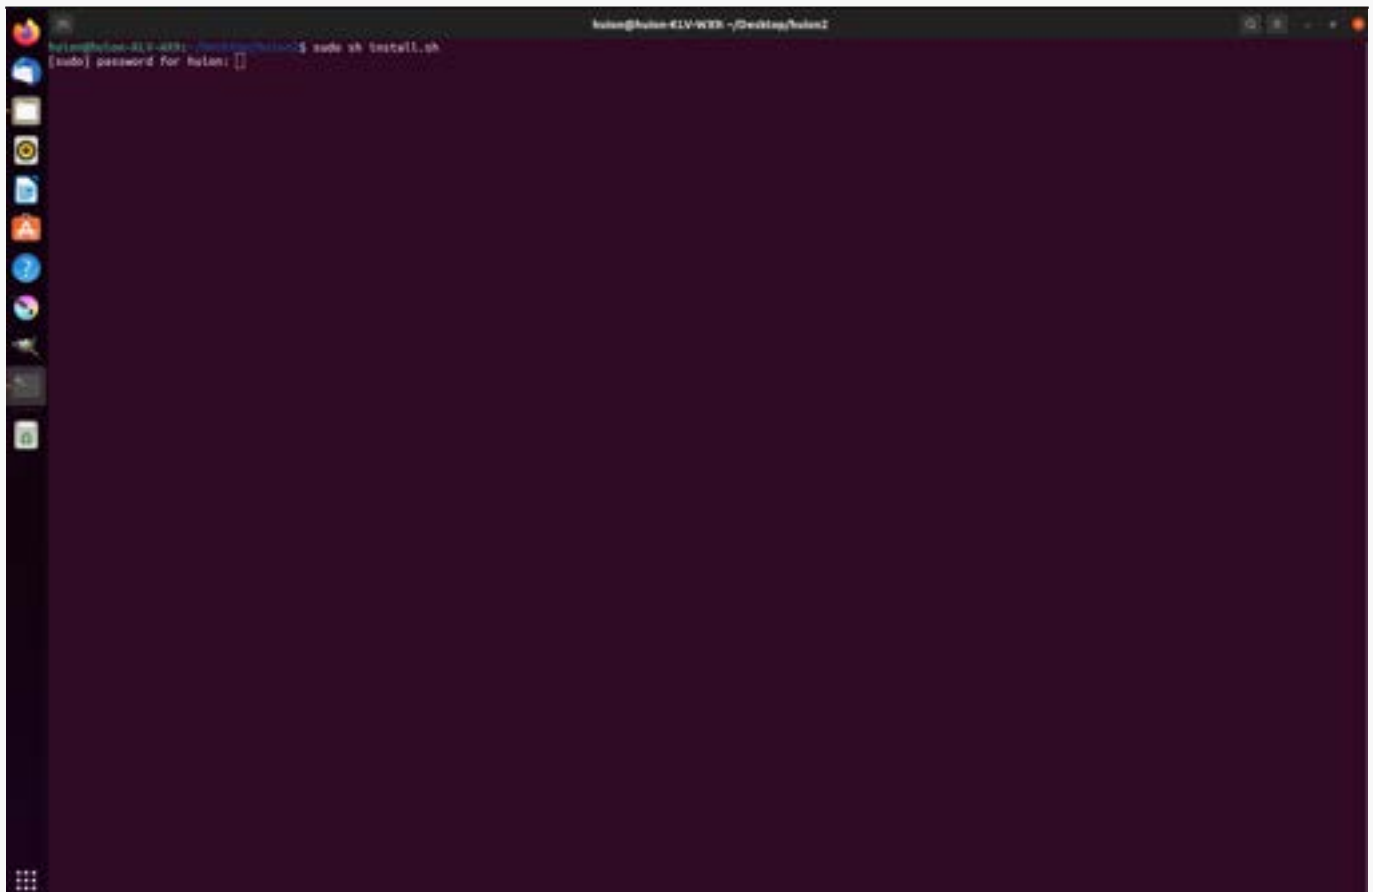

4. Enter the user password to complete the installation.

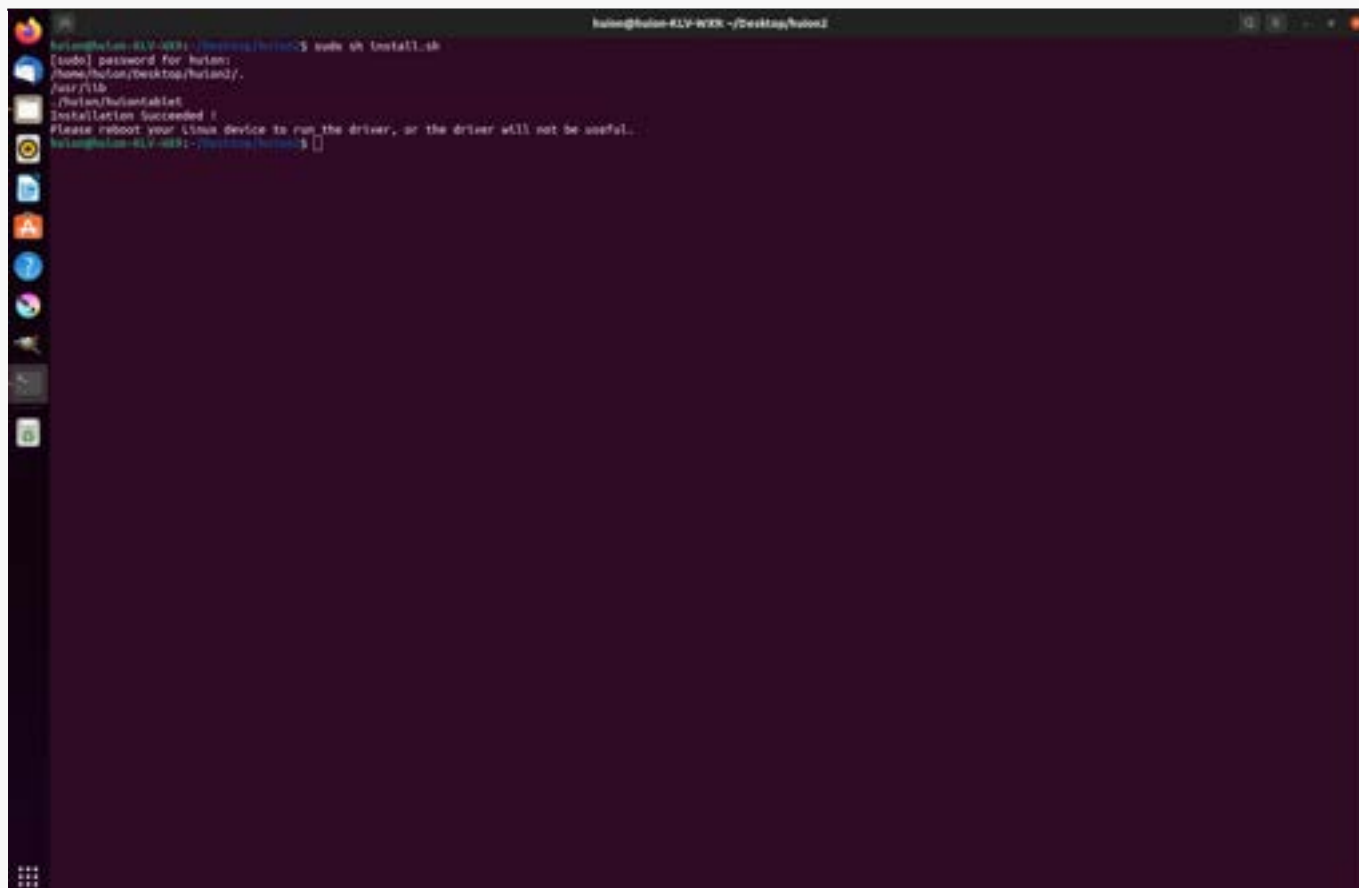


5. Please reboot your Linux device to run the driver, or the driver will not be useful.

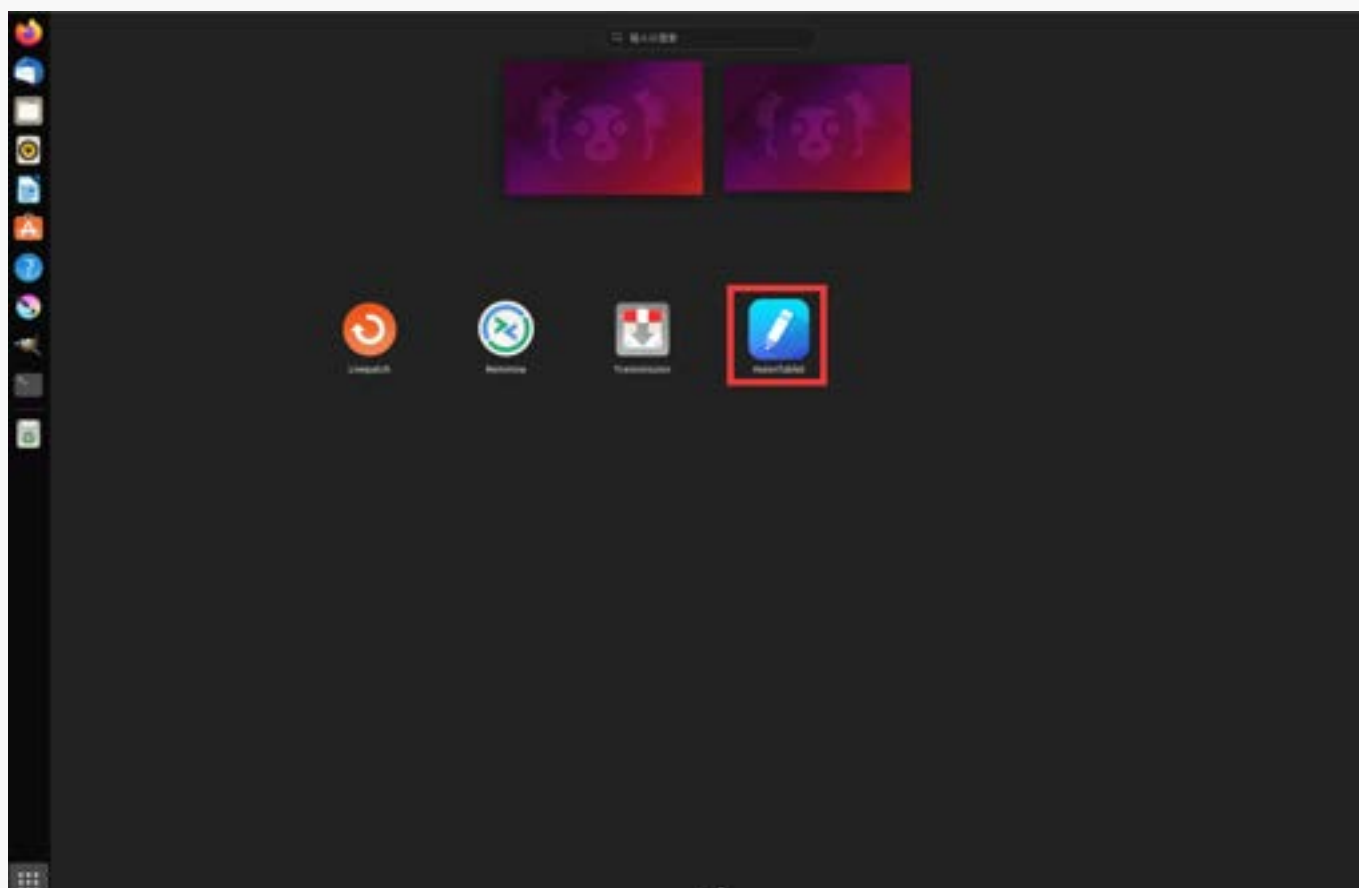


Steps to Uninstall:

1. Open the command window in the folder of the driver.

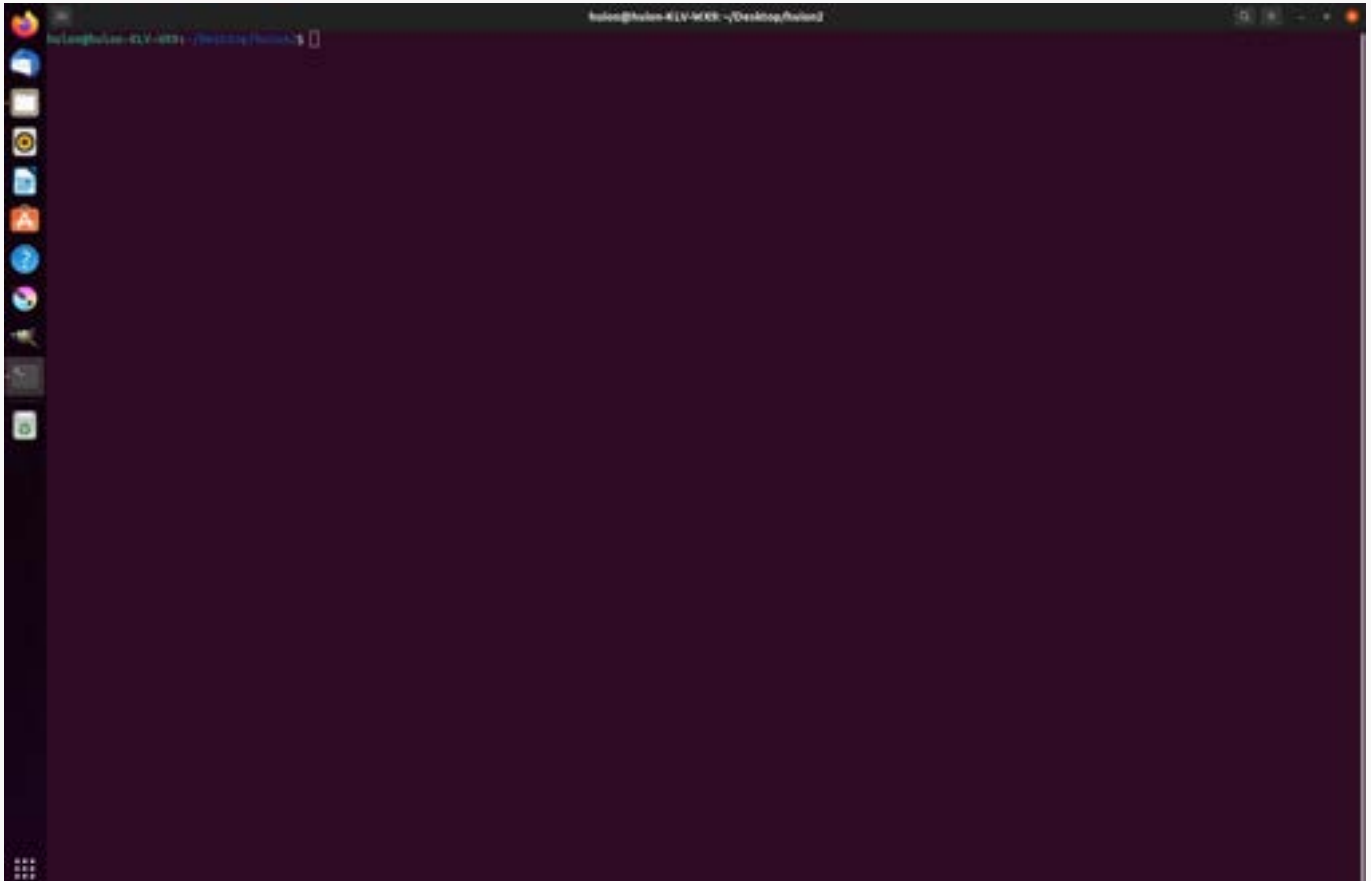


2. Input the following command in the command window: “sudo sh uninstall.sh”, and press the enter key on the keyboard to make your Linux device execute it.

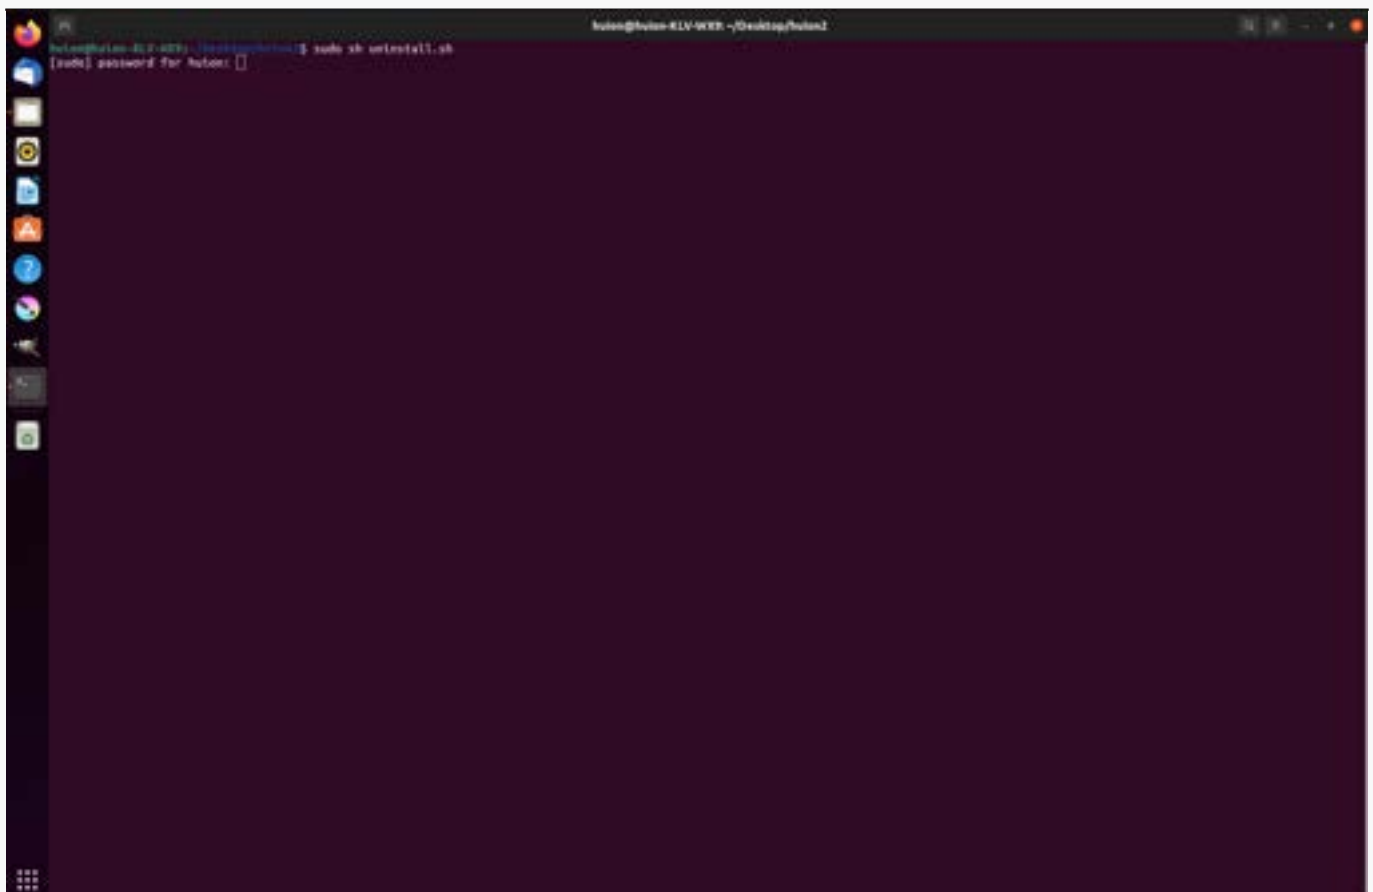

A terminal window titled 'helen@helen-K1V-WKH: ~/Desktop/helen2' with a dark purple background. The prompt is 'helen@helen-K1V-WKH: ~/Desktop/helen2\$'. The user has entered 'sudo sh uninstall.sh'. The prompt has changed to '[sudo] password for helen:'. The cursor is positioned after the colon, ready for the password input.

3. Enter the user password to complete the uninstallation.

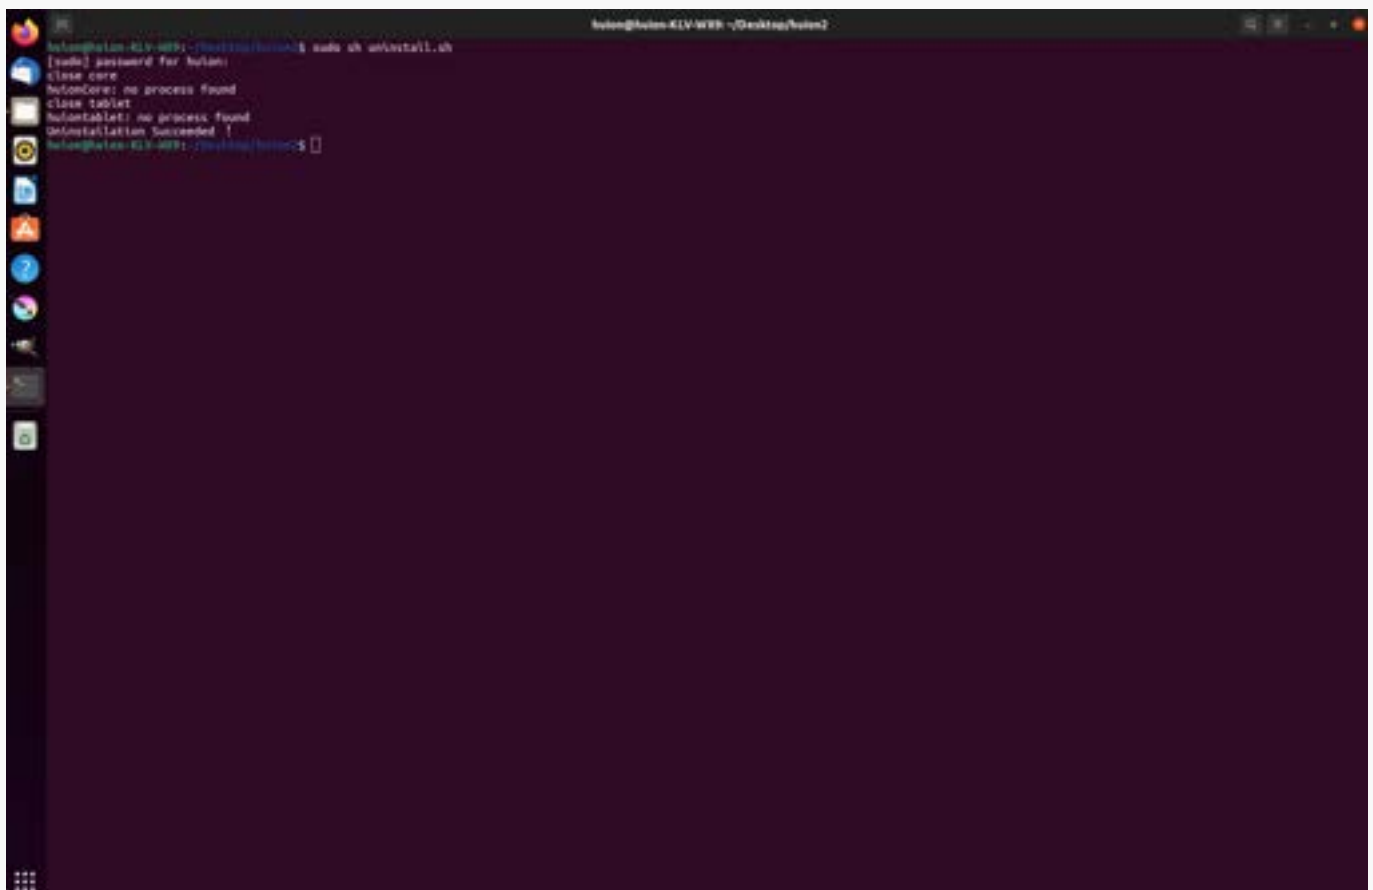

The same terminal window as before, but now the password has been entered. The output shows the following lines: 'close core', 'helenCore: no process found', 'close tablet', 'helenTablet: no process found', and 'Uninstallation Succeeded !'. The prompt has returned to 'helen@helen-K1V-WKH: ~/Desktop/helen2\$'.


2. Instructions for installing the driver package file in deb format.

Linux operating systems supported:



Ubuntu

Steps to Install:


1. Open the folder and double-click the driver file in deb format to enter the system default interface of installing the driver on the application store, then click to install.

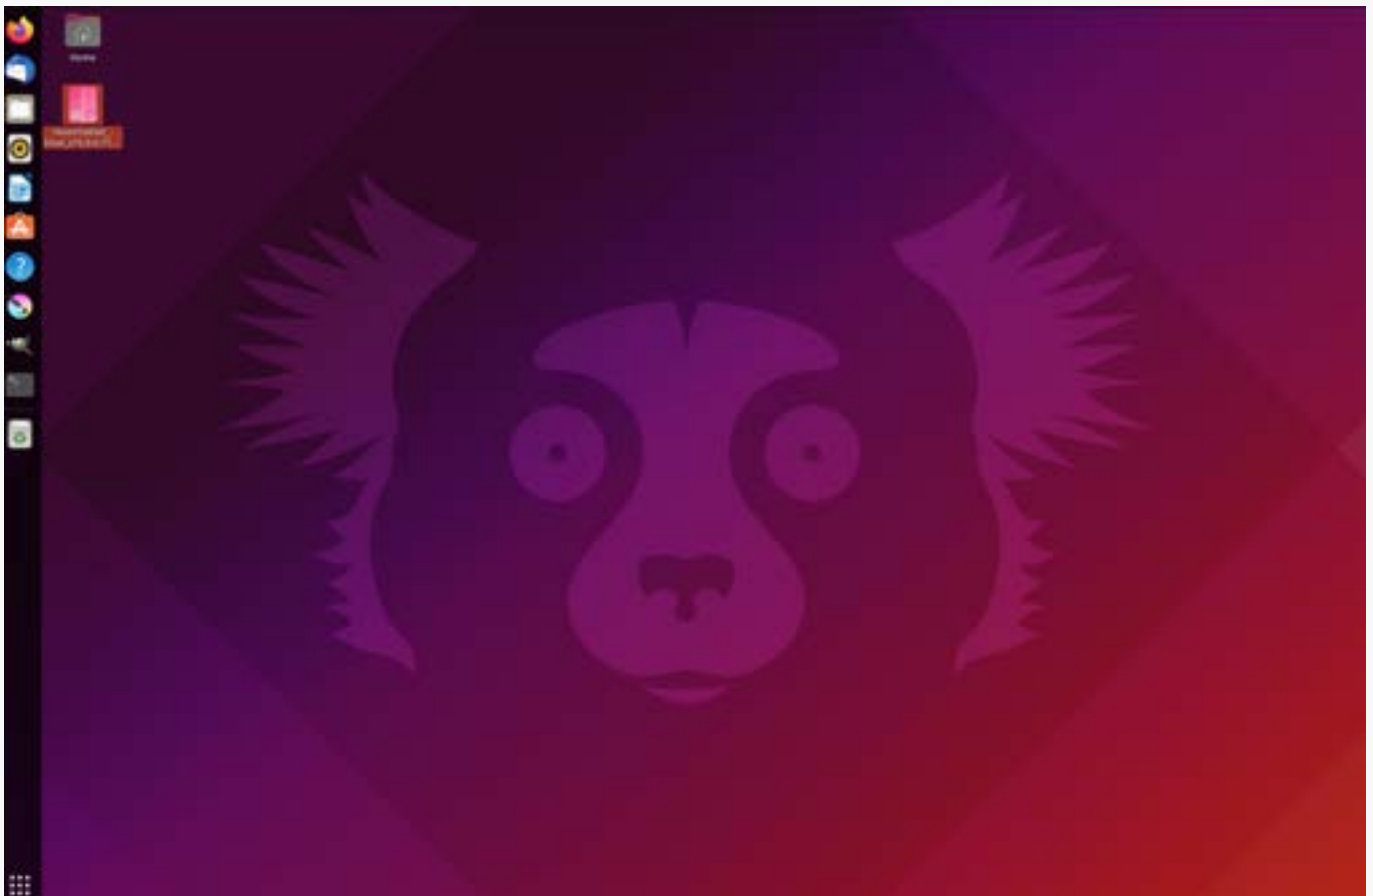

2. Enter the user password to complete the installation.

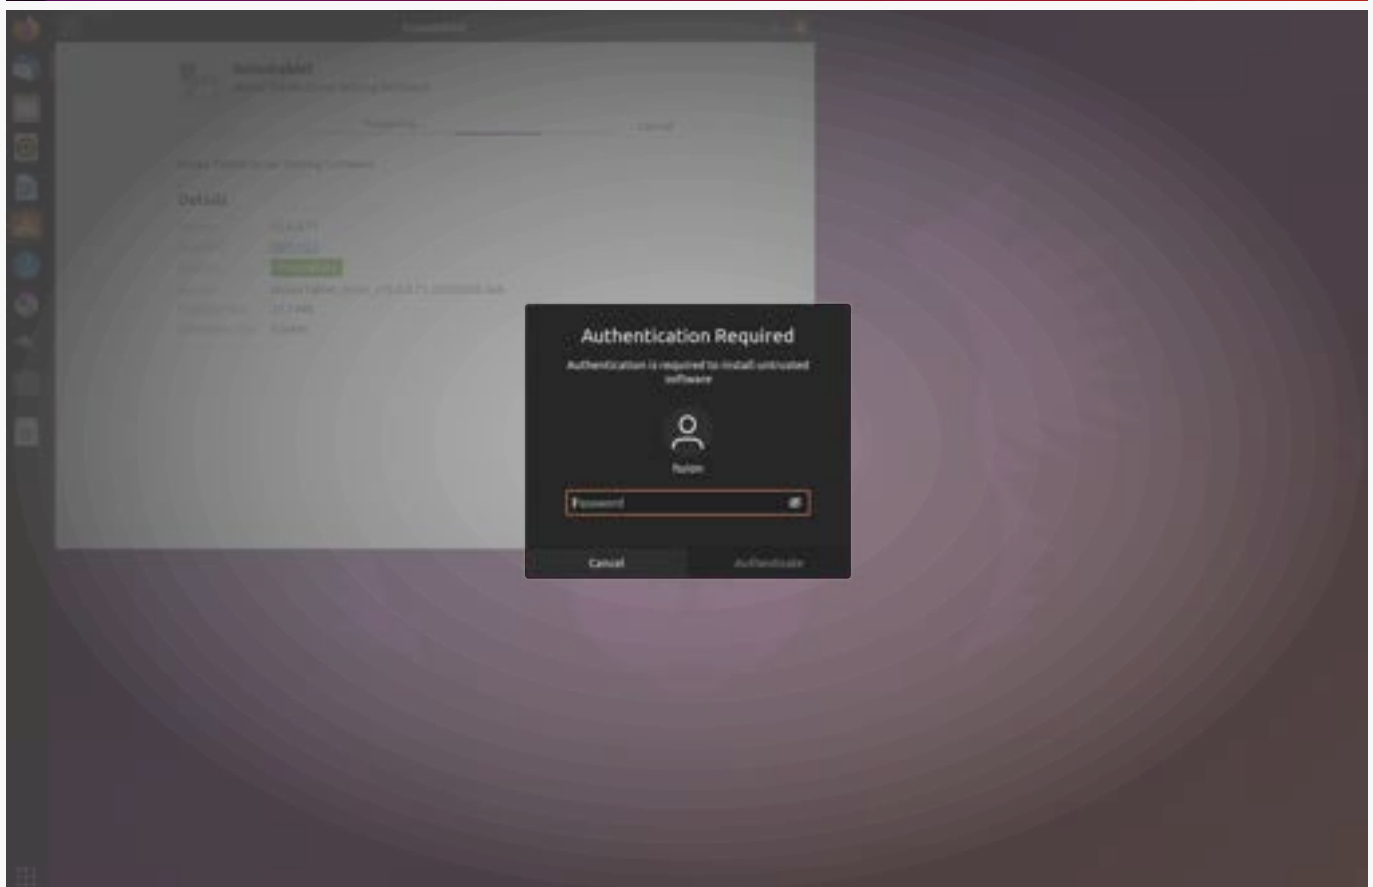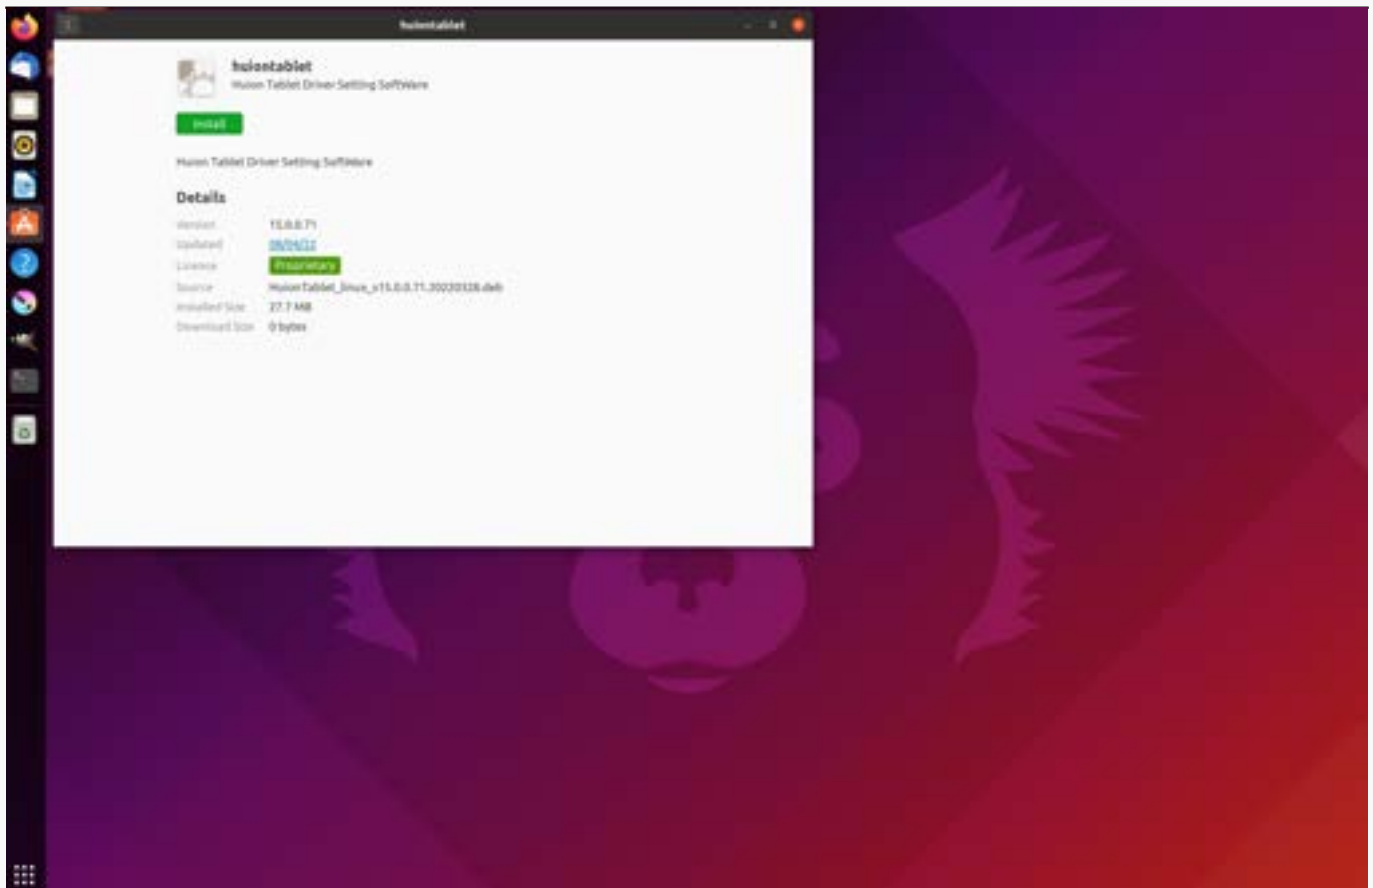


3. Please reboot your Linux device to run the driver, or the driver will not be useful.

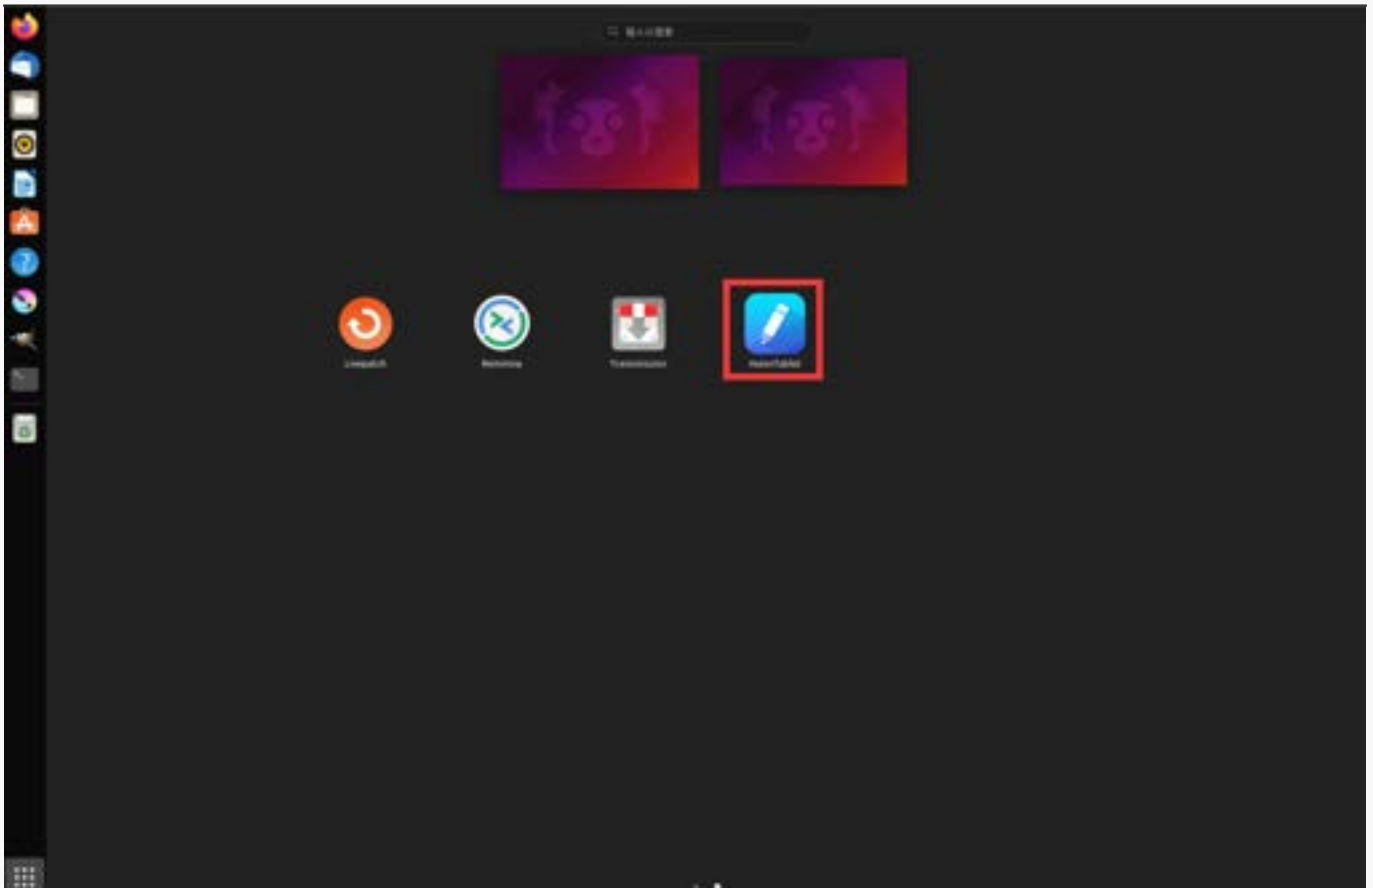

Tips: Please ensure that your Linux device has been connected to the internet when installing the driver, or the installation will fail when entering the application store interface.


Steps to Uninstall:

1. Enter the interface of the installed applications on the system's built-in application store.
2. Find the driver and click to uninstall it.

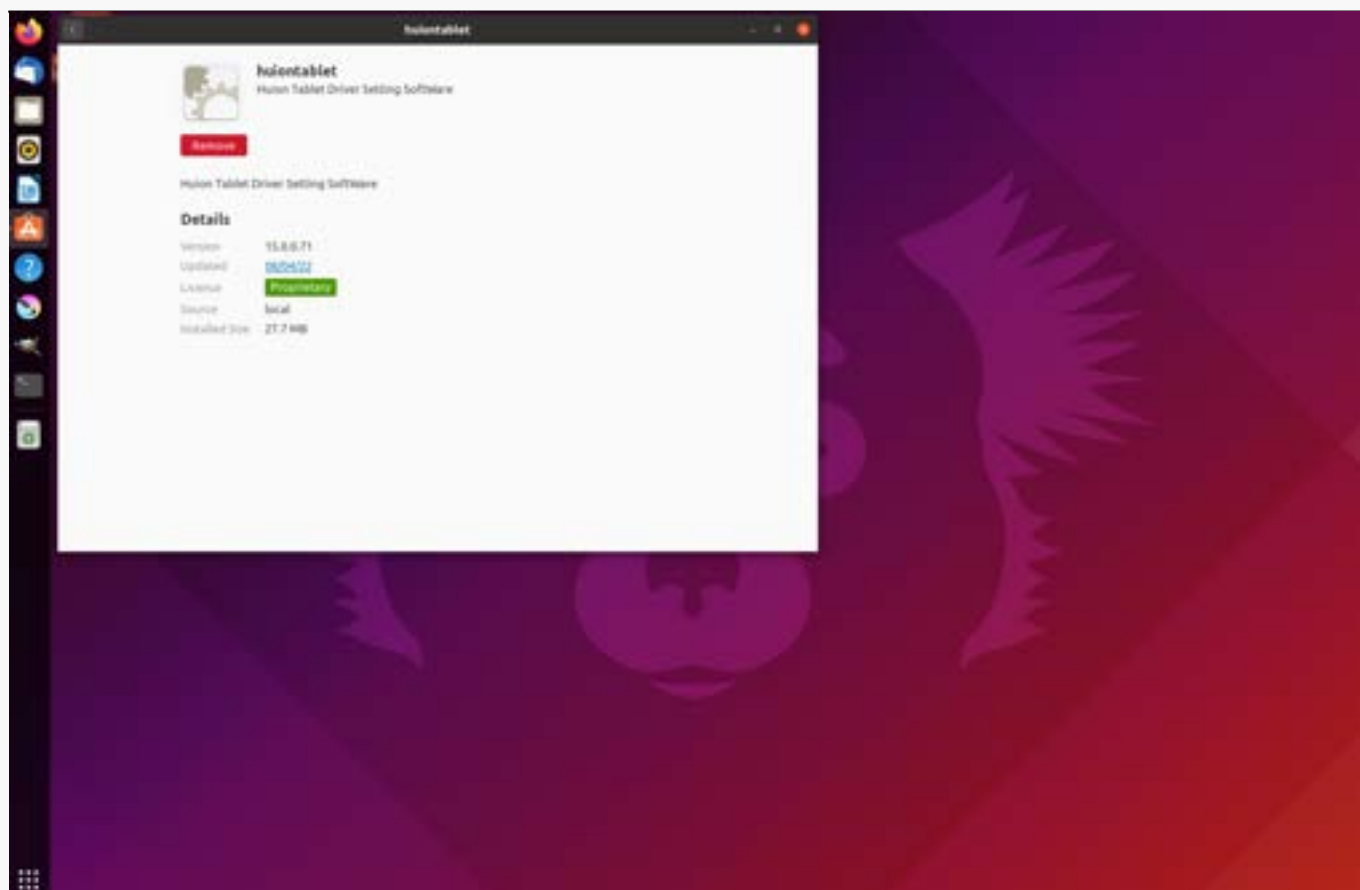

Tips: If you can't access the system's built-in application store, you can search out the driver file, huiontablet_xxx.deb, then double-click it to enter the installation interface, and click the remove button to uninstall it.

Driver Interface Preview

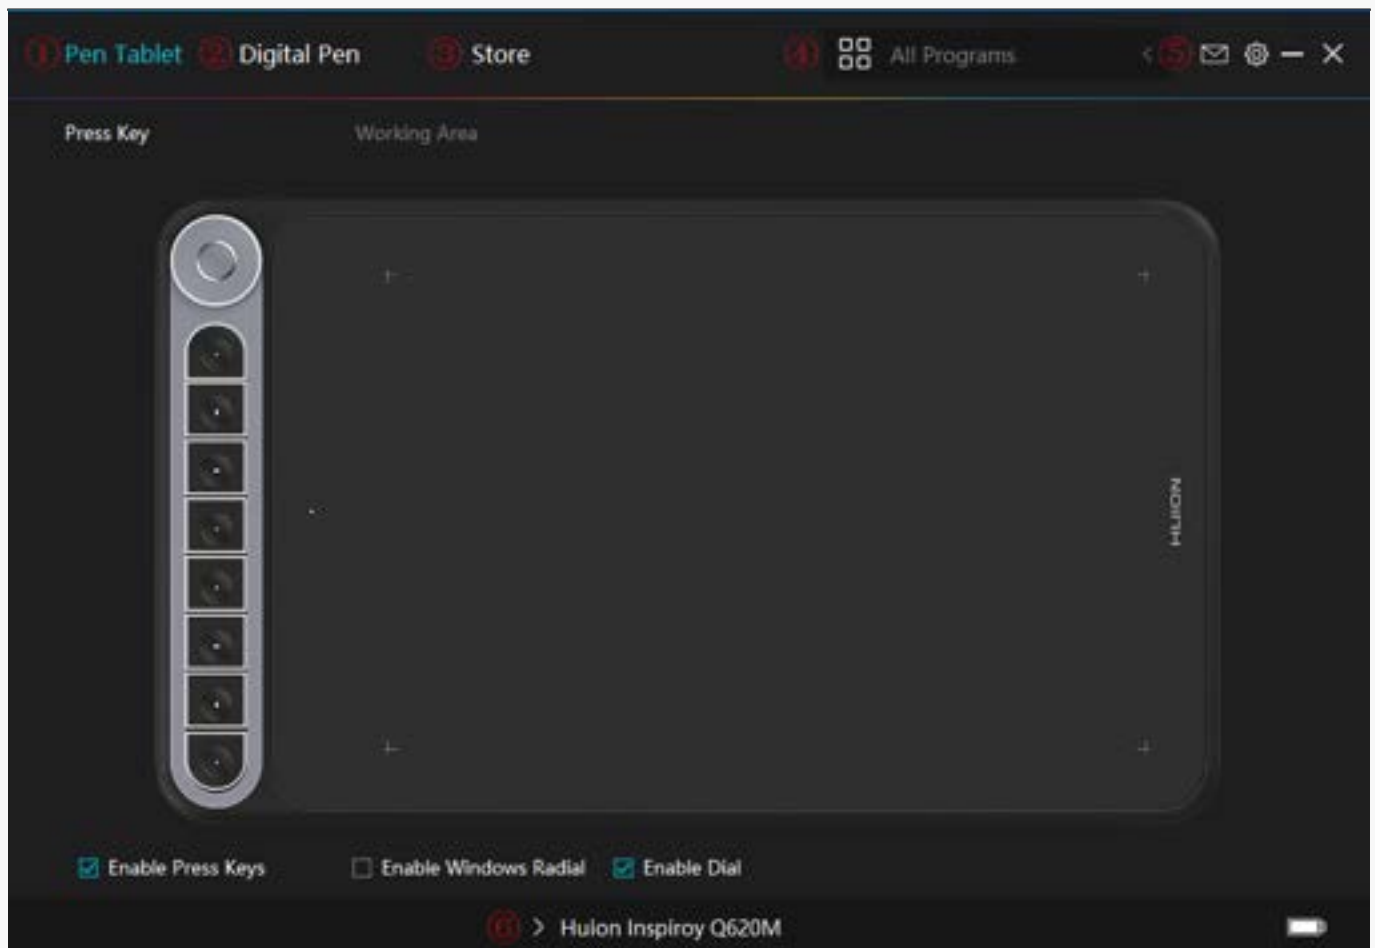

1. Pen Tablet

Pen Tablet function setting interface, the users can set the tablet function on this interface, such as Press Key, Working Area.

[See Section](#)

2. Digital Pen

The users can set the Pen function on this interface. About Press Key, Mode selection, Pressure Sensitivity Adjustment and Pressure Test.

[See Section](#)

3. Store

Huion Store, where you can get the latest information about the product such as its FAQ or sales promotion. Additionally, you can also purchase other products or accessories on Huion Store.

4. Add Programs

You can customize different functions on the current device for different programs.

When select All programs, the setting of the device is valid for every program.

By clicking Add a Program from the drop-down list, you can set the functions for a specific program and hence have unique settings for different programs. After that, when launching a specific program, the Driver will automatically recognize it and the setting features will change to its corresponding one.

5. Setting

The users can set the Driver function on this interface. About Device Information, Backup Setting, General Setting and Driver Update.

[See Section](#)

6. Switch between Devices

Driver can support the connection to two digital drawing devices at the same time. When these devices are sharing the same Driver with the current device, users can customize the settings of the devices by switching the Driver interface to the corresponding one.


Pen Tablet Setting

Press Key

You can customize the functions of these buttons according to your own habits, and you can uncheck "Enable press keys" in the lower left corner to turn off the button function.

Place the cursor on a key to check its default value. Click the key for a pop-up dialog box and then set the function.

You can enter a name for the keystroke, then select the property of the keystroke and customize the function.

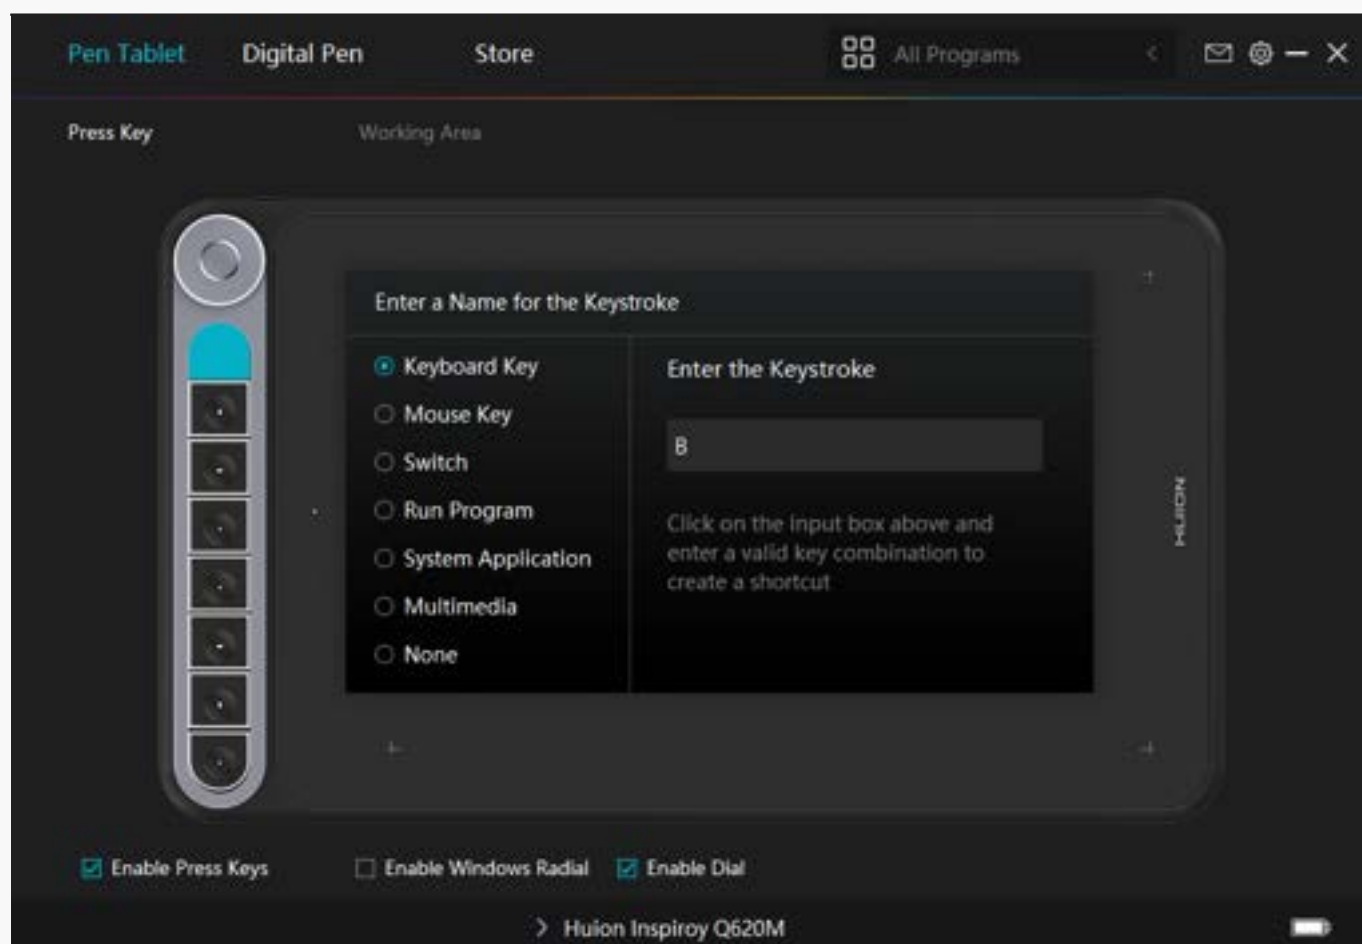

1. Keyboard Key

Click on the input box above and enter a valid key combination to create a shortcut. For example "Ctrl+A", "Ctrl+Z", and so on.

Enetr a Name for the Keystroke

☒ Keyboard Key
 ☐ Mouse Key
 ☐ Switch
 ☐ Run Program
 ☐ System Application
 ☐ Multimedia
 ☐ None

Enetr a Keystroke

None

Click on the input box above and enter a valid key combination to creat a shortcut.

2. Mouse Key

Select the function of a Mouse or Wheel. Please see the picture below for detailed functions.

Mouse: Left Button, Right Button, Middle Button.

Wheel: Wheel Forward, Wheel Backward.

Double-Left Click.

Enetr a Name for the Keystroke

☐ Keyboard Key
 ☒ Mouse Key
 ☐ Switch
 ☐ Run Program
 ☐ System Application
 ☐ Multimedia
 ☐ None


☐ Mouse Left Button
 ☒ Mouse Right Button
 ☐ Mouse Middle Button
 ☐ Double-Left Click
 ☐ Wheel Forward
 ☐ Wheel Backward

☐ Ctrl
 ☐ Shift
 ☐ Alt
 ☐ Win

3. Switch

Select Switch Screen or Switch Brush.

Note: Some software does not support the "Switch Brush" function.

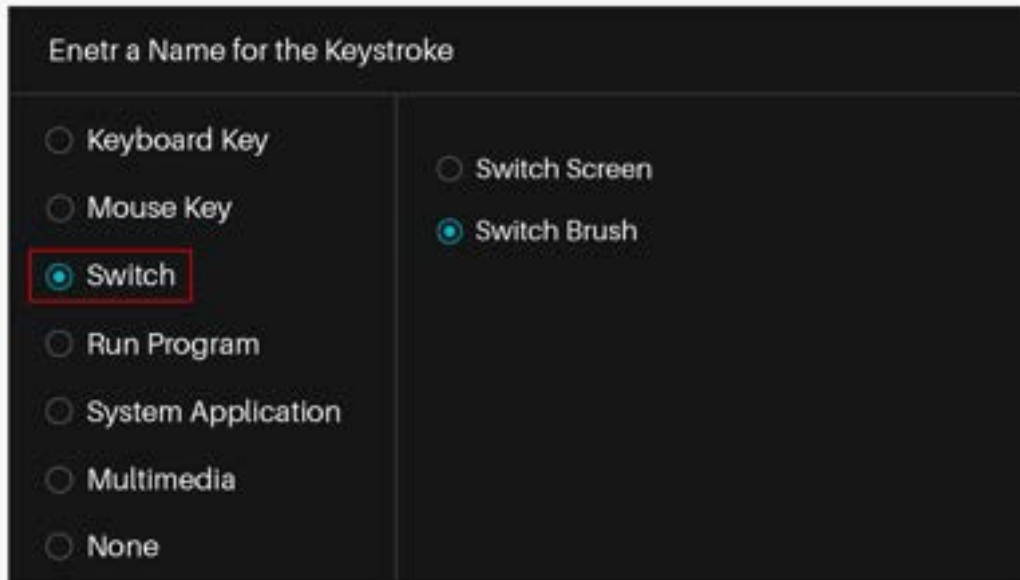

4. Run Program

Browse and select a program that you want to launch quickly. After the setting, you can launch that program with just a single press.

Enetr a Name for the Keystroke

☐ Keyboard Key
☐ Mouse Key
☐ Switch
☒ Run Program
☐ System Application
☐ Multimedia
☐ None

Select a Program

Program Path

Click on the "Browse" to select a file.

5. System Application

The table below are the functions of Windows and Mac Systems that can be customized on the Keys.


Enetr a Name for the Keystroke

☐ Keyboard Key
☐ Mouse Key
☐ Switch
☐ Run Program
☒ System Application
☐ Multimedia
☐ None

☐ Lock the Screen
☒ Sleep
☐ Power Off
☐ Show/Hide Desktop Icon
☐ Task View
☐ Start Menu

6. Multimedia

To realize the functions such as previous song, next song, play/pause, volume up, volume down.

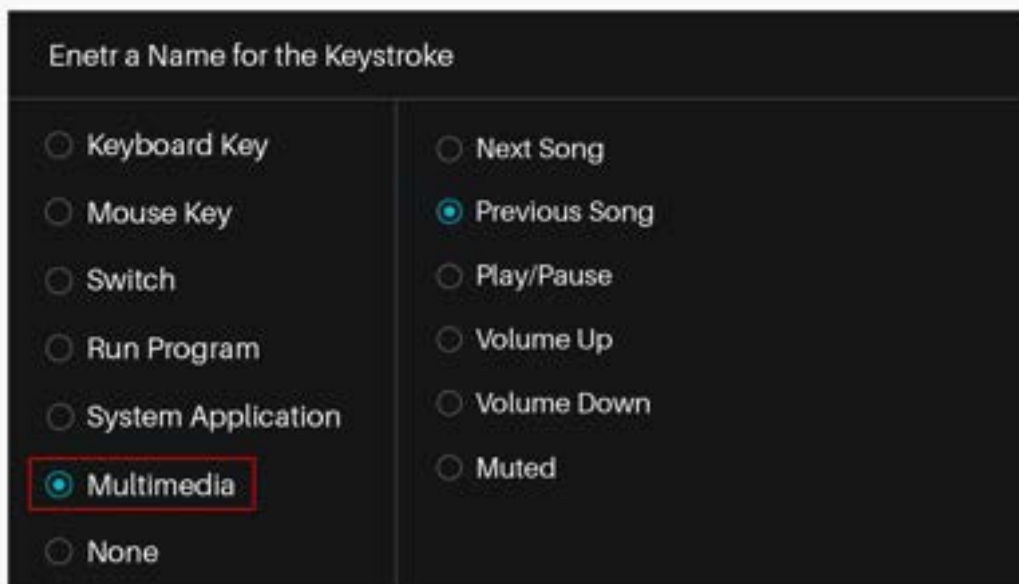

7. None

When select None, the keys will have no function.

Working Area

Select the Working Area tab to define the relationship between pen movement on the tablet and cursor movement on the monitor screen.

By default the entire active area of tablet maps to the entire monitor. If more than one monitor is in use and you are in extended mode, you need to choose the related monitor on the driver interface which you are going to map to.

If your monitors are in mirror mode (All monitors display the same content), the tablet maps to the entire space on each monitor and the screen cursor is displayed on each monitor simultaneously.

1. Working Area Setting

Define the tablet area that will be mapped to the screen area.


[1] Full Area: the entire active area of the tablet. This is the default setting.

[2] Screen Ratio: As a general rule, be 16:9.

[3] Customized Area:

1> Enter coordinate values.

2> Drag the corners of the foreground graphic to select the screen area.

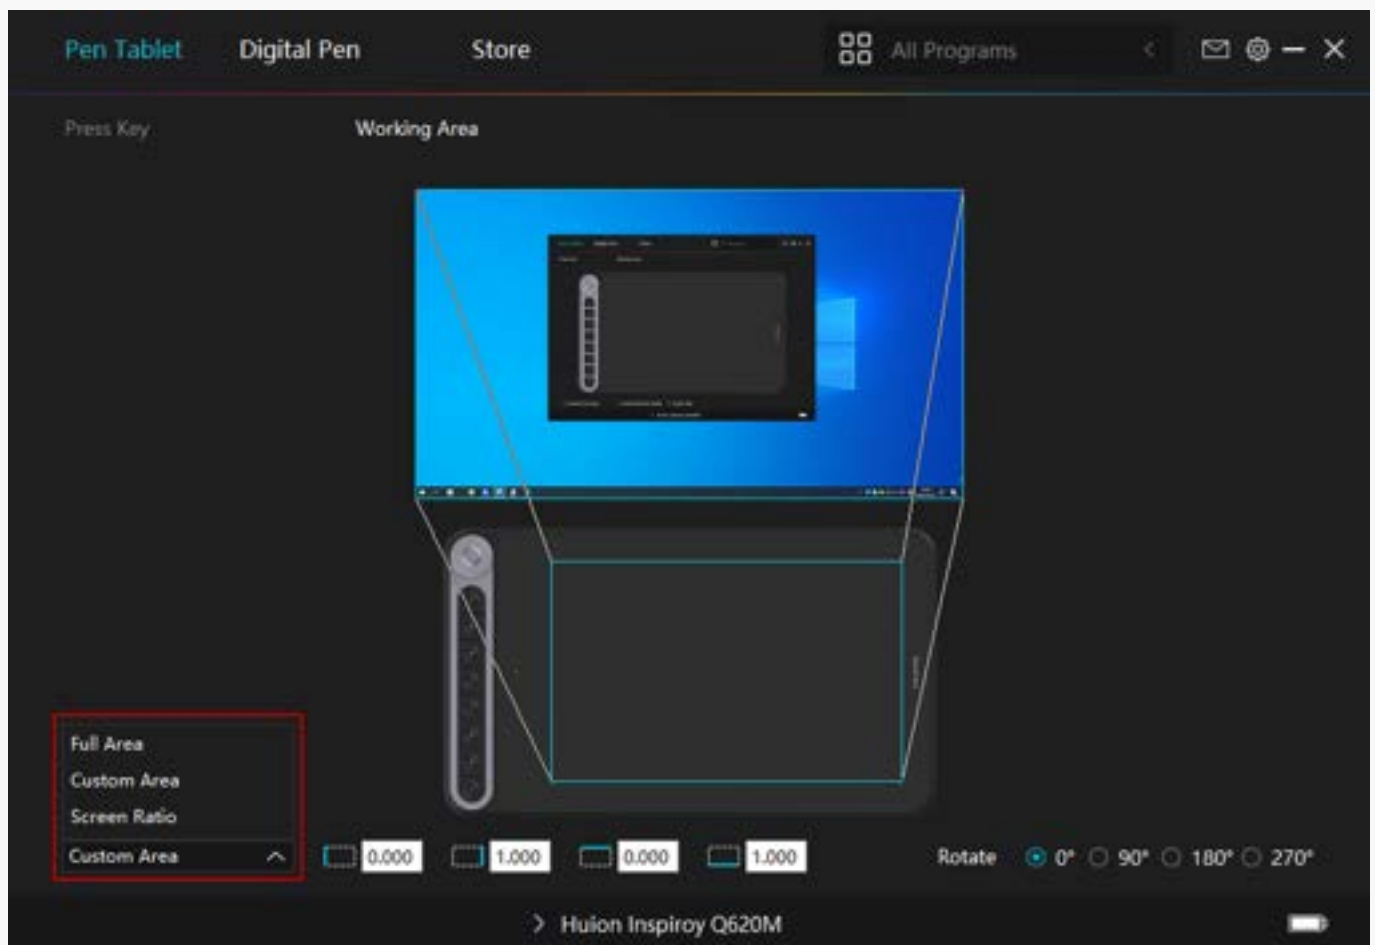

2. Rotate Working Area

By changing the direction of the tablet to adapt to the left and right hand operation. You can rotate the tablet by 0°,90°,180° or 270°.




Dial Function Setting

You can customize the features of the Dial, and you can uncheck "Enable Dial" in the lower left corner to turn off the function.


Click the Dial for a pop-up box where you can see the three groups of current settings and to modify them.

There are four properties for the Dial, which are Default, Multimedia, Customize Function, and None.

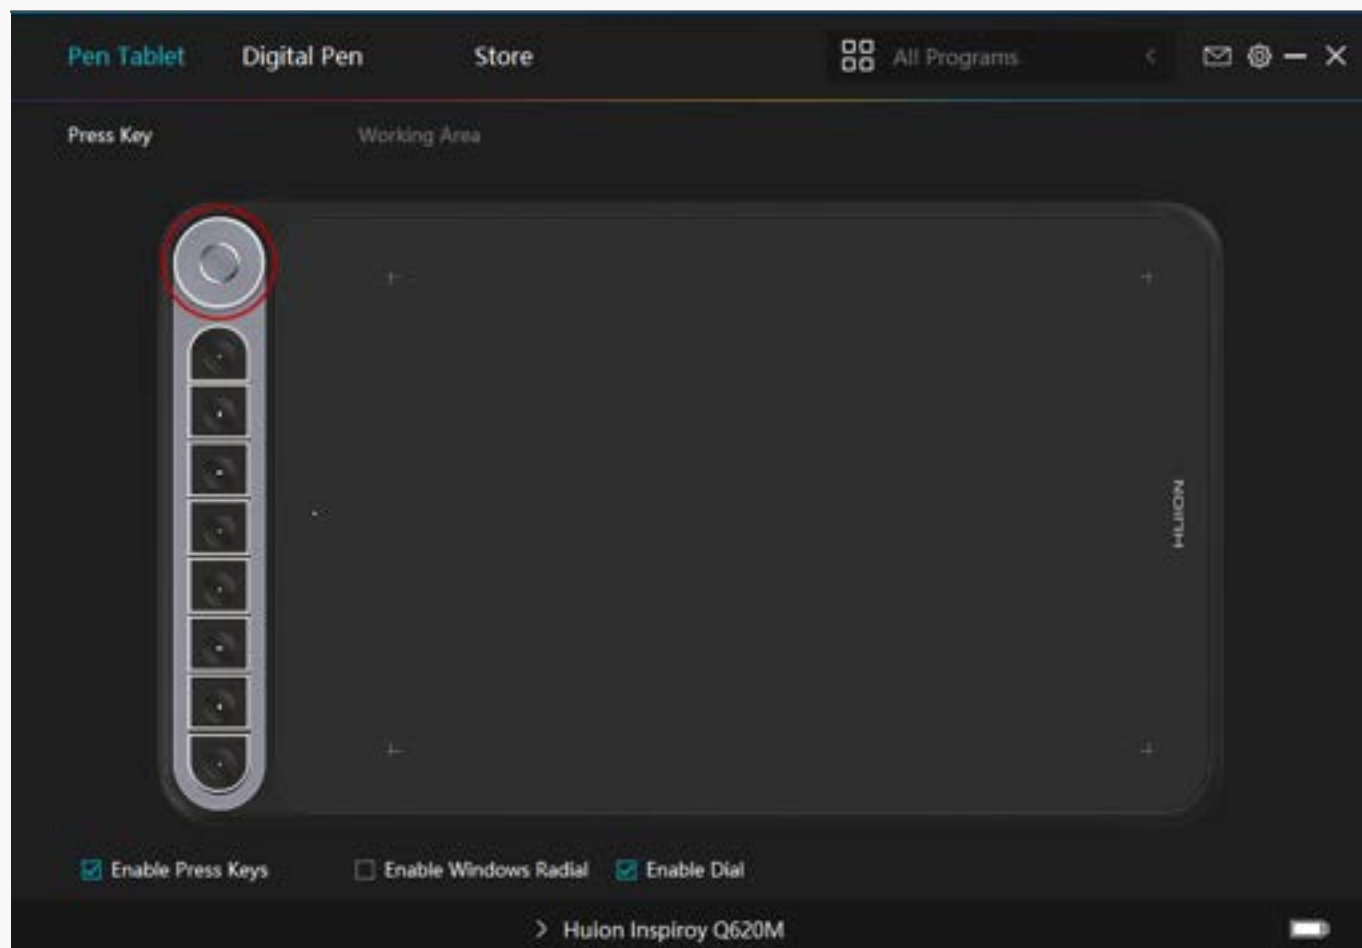


1. Default Features

You can zoom in/out on canvas, Adjust Brush Size, Scroll Up/Down.

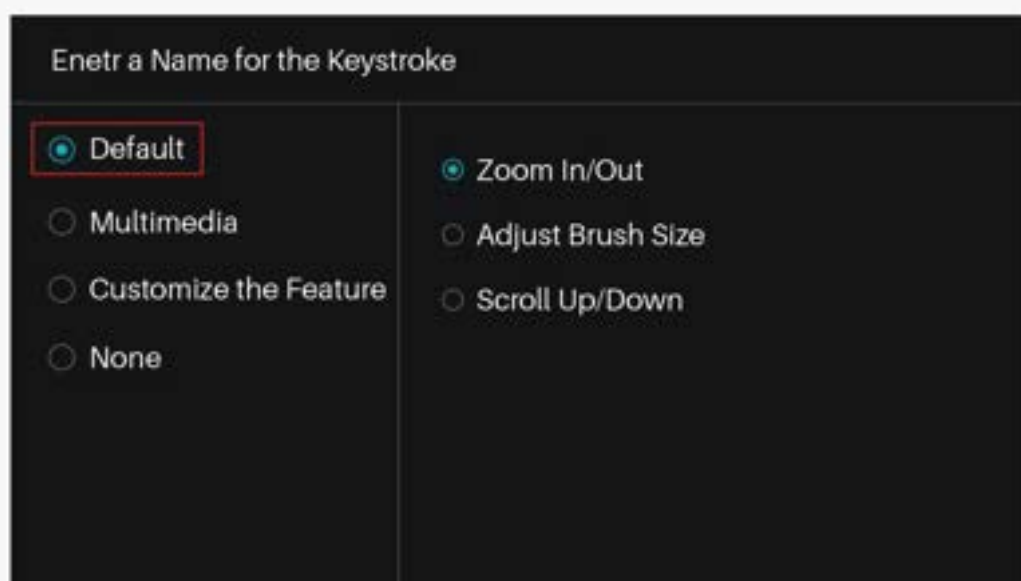

2. Multimedia


To realize the functions such as previous song, next song, play/pause, volume up, volume down.

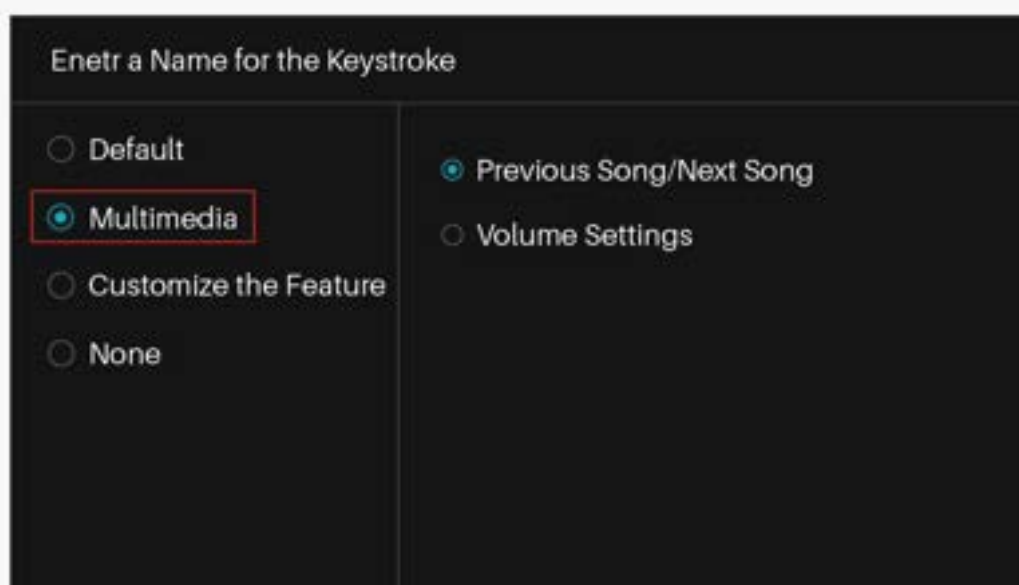

3. Customize Features

Input the features under rotate right / rotate left.

After the setting, you can rotate the Dial to realize corresponding features.

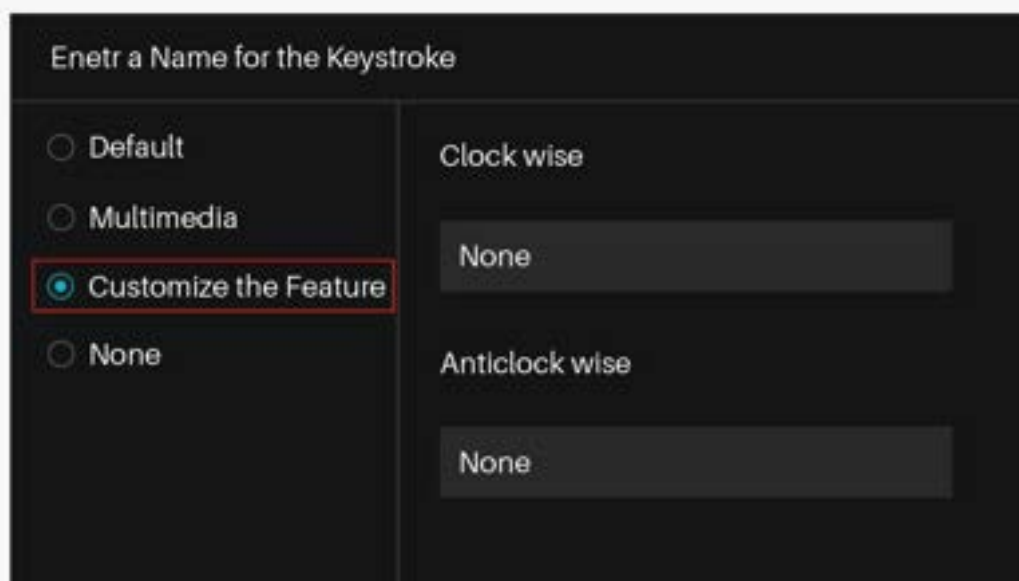

4. None


When select None, the keys will have no function.

Digital Pen Setting

1. Press Key


The function setting is the same as the Press Key setting of the tablet. Please refer to it.

[See Section](#)

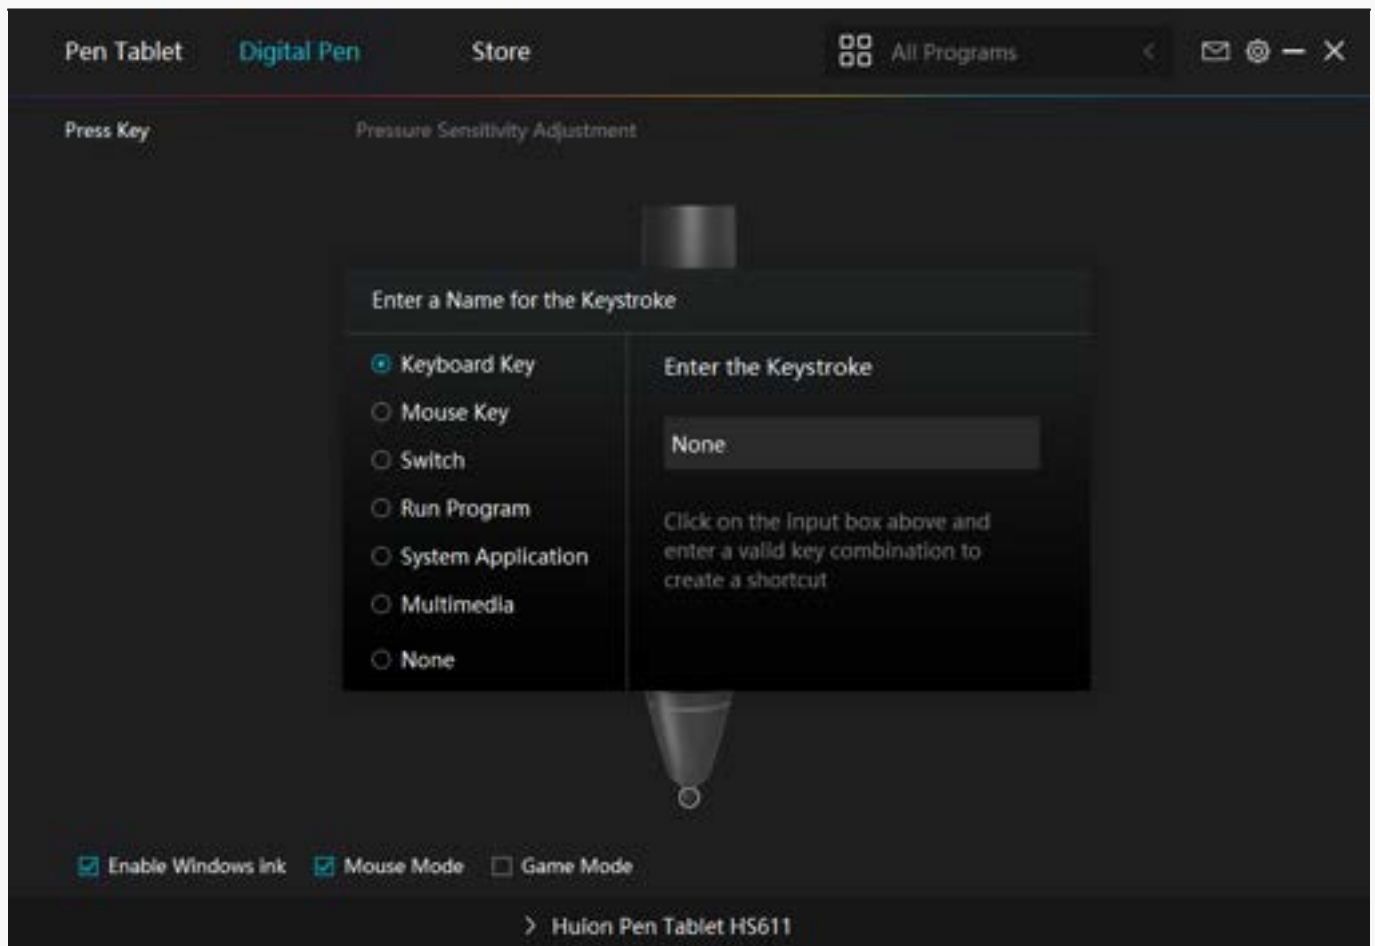


2. Pen Nib Activity

The pen nibs can be set to be Valid/Invalid as needed. Click the drop-down option to select. In Valid mode, the digital pen can be used normally. In Invalid mode, the digital pen has cursor movement, but cannot complete the specified action.

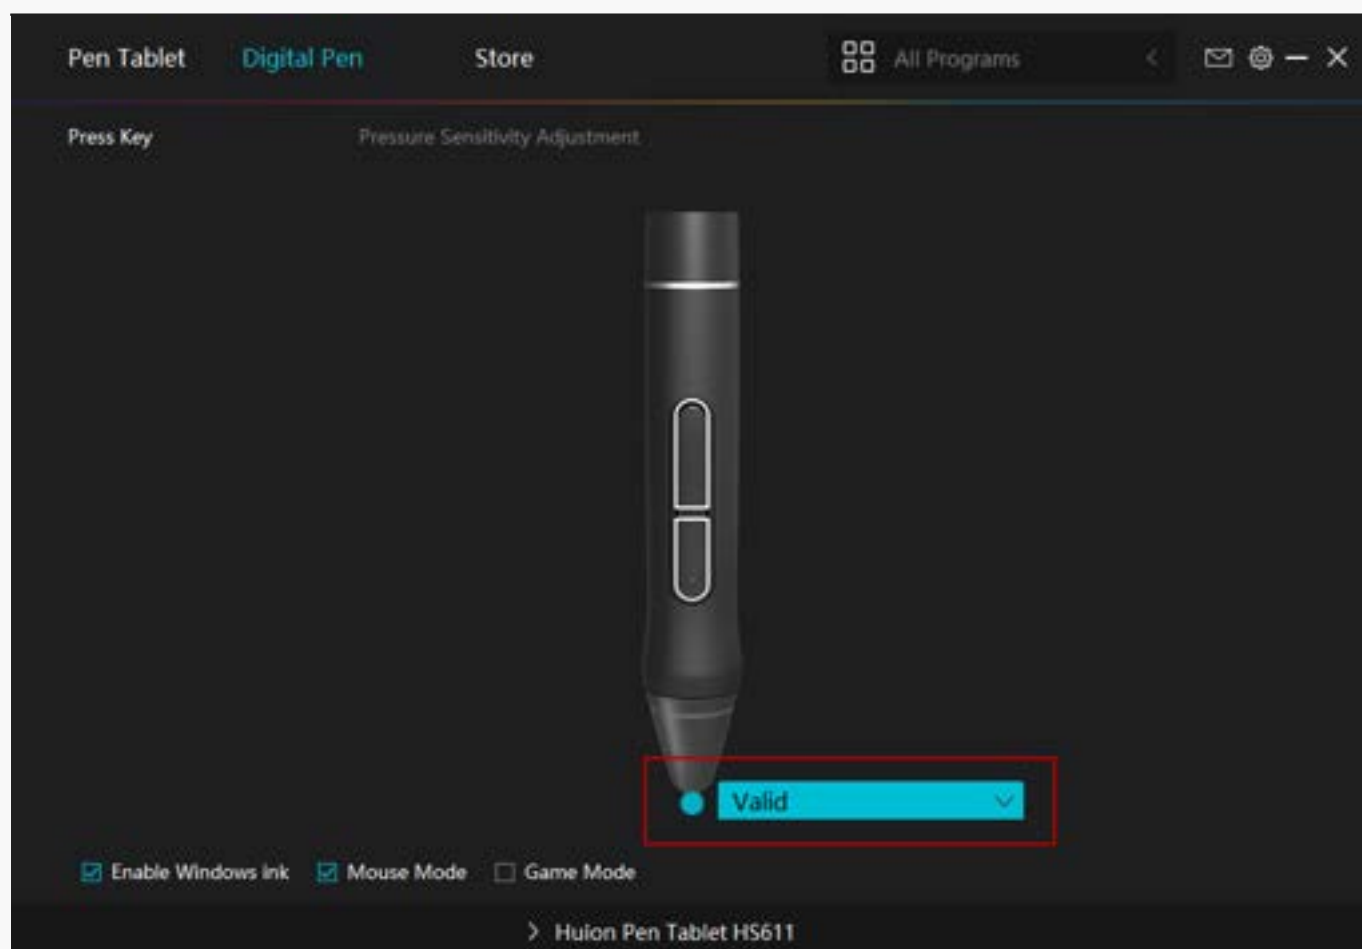

3. Enable Windows ink


Microsoft Windows provides extensive support for pen input. Pen features are supported in such as Microsoft Office, Windows Whiteboard, Adobe Photoshop CC, SketchBook 6 and so on.

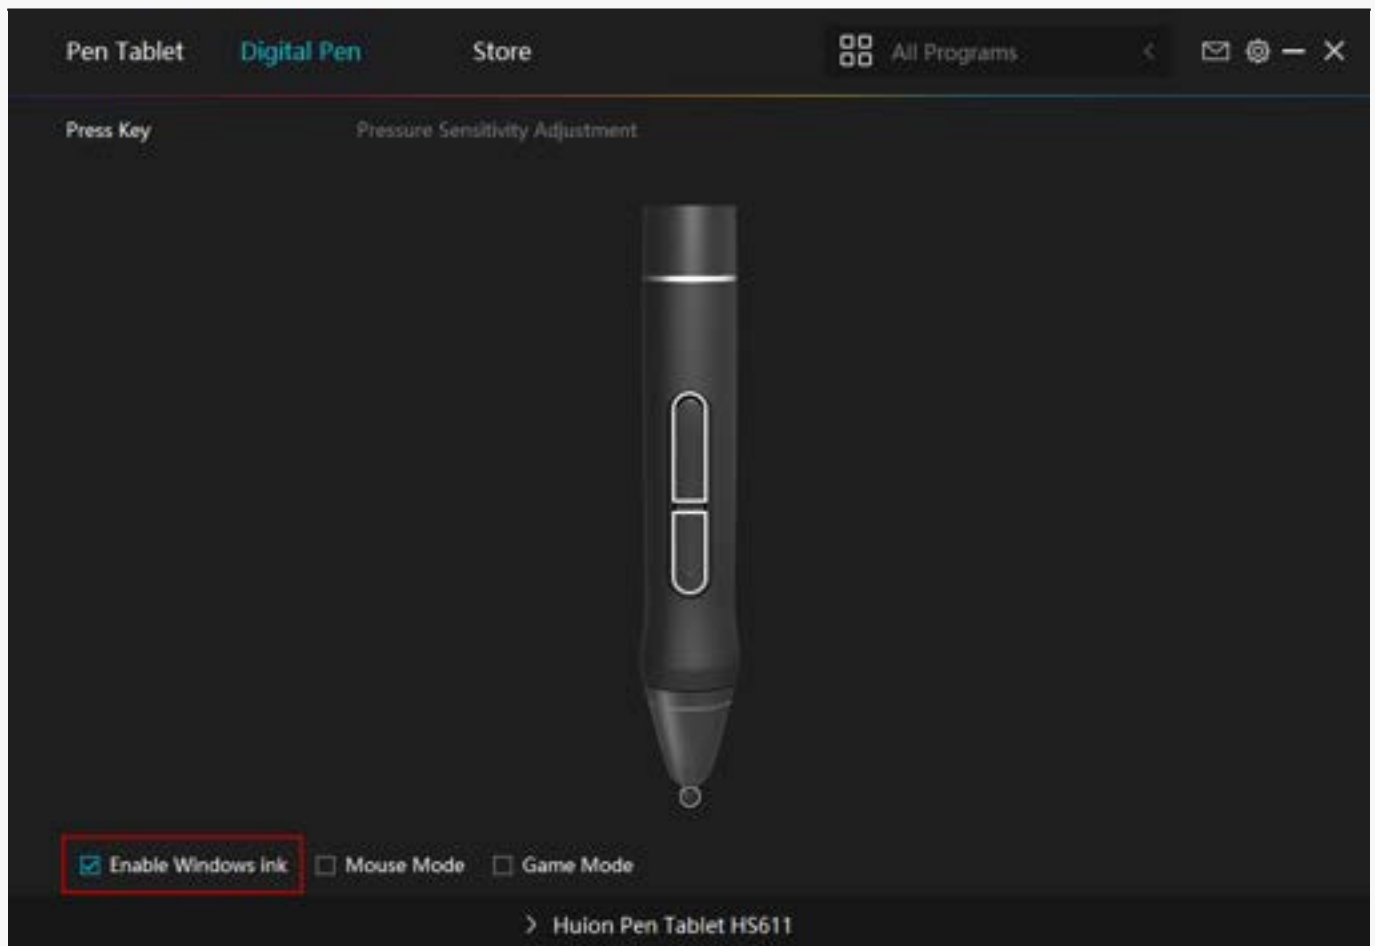

4. Mode Selection

Game Mode: This mode is specially designed for OSU games. OSU game users can turn on the "Game Mode" to increase the cursor's following speed when the pen tip moves quickly. It is not recommended for non-OSU game users.


Mouse Mode: When the digital pen moves on the tablet work area, the "absolute coordinate" mode is adopted by default. After selecting the "mouse mode", it will change to the "relative coordinate" mode. At this time, the user can use the digital pen like a mouse.

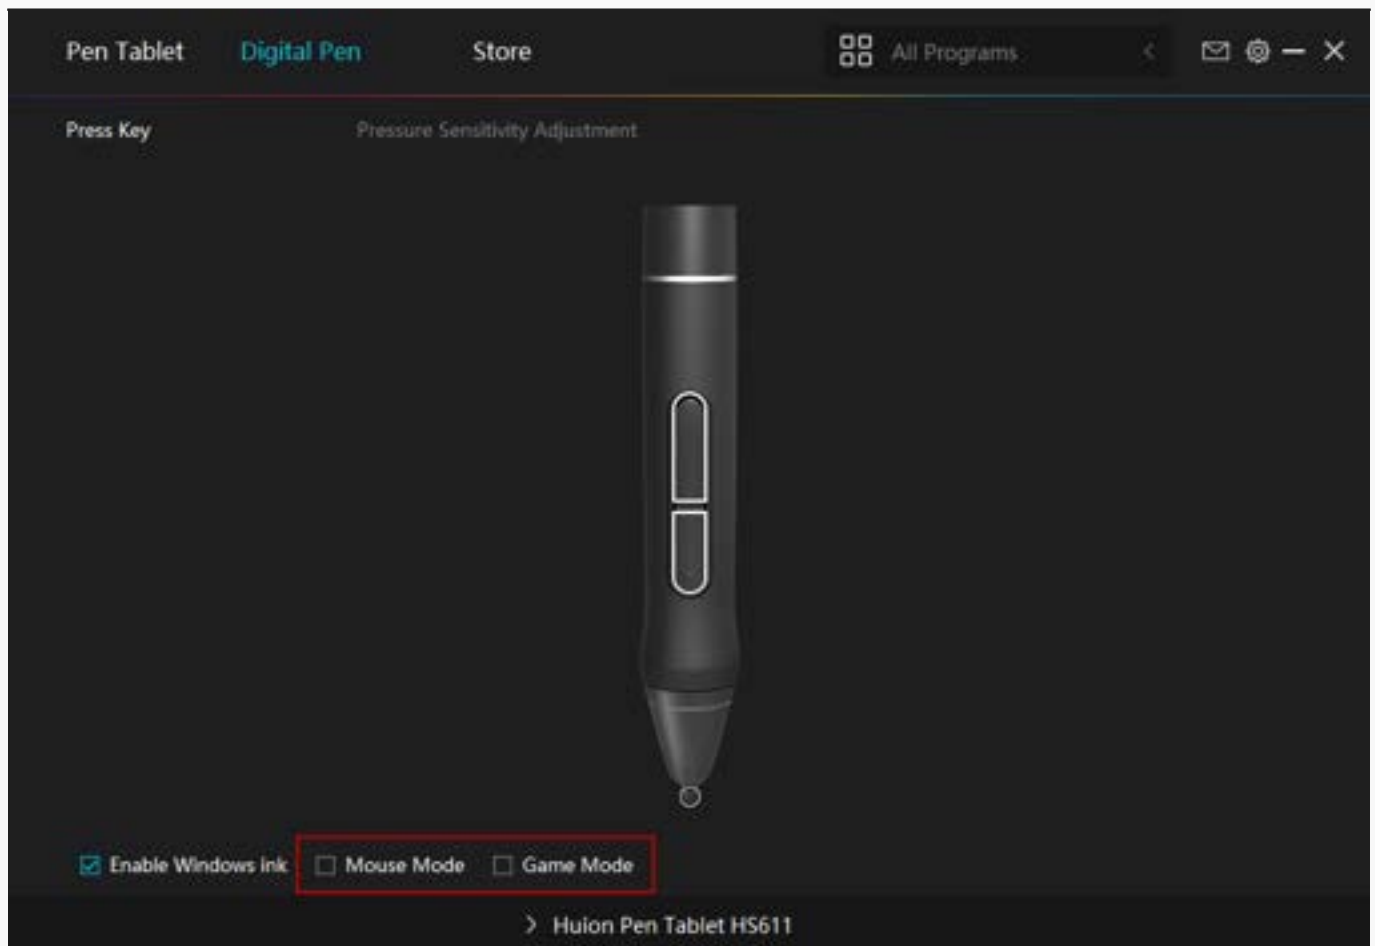

5. Pressure Sensitivity Adjustment


The pressure sensitivity will be changed by dragging the slider up and down, the smaller the value, the more pressure sensitive.

Click the Redo button at the top right of the Settings box to reset the pressure sensitivity to the default state.

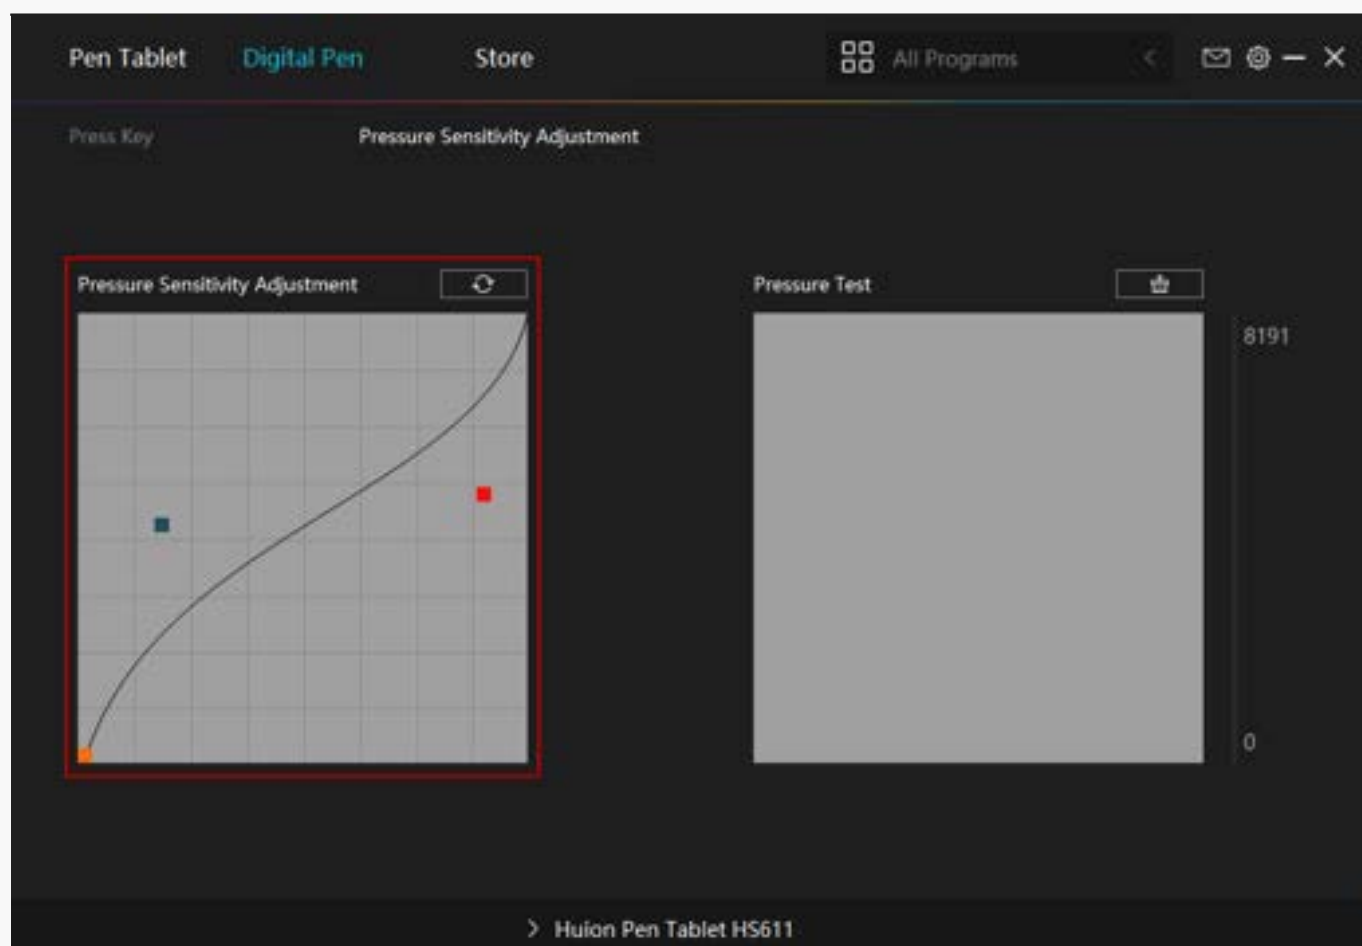

6. Pressure Test


You can gradually apply pressure to the stylus on the screen to test the pressure level. Click the Clear button to clear all the ink.

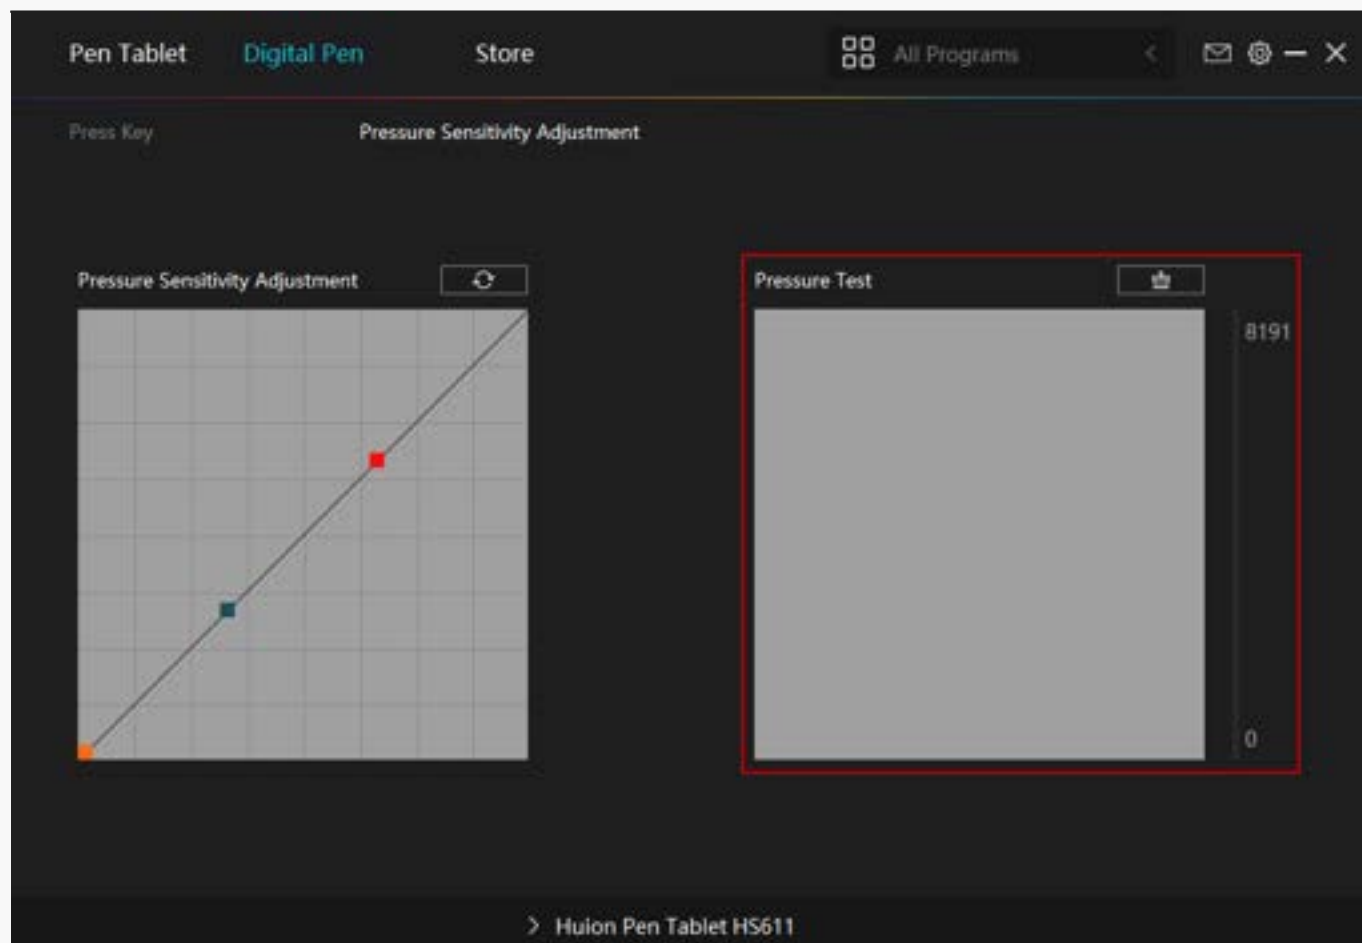

Driver Setting

1. Backup

The Driver can import and export your custom settings, which helps to avoid repeated settings when launching a different program.

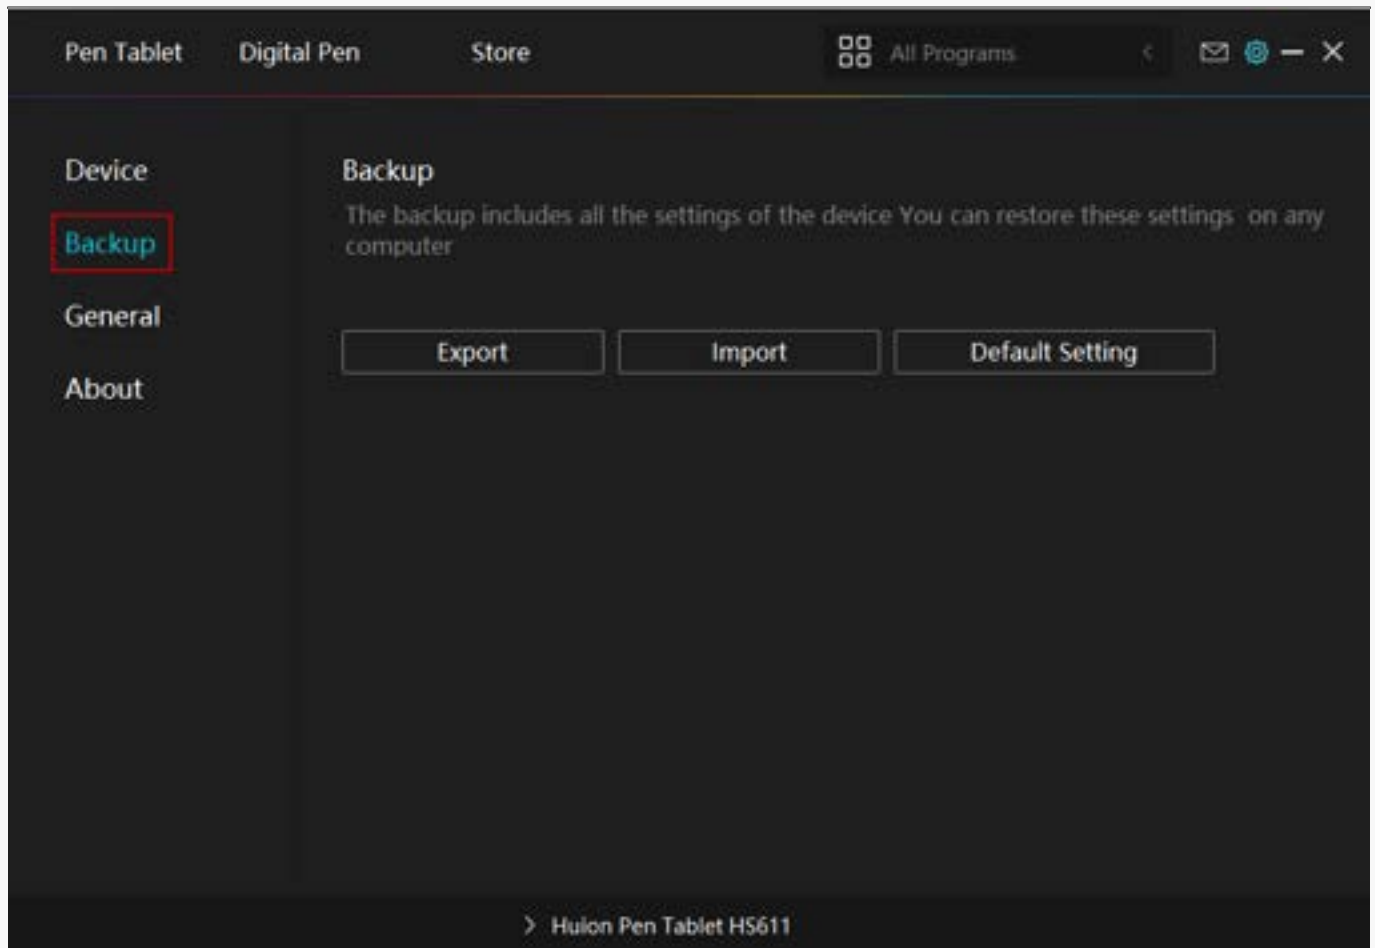


2. General Setting

[1] Language: Click the drop down menu to select a language.

[2] Color: You can select the color of the Driver interface among Dark, Blue, and Light according to your preference.


[3] Start Menu: Click to enable or disable AutoStart, New Message Alert, Automatic Updates.

[4] Hotkey: A hotkey can be used to call out the Driver interface quickly, you can set one according to your usage habits.

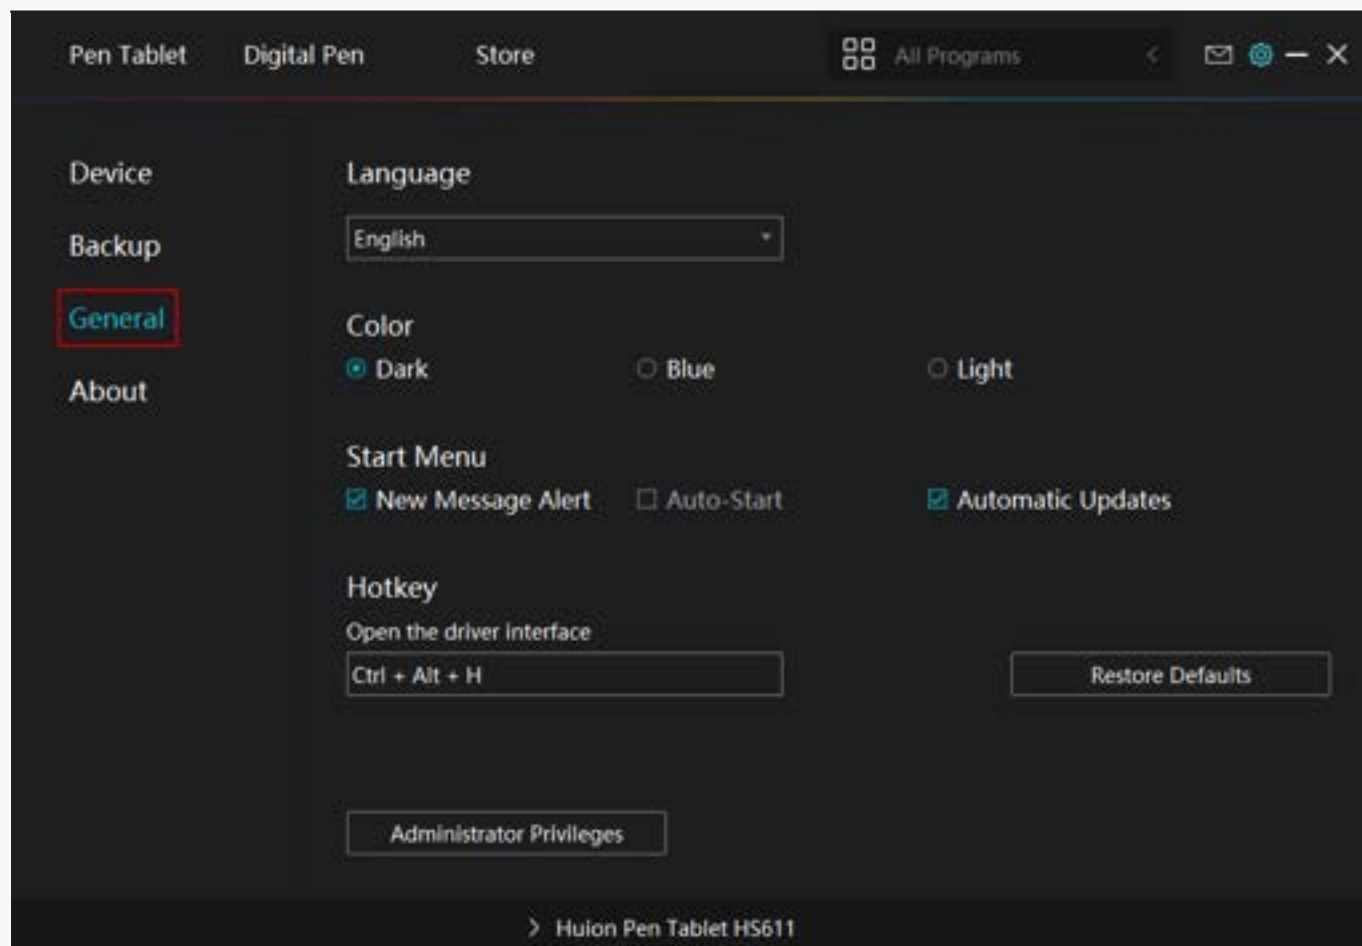

3. About

Users can check the Driver version number here. Click Check for Updates to view the latest Driver version and then follow the prompts to update the Driver if needed.

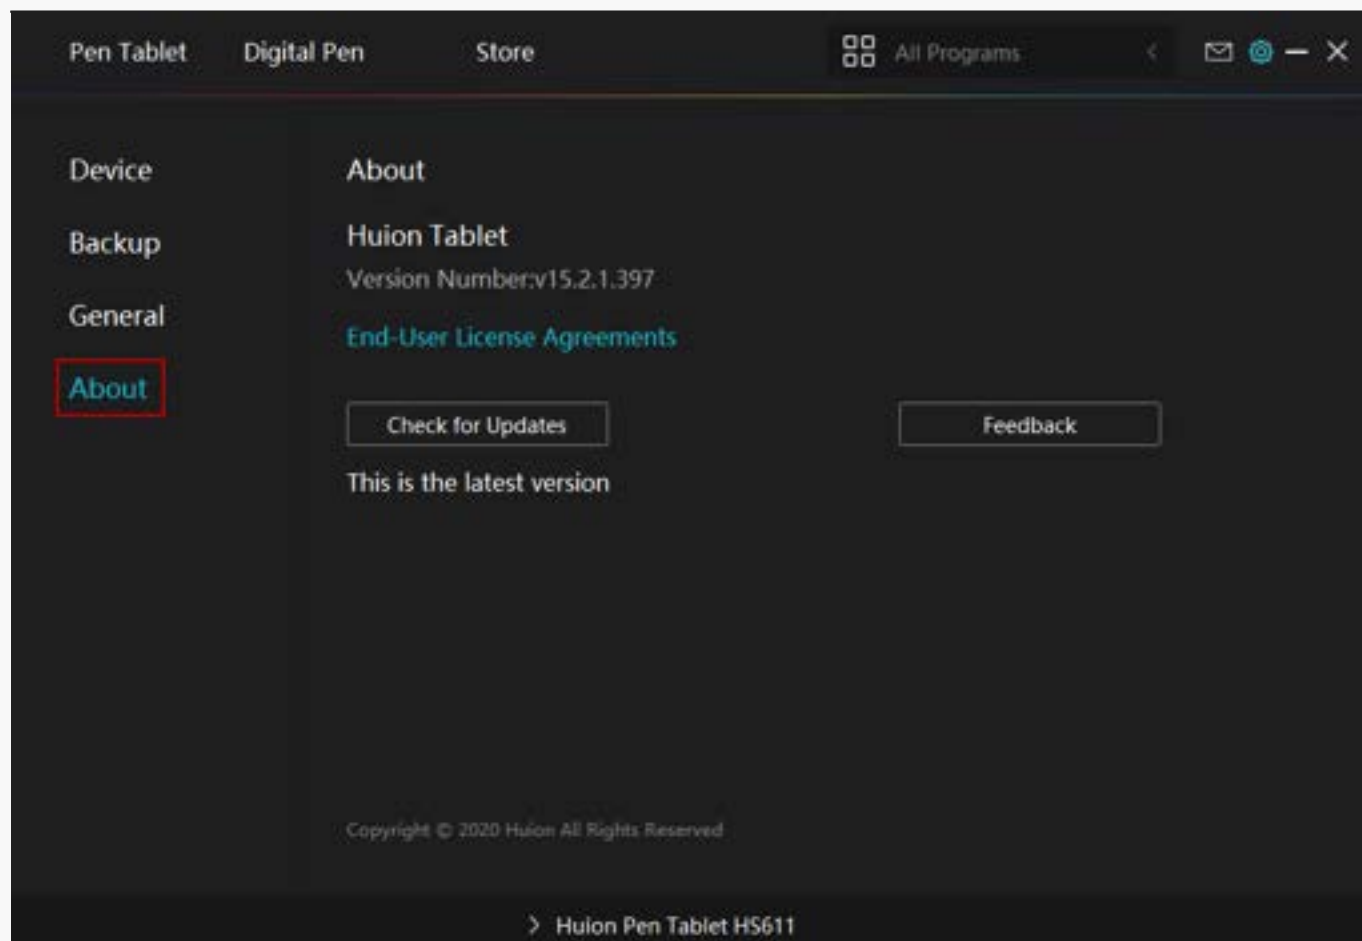

Digital Pen Basic Operation

Note: Picture shown is for illustration purposes only.

Hold the Pen

Hold the pen as you hold a normal pen or pencil. Adjust your grip so that you can toggle the side switch easily with your thumb or forefinger. Be careful not to accidentally press the switch while drawing or positioning with the pen.

Note:


When not in use, place the pen in the pen case or on the desk. Do not place the pen on the surface of screen, which may interfere with the use of other screen cursor positioning equipment, may also cause your computer can not enter the sleep mode.




Position the cursor

Move the pen slightly above the active area without touching the screen surface, the cursor will move to the new position accordingly.


Press the pen tip on the screen to make a selection. Tap the screen once with the pen tip, or touch it to the screen with enough pressure to register a click.

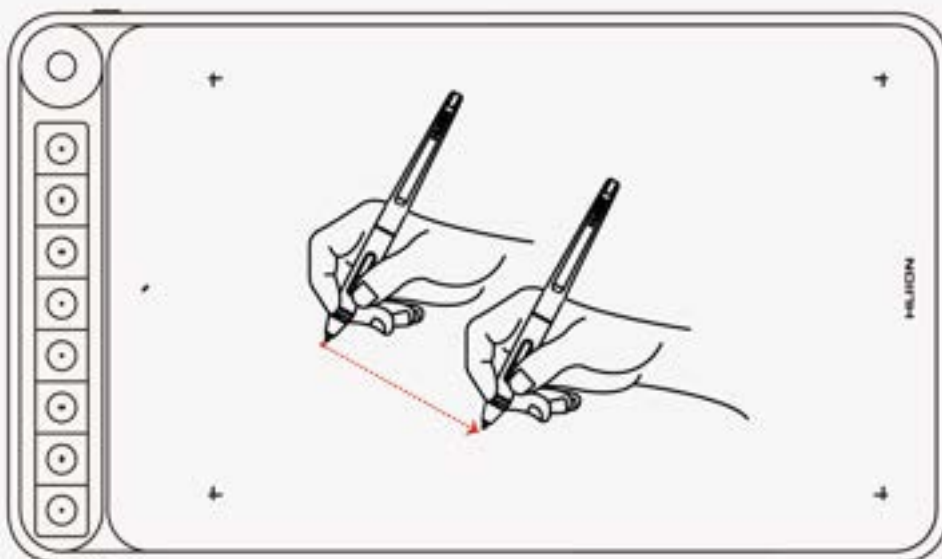

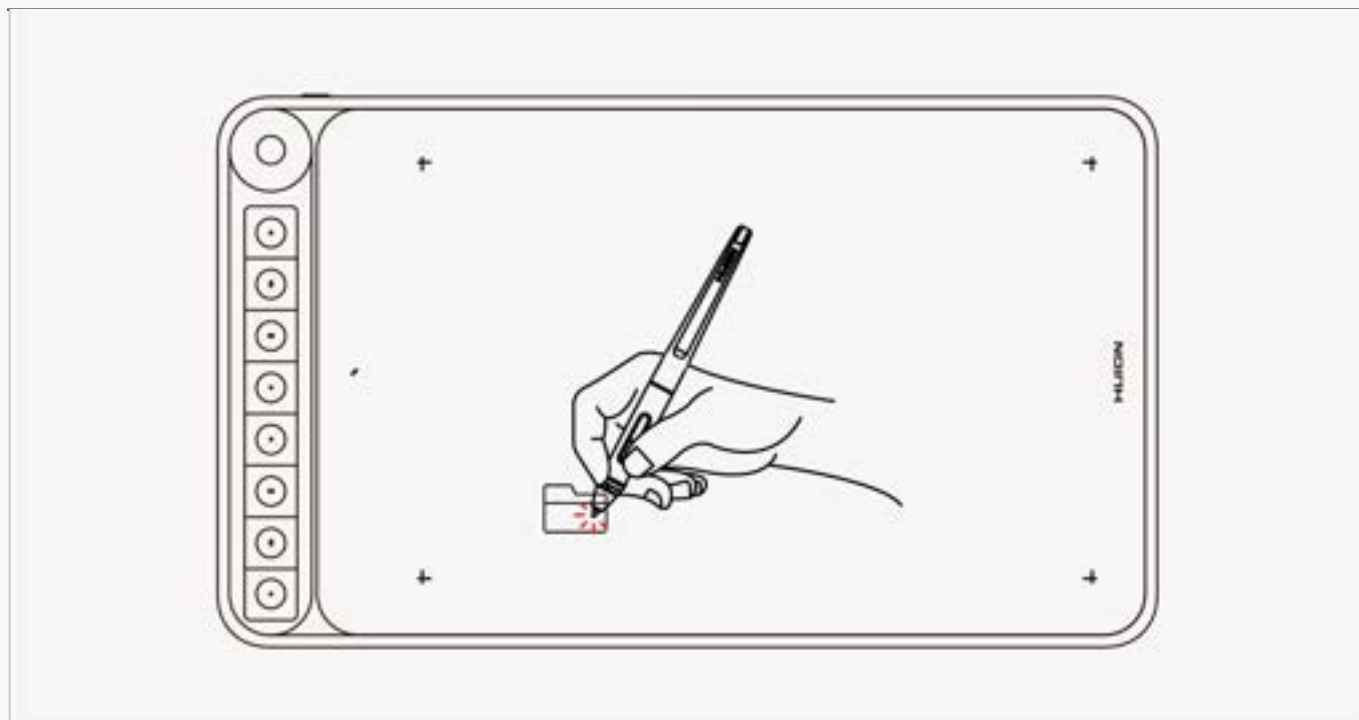


Click

Use the pen tip to tap once on the screen to register a click. Tap to highlight or select an item on the screen and double-click to open it.

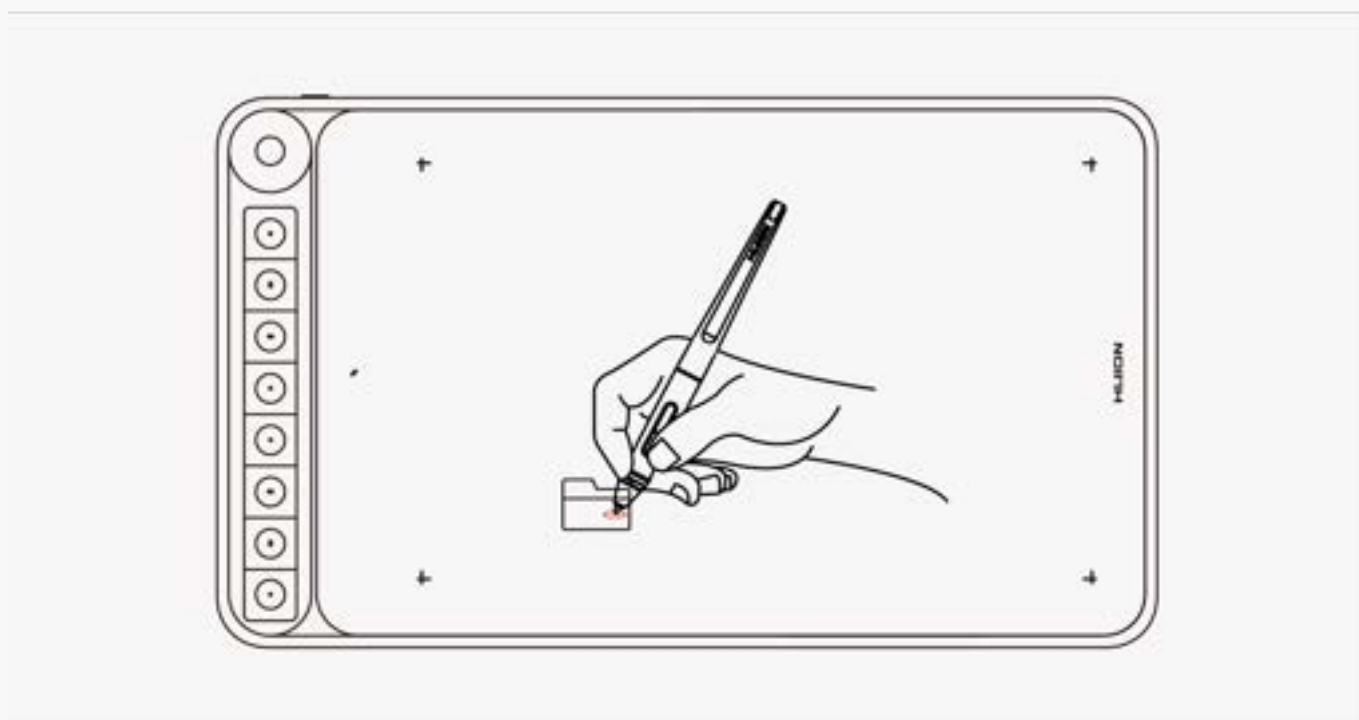


Move

Select the object, then slide the pen tip across the screen to move it.

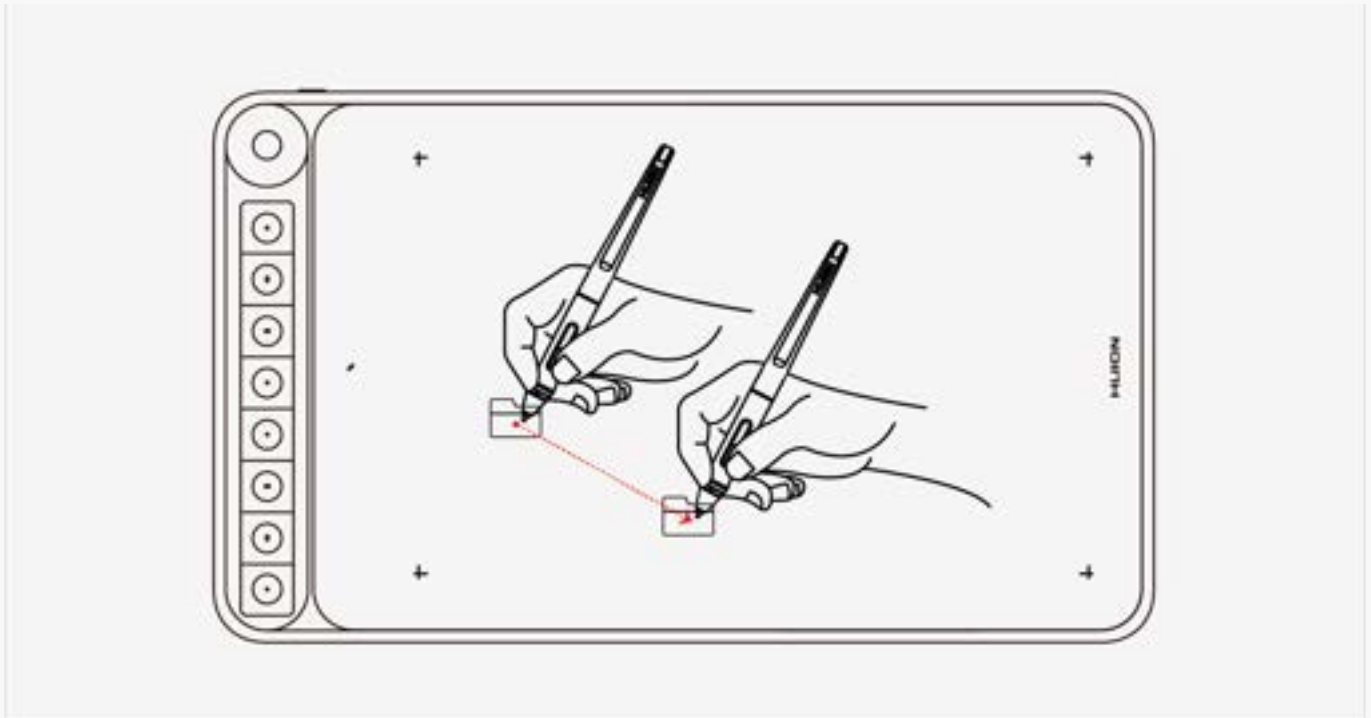

Use the side buttons

The buttons on the pen can be set to two different customizable functions. You can use the buttons whenever the pen tip is within 10mm of the tablet active area. You do not have to touch the pen tip to the tablet in order to use the switch.

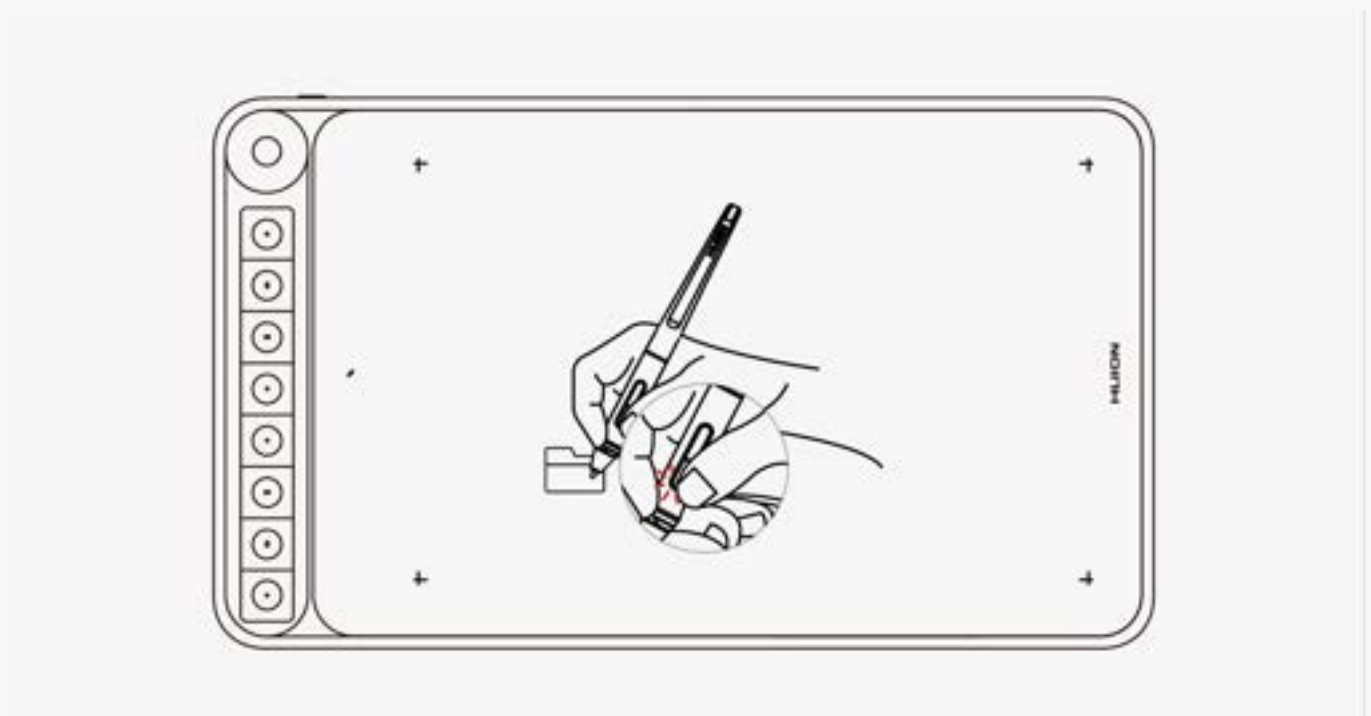

Pen Nib Replacement

The nib will be wear off after using for a long time, then you need to replace a new nib.

1. Anticlockwise rotate the pen holder to open the cover, take a new nib out.
2. Insert the pen nib into the hole on the bottom of the holder and tilt the pen to pull out the old nib.
3. Insert the new nib straight into the the pen and push the nib slowly and firmly until it stops.



Specifications

Here are the product specifications for you to learn more about the Tablet. If you have any questions, please feel free to contact us.

The following data will vary in different usage environments and are for reference only.

Appearance

Color:	Black
Dimension:	375.5 × 220.4 × 8mm
Workspace:	266.7 x 166.7mm
Net Weight:	666g
Interface:	USB-C

Technical Specifications

Digital Pen:	PW500
Pen Technology:	Battery-Free Electromagnetic

Resonance

Pen Resolution:	5080 LPI
Pressure Sensitivity:	8192 Levels
Tilt Support:	±60°
Sensing Height:	10mm
Report Rate:	> 233PPS
Accuracy:	±0.3mm
Press Keys:	8 Programmable Press Keys +Dial

Connection

Automatic Sleep:	15mins
Wireless Connectivity:	USB 2.4 G
Communication Distance:	5-10m (as per surroundings
Charge Time:	about 1.2 hours
Battery Life:	about 20 hours
Battery Capacity:	1100mAh

OS Compatibility

Windows 7 or later
macOS 10.12 or later
Android 6.0 or later

Troubleshooting Solutions

There is no pressure in the graphics software but the cursor moves.

You may have installed other tablet drivers or opened the drawing software when installing the driver. Please uninstall all drivers and close the drawing software, then reinstall the Huion

driver. It's better to restart your computer after finishing the installation.

The pen does not work.

1. Make sure you are using the pen that originally came with your tablet.
2. Make sure you installed the driver correctly.

Press Keys does not work.

1. Make sure the Press Keys function were enabled in the driver.
2. Make sure you have correctly defined the Press Keys.
3. Check if the press lock switch is on the unlock position.

The side button of the pen doesn't work.

When pressing the side button, please make sure that the nib didn't touch the tablet surface and the distance between the nib and surface is within 10mm.

How to manually set your tablet to phone mode?

[Click Here](#)

If your problem is not resolved, please click [FAQs](#) to view more troubleshooting methods or email us (service@huion.com).

Safety Warnings and Information

All information regarding the operation of the device can be found in the user manual. Before you begin using it, please familiarize yourself with its contents and adhere to the guidelines provided.

Additionally, review the following information before use:

Usage Warnings

1. Safety Considerations for Using a Graphic Tablet:

Graphic tablets are precision devices; they should not be subjected to strong shocks, pressure, or contact with liquids. Use them only on a stable work surface.

Always use the device in accordance with the manufacturer's recommendations – do not open the casing or modify the electronic components.

2. Stylus and Working Surface:

Use only compatible styluses. Excessive pressure or the use of sharp objects may damage the surface of the tablet.

Store the stylus in a secure location, away from children, due to the risk of swallowing small parts or injury from the tip.

3. Power and Battery (if applicable):

Charge the graphic tablet (if it is battery-powered) only with original or certified chargers. Do not leave the device connected to power without supervision for an extended period.

Avoid using the device while it is charging to prevent overheating.

4. Working at the computer:

When using the graphic tablet for extended periods, take regular breaks to minimize the risk of strain on your wrists, arms, or eyes. Position the tablet and computer screen ergonomically.

Information on Proper Usage

1. Installation and Configuration:

Before first use, install the latest drivers and software recommended by the manufacturer. Ensure that the computer's operating system meets the device's technical requirements.

2. Software and Updates:

Regularly update the device's software and firmware to ensure stability, security, and full functionality of the tablet.

3. Device Compatibility:

Use the tablet with computers that meet the technical requirements specified by the manufacturer. Using incompatible systems may result in errors during the device's operation.

4. Access for Children:

Graphic tablets are not intended for children under the age of 14. Supervision of device use by minors is essential, particularly in the presence of a power supply or small components.

Additional Precautions

1. Storage and Maintenance:

The tablet should be stored in a dry and clean location, away from sources of heat and moisture. Regularly clean the working surface with a soft, dry cloth; do not use chemical cleaners.

If the device will not be used for an extended period, disconnect it from the computer and store it in the original packaging or a protective case.

2. Disposal:

Used graphic tablets, styluses, and batteries (if applicable) must be disposed of in accordance with local electronic waste regulations. Do not dispose of electronic devices in municipal waste.

3. Environmental Protection and Energy Efficiency:

Disconnect the tablet from the power source and the computer when not in use. Make use of the energy-saving modes provided by the device's software.