

USER MANUAL

HUION

Graphic Tablet

Kamvas 13


GS1331

Contents

Product Overview	2
Display Introduction	2
Product and Accessories	2
Product Connection	5
Driver and Setting	7
Install Driver	7
Driver Interface Preview	9
Pen Display Setting	11
Driver Setting	19
Digital Pen Setting	24
Digital Pen Basic Operation	29
Specifications	33
Troubleshooting Solutions	35

Product Overview

Display Introduction

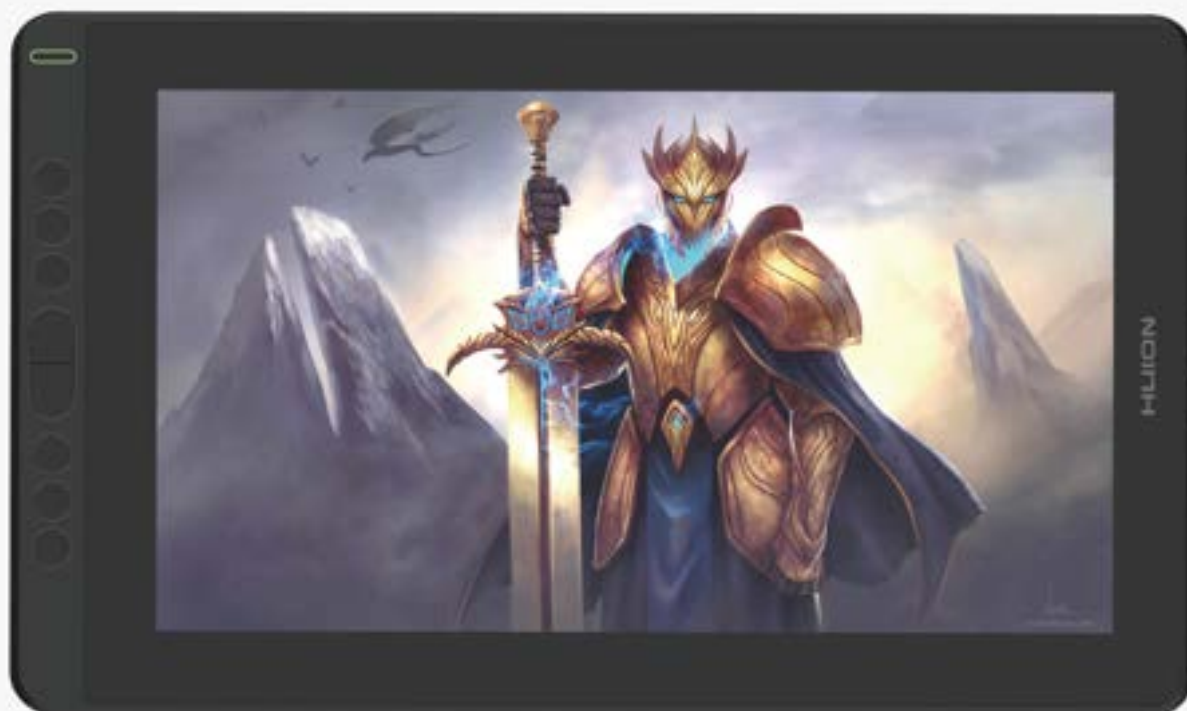


Thanks for choosing HUIION KAMVAS 13 creative pen display. This is a new generation of professional drawing display, which can greatly improve your work efficiency of painting and creation, and full of fun. You can freely painting and writing, depicting different lines and colors, just as the pen writes on the paper, which brings you a real shock experience. To give you a better understanding and using of your tablet, please read this user manual carefully. The user manual only shows the information under Windows, unless otherwise specified, this information applies to both Windows and Mac systems.

Note: The pictures in the User Manual are for reference only.

Product and Accessories

Product Overview

Please see the detailed product introduction.

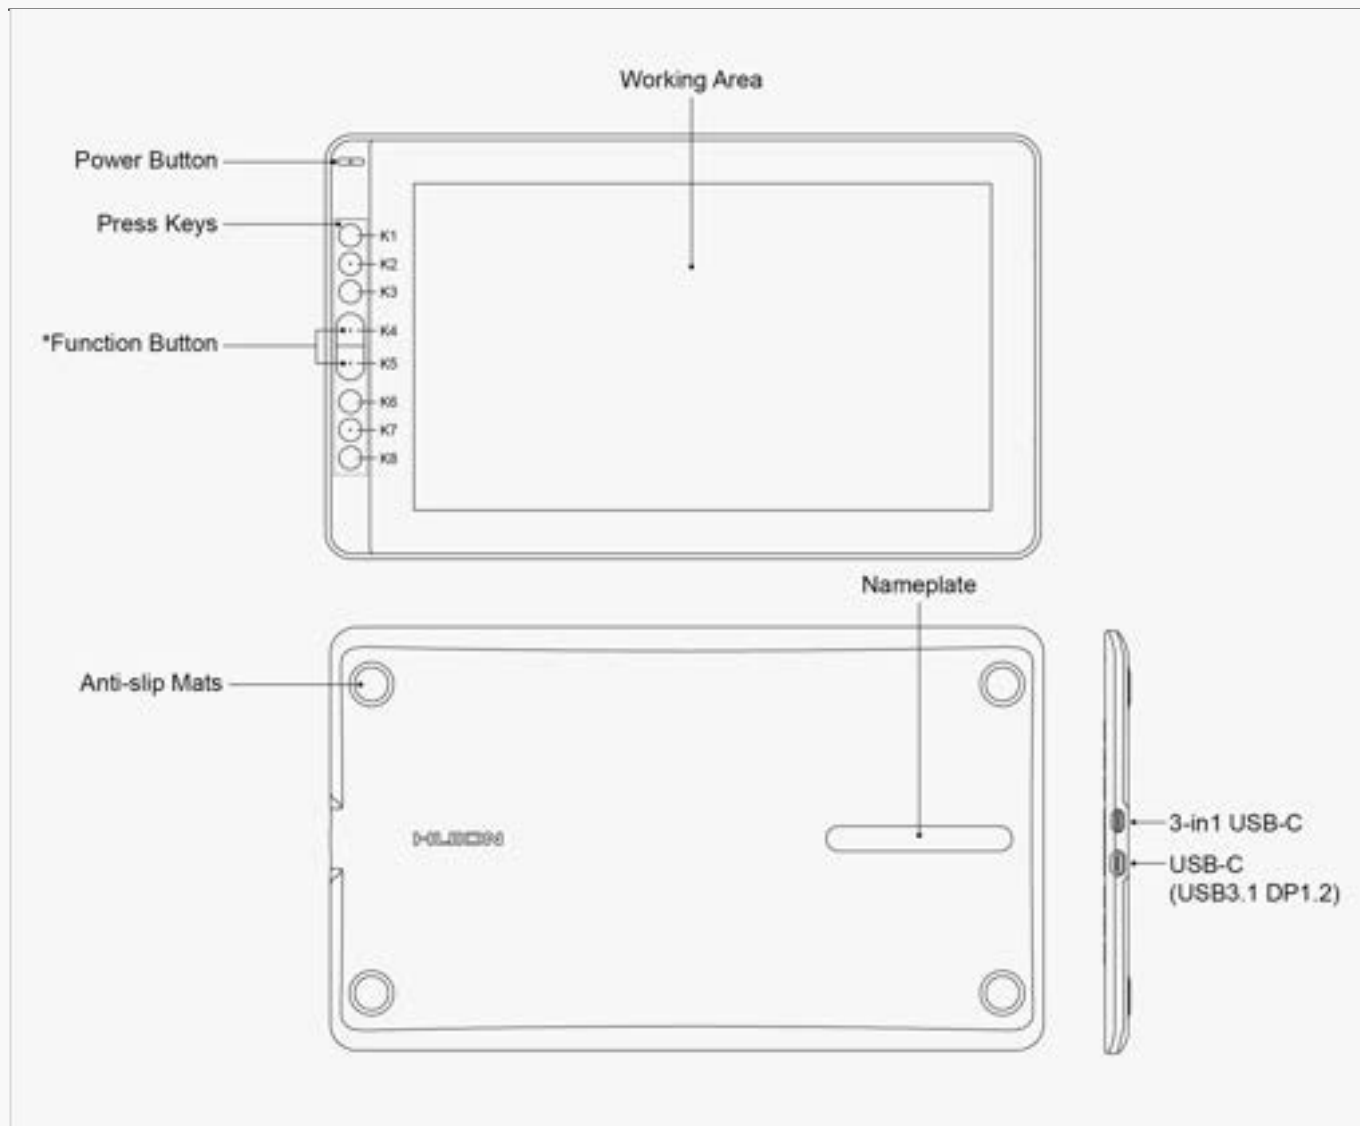

*Function Button: Press K4 & K5 around three seconds to open the OSD menu, meanwhile the indicator will flash green. The function of K2 K3 K6 K7 will become OSD function.

K2 [AUTO]: Before entering menu, its function is "auto adjustment".
After entering menu, its function is "back to previous menu".

K3 [MENU]: Press to call up the menu, after entering menu, its function is "confirm".

K7 [-]: After entering menu, its function is "down/left/decrease".


K6 [+]: After entering menu, its function is "up/right/increase".

*Press K4 & K5 again for around three seconds until the OSD menu disappears, the function of K2 K3 K6 K7 will become shortcuts function again.

Accessories


After unboxing your package, make sure that you have the following items:

Pen Display*1
Battery-free Pen*1
Pen Holder*1
Replacement Nibs(Inside the Pen Holder)*8
3-in-1 Cable*1
USB Extension Cable*1
Quick Start Guide*1
Cleaning Cloth*1
Warranty Card*1

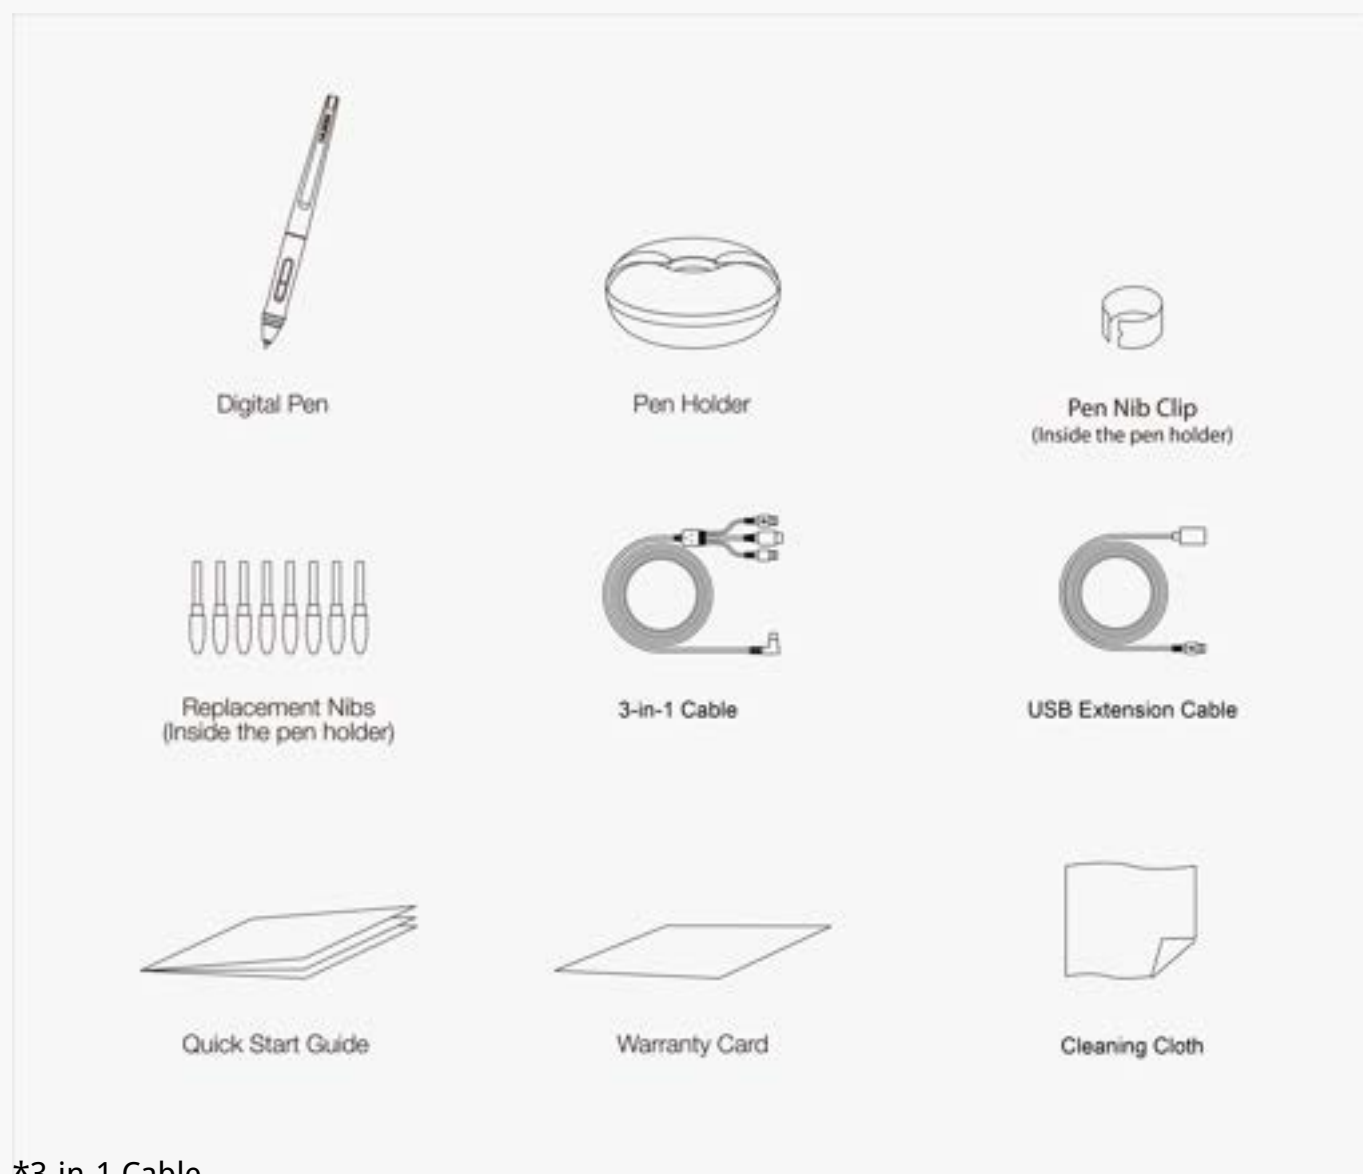


*3-in-1 Cable

1. USB(Data) 2. HDMI 3. USB(Power) 4. Type-C

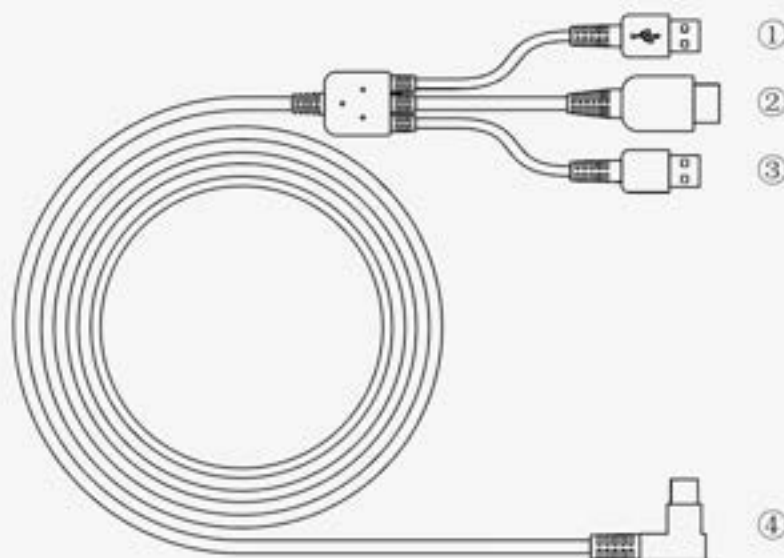

*Adjustable Stand(Optional)

We designed this ergonomic adjustable stand specially for your KAMVAS display, you can adjust the angle of the display according to your usage habit, and make you feel more comfortable when painting and creating.

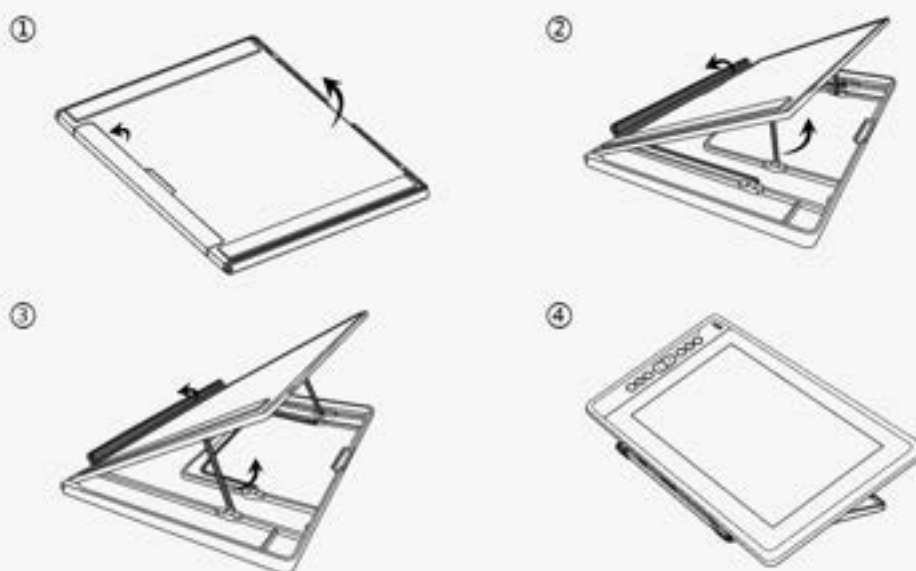

Product Connection

The display supports the connection of a computer and Android device, please refer to the


following connection method.

[Watch the Video](#)

3-in-1 Type-C Cable

Connect the pen display to your computer with 3-in-1 Cable.


Generally the device can be powered on when the black USB-A cable is connected to your computer. A flashing screen of the device may indicate a low battery, in which case you are suggested to connect the red colored USB-A cable to another USB interface on your computer or the power adaptor. The power adaptor is not included in the package and requires extra cost. Power adaptor of your mobile phone is also compatible.

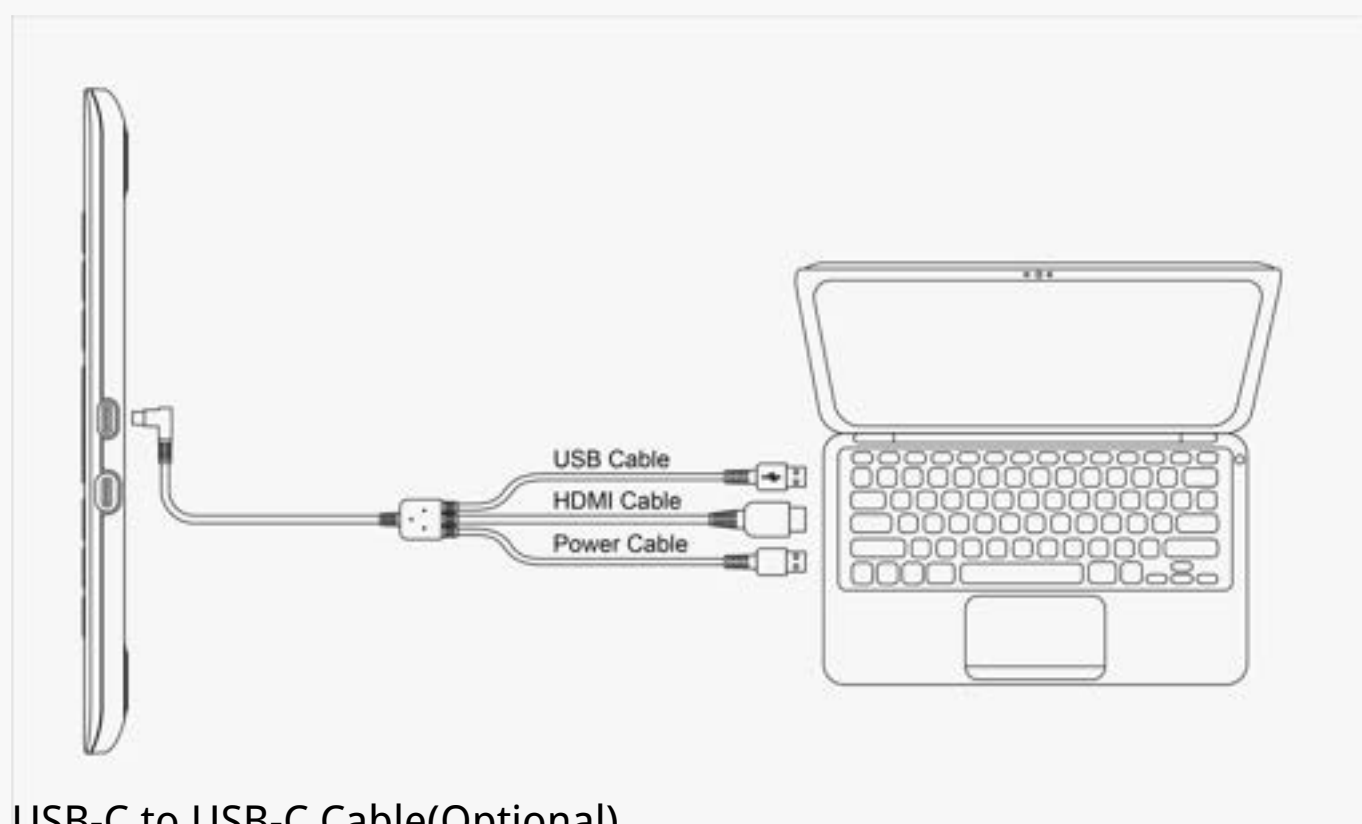

USB-C to USB-C Cable(Optional)

Connect the display to your computer or Android device with USB-C to USB-C cable:

USB-C to USB-C cable is not included in the package and requires extra cost. You can buy it in the [Store](#).

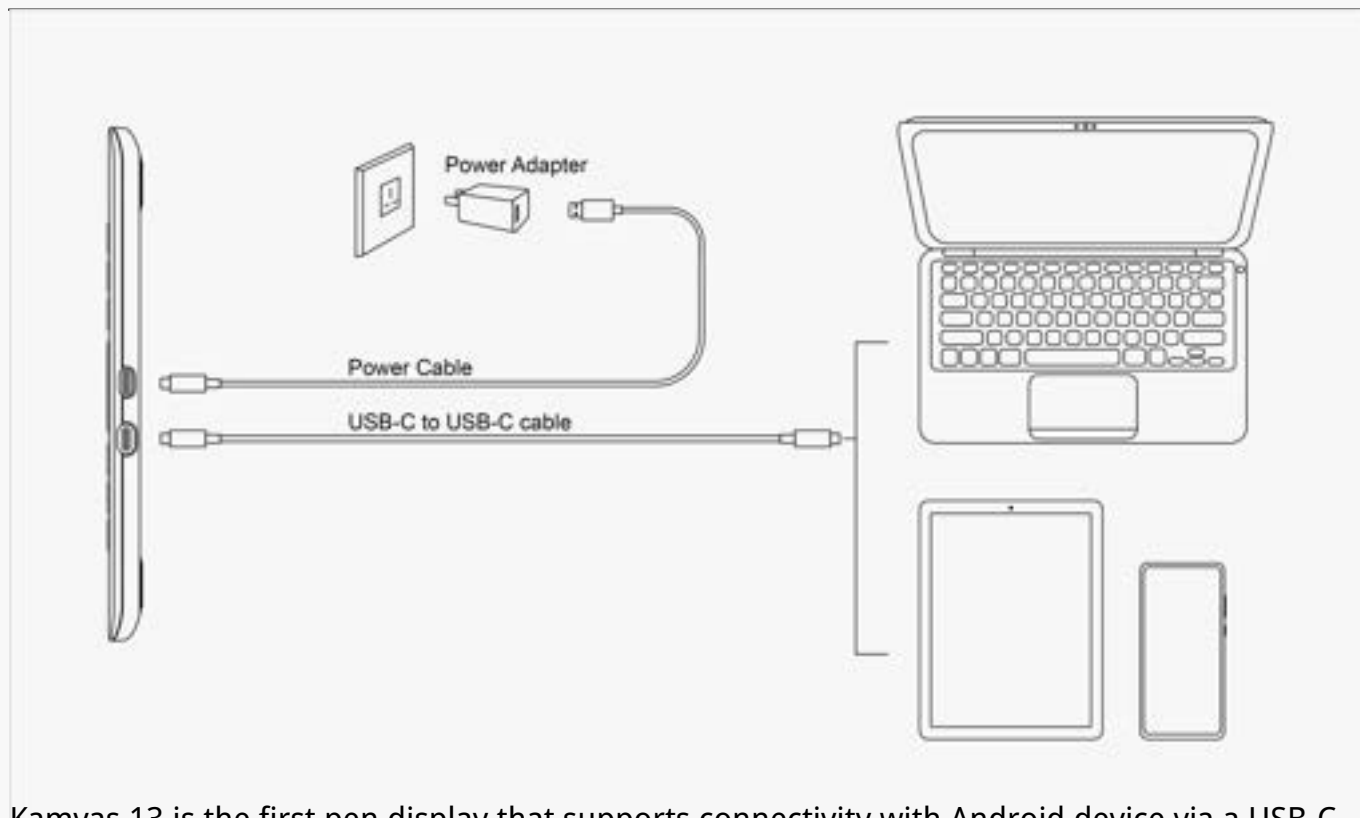

Kamvas 13 is the first pen display that supports connectivity with Android device via a USB-C to USB-C cable.

*USB-C on device should at least support USB3.1 GEN1 data transfer protocol and DP 1.2.

*Extra power supply is needed under connection with Android device.

[Learn More](#)



List of Compatible Android Devices

• Huawei P20/P20Pro/P20RS	• Samsung Galaxy Note 10/10+/10+ 5G
• Huawei P30/P30Pro	• Samsung Galaxy S8/S8+
• Huawei P40/P40 Pro/P40 Pro Plus	• Samsung Galaxy S9/S9+
• Huawei Mate 10/Mate10 Pro	• Samsung Galaxy S10/S10+/S10e
• Huawei Mate 20/Mate20 Pro/Mate20 X	• Galaxy S20/S20+/S20 Ultra
• Huawei Mate 30/30Pro	• Galaxy Fold
• HONOR Note 10	• Galaxy A90 5G
• HONOR V20	• Samsung Galaxy Tab S4
• HONOR 30Pro+	• Samsung Galaxy Tab S5e
• Samsung Galaxy Note 8	• Samsung Galaxy Tab S6
• Samsung Galaxy Note 9	



Driver and Setting

Install Driver


Please download the driver from our website: [Driver-Kamvas 13](#)


Note:

1. Before installing driver, please close all graphic software and antivirus program.
2. If you have installed other pen tablet driver, please uninstall it before you install this driver.
3. Please make sure your computer OS are as following: Windows 7 or later, macOS 10.12 or later.
4. Run the tablet driver program and complete the installation according to the instruction.


After the download is successful, double-click to open the driver.

If the connection fails, please reconnect the computer to the device, or restart the driver or computer.

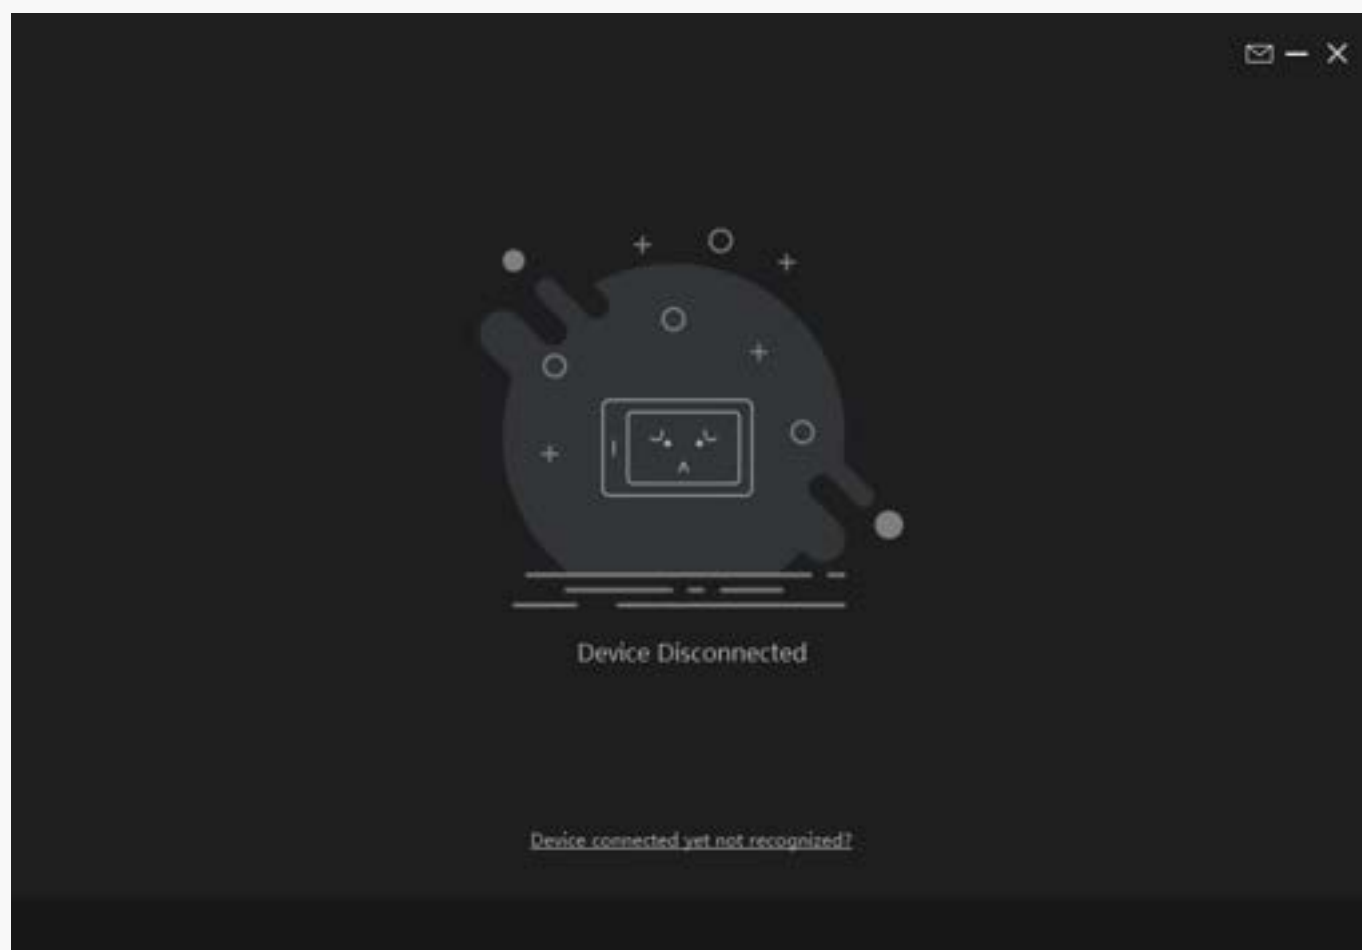

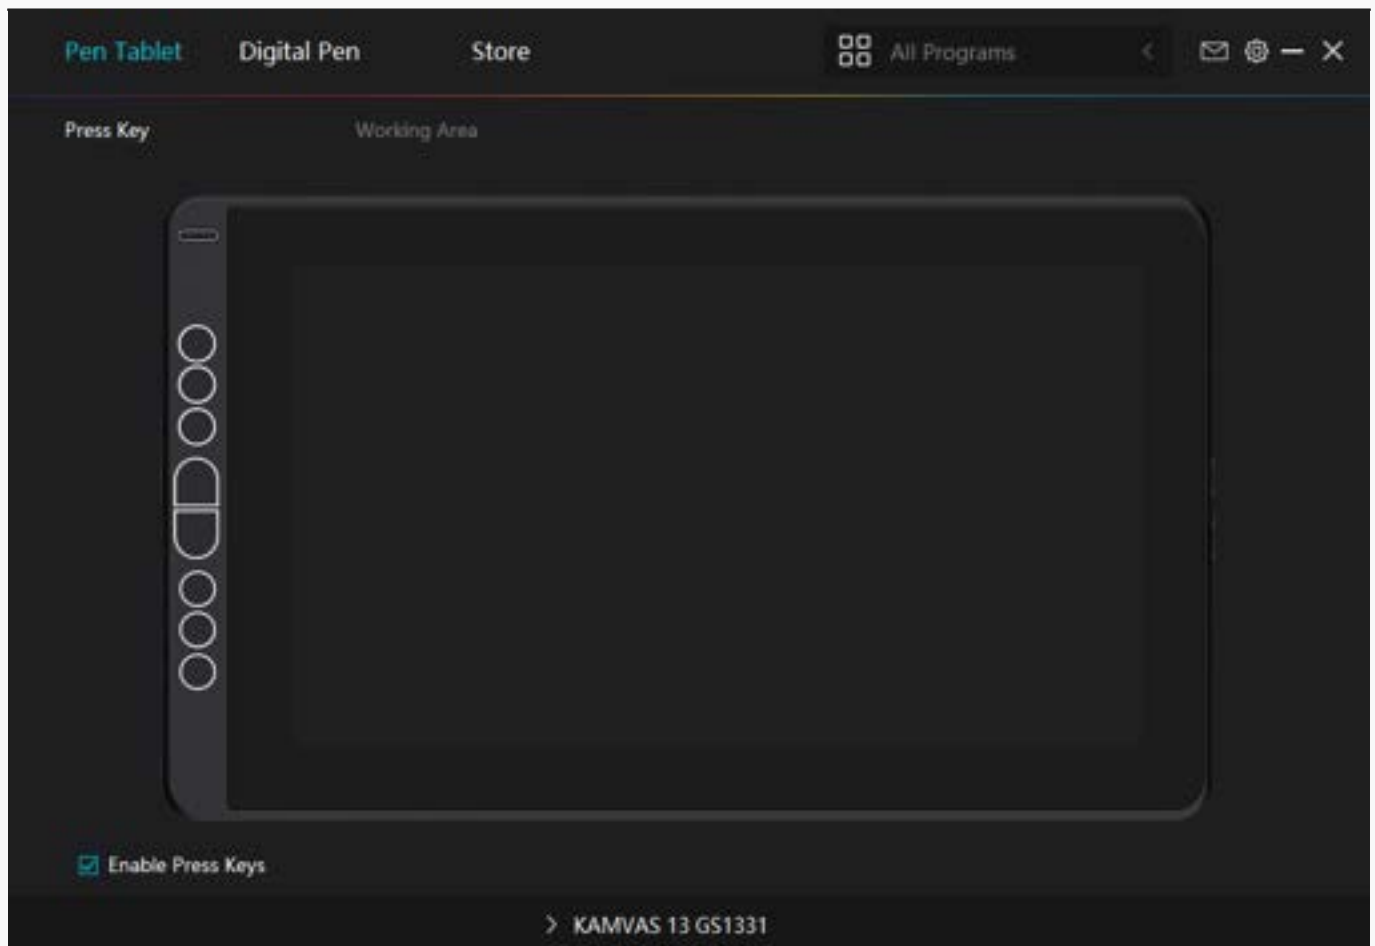

Driver Interface Preview

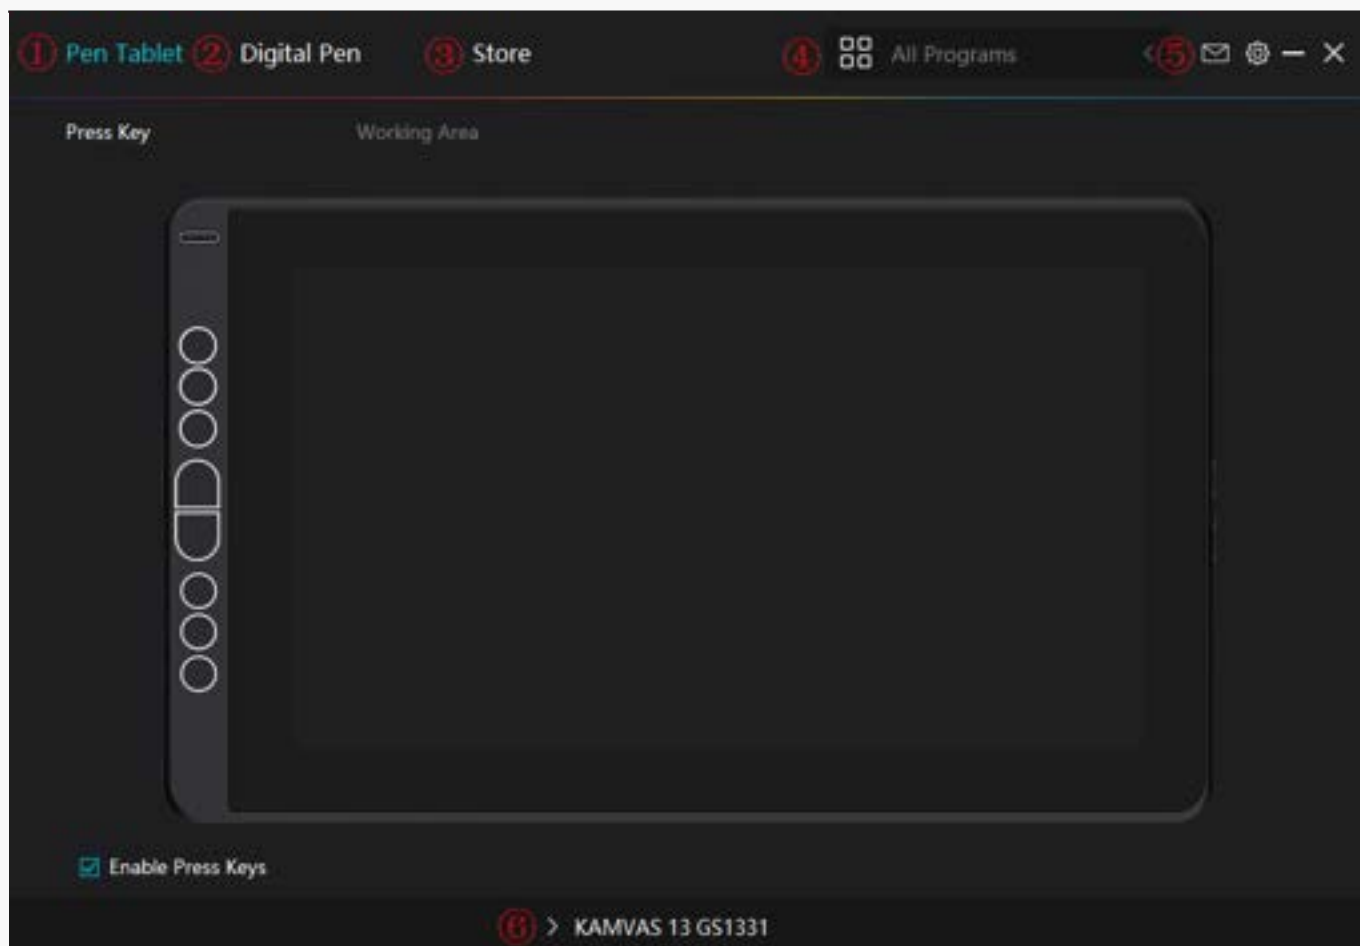

1. Pen Tablet

Pen Tablet function setting interface, the users can set the device function on this interface, such as Press Key, Working Area.

[See Section](#)

2. Digital Pen

The users can set the Pen function on this interface. About Press Key, Mode selection, Pressure Sensitivity Adjustment and Pressure Test.

[See Section](#)

3. Store

Huion Store, where you can get the latest information about the product such as its FAQ or sales promotion. Additionally, you can also purchase other products or accessories on Huion Store.

4. Add Programs

You can customize different functions on the current device for different programs.

When select All programs, the setting of the device is valid for every program.

By clicking Add a Program from the drop-down list, you can set the functions for a specific program and hence have unique settings for different programs. After that, when launching a specific program, the Driver will automatically recognize it and the setting features will change to its corresponding one.

5. Setting

The users can set the Driver function on this interface. About Device Information, Backup Setting, General Setting and Driver Update.

[See Section](#)

6. Switch between Devices

Driver can support the connection to two digital drawing devices at the same time. When these devices are sharing the same Driver with the current device, users can customize the settings of the devices by switching the Driver interface to the corresponding one.


Pen Display Setting

Press Key

You can customize the functions of these buttons according to your own habits, and you can uncheck "Enable press keys" in the lower left corner to turn off the button function.


Place the cursor on a key to check its default value. Click the key for a pop-up dialog box and then set the function.

You can enter a name for the keystroke, then select the property of the keystroke and customize the function.

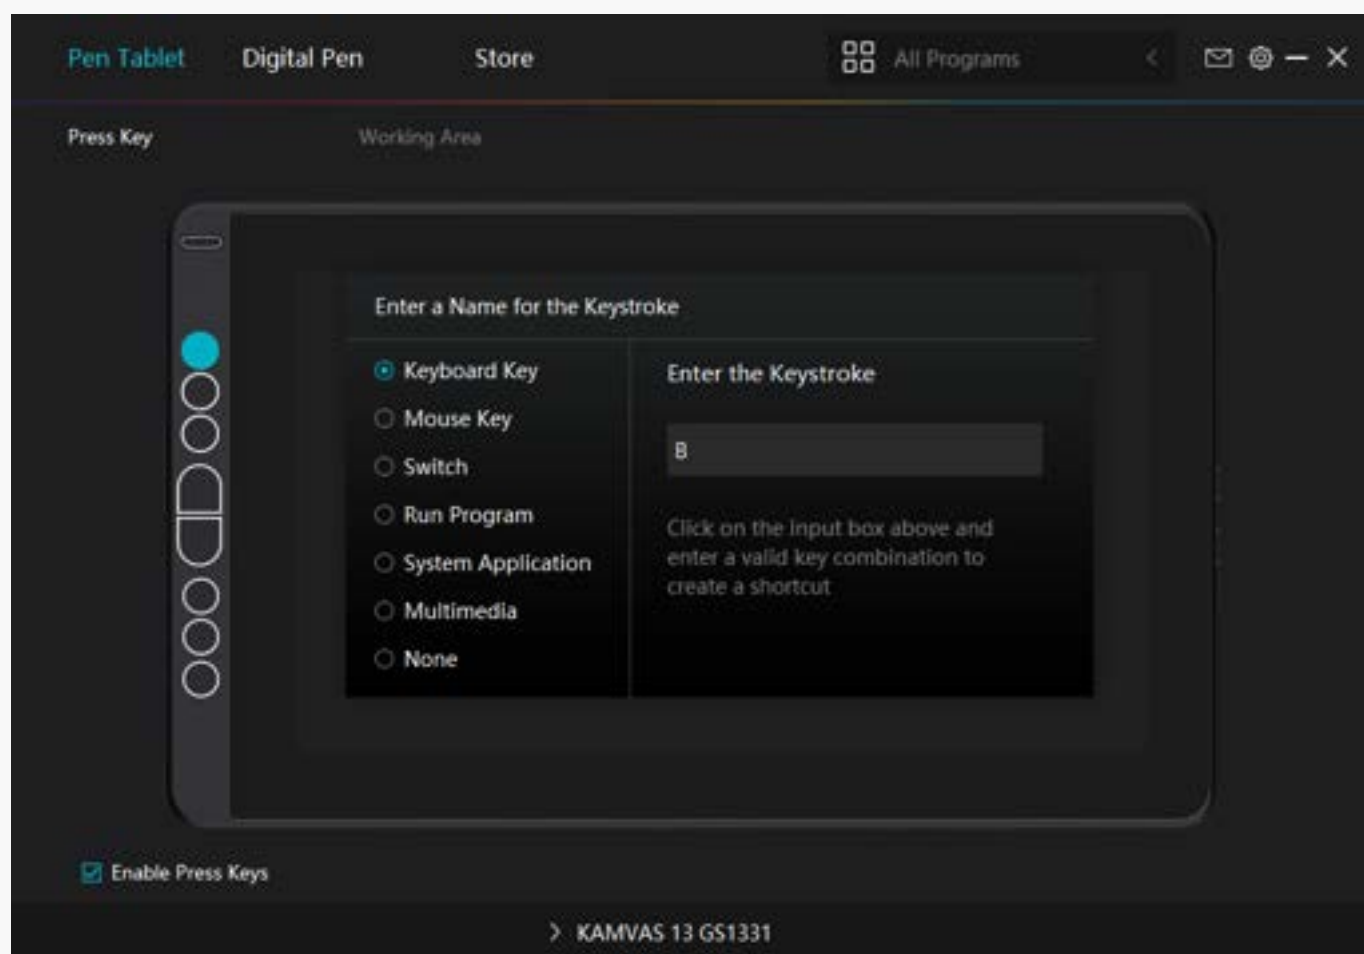

1. Keyboard Key

Click on the input box above and enter a valid key combination to create a shortcut. For example "Ctrl+A", "Ctrl+Z", and so on.

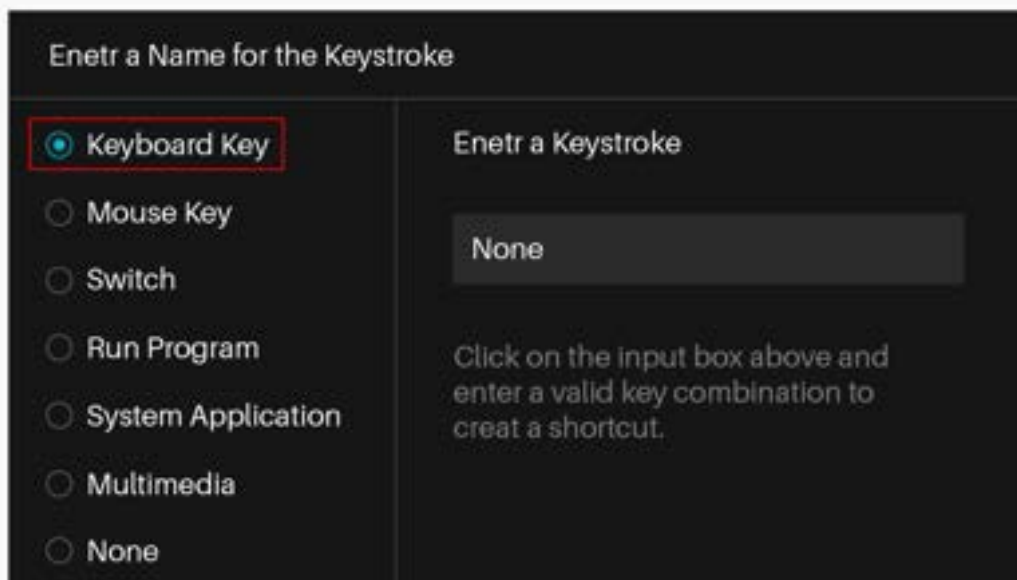

Enetr a Name for the Keystroke

☒ Keyboard Key

☐ Mouse Key

☐ Switch

☐ Run Program

☐ System Application

☐ Multimedia

☐ None

Enetr a Keystroke

None

Click on the input box above and enter a valid key combination to creat a shortcut.


2. Mouse Key

Select the function of a Mouse or Wheel. Please see the picture below for detailed functions.

Mouse: Left Button, Right Button, Middle Button.

Wheel: Wheel Forward, Wheel Backward.

Double-Left Click.

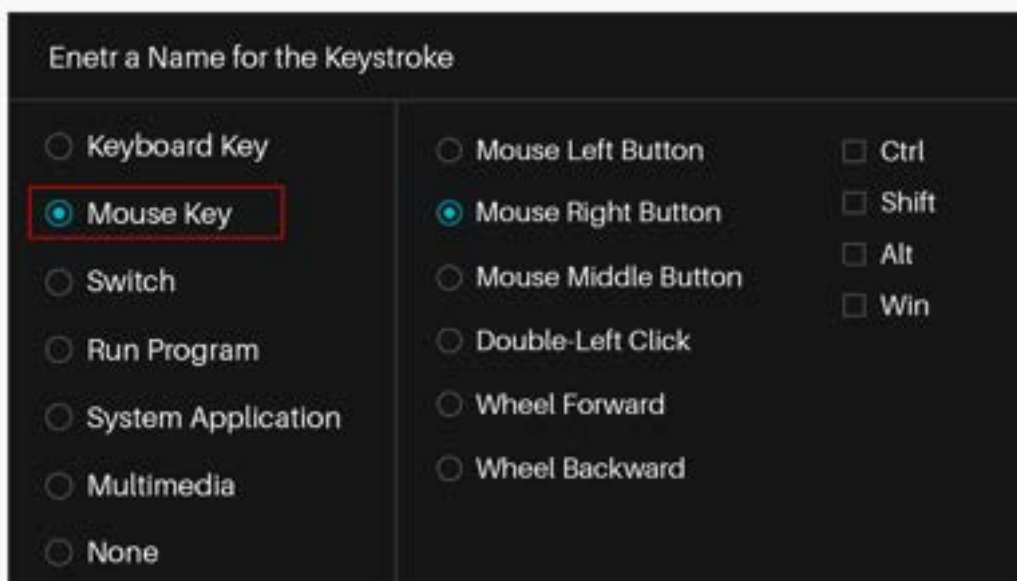

Enetr a Name for the Keystroke

☐ Keyboard Key

☒ Mouse Key

☐ Switch

☐ Run Program

☐ System Application

☐ Multimedia

☐ None

☐ Mouse Left Button

☒ Mouse Right Button

☐ Mouse Middle Button

☐ Double-Left Click

☐ Wheel Forward

☐ Wheel Backward

☐ Ctrl

☐ Shift

☐ Alt

☐ Win

Enetr a Keystroke


None

Click on the input box above and enter a valid key combination to creat a shortcut.

3. Switch

Select Switch Screen or Switch Brush.

Note: Some software does not support the "Switch Brush" function.

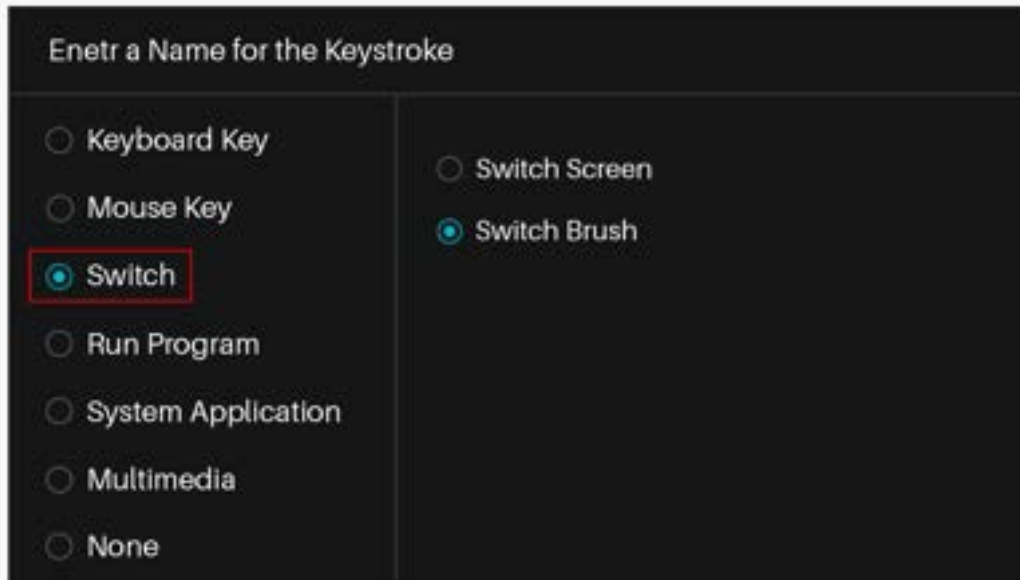

4. Run Program

Browse and select a program that you want to launch quickly. After the setting, you can launch that program with just a single press.

Enetr a Name for the Keystroke

☐ Keyboard Key ☐ Mouse Key ☐ Switch ☒ Run Program ☐ System Application ☐ Multimedia ☐ None	Select a Program Program Path Click on the "Browse" to select a file. Browse
---	--

5. System Application


The table below are the functions of Windows and Mac Systems that can be customized on the Keys.

Enetr a Name for the Keystroke

☐ Keyboard Key ☐ Mouse Key ☐ Switch ☐ Run Program ☒ System Application ☐ Multimedia ☐ None	☐ Lock the Screen ☒ Sleep ☐ Power Off ☐ Show/Hide Desktop Icon ☐ Task View ☐ Start Menu
---	---

6. Multimedia

To realize the functions such as previous song, next song, play/pause, volume up, volume down.

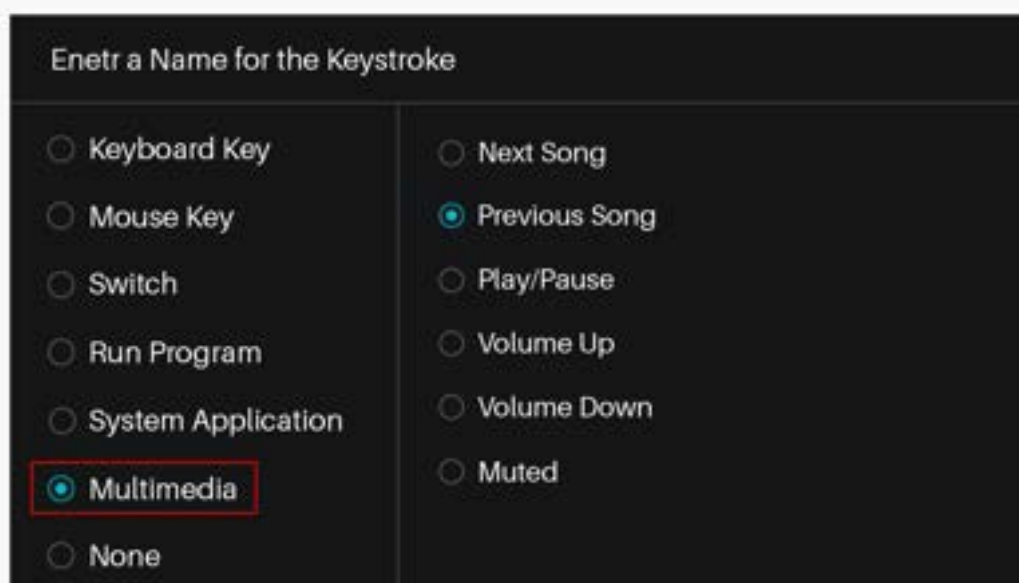

7. None

When select None, the keys will have no function.

Working Area

Select the Working Area tab to define the relationship between pen movement on the device and cursor movement on the monitor screen.

By default the entire active area of device maps to the entire monitor. If more than one monitor is in use and you are in extended mode, you need to choose the related monitor on the driver interface which you are going to map to.

If your monitors are in mirror mode (All monitors display the same content), the device maps to the entire space on each monitor and the screen cursor is displayed on each monitor simultaneously.

1. Working Area Setting

Define the device area that will be mapped to the screen area.


[1] Full Area: the entire active area of the device. This is the default setting.

[2] Screen Ratio: As a general rule, be 16:9.

[3] Customized Area:


1> Enter coordinate values.

2> Drag the corners of the foreground graphic to select the screen area.

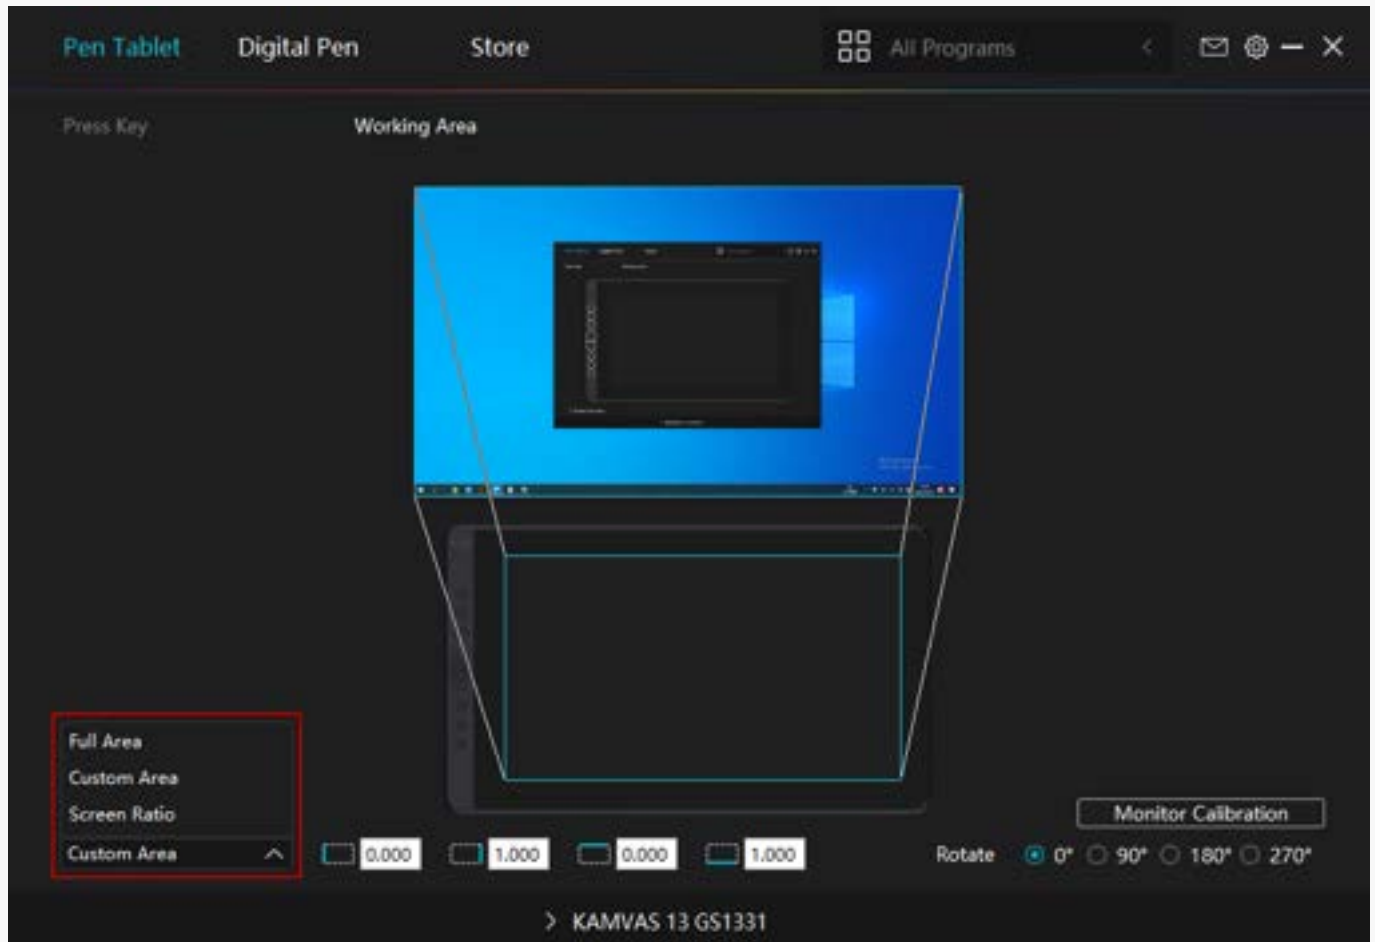


2. Rotate Working Area

By changing the direction of the device to adapt to the left and right hand operation. You can rotate the tablet by 0°, 90°, 180° or 270°.

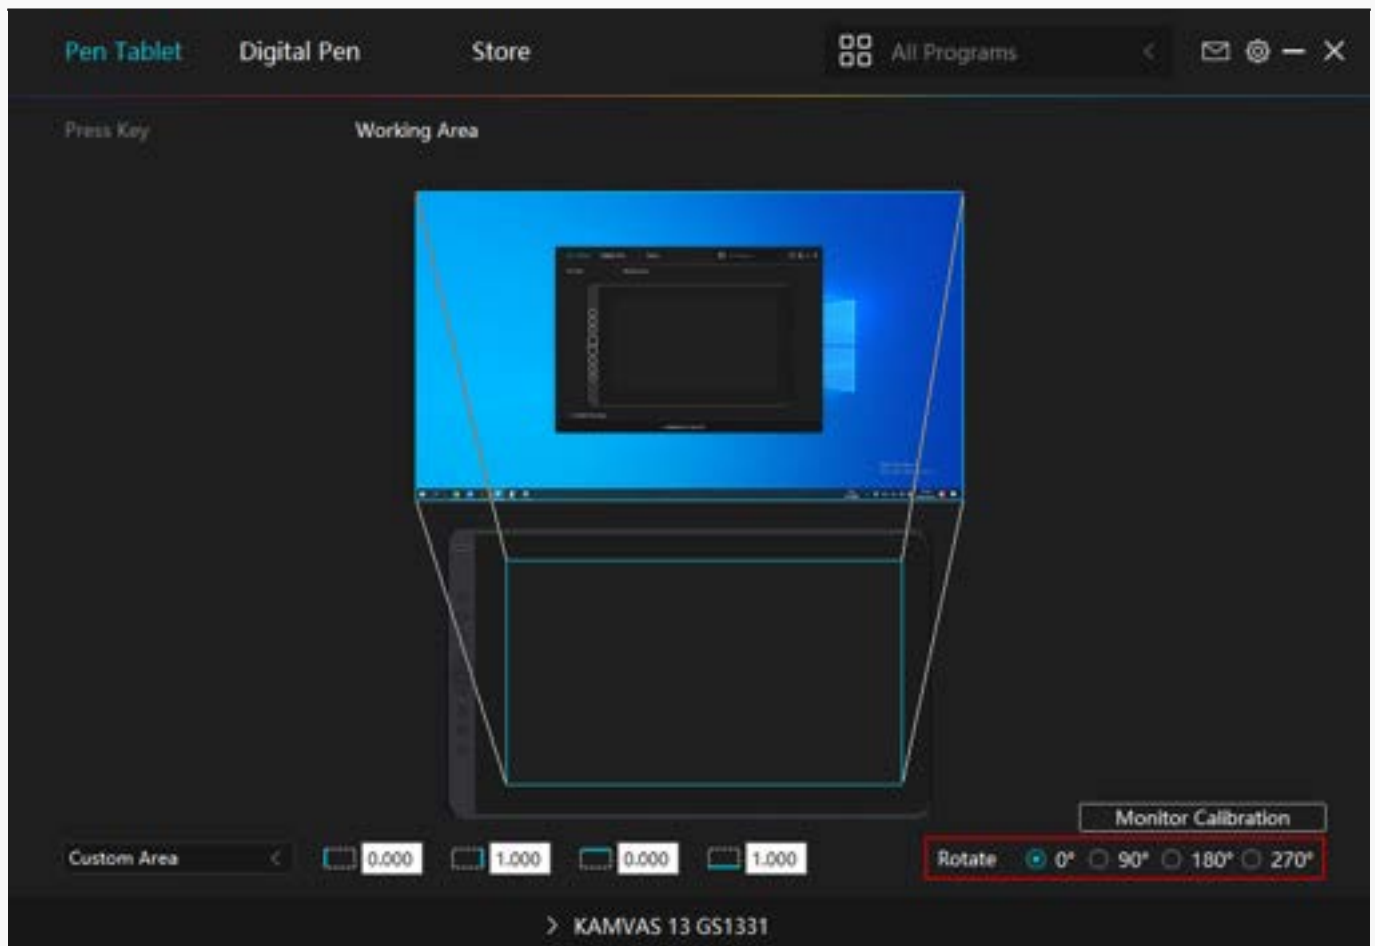

3. Monitor Calibration

Click "Cursor Calibration" to enter the calibration page and operate according to the prompts.

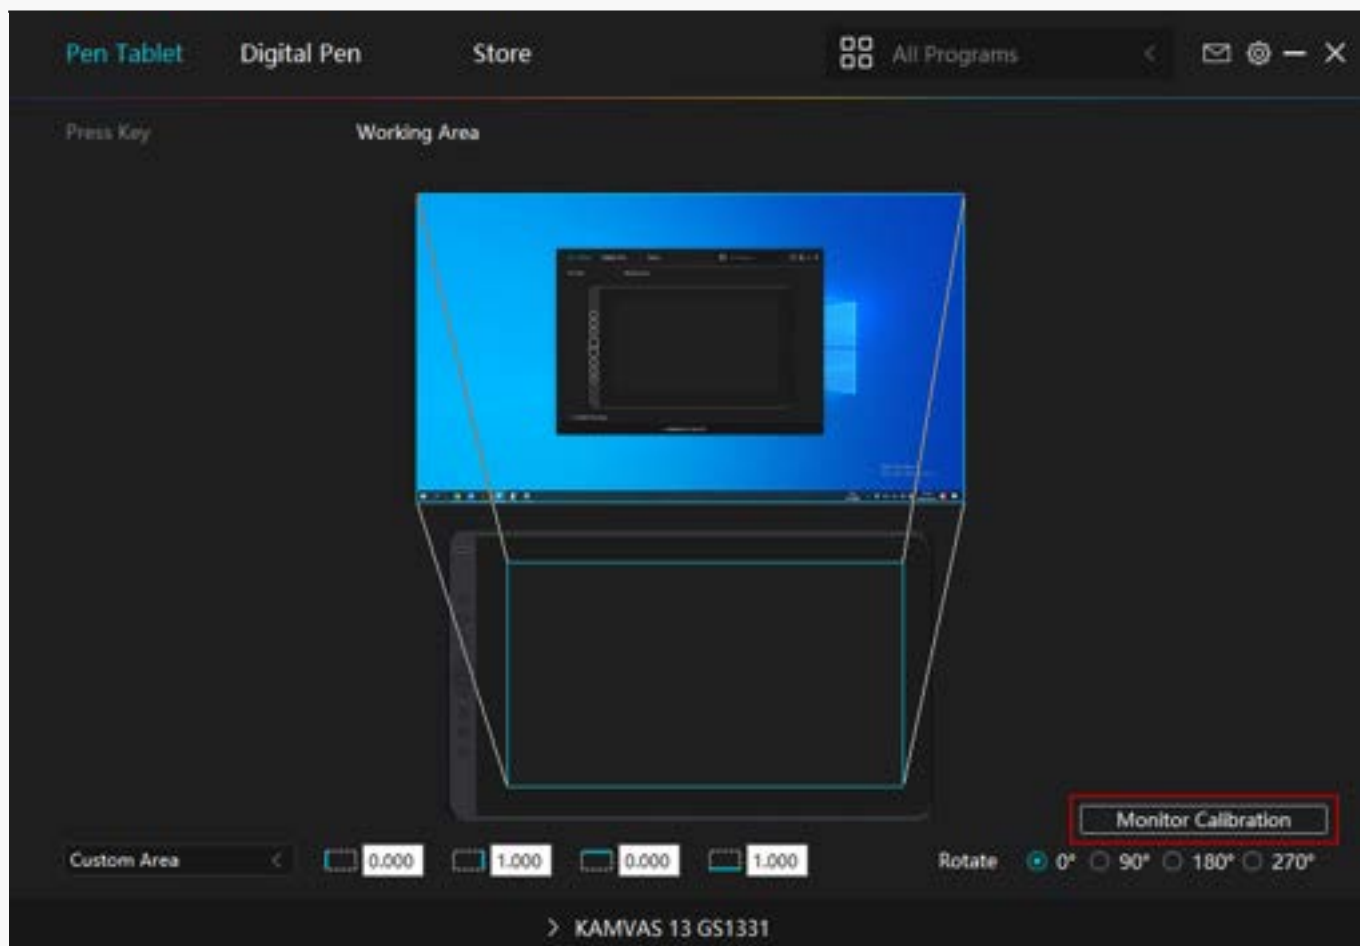


Please use the digital pen to click on the center red dot of the cross in a common pen-holding posture. You can cancel Calibration and restore default.



1. Device

You can view product information.

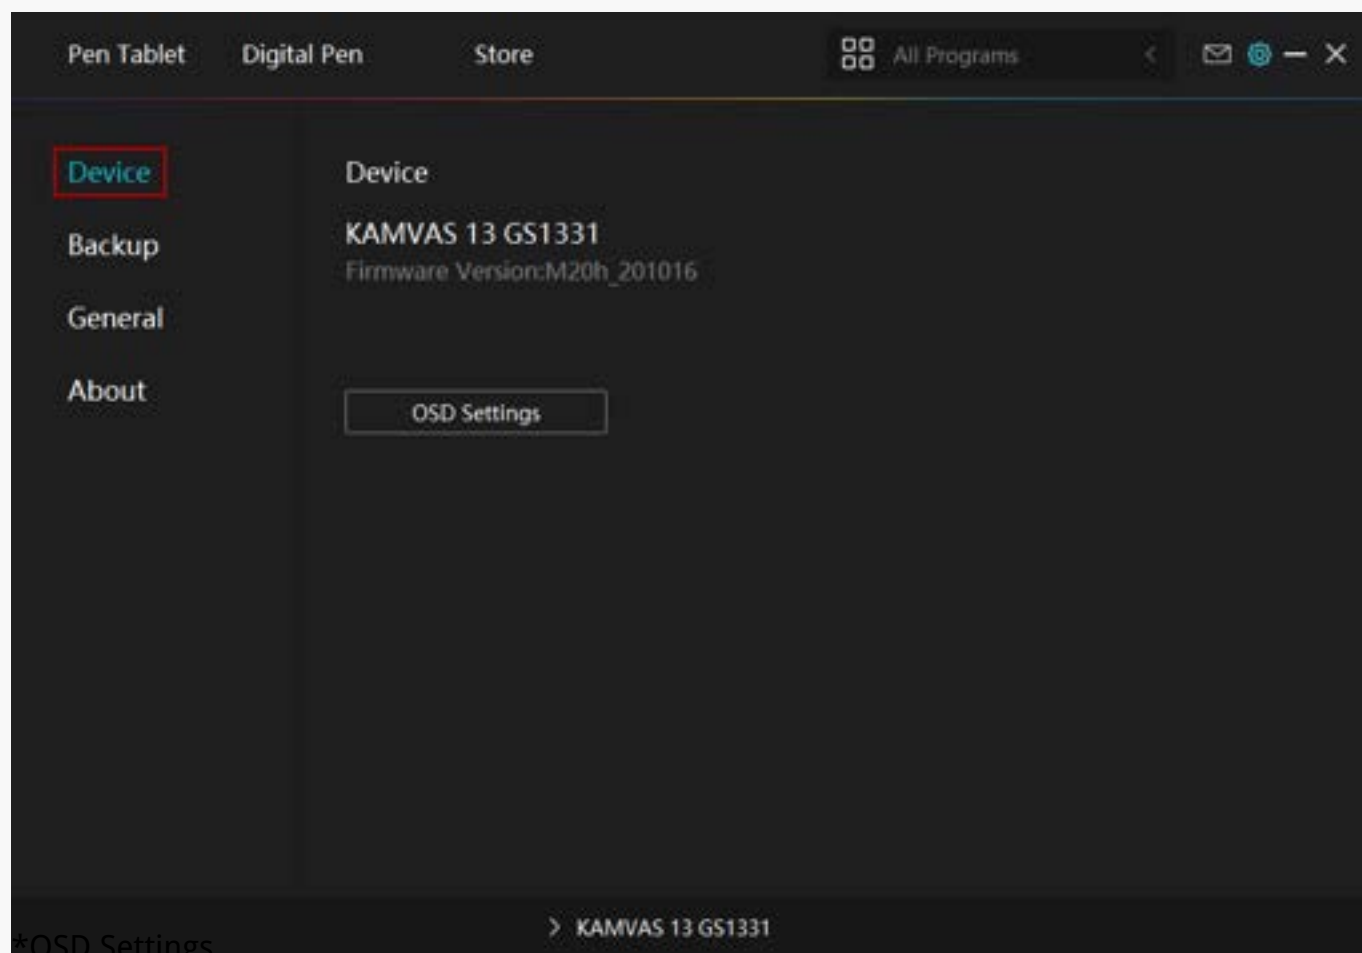


*OSD Settings

Scene Mode: You can choose the "Standard Mode", "Motion Mode", "Movie Mode" and "Gaming Mode".

Brightness: You can adjust the brightness of the screen.


Contrast Ratio: You can adjust the contrast of the screen.

Color Temperature: You can choose "6500K", "9500K", and "USER" mode. In the "USER" mode, you can customize the color temperature by adjusting the RGB value.

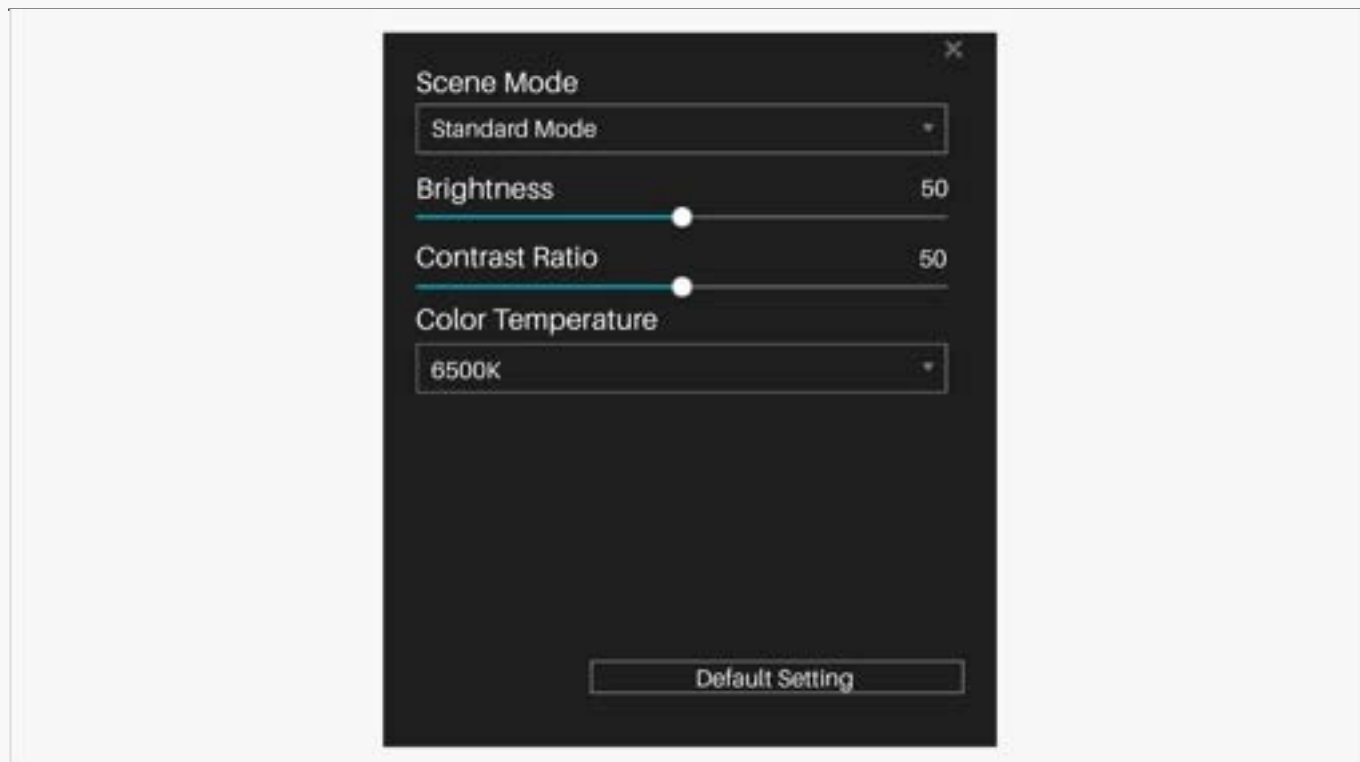

2. Backup

The Driver can import and export your custom settings, which helps to avoid repeated settings when launching a different program.

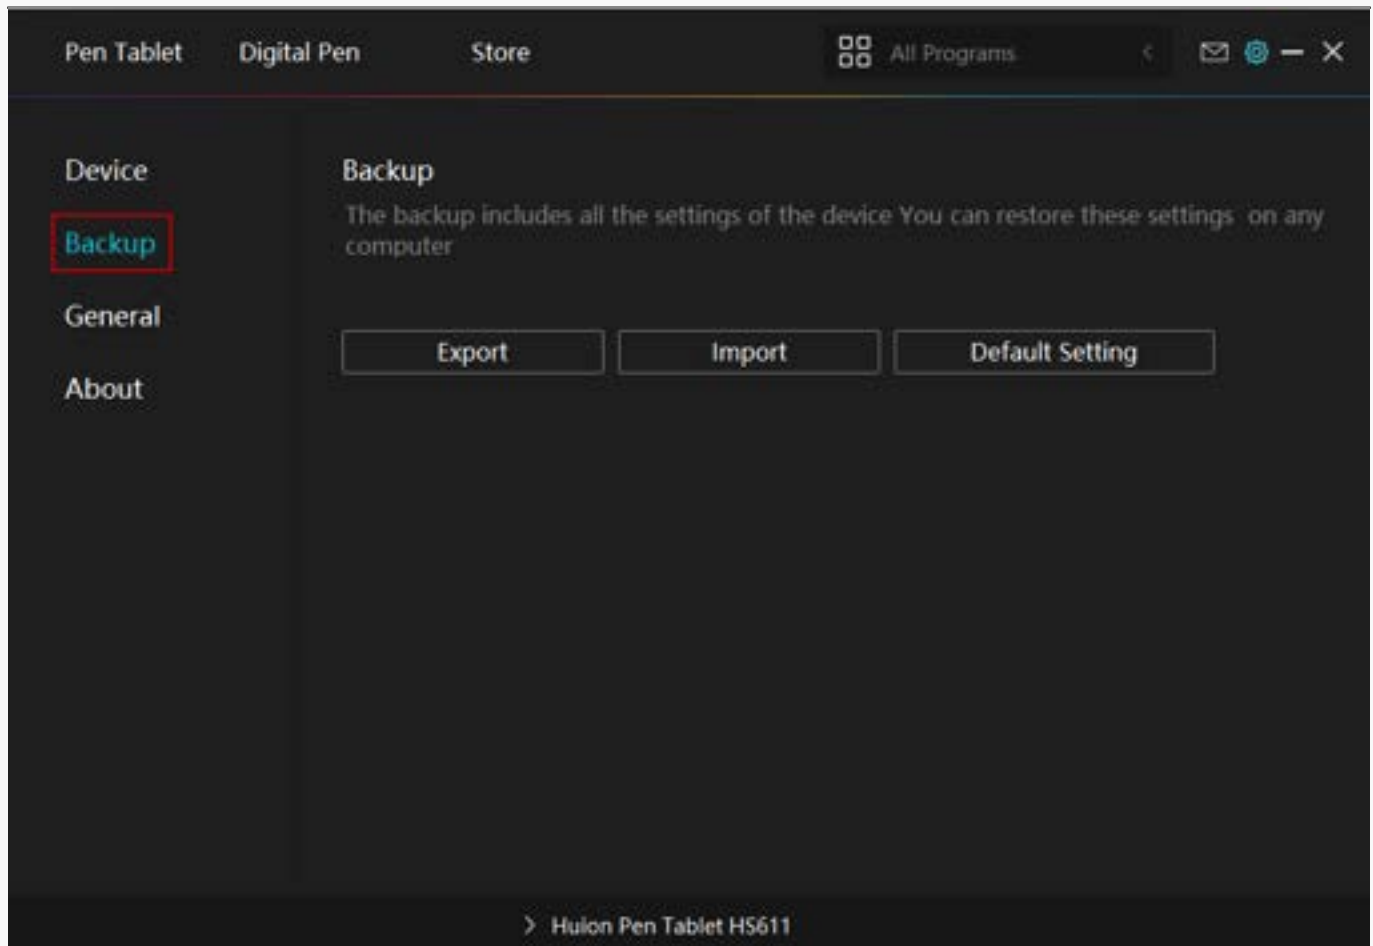


3. General Setting

[1] Language: Click the drop down menu to select a language.

[2] Color: You can select the color of the Driver interface among Dark, Blue, and Light according to your preference.


[3] Start Menu: Click to enable or disable AutoStart, New Message Alert, Automatic Updates.

[4] Hotkey: A hotkey can be used to call out the Driver interface quickly, you can set one according to your usage habits.

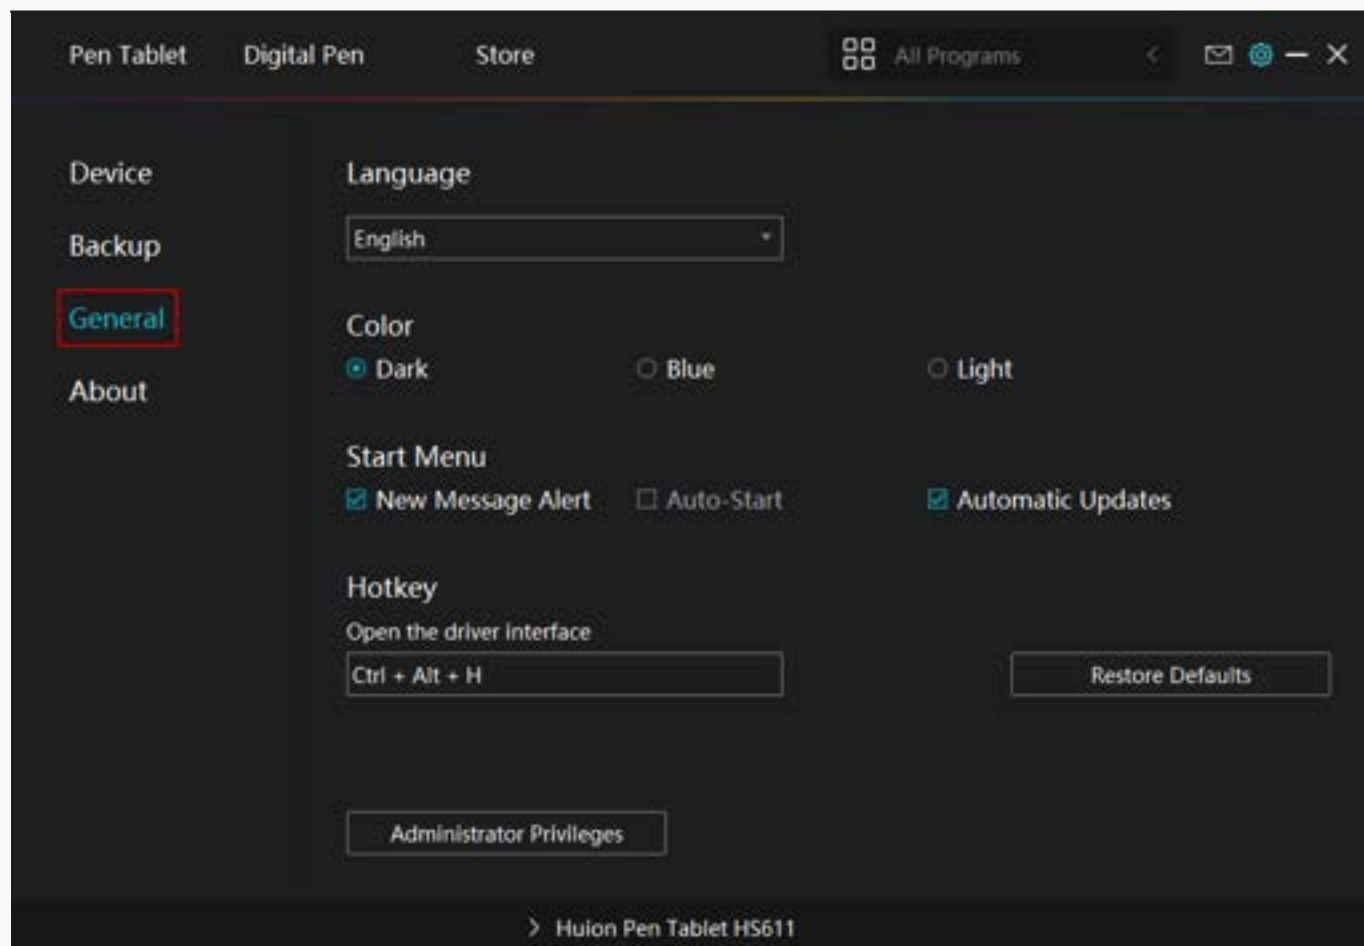

4. About

Users can check the Driver version number here. Click Check for Updates to view the latest Driver version and then follow the prompts to update the Driver if needed.

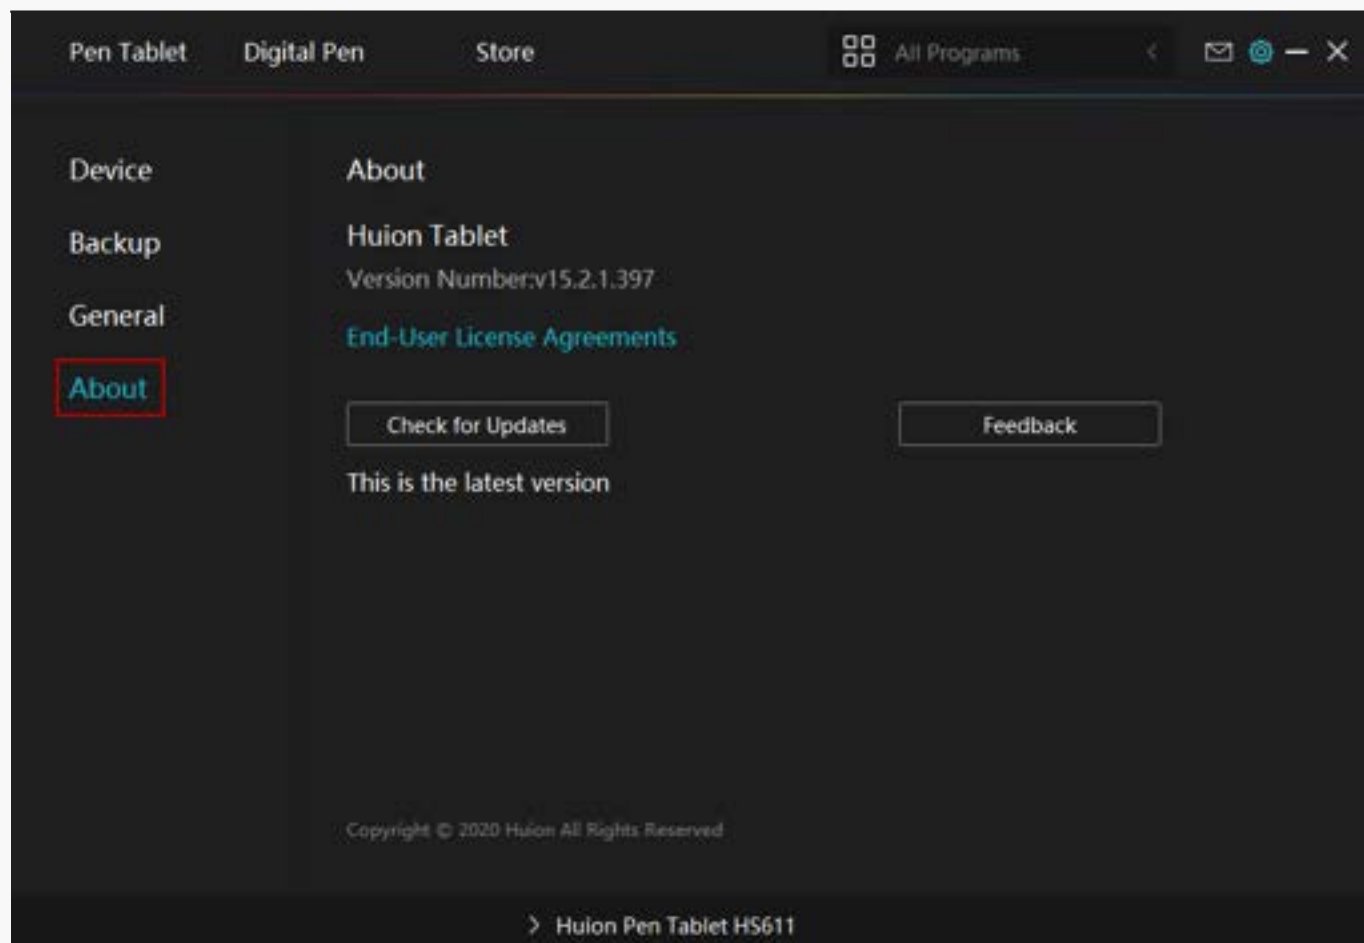


Digital Pen Setting

1. Press Key


The function setting is the same as the Press Key setting of the tablet. Please refer to it.

[See Section](#)

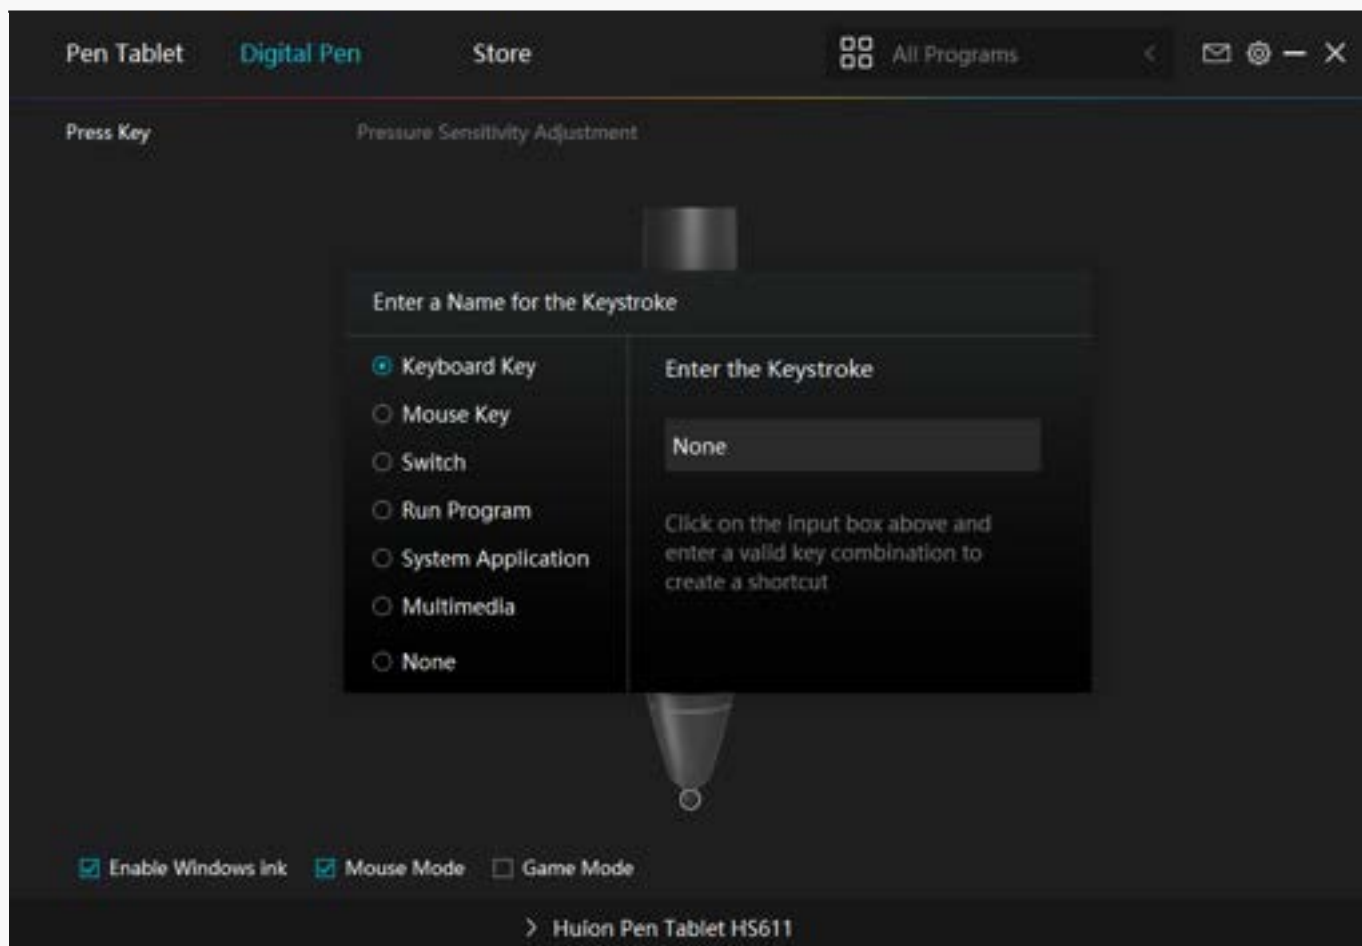


2. Pen Nib Activity

The pen nibs can be set to be Valid/Invalid as needed. Click the drop-down option to select. In Valid mode, the digital pen can be used normally. In Invalid mode, the digital pen has cursor movement, but cannot complete the specified action.

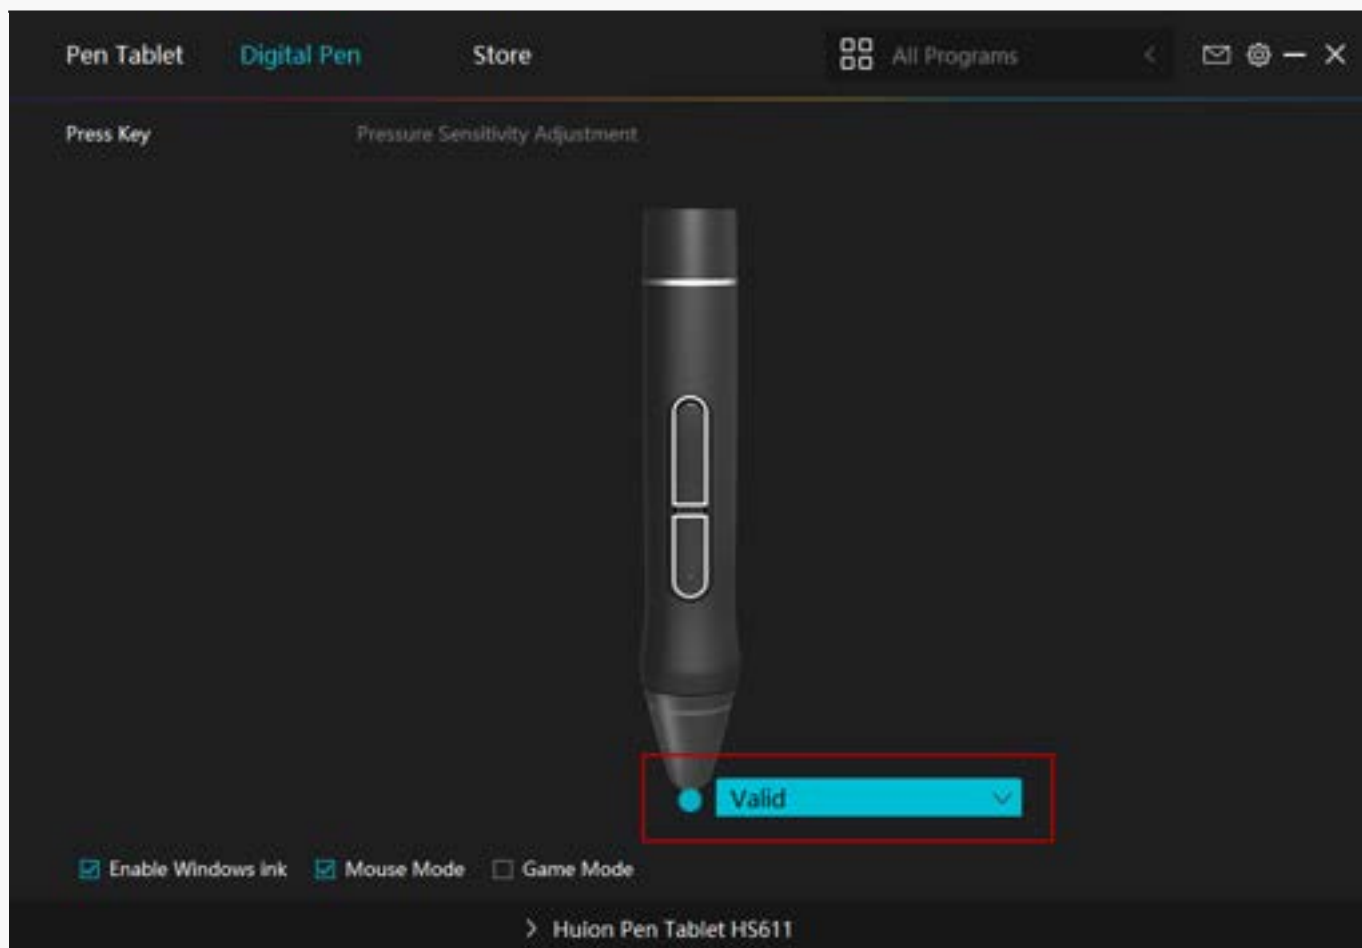

3. Enable Windows ink


Microsoft Windows provides extensive support for pen input. Pen features are supported in such as Microsoft Office, Windows Whiteboard, Adobe Photoshop CC, SketchBook 6 and so on.

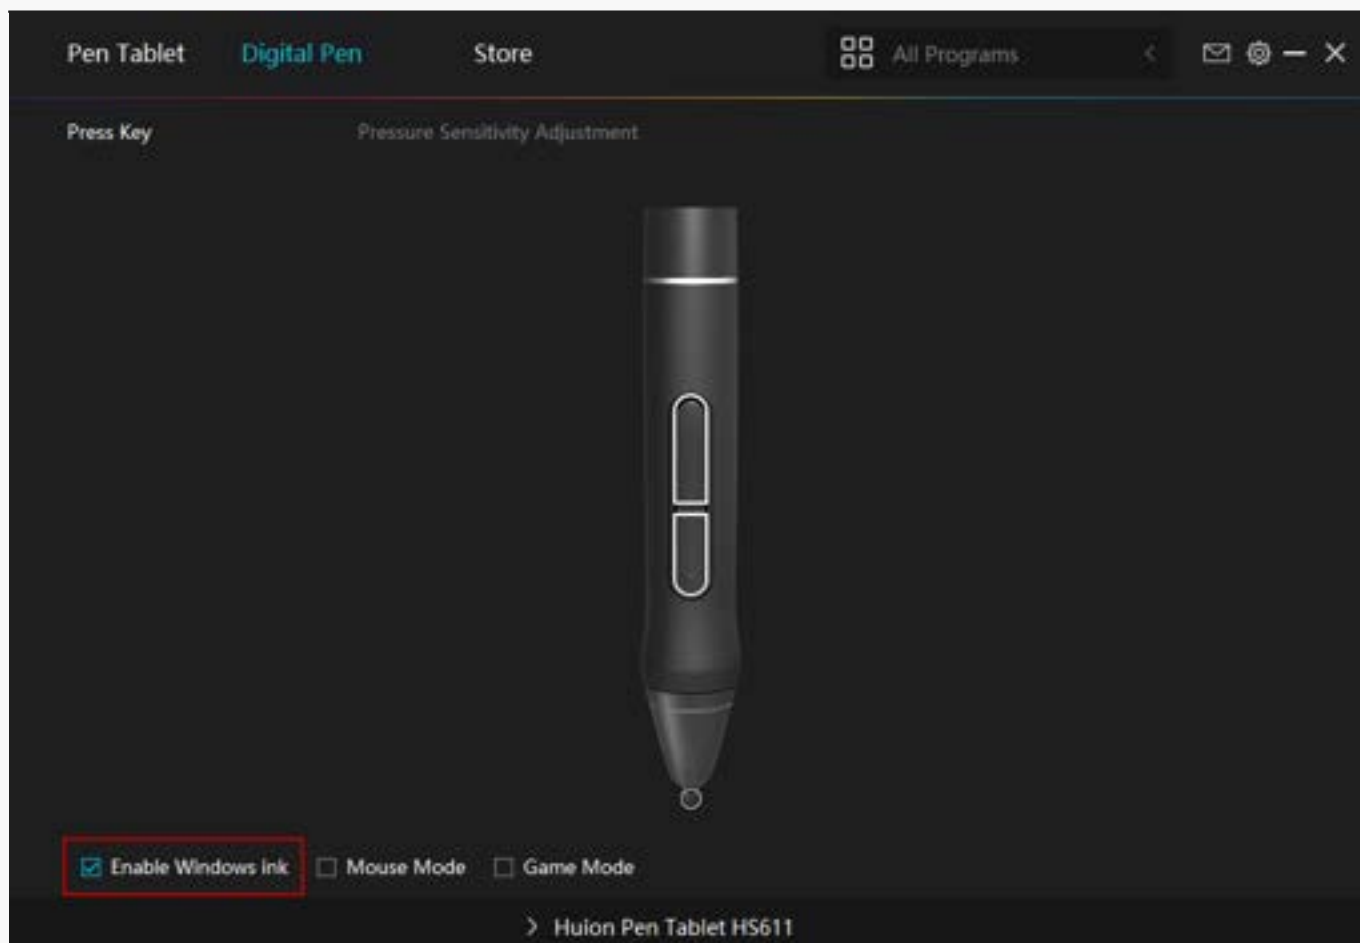

4. Pressure Sensitivity Adjustment


The pressure sensitivity will be changed by dragging the slider up and down, the smaller the value, the more pressure sensitive.

Click the Redo button at the top right of the Settings box to reset the pressure sensitivity to the default state.

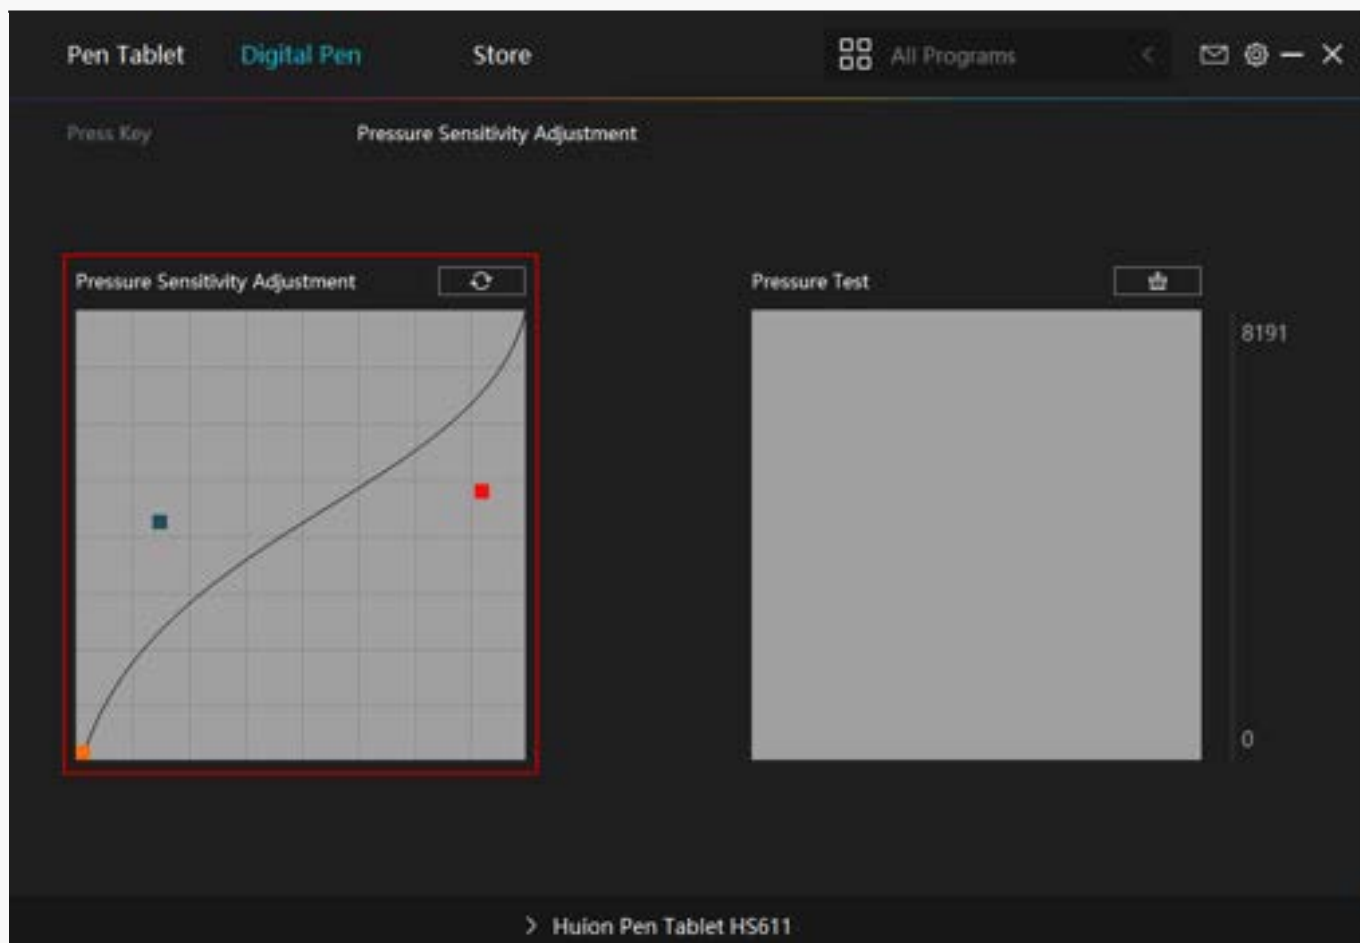

5. Pressure Test

You can gradually apply pressure to the stylus on the screen to test the pressure level. Click the Clear button to clear all the ink.

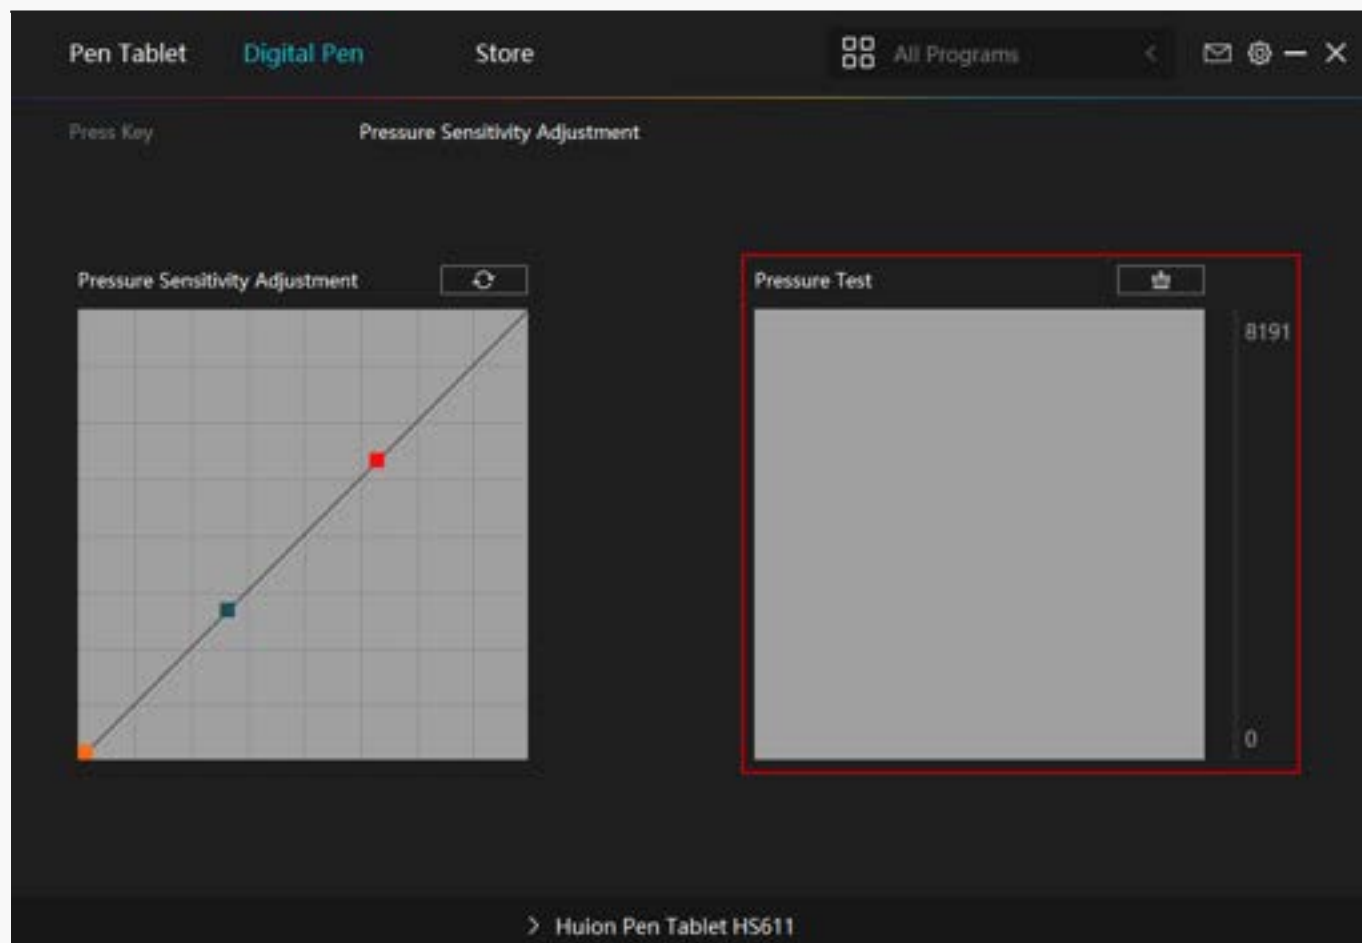

Digital Pen Basic Operation

Hold the Pen

Hold the pen as you hold a normal pen or pencil. Adjust your grip so that you can toggle the side switch easily with your thumb or forefinger. Be careful not to accidentally press the switch while drawing or positioning with the pen.

Note:


When not in use, place the pen in the pen case or on the desk. Do not place the pen on the surface of screen, which may interfere with the use of other screen cursor positioning equipment, may also cause your computer can not enter the sleep mode.




Position the cursor

Move the pen slightly above the active area without touching the screen surface, the cursor will move to the new position accordingly.


Press the pen tip on the screen to make a selection. Tap the screen once with the pen tip, or touch it to the screen with enough pressure to register a click.

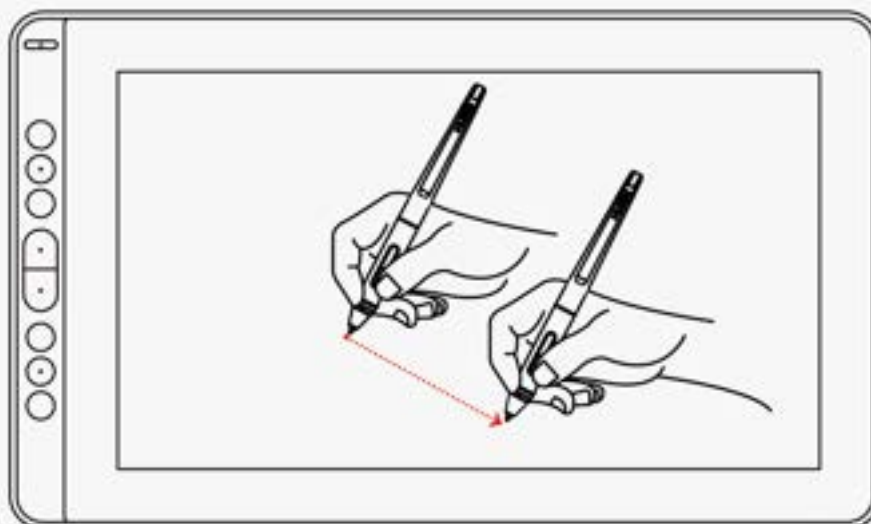

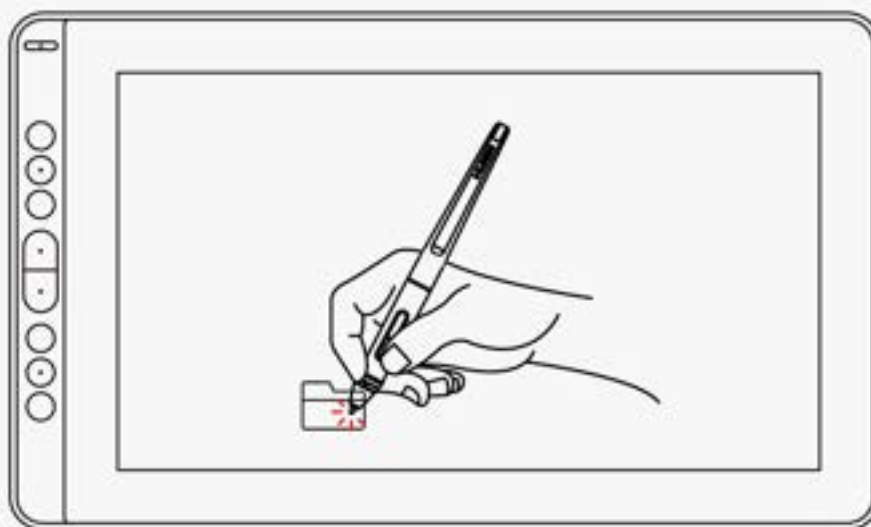


Click

Use the pen tip to tap once on the screen to register a click. Tap to highlight or select an item on the screen and double-click to open it.

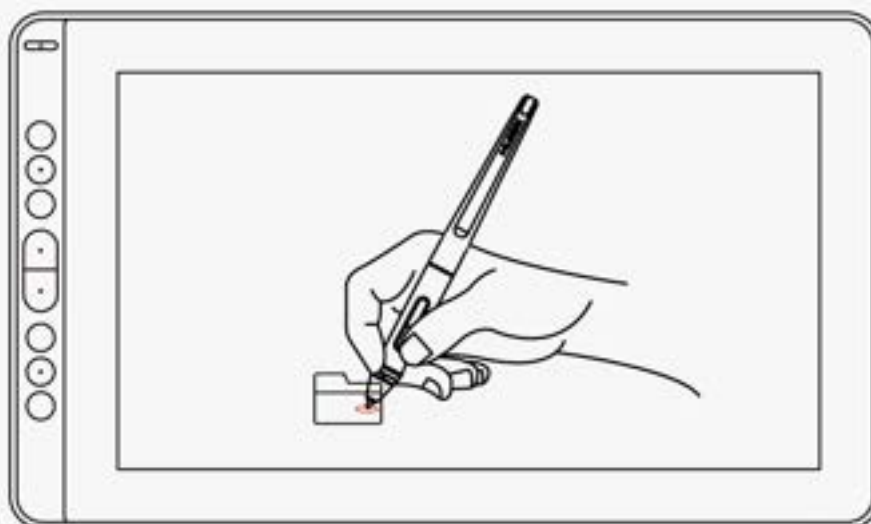


Move

Select the object, then slide the pen tip across the screen to move it.

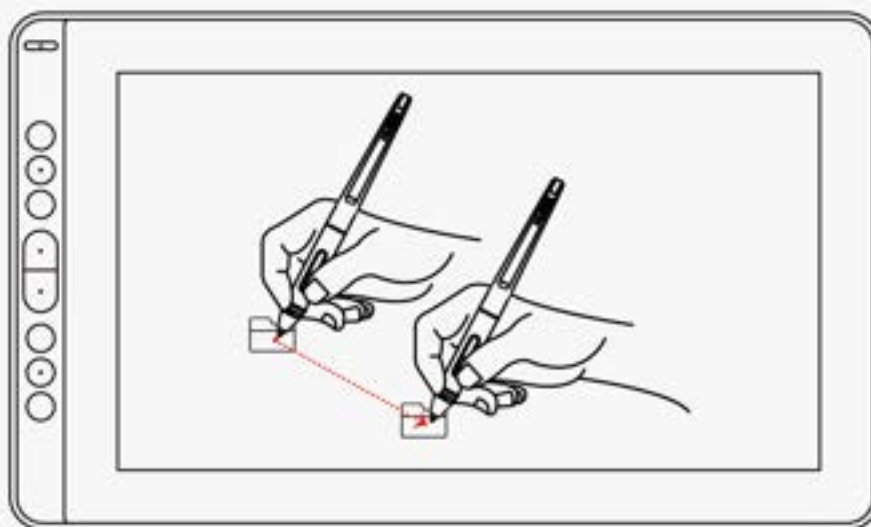

Use the side buttons

The buttons on the pen can be set to two different customizable functions. You can use the buttons whenever the pen tip is within 10mm of the tablet active area. You do not have to touch the pen tip to the device in order to use the switch.

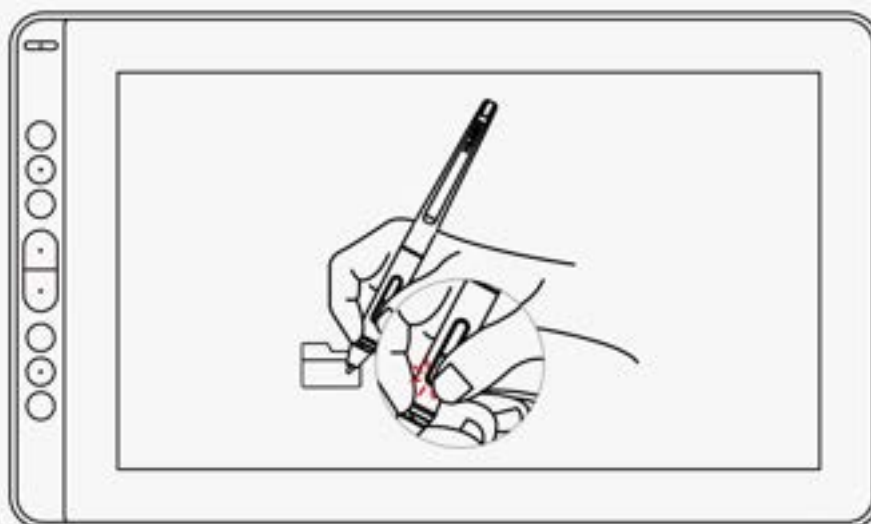

Pen Nib Replacement

The nib will wear off after using for a long time, then you need to replace a new nib.

1. Anticlockwise rotate the pen holder to open the cover, take a new nib out.
2. Insert the pen nib into the pen nib clip and tilt the pen to pull out the old nib.

3. Insert the new nib straight into the pen and push the nib slowly and firmly until it stops.



Specifications

Here are the product specifications for you to learn more about the device. If you have any questions, please feel free to contact us.

The following data will vary in different usage environments and are for reference only.

Appearance

Color:	Cosmo Black, Midnight Green, Violet Purple
Dimension:	366.5 x 217.4 x 11.8mm
Workspace:	293.76 × 165.24mm
Net Weight:	980g
Stand:	ST300(Optional)
Interface:	USB-C, Full-Featured USB-C

Screen

Resolution:	1920 x 1080
-------------	-------------

LCD Type:	IPS
AG Glass:	Anti-glare matte film
Full Lamination:	YES
Contrast Ratio:	1000:1
Brightness:	220cd/m2
Response Time:	25ms
Viewing Angle: (Typ.)(CR > 10)	89°/89°(H)/89°/89°(V)
AGamut:	120% sRGB
Display Color:	16.7M(8bit)

Technical Specifications

Digital Pen:	PW517
Pen Technology: Resonance	Battery-Free Electromagnetic
Pen Resolution:	5080 LPI
Pressure Sensitivity:	8192 Levels
Tilt Support:	±60°
Sensing Height:	10mm
Report Rate:	> 233PPS
Accuracy:	±0.3mm
Press Keys:	8 Programmable Press Keys

Operating Conditions

Input Voltage:	DC 5V
----------------	-------

Output Voltage:	5V 2A
Power Consumption:	$\leq 7W$
Standby Consumption:	$\leq 0.3W$
Working Temp. and Humidity:	0-40°C, 20-80%
Storage Temp. and Humidity:	-20°C~60°C, 10-90%

OS Compatibility

Windows 7 or later

macOS 10.12 or later

Android 6.0 or later

Troubleshooting Solutions

1. Possible Breakdowns Related to Display.

Power indicator does not flash.

1. Make sure power is on.
2. Check the socket and power cable.

No display on the screen.

1. Make sure power is on.
2. Correctly connect the cables.
3. If you connect the display with a laptop, please make sure the display is on the right display mode: extend or duplicate mode.
4. Check whether the side indicator shows green, if not, it means no signal in. Please reboot your computer or reconnect the cable.
5. Is the signal wire broken or bent? If so, please replace the signal wire.

No signal.

1. Make sure the cables are well connected.
2. If you use a desktop, make sure the HDMI port is plugged into the graphic card on the tower, but not into the motherboard.
3. If you use a Windows OS computer, make sure to press "Windows+P" on keyboard, then choose Duplicate or Extend. Don't choose Computer Only or Projector Only.
4. If there is no HDMI port on your computer, you need an extra HDMI adapter. We don't recommend a USB to HDMI adapter. Also, we don't recommend a USB hub. We recommend DVI/ VGA/ Display Port/ Type-C/ Thunderbolt, etc. to HDMI adapters.

Images are blurred.

Please set the display resolution with 1920 x 1080.

Displays wallpaper & task bar of computer monitor only.

1. It is because you are under extended mode right now. It is a normal situation.
2. If you are not familiar with extended mode, we recommend you to use in Duplicate/Mirror mode. Windows OS: Press keyboard combination---Windows+P---then choose Duplicate
Mac OS: System Preference---Displays--- Arrangement--- Check "Mirror Displays".
3. If you decide to use in Extended mode. Make sure to choose pen display as Work Area in Driver. It is usually "Display 2".

Lack of colors.

Check the pins of the signal wire are not bent or fractured.

There is chromatic aberration.

As the regional color temperature is different, so minor chromatic aberration is a normal phenomenon.

Images jitter or ripple images appear.

It is likely that there is electric equipment nearby that brings about electronic interference.

2. Possible Breakdowns Related to Functions.

There is no pressure in the graphics software but the cursor moves.

You may have installed other display drivers or opened the drawing software when installing the driver. Please uninstall all drivers and close the drawing software, then reinstall the Huion driver. It's better to restart your computer after finishing the installation.

The pen does not work.

1. Make sure you are using the pen that originally came with your tablet.
2. Make sure you installed the driver correctly.

Press Keys does not work.

1. Make sure the Press Keys function were enabled in the driver.
2. Make sure you have correctly defined the Press Keys.
3. Check if the press lock switch is on the unlock position.

The computer can't enter sleep mode.

When you are not using the display, please do not put the pen on the display surface, which will keep the computer awake.

The side button of the pen doesn't work.

When pressing the side button, please make sure that the nib didn't touch the tablet surface and the distance between the nib and surface is within 10mm.

The computer can't recognize the display.

Check that the USB port is normal. If there is any problem, please use another USB port.

If your problem is not resolved, please click [FAQs](#) to view more troubleshooting methods or email us(service@huion.com).

Safety Warnings and Information

All information regarding the operation of the device can be found in the user manual. Before you begin using it, please familiarize yourself with its contents and adhere to the guidelines provided.

Additionally, review the following information before use:

Usage Warnings

1. Safety Considerations for Using a Graphic Tablet:

Graphic tablets are precision devices; they should not be subjected to strong shocks, pressure, or contact with liquids. Use them only on a stable work surface.

Always use the device in accordance with the manufacturer's recommendations – do not open the casing or modify the electronic components.

2. Stylus and Working Surface:

Use only compatible styluses. Excessive pressure or the use of sharp objects may damage the surface of the tablet.

Store the stylus in a secure location, away from children, due to the risk of swallowing small parts or injury from the tip.

3. Power and Battery (if applicable):

Charge the graphic tablet (if it is battery-powered) only with original or certified chargers. Do not leave the device connected to power without supervision for an extended period.

Avoid using the device while it is charging to prevent overheating.

4. Working at the computer:

When using the graphic tablet for extended periods, take regular breaks to minimize the risk of strain on your wrists, arms, or eyes.

Position the tablet and computer screen ergonomically.

Information on Proper Usage

1. Installation and Configuration:

Before first use, install the latest drivers and software recommended by the manufacturer. Ensure that the computer's operating system meets the device's technical requirements.

2. Software and Updates:

Regularly update the device's software and firmware to ensure stability, security, and full functionality of the tablet.

3. Device Compatibility:

Use the tablet with computers that meet the technical requirements specified by the manufacturer. Using incompatible systems may result in errors during the device's operation.

4. Access for Children:

Graphic tablets are not intended for children under the age of 14. Supervision of device use by minors is essential, particularly in the presence of a power supply or small components.

Additional Precautions

1. Storage and Maintenance:

The tablet should be stored in a dry and clean location, away from sources of heat and moisture. Regularly clean the working surface with a soft, dry cloth; do not use chemical cleaners.

If the device will not be used for an extended period, disconnect it from the computer and store it in the original packaging or a protective case.

2. Disposal:

Used graphic tablets, styluses, and batteries (if applicable) must be disposed of in accordance with local electronic waste regulations. Do not dispose of electronic devices in municipal waste.

3. Environmental Protection and Energy Efficiency:

Disconnect the tablet from the power source and the computer when not in use. Make use of the energy-saving modes provided by the device's software.

EC REP: Dilectro Spółka z Organiczoną Odpowiedzialnością, ul. Brukselska 4, 03-973 Warsaw, Vat no: PL5223032301, rafal.pacula@dilectro.pl