


KAMVAS 12

GS1161

② User Manual

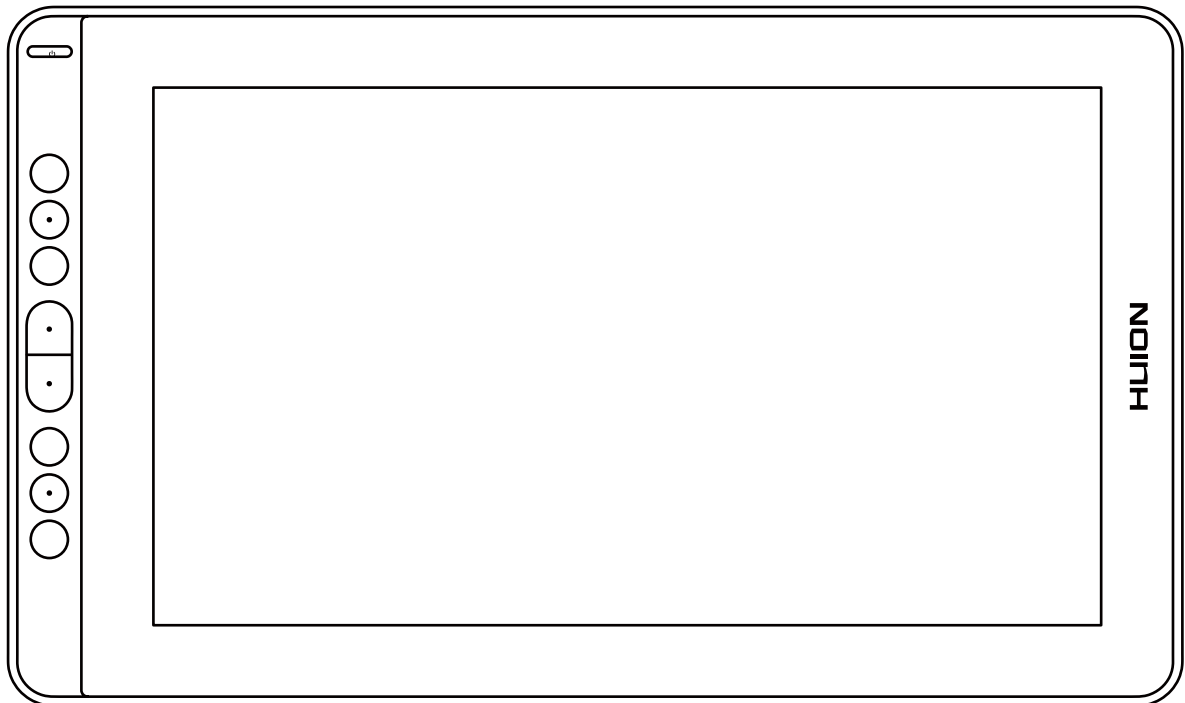

Contents

1 / Precautions	3
2 / Product Overview.....	4
2.1 Display Introduction	4
2.2 Product and Accessories	4
2.3 Setting Up Display	8
2.4 Install Driver	8
3 / Pen Basic Operation	9
3.1 Hold the Pen.....	9
3.2 Position the Cursor.....	9
3.3 Click.....	10
3.4 Move.....	10
3.5 Use the Side Buttons	10
3.6 Pen Nib Replacement	11
4 / OSD Buttons.....	11
5 / Function Setting	12
5.1 Working Area Setting	12
5.2 Display Setting.....	14
5.3 Pen Buttons Function Setting.....	16
5.4 Enable the Windows Ink Feature.....	16
5.5 Pressure Sensitivity Setting.....	17
5.6 Pen Pressure Testing.....	18
5.7 Pen Nib Activity Setting.....	18
5.8 Data Export and Import	19
6 / Specifications.....	20
7 / Trouble Shooting.....	21
8 / After-service Contact	24

1 / Precautions



【 Please read this manual carefully before using, and keep it well for future reference.】

--Before cleaning the display, please unplug the USB cable and wipe with a soft damp cloth, do not use any kind of detergents.

--Please don't place the display near water sources such as bathtub, washbasin, sinks, washing machine, damp basement, swimming pool, etc.

--Do not place the display on where is unstable or a height for children reaching easily in order to avoid danger.

--Do not place the display and digital pen close to the magnetic field.

--The grooves and holes on the back case is designed for ventilation to prevent the monitor from overheating. Please don't place the display on beds, sofas, carpets or in embedded device.

--Only power supplies shown on the nameplate can be used for the display. If you have questions about the power supply which you are using, please consult the distributor of your display.

--To protect your display, please switch off the power when it is not in use. During blackouts or not using for long time, please unplug the display from the socket.

--Make sure no foreign bodies get inside the monitor through grooves and prevent liquid from splashing on the display as to prevent short-circuit or fire.

--If the display has a breakdown, do not open the main case and try to repair it by yourself. Please ask for a service for proper repair and maintenance.

--When the following situations occur, please unplug the power adapter and you may need a service for full repair and maintenance:

A. The power wire or plug is damaged or worn out;

B. There is liquid splashed inside of the display;

C. The display has fallen or the LCD is broken;

D. When obvious abnormalities occur to the display.

--While getting the components replaced, you are supposed to guarantee that the repairman is using the substitute components specified by the manufacturer. Unauthorized component replacement might cause fire, electric shocks or other dangers.

2 / Product Overview


2.1 Display Introduction

Thanks for choosing HUION® KAMVAS® 12 creative display. This is a new generation professional drawing display, which can greatly improve your work efficiency of painting and creation, and full of fun. You can freely paint and write, depicting different lines and colors, just as the pen writes on the paper, which brings you a real shock experience.


To give you a better understanding and using of your display, please read this user manual carefully. The user manual only shows the information under Windows, unless otherwise specified, this information applies to both Windows and Mac systems.

2.2 Product and Accessories

2.2.1 Tablet Overview

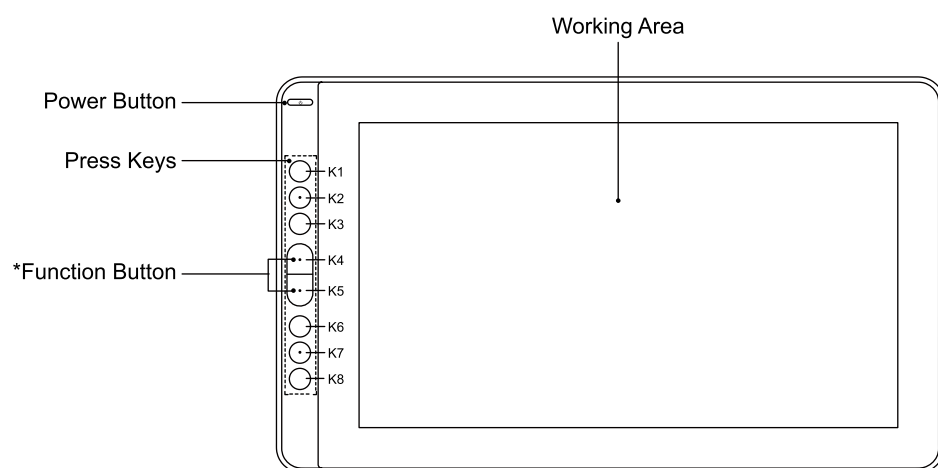


*Function Button: Press K4 & K5 around three seconds to open the OSD menu.

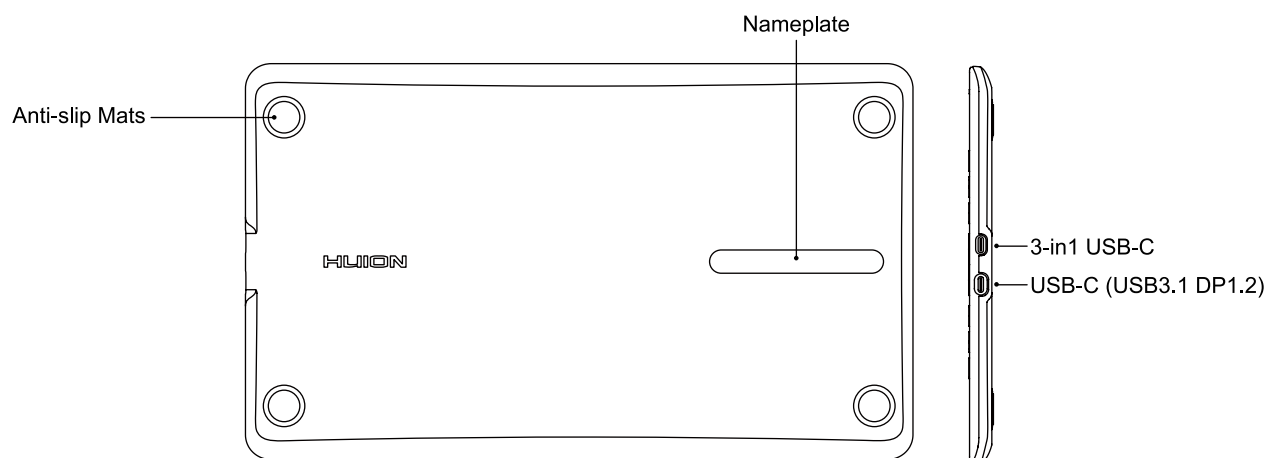

2.2.1 Accessories



 
Battery-free pen




Replacement Nibs
(inside the pen holder)



Pen Holder

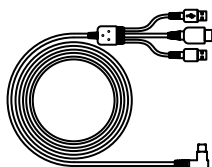

3-in-1 Cable

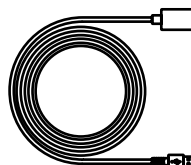

USB Extension Cable



Pen Nib Clip
(inside the pen holder)



Warranty Card




Quick Start Guide



Cleaning Cloth


2.2.2 3-in-1 Cable

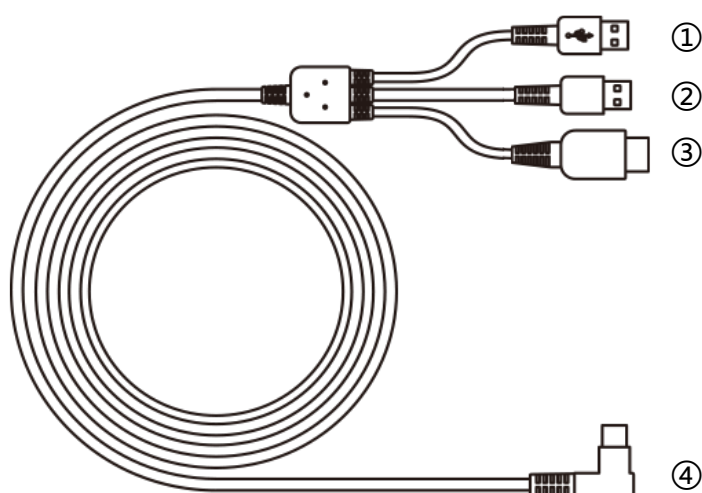

① USB (Data) ② USB (Power) ③ HDMI ④ Type-C

2.2.3 Adjustable Stand (Optional)


We designed this ergonomic adjustable stand specially for your KAMVAS display, you can adjust the angle of the display according to your usage habit, and make you feel more comfortable when painting and creating.

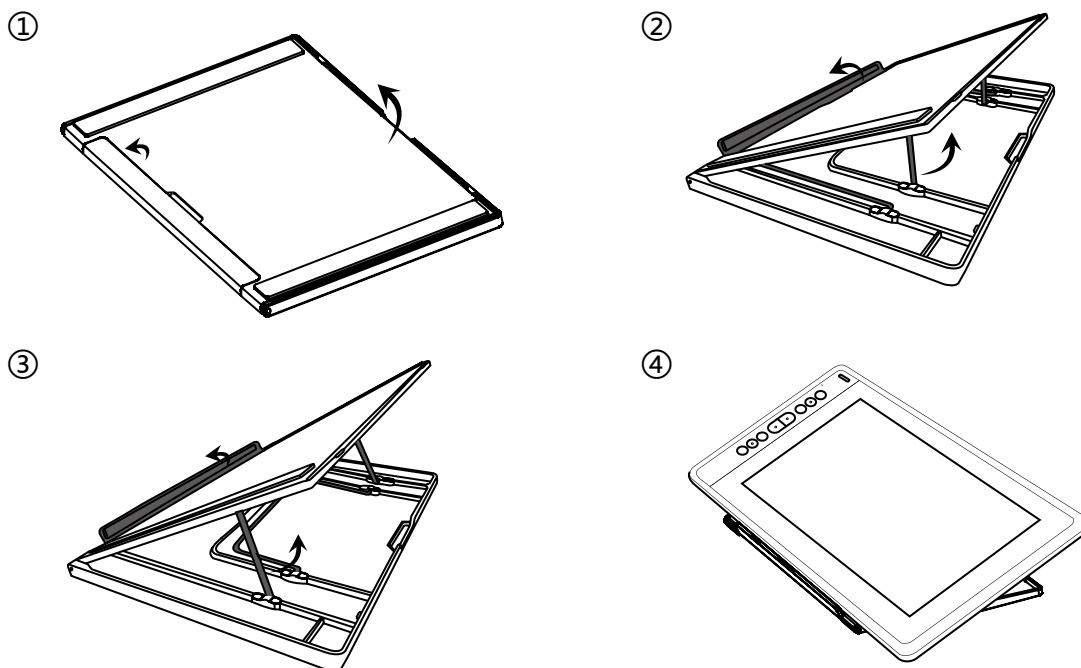


2.3 Display Connection

Connect the pen display to your computer with 3-in-1 Cable or USB-C to USB-C Cable.

1) Generally the device can be powered on when the black USB-A cable is connected to your computer. A flashing screen of the device may indicate a low battery, in which case you are suggested to connect the red colored USB-A cable to another USB interface on your computer or the power adaptor. The power adaptor is not included in the package and requires extra cost. Power adaptor of your mobile phone is also compatible.

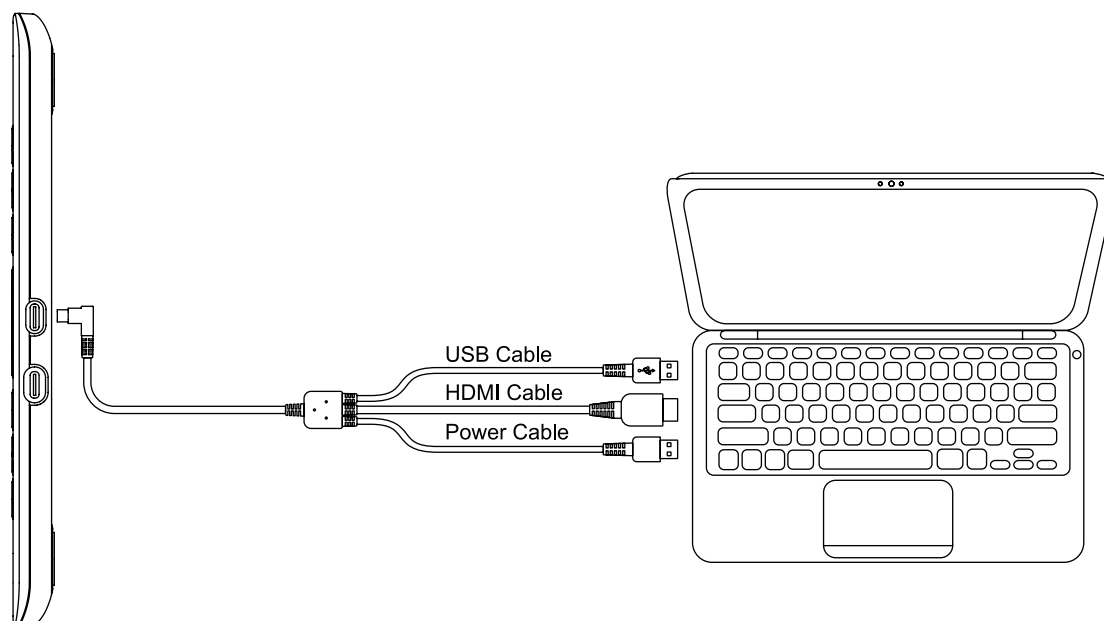

2) Connect the display to your computer with USB-C to USB-C cable, USB-C to USB-C cable is not included in the package and requires extra cost. Please purchase the cable through official channels as it is customized and cables from unknown sources may not be usable with the device.

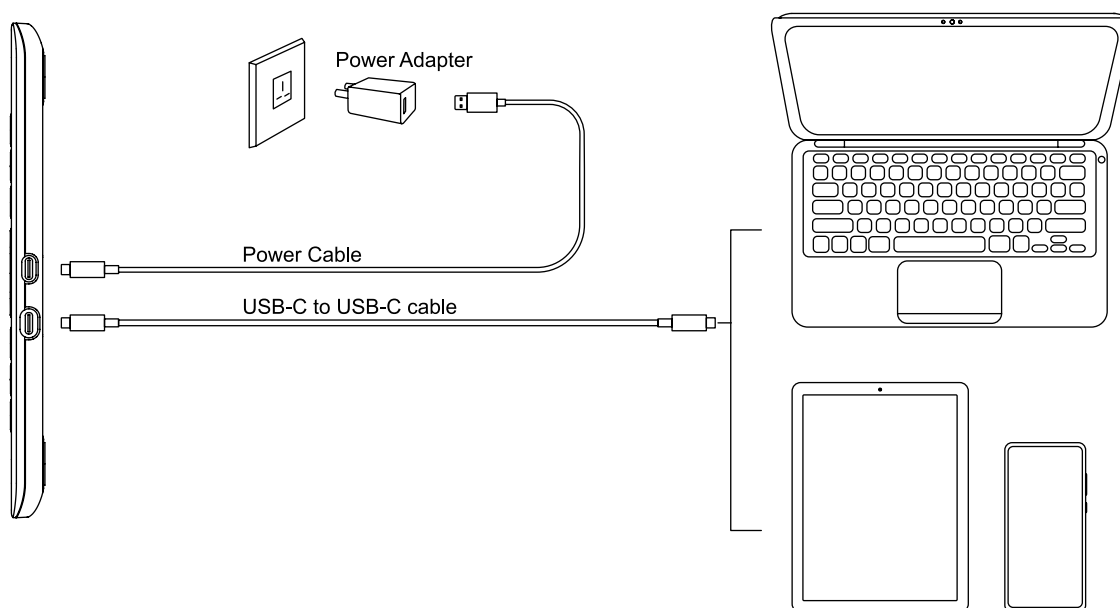

2.4 Install Driver

2.4.1 OS Support

Windows 7 or later, macOS 10.12 or later.

2.4.2 Install Driver

Please download the driver from our website: www.huion.com/download

After finishing installation, you can find the driver icon "  " in the system tray area, which means the driver was installed successfully; when you connect the display to computer, the icon will change to color "  ", which means the driver has already recognized the display and you can start using it now.





Notes:

- [1] Before installing, you need to uninstall other driver of similar products, including the old driver of this product.
- [2] Before installing, please close all graphics software and anti-virus software to avoid unnecessary mistake.

2.4.3 Driver Page

After the download is successful, double-click to open the driver, connect the display to your computer with attached cables.

When the connection is complete, watch for a prompt at the bottom left of the driver page that display two states "Device disconnected" or "Device connected".

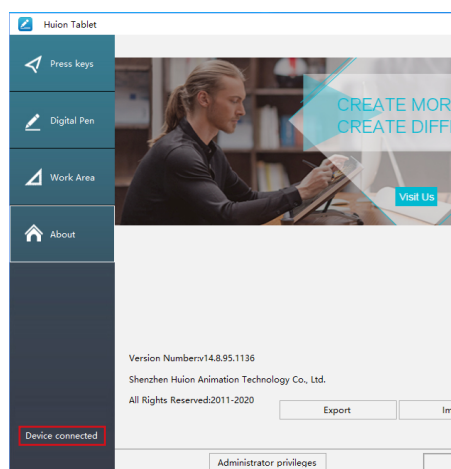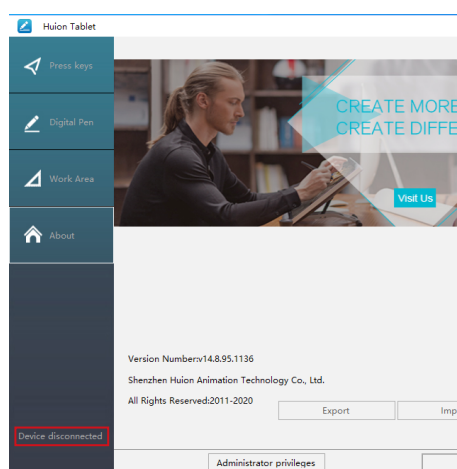

3 / Pen Basic Operation

3.1 Hold the pen

Hold the pen as you hold a normal pen or pencil. Adjust your grip so that you can toggle the side switch easily with your thumb or forefinger. Be careful not to accidentally press the switch while drawing or positioning with the pen.

Notice:



When not in use, place the pen in the pen case or on the desk. Do not place the pen on the surface of screen, which may interfere with the use of other screen cursor positioning equipment, may also cause your computer can not enter the sleep mode.



3.2 Position the cursor


Move the pen slightly above the active area without touching the screen surface, the cursor will move to the new position accordingly.

Press the pen tip on the screen to make a selection. Tap the screen once with the pen tip, or touch it to the screen with enough pressure to register a click.

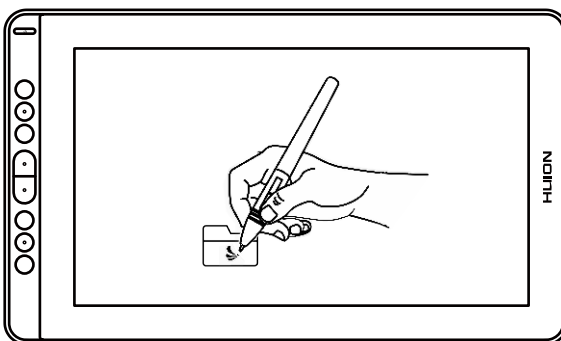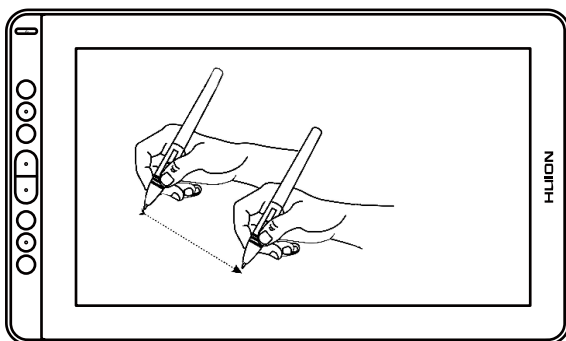


3.3 Click

Use the pen tip to tap once on the screen to register a click. Tap to highlight or select an item on the screen and double-click to open it.

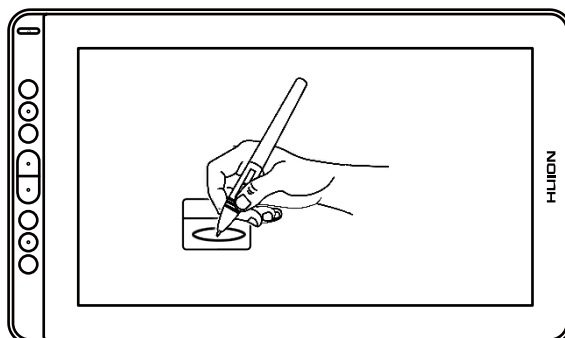

3.4 Move

Select the object, then slide the pen tip across the screen to move it.

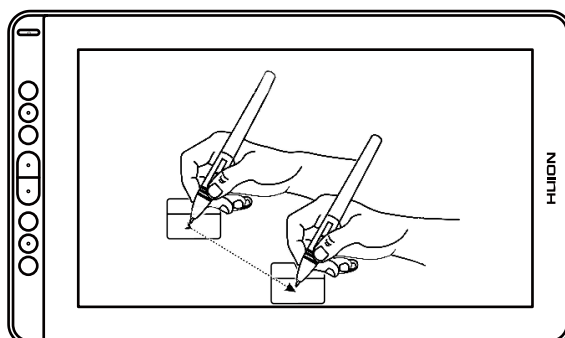


3.5 Use the side buttons

The buttons on the pen can be set to two different customizable functions.

You can use the buttons whenever the pen tip is within 10mm of the display active area.




You do not have to touch the pen tip to the display in order to use the switch.

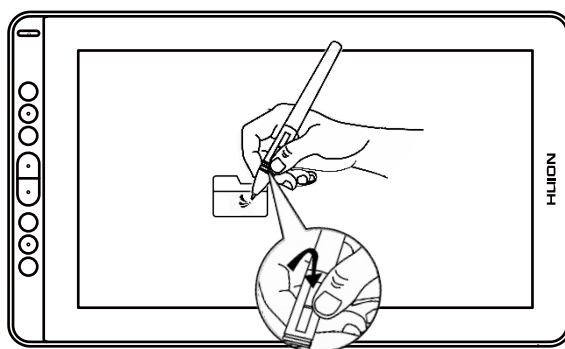

3.6 Pen Nib Replacement

The nib will be worn off after using for a long time, then you need to replace a new nib.

- [1] Anticlockwise rotate the pen holder to open the cover, take a new nib out.
- [2] Insert the pen nib into the pen nib clip and tilt the pen to pull out the old nib.
- [3] Insert the new nib straight into the pen and push the nib slowly and firmly until it stops.

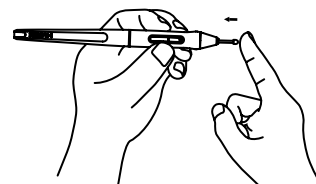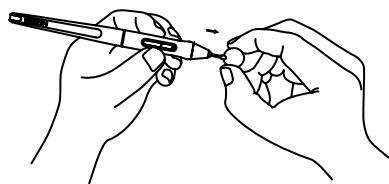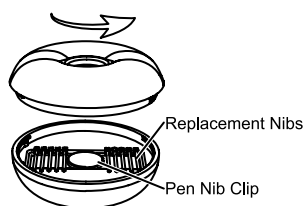

4 / Display features overview

4.1 Power Button

The power button was placed on the left side of the digital screen, you need to turn on the power switch before using.

4.2 Press Keys

There are 8 press keys on the top left side of the display, which you can modify the functions according to your own habits, thus will help to improve your work efficiency.

4.3 OSD Function

Enter OSD Menu:

[1] Press K4 & K5 for around three seconds until the OSD menu appears and meanwhile the indicator will flash green. The function of K2 K3 K6 K7 will become OSD function.

[2] In the menu, the function of K2 K3 K6 K7 will become as the following:

K2 AUTO: Before entering menu, its function is "auto adjustment".

After entering menu, its function is "back to previous menu".


K3 MENU: Press to call up the menu, after entering menu, its function is "confirm".

K7 - : After entering menu, its function is "down/left/decrease".

K6 + : After entering menu, its function is "up/right/increase".

Exit OSD Menu:

[3] Press K4 & K5 again for around three seconds until the OSD menu disappears, the function of K2 K3 K6 K7 will become shortcuts function again.

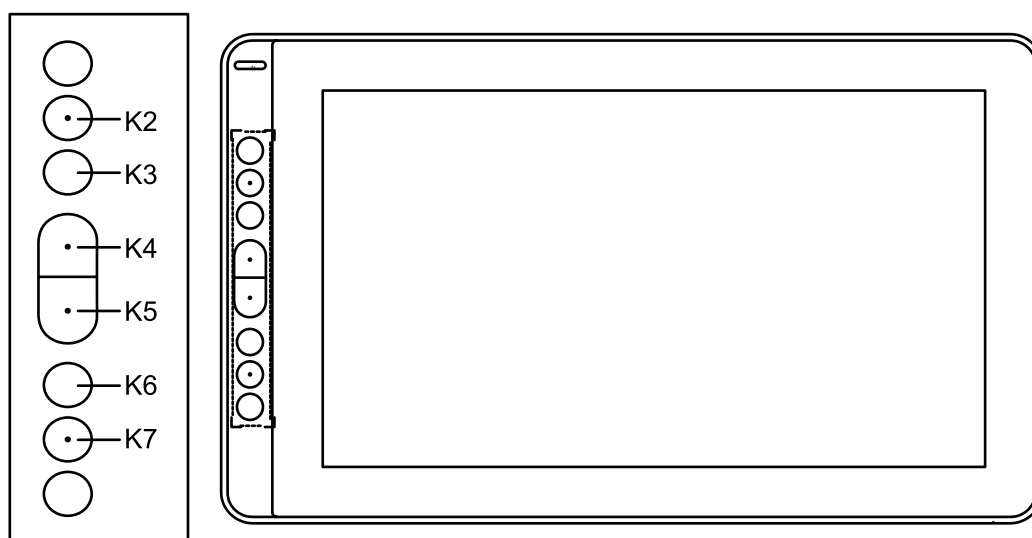

5 / Function Setting


5.1 Working Area Setting

5.1.1 Using Multiple Monitors

Select the Working Area tab to define the relationship between pen movement on the display and cursor movement on the monitor screen.

By default the entire active area of display maps to the entire monitor. If more than one monitor is in use and you are in extended mode, you need to choose the related monitor on the driver interface which you are going to map to.

If your monitors are in mirror mode (All monitors display the same content), the display maps to the entire space on each monitor and the screen cursor is displayed on each monitor simultaneously.

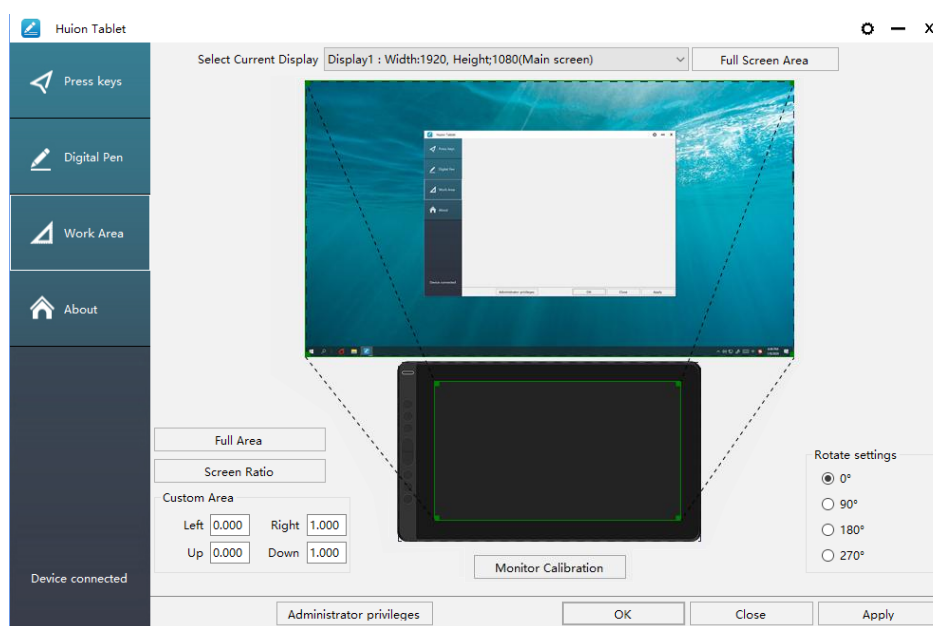

5.1.2 Working Area Setting

Define the display area that will be mapped to the screen area.


[1] Full Area: the entire active area of the display. This is the default setting.

[2] Screen Ratio: As a general rule, be 16:9.

[3] Customized Area:


1> Enter coordinate values.

2> Drag the corners of the foreground graphic to select the screen area.

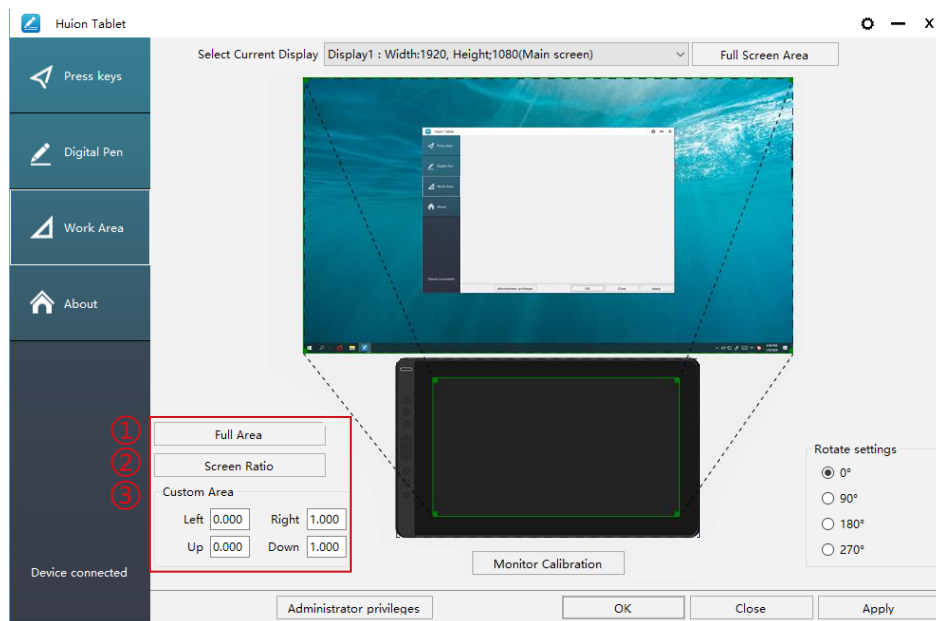


5.1.3 Rotate Working Area

By changing the direction of the display to adapt to the left and right hand operation. You can rotate the display by 0°, 90°, 180° or 270°.

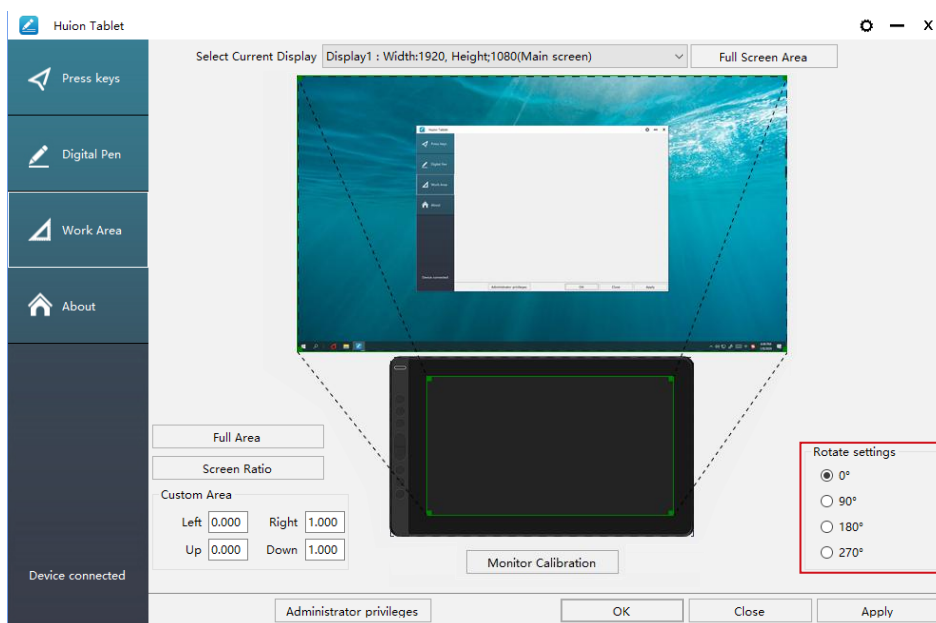

5.2 Display Setting


Click the "⚙️" in the upper right corner of the driver to set the Display, including General settings, Hotkeys and Updates.

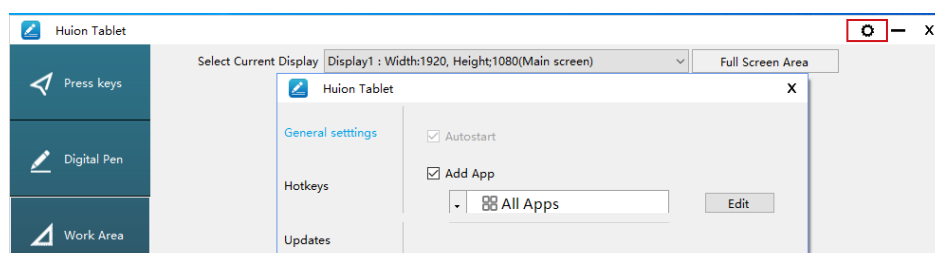


5.2.1 General settings

[1] Add App: Shortcut key function can be set by adding different programs.

When opening different programs, the driver will automatically recognize that the shortcut function is the corresponding function set.

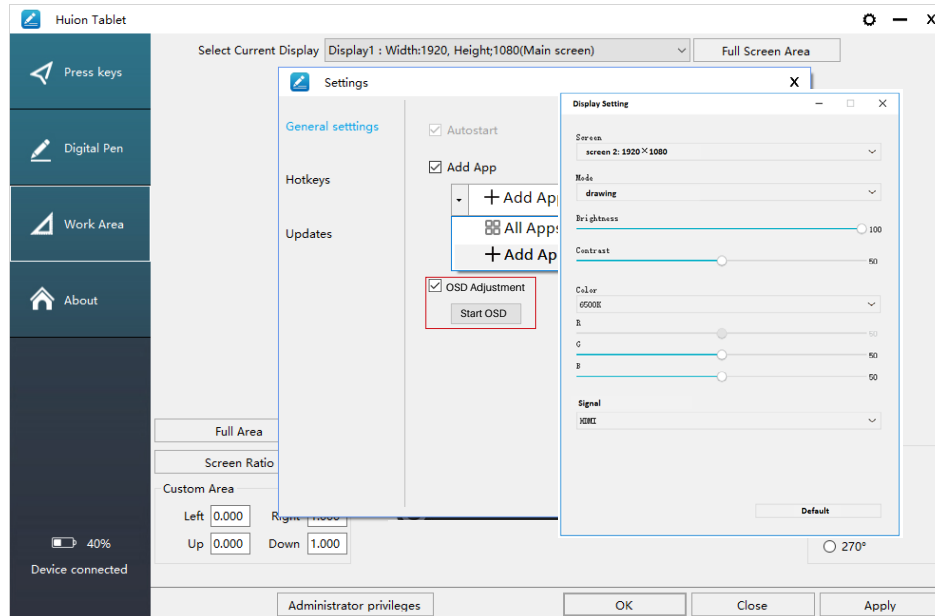


[2] OSD Adjustment: Click on the "Activate the OSD" button and then you can adjust the screen, scene mode, brightness, contrast and color.

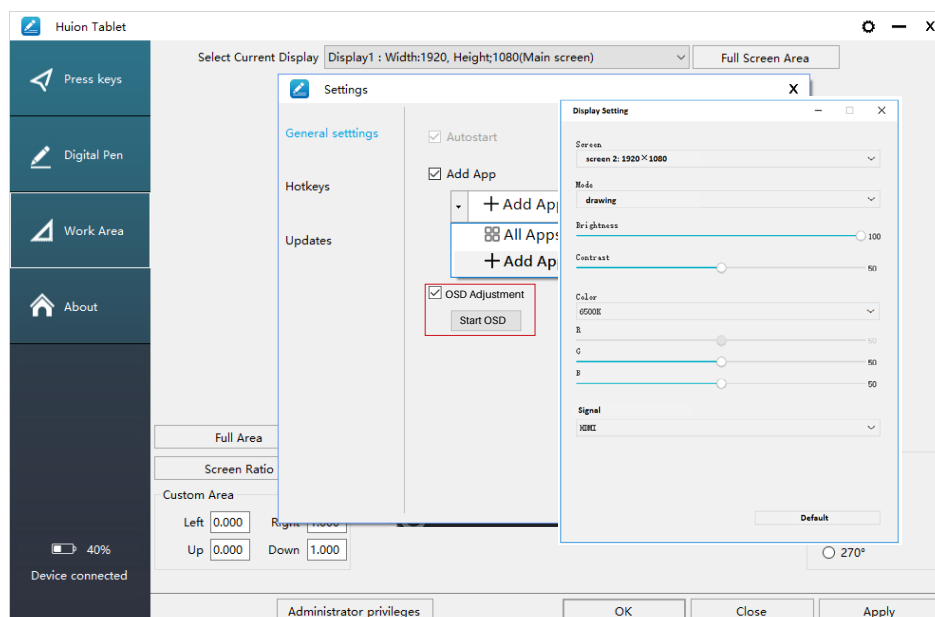


5.2.2 Hotkeys settings

Set the shortcut key to quickly open the driver interface. The default value is Ctrl+Alt+H, which can be set according to usage habits.

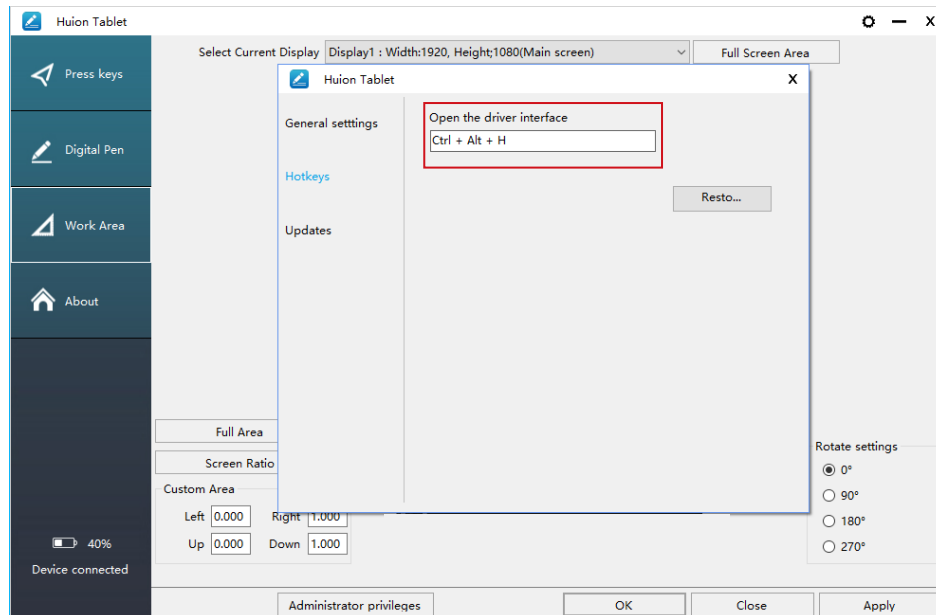


5.2.3 Updates

You can view the driver version number, click "Check for Update", view the latest driver version, and update according to the system prompt.

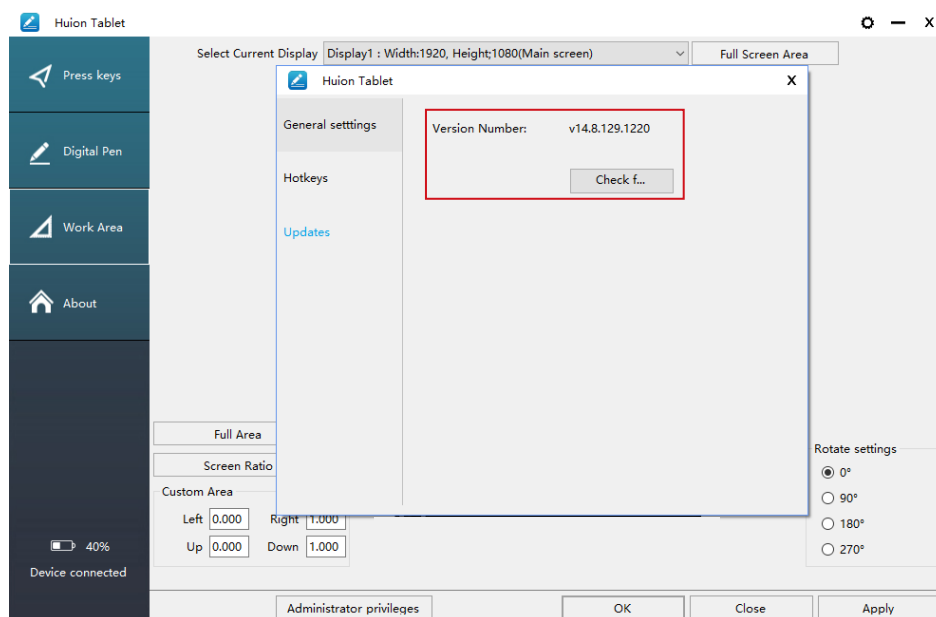


5.3 Pen Buttons Function Setting

Select the function to be achieved on the pop-up dialog box, then click "Apply" or "OK" to take effect.

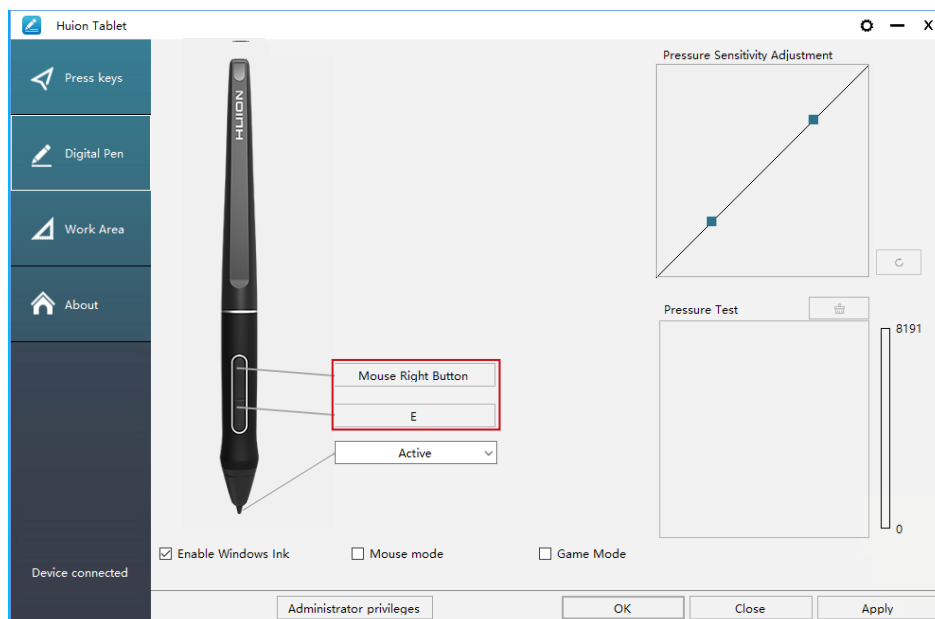


5.4 Enable the Windows Ink Feature

Microsoft Windows provides extensive support for pen input. Pen features are supported in such as Microsoft Office, Windows Journal, Adobe Photoshop CC, SketchBook 6 and so on.

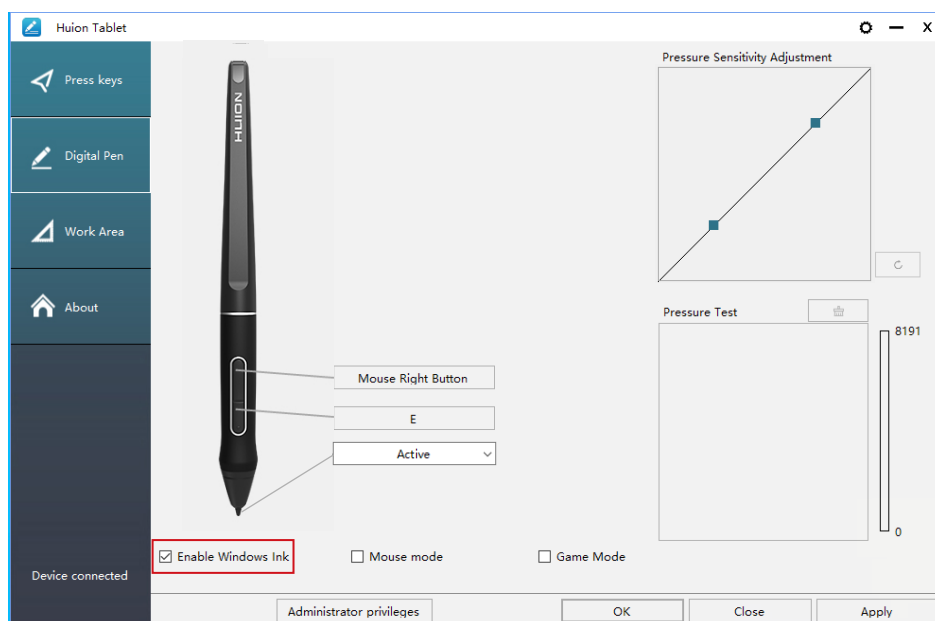

5.5 Pressure Sensitivity Setting

The pressure sensitivity will be changed by dragging the slider up and down, the smaller the value, the more pressure sensitive.

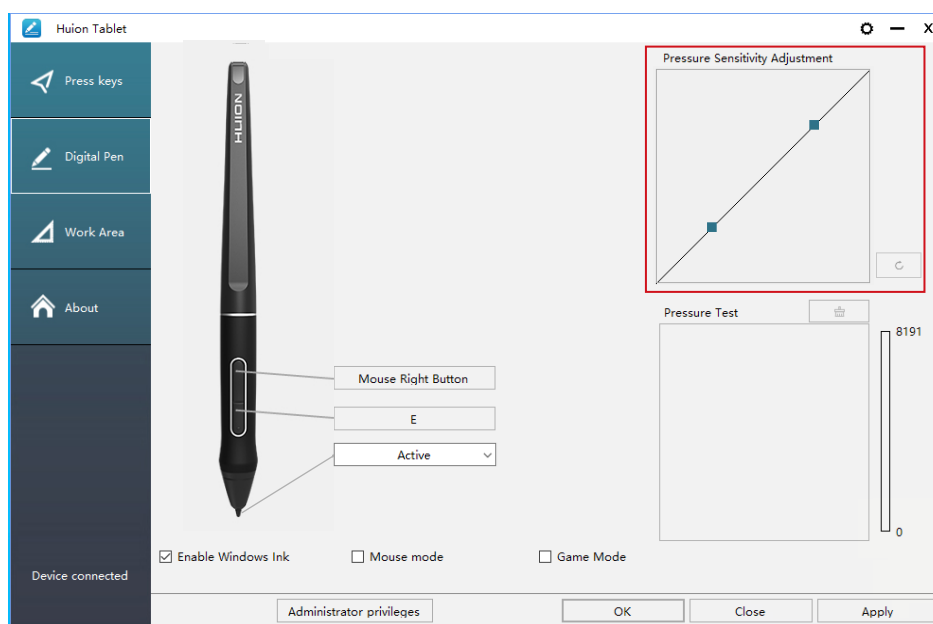


Drag upward (left): the pressure change is more obvious, small pressure produces a great pressure.

Drag down (right): pressure change is weak, a lot of pressure produces less pressure.


Click the button  at the bottom right of the Settings box to reset the pressure sensitivity to the default state.

For example: apply $\ast N$ respectively the same pressure, under different pressure coefficient produced different pressure effects. According to their habit of holding the pen posture and the size of the hand for the appropriate pressure Settings.

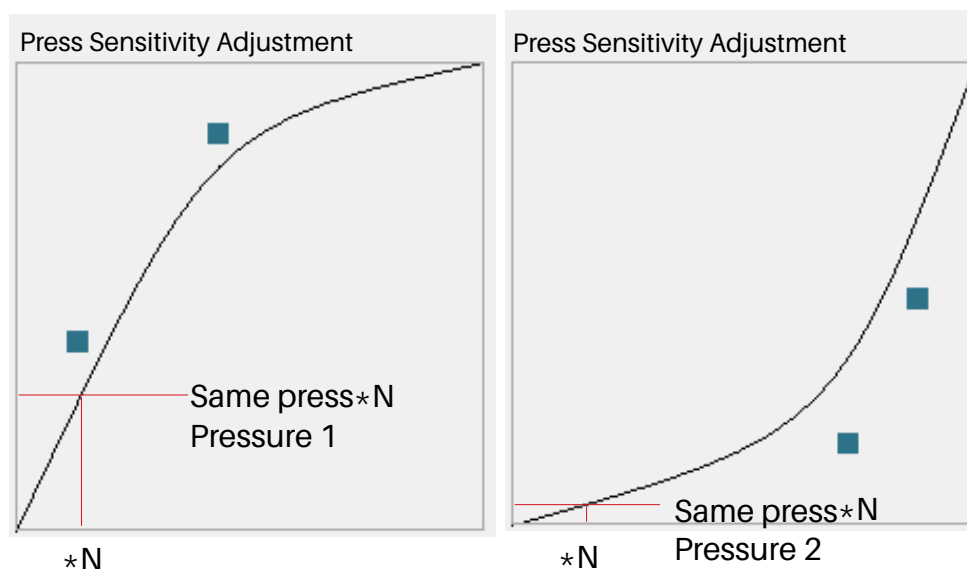


5.6 Pen Pressure Testing

You can gradually apply pressure to the stylus on the screen to test the pressure level. Click "  " button to clear all the ink.

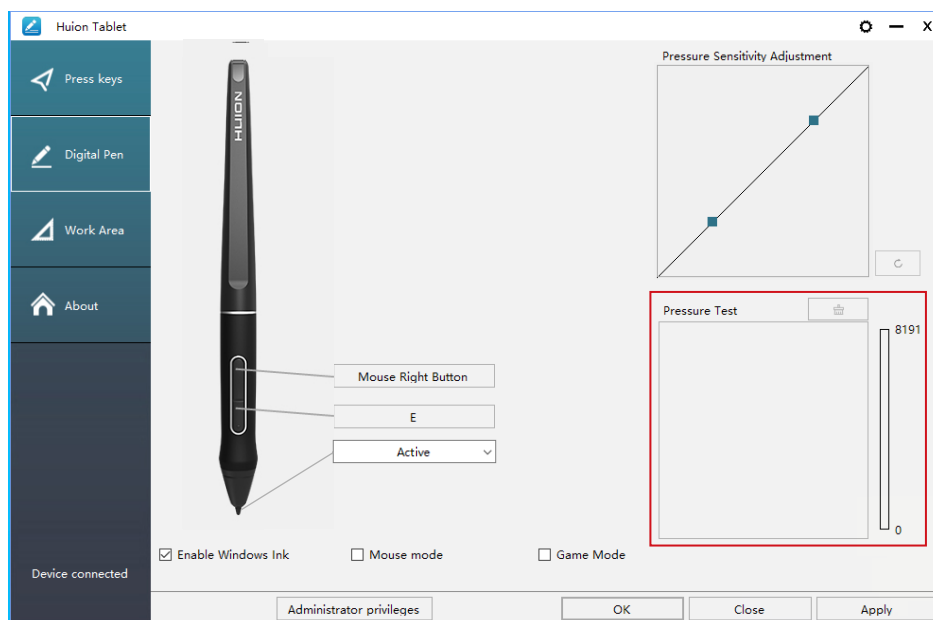


5.7 Pen Nib Activity Setting

The pen nibs can be set to be Active/Inactive as needed. Click the drop-down option to select, and click OK again to save the Settings. In Active mode, the digital pen can be used normally. In Inactive mode, the digital pen has cursor movement, but cannot complete the specified action.

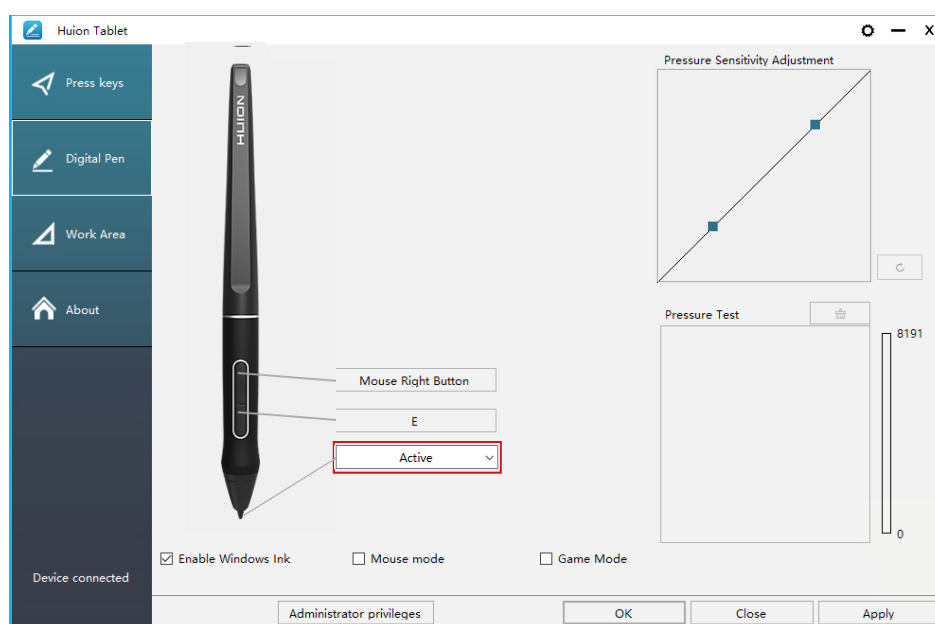

5.8 Data Export and Import

The driver supports exporting and importing your custom configuration data of the product, which is convenient for you to use different software and avoid the trouble of repeated settings.

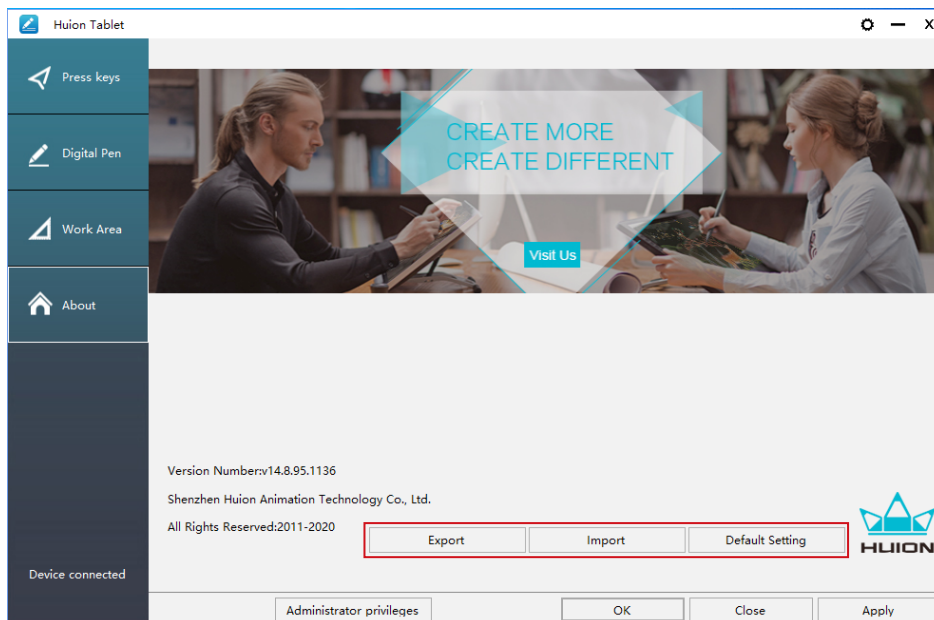

6 / Specifications

Model		GS1161
Screen	Panel Size	11.6 inches
	Resolution	1920 x 1080 (16:9)
	LCD Type	IPS
	Active Area	256.32 x 144.18mm
	Contrast Ratio	1000:1
	Brightness	200cd/m ²
	Response Time	25ms
	View Angle	89°/89° (H) /89°/89° (V) (Typ.) (CR > 10)
	Gamut	120% sRGB
	Display Color	16.7M (8bit)
Touch	Touch Type	Battery-Free Electromagnetic Resonance
	Resolution	5080LPI
	Pressure Level	8192
	Accuracy	±0.3 mm (Center), ±2 mm (Corner)
	Sensing Height	10mm
Pen	Model	PW517
	Dimension	163.7 x Φ14.3 mm
	Buttons	Two Customized Press Key
General	Output Voltage	5V 2A
	Video Interface	3-in-1 USB-C and USB-C to USB-C
	Dimension	330.25 x 197 x 11.8mm (Without Stand)
	Net Weight	735g (With stand)
	OS Support	Windows 7 or later, mac OS 10.12 or later, Android (USB3.1 DP1.2)

7 / Trouble Shooting

7.1 Possible Breakdowns Related to DISPLAY

Abnormal Phenomena	Possible Solutions
Power indicator does not flash	1. Make sure power is on. 2. Check the socket and power cable.
No display on the screen	1. Make sure power is on. 2. Correctly connect the cables. 3. If you connect the display with a laptop, please make sure the display is on the right display mode: extend or duplicate mode. 4. Check whether the side indicator shows green, if not, it means no signal in. Please reboot your computer or reconnect the cable. 5. Is the signal wire broken or bent? If so, please replace the signal wire.
No signal	1. Make sure the cables are well connected. 2. If you use a desktop, make sure the HDMI port is plugged into the graphic card on the tower, but not into the motherboard. 3. If you use a Windows OS computer, make sure to press "Windows+P" on keyboard, then choose Duplicate or Extend. Don't choose Computer Only or Projector Only. 4. If there is no HDMI port on your computer, you need an extra HDMI adapter. We don't recommend a USB to HDMI adapter. Also, we don't recommend a USB hub. We recommend DVI/ VGA/ Display Port/ Type-C/ Thunderbolt, etc. to HDMI adapters.
Images are blurred	Please set the display resolution with 1920 x 1080.

Abnormal Phenomena	Possible Solutions
Displays wallpaper & task bar of computer monitor only.	1. It is because you are under extended mode right now. It is a normal situation. 2. If you are not familiar with extended mode, we recommend you to use in Duplicate/Mirror mode. Windows OS: Press keyboard combination---Windows+P---then choose Duplicate Mac OS: System Preference---Displays--- Arrangement--- Check "Mirror Displays". 3. If you decide to use in Extended mode. Make sure to choose pen display as Work Area in Driver. It is usually "Display 2".
Lack of colors	Check the pins of the signal wire are not bent or fractured.
There is chromatic aberration	As the regional color temperature is different, so minor chromatic aberration is a normal phenomenon.
Images jitter or ripple images appear	It is likely that there is electric equipment nearby that brings about electronic interference.

7.2 Possible Breakdowns Related to FUNCTIONS

Abnormal Phenomena	Possible Solutions
There is no pressure in the graphics software but the cursor moves	You may have installed other display drivers or opened the drawing software when installing the driver. Please uninstall all drivers and close the drawing software, then reinstall the Huion driver. It's better to restart your computer after finishing the installation.
The pen does not work	1. Make sure you are using the pen that originally came with your display. 2. Make sure you installed the driver correctly.
Press Keys does not work	1. Make sure the Press Keys function was enabled in the driver. 2. Make sure you have correctly defined the Press Keys. 3. Check if the press lock switch is on the unlock position.
The computer can't enter sleep mode	When you are not using the display, please do not put the pen on the display surface, which will keep the computer awake.
The side button of the pen doesn't work	When pressing the side button, please make sure that the nib didn't touch the display surface and the distance between the nib and surface is within 10mm.
The side button of the pen doesn't work	Make sure the USB port is functional, if not, please change to another USB port.
The computer can't recognize the display	Check that the USB port is normal. If there is any problem, please use another USB port.

8 / After-service Contact

SHENZHEN HUION ANIMATION TECHNOLOGY CO., LTD.

Bldg 28, Quarter 4, HuaiDeCuiGang Industrial Park, Fuyong Street, Bao'an District,
Shenzhen, 518106, China

The information in this manual is subject to change without notice. For more information,
please contact us by email: service@huion.com

Or visit our website www.huion.com to get the latest driver and user manual.

Safety Warnings and Information

All information regarding the operation of the device can be found in the user manual. Before you begin using it, please familiarize yourself with its contents and adhere to the guidelines provided.

Additionally, review the following information before use:

Usage Warnings

1. Safety Considerations for Using a Graphic Tablet:

Graphic tablets are precision devices; they should not be subjected to strong shocks, pressure, or contact with liquids. Use them only on a stable work surface.

Always use the device in accordance with the manufacturer's recommendations – do not open the casing or modify the electronic components.

2. Stylus and Working Surface:

Use only compatible styluses. Excessive pressure or the use of sharp objects may damage the surface of the tablet.

Store the stylus in a secure location, away from children, due to the risk of swallowing small parts or injury from the tip.

3. Power and Battery (if applicable):

Charge the graphic tablet (if it is battery-powered) only with original or certified chargers. Do not leave the device connected to power without supervision for an extended period.

Avoid using the device while it is charging to prevent overheating.

4. Working at the computer:

When using the graphic tablet for extended periods, take regular breaks to minimize the risk of strain on your wrists, arms, or eyes.

Position the tablet and computer screen ergonomically.

Information on Proper Usage

1. Installation and Configuration:

Before first use, install the latest drivers and software recommended by the manufacturer. Ensure that the computer's operating system meets the device's technical requirements.

2. Software and Updates:

Regularly update the device's software and firmware to ensure stability, security, and full functionality of the tablet.

3. Device Compatibility:

Use the tablet with computers that meet the technical requirements specified by the manufacturer. Using incompatible systems may result in errors during the device's operation.

4. Access for Children:

Graphic tablets are not intended for children under the age of 14. Supervision of device use by minors is essential, particularly in the presence of a power supply or small components.

Additional Precautions

1. Storage and Maintenance:

The tablet should be stored in a dry and clean location, away from sources of heat and moisture. Regularly clean the working surface with a soft, dry cloth; do not use chemical cleaners.

If the device will not be used for an extended period, disconnect it from the computer and store it in the original packaging or a protective case.

2. Disposal:

Used graphic tablets, styluses, and batteries (if applicable) must be disposed of in accordance with local electronic waste regulations. Do not dispose of electronic devices in municipal waste.

3. Environmental Protection and Energy Efficiency:

Disconnect the tablet from the power source and the computer when not in use. Make use of the energy-saving modes provided by the device's software.

EC REP: Dilectro Spółka z Organiczoną Odpowiedzialnością, ul. Brukselska 4, 03-973 Warsaw, Vat no: PL5223032301, rafal.pacula@dilectro.pl

