


Inspiroy S/M/L

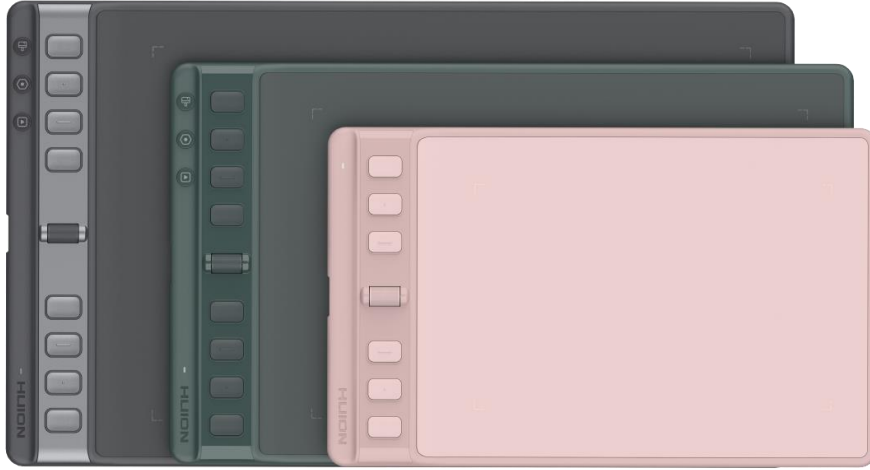


Thanks for choosing HUION Inspiroy 2 pen tablet (Inspiroy 2 S/M/L). Inspiroy 2, the second generation of the HUION Inspiroy series, is a professional pen tablet that owns an innovative Scroller and programmable press keys, which enables you to enjoy drawing and creating with higher efficiency. With HUION Inspiroy 2 pen tablet, you can freely write and draw, making lines varied in width, painting pictures in different shades of colors, and gaining a pen-on-paper experience.

To better know and use this product, please read this user manual carefully.

Note: The pictures in the manual are for reference only and are intended to assist you in understanding the design and function of the product. A change in design or specification may occur without notice.

1. Accessories

Please see the detailed product introduction.

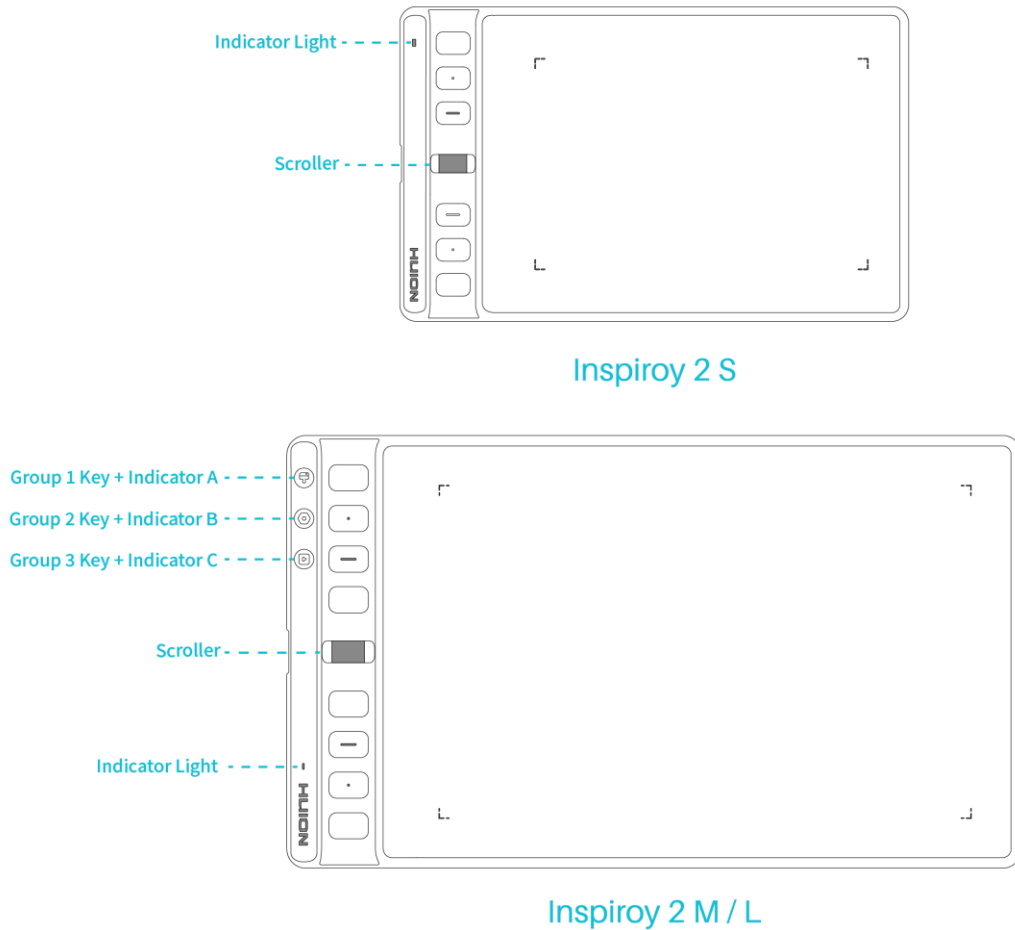

Indicator Light:

There is an indicator light on the pen tablet to help you check the status of the pen tablet and the digital pen. Detailed information for reference is down below:

Product	Color	Status
Inspiroy 2 S	Dim white light	The pen tablet is connected to a device successfully via a cable.
	Bright white light	The pen signal is detected or any of the press keys is pressed.

Product	Color	Status
Inspiroy 2 M/L	Bright white light	The pen tablet is connected to a device successfully via a cable.

Scroller:

Roll the wheel to execute the currently set function.

Group Key:

Each Group Key controls a group of shortcuts assigned to the 8 programmable press keys and the Scroller of a pen tablet. You can set them in the driver. For more information.

Accessories

After unboxing your package, make sure that you have the following items:

Pen Tablet*1


Battery-free Digital Pen*1

Pen Holder*1

Pen Nib*10

USB-C Cable*1


Quick Start Guide*1

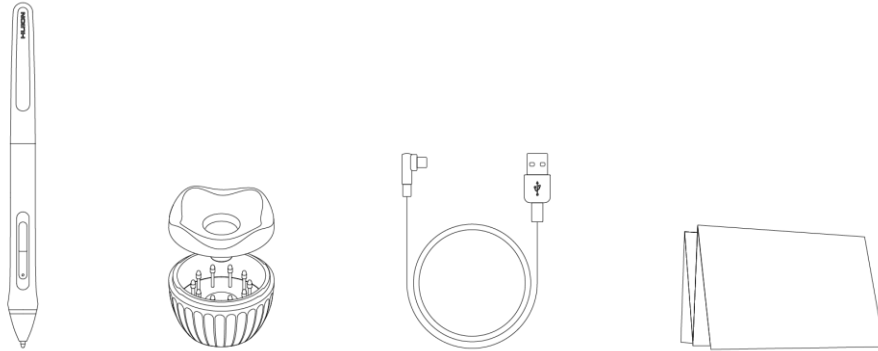

2. Connection

2.1. Wired Connection

1. Take out the USB-C cable from the box (Some computers require a USB-C adaptor), and use it to connect Inspiroy 2 to a computer.
2. Please choose and download the correct driver Driver-Inspiroy 2 S/M/L from our official website.
3. Open the driver and a picture of Inspiroy 2 will appear, indicating that the pen tablet is successfully connected to your computer. Now you can use your pen tablet.


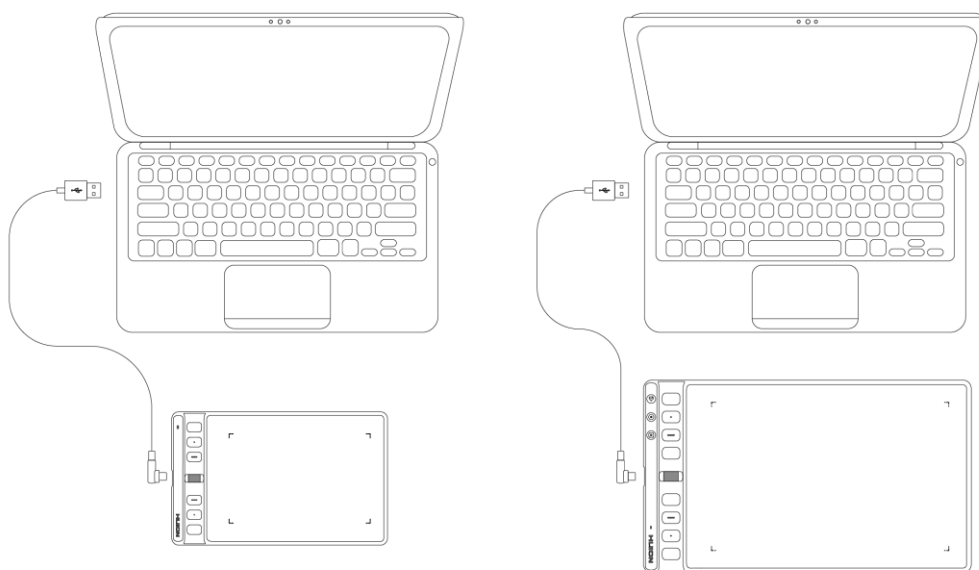


Inspiroy 2 S

Inspiroy 2 M / L

2.2. Android System Connection

1. Make sure that the operating system of your phone or tablet is above Android OS 6.0 or HarmonyOS and supports OTG;
2. For certain models, you need to enter the Setting page of your phone or tablet to enable "OTG";
3. Take out the USB-C adaptor and connect the pen tablet to your phone or tablet as shown in the figure below.

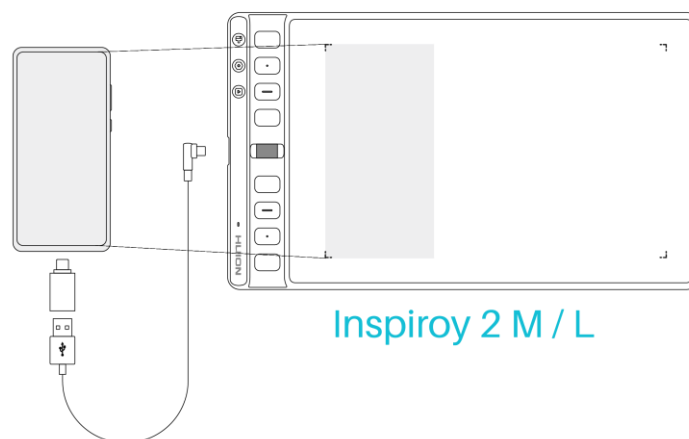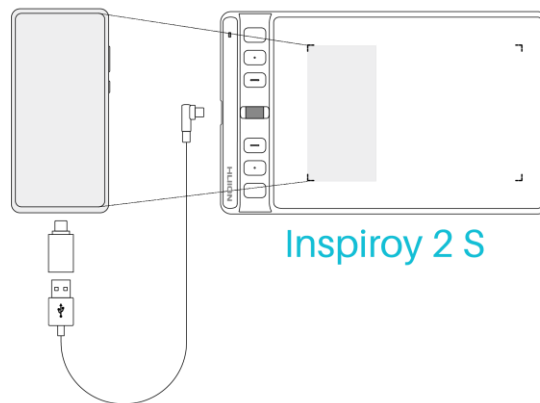

3. Driver Installation

3.1. Windows

How to Install the Driver on Windows Device


Notice:

- ① Before installing the driver, please close all graphic software and antivirus programs. The note ("HuionTabletCore.exe" failed to launch!) below appears only on devices with Windows OS, indicating that the driver is blocked by antivirus programs or drawing applications.
- ② Please make sure your computer operating system is Windows 7 or later.
- ③ Open the driver and a picture of Inspiroy 2 will appear, indicating that the pen tablet is successfully connected to your computer. Now you can use your pen tablet.
- ④ If the connection fails, please restart the driver or your computer.


Note: The pen tablet cannot work once the driver is uninstalled or deleted. In this case please click [Driver-Inspiroy 2](#) to reinstall a driver, and your pen tablet and digital pen will restore to their default settings.

Driver Installation


1. Connect the pen tablet to your computer.
2. Choose the correct driver for your device from our website: [Driver-Inspiroy 2](#)
3. Click Driver-Inspiroy 2 to download it.
4. Double-click the driver and click “OK” to proceed.

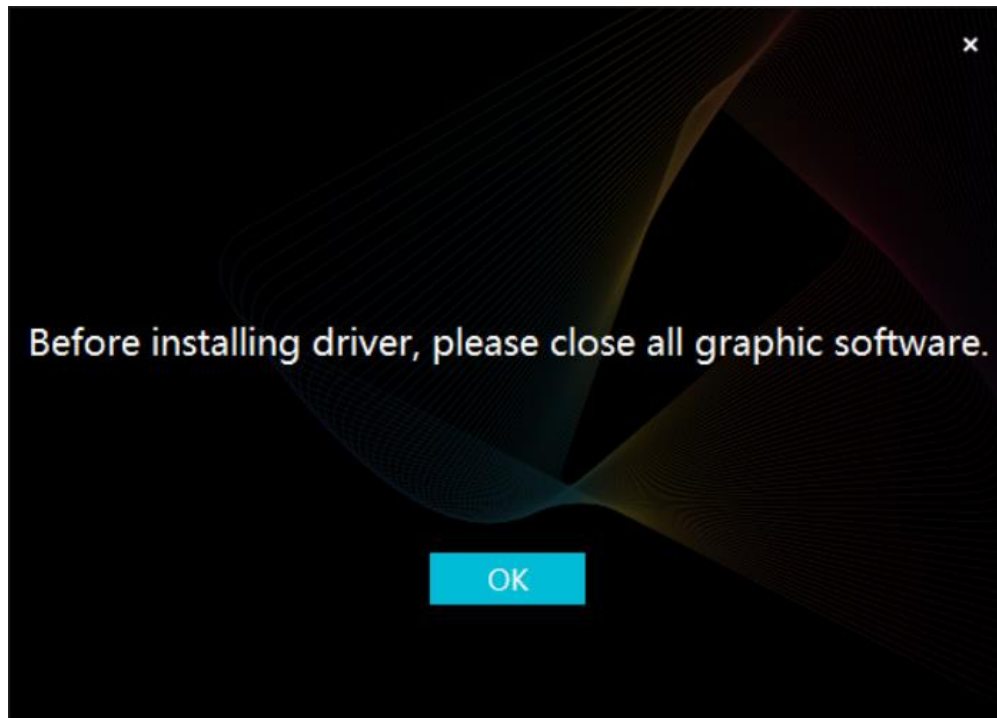


5. Check the box to agree with the User Agreement and click “Install Now”.

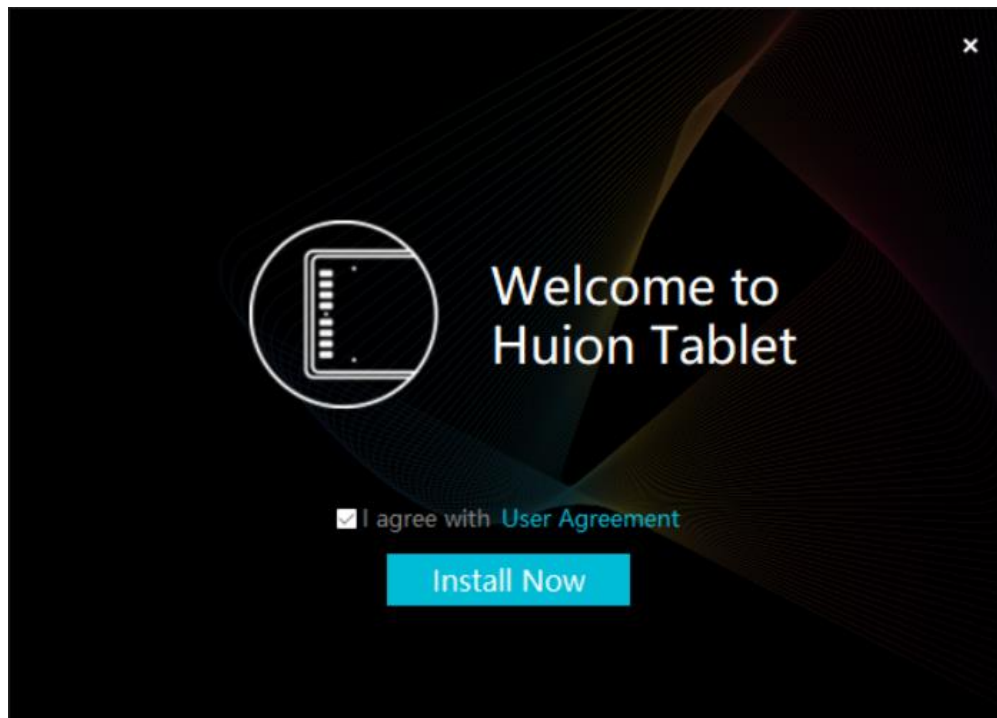

6. After the installation has been completed, click on "Try it now".

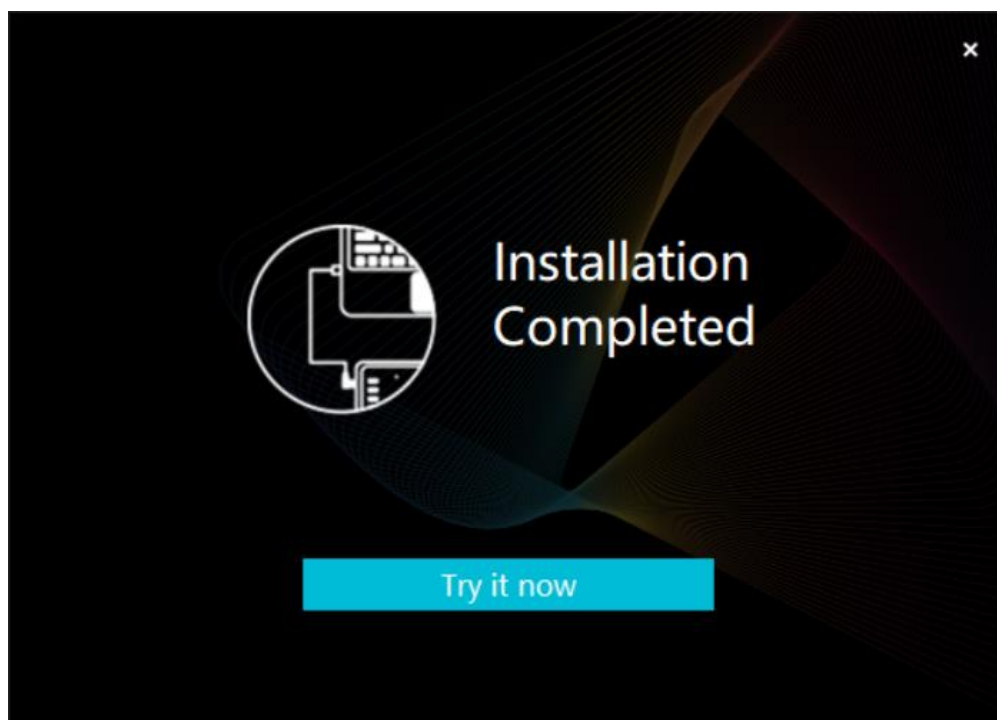

7. A picture of Inspiroy 2 will appear on the driver interface to indicate a successful connection. Now you can use your pen tablet.

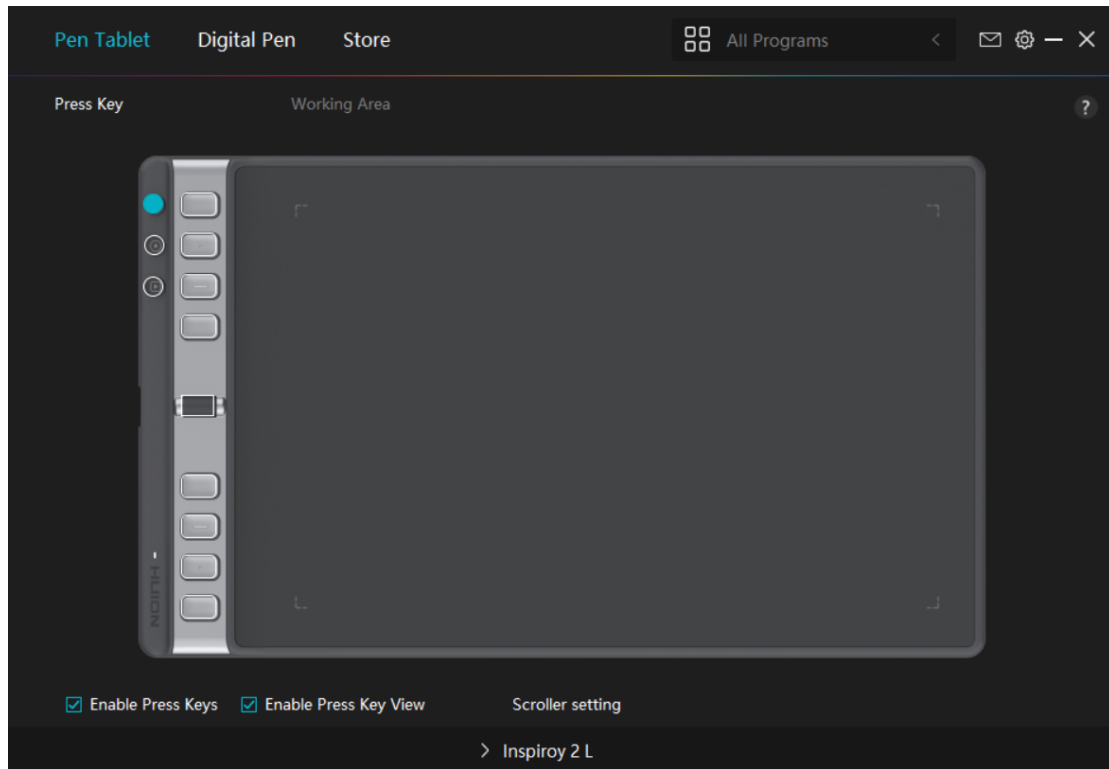

3.2. macOS

How to Install the Driver on Mac Device

Notice:

1. Please make sure your computer operating system is macOS 10.12 or later.
2. Open the driver and a picture of Inspiroy 2 will appear, indicating that the pen tablet is successfully connected to your computer. Now you can use your pen tablet.
3. If the connection fails, please restart the driver or your computer. For more information, please refer to Troubleshooting. See section.


Note: The pen tablet cannot work once the driver is uninstalled or deleted. In this case please click [Driver-Inspiroy 2](#) to reinstall a driver, and your pen tablet and digital pen will restore to their default settings.

Driver Installation

1. Connect the pen tablet to your computer.
2. Choose the correct driver for your device from our website: Driver-Inspiroy 2
3. Click [Driver-Inspiroy 2](#) to download it.
4. Unzip the driver file and drag the HuionTablet driver application into the "Applications" folder.




5. Open the folder and then find and double-click the HuionTablet driver application.

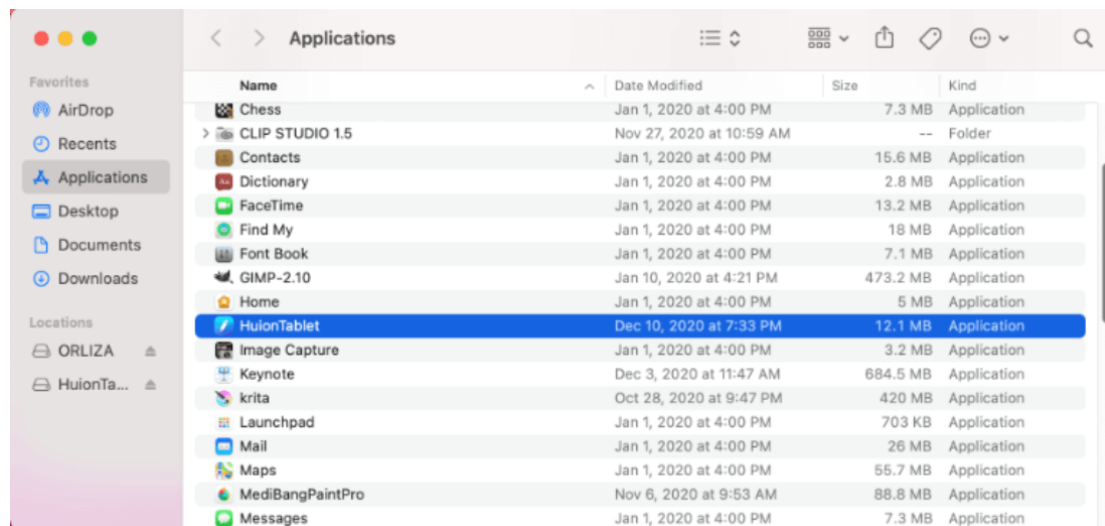


6. Connect the pen tablet to your Mac, and click "Open System Preferences" when prompted. Go to Security & Privacy > Privacy > Accessibility settings and click the lock icon to unlock the settings.

Tick the checkbox on the left of the HuionTablet driver application to enable accessibility. Then click the lock icon to lock the settings.

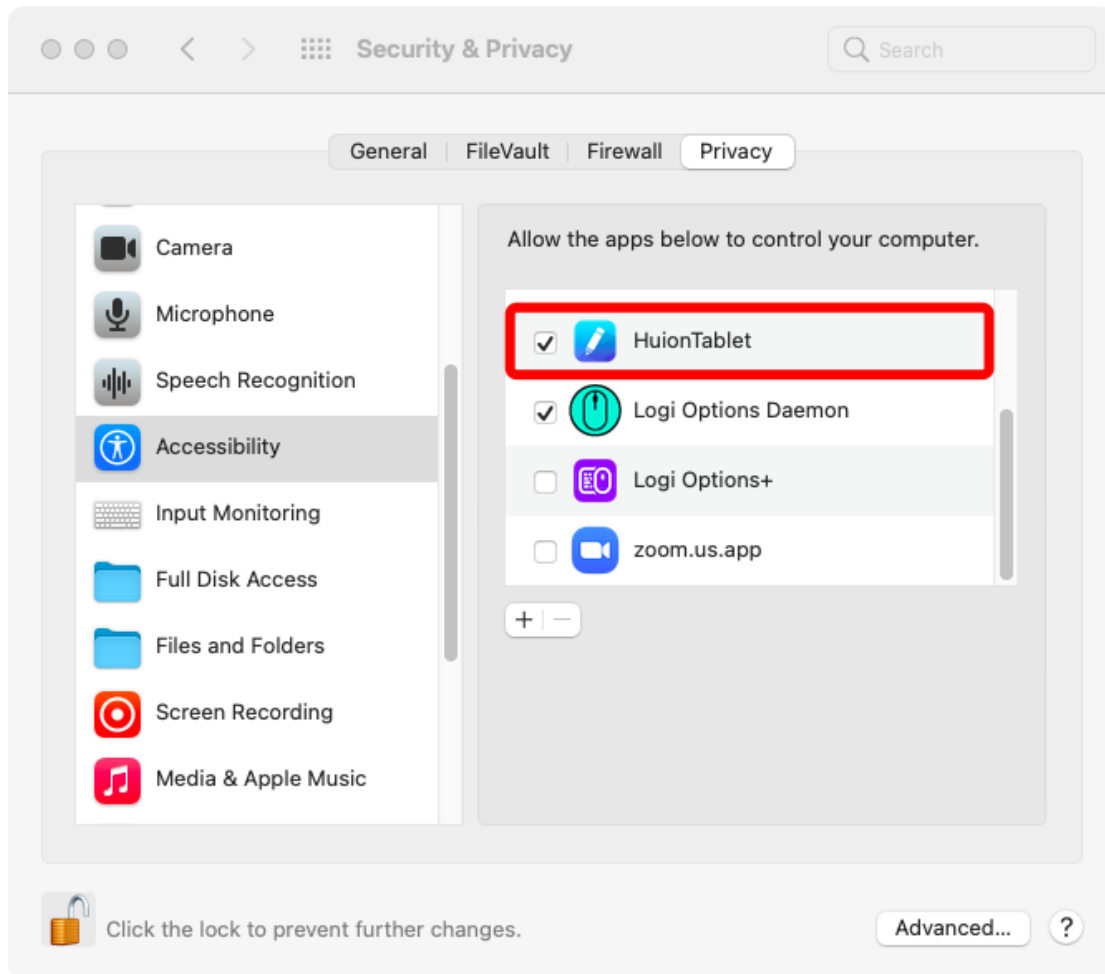

7. A picture of Inspiroy 2 will appear on the driver interface to indicate that the pen tablet is successfully connected to your computer. Now you can use your pen tablet.

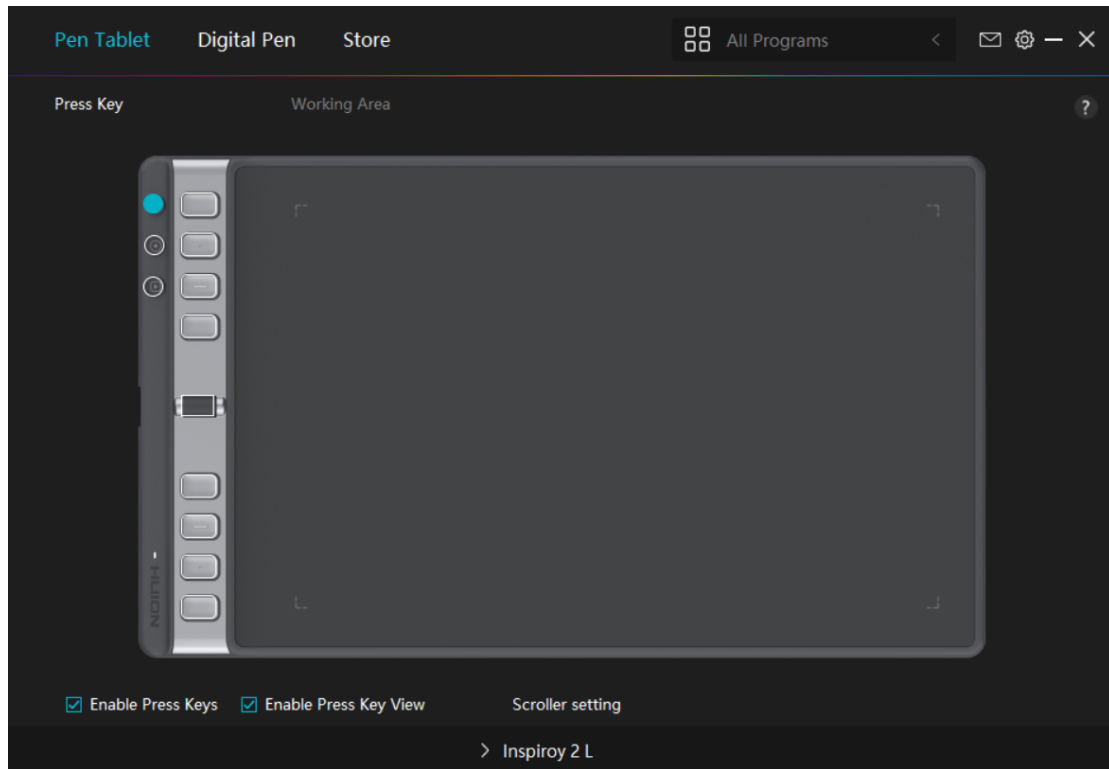

3.3. Linux (Ubuntu)

Note:

- ① Please remember to close the command window and reboot your Linux device after installing the driver, or the driver will not be useful. After rebooting the device, you can access the system main menu to find the Huion Tablet driver and then open it to finish some settings.
- ② If you are running Linux operating system on VMware, you must use the VMware Workstation Pro version. And the Play version of VMware Workstation doesn't support the Huion Tablet driver.
- ③ Some versions of the Ubutun operating system don't support using more than one monitor simultaneously. And we recommend you upgrade your system to 20.04LTS or later if you want to use a Huion painting device on multiple display screens simultaneously smoothly.

Huion Tablet Driver installation packages in 2 different formats are available for Linux devices:

- [tar.xz \(file format\)](#)
- [deb \(file format\)](#)

Here are the step-by-step instructions for installing the driver packages in different file formats respectively:


3.3.1. Instructions for installing the driver package file in tar.xz format.

Linux operating systems supported: Ubuntu


3.3.1.1. Steps to Install:

1. Extract the contents of the driver file, huiontablet_XXXX.tar.xz, into a folder.


2. Open the command window in the folder.

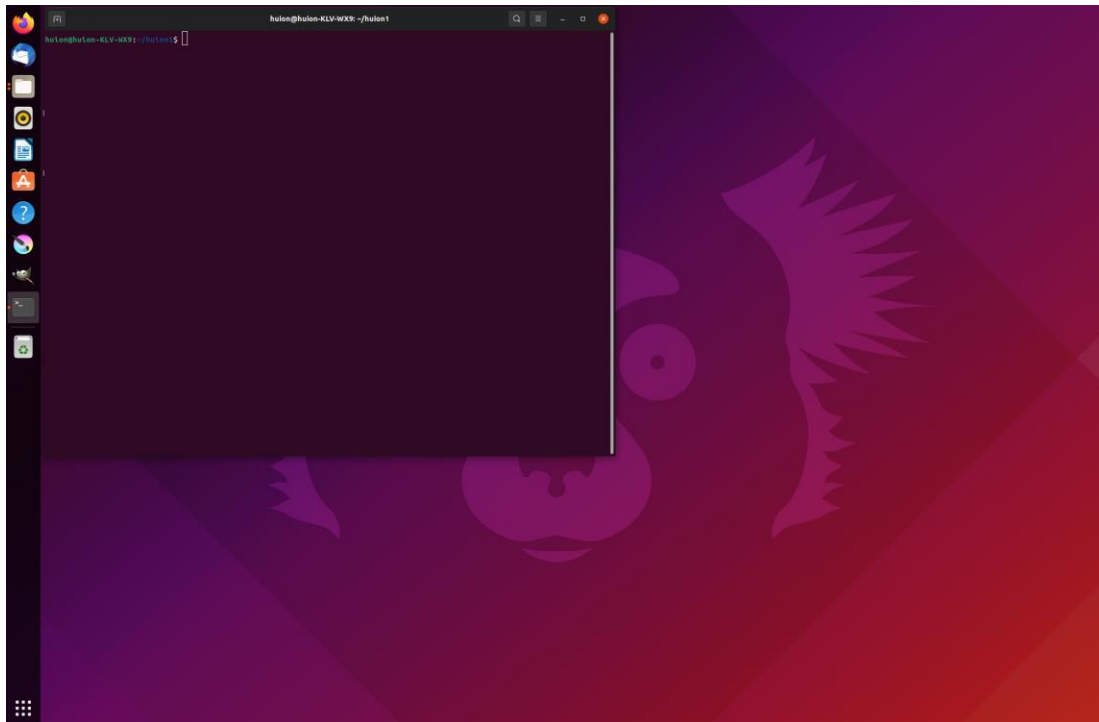


3. Input the following command: “sudo sh install.sh”, and press the enter key on the keyboard to make your Linux device execute it.

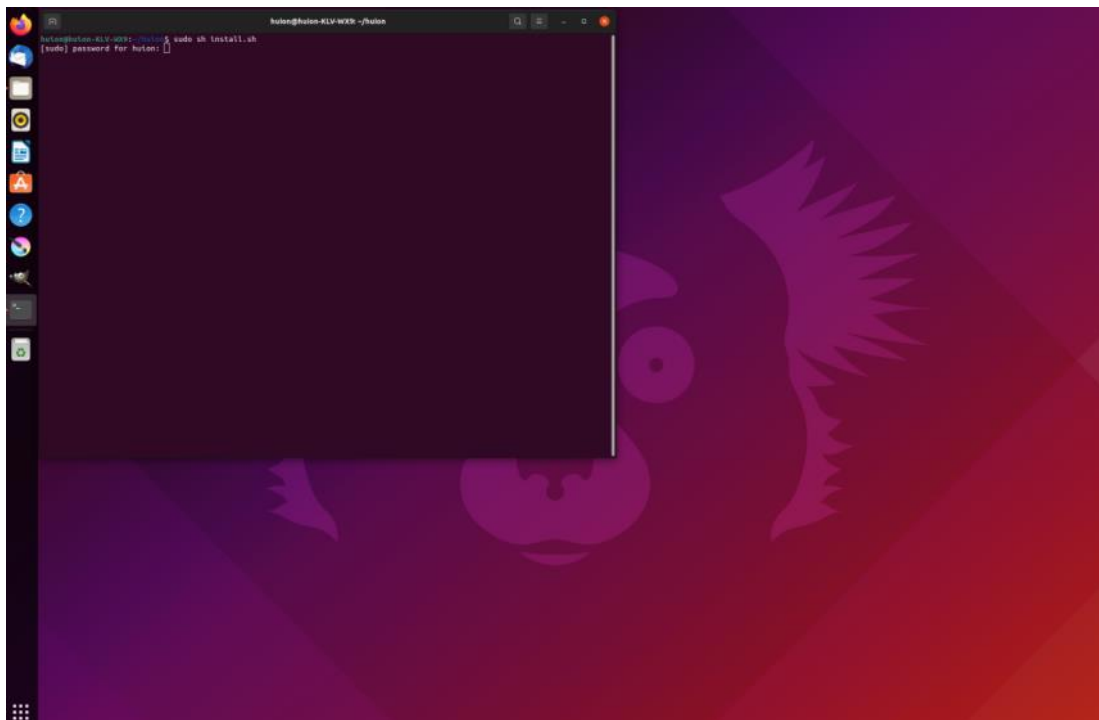


4. Enter the user password to complete the installation.

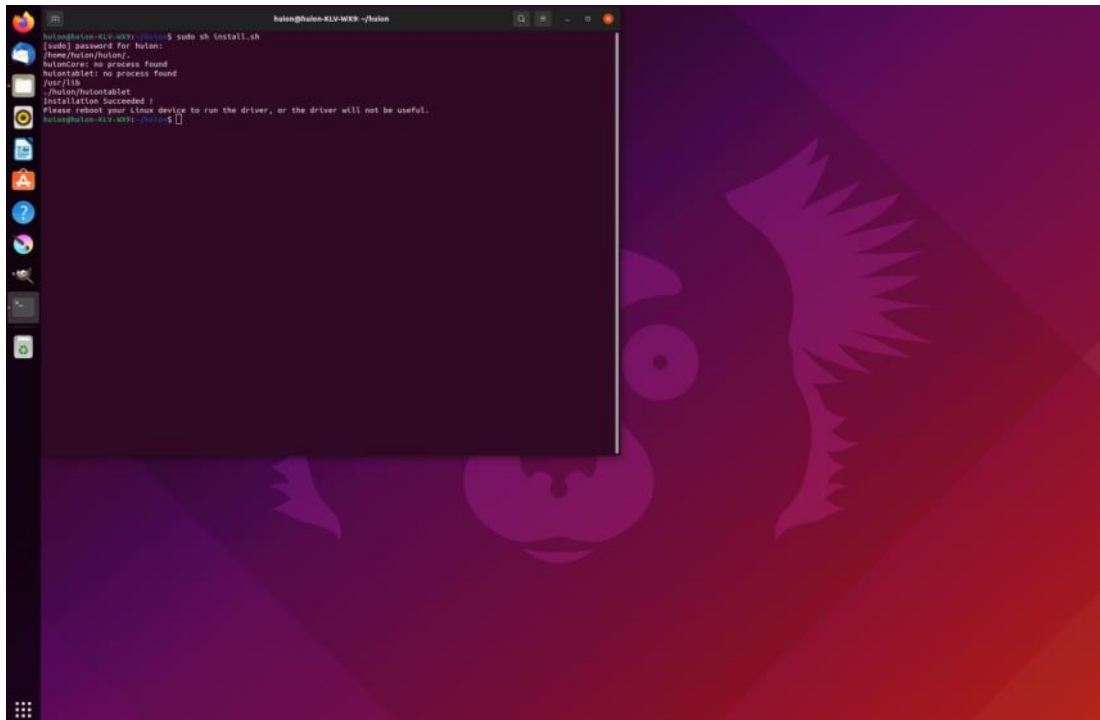

5. Please reboot your Linux device to run the driver, or the driver will not be useful.

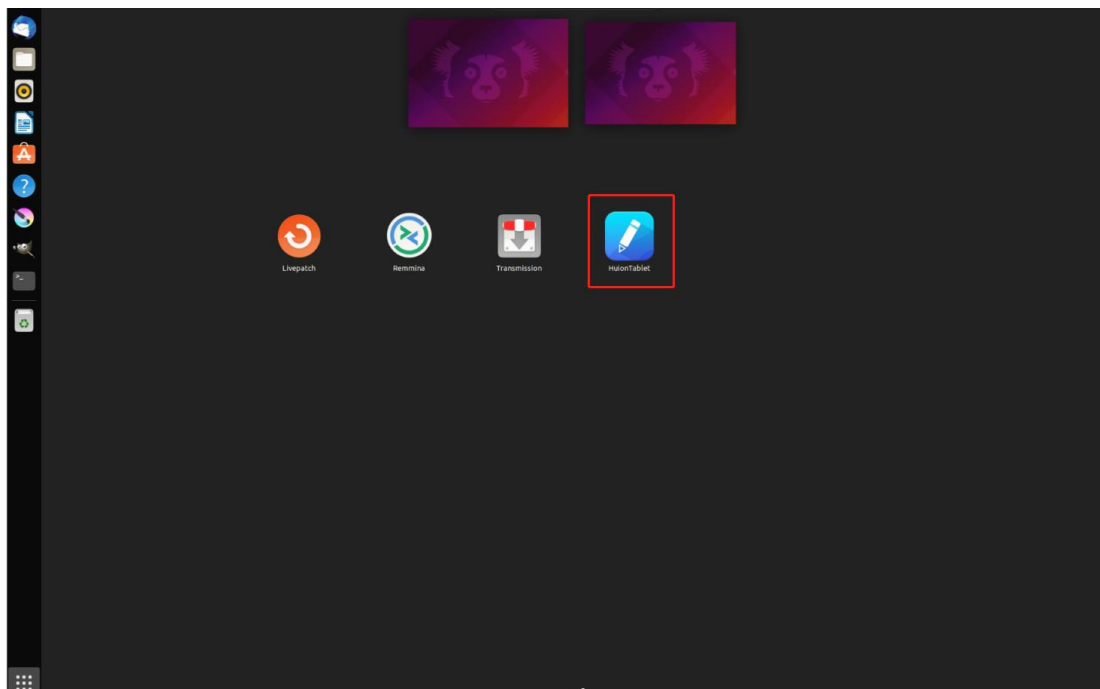


6. A picture of Inspiroy S/M/L will appear on the driver interface to indicate a successful connection. Now you can use your tablet.

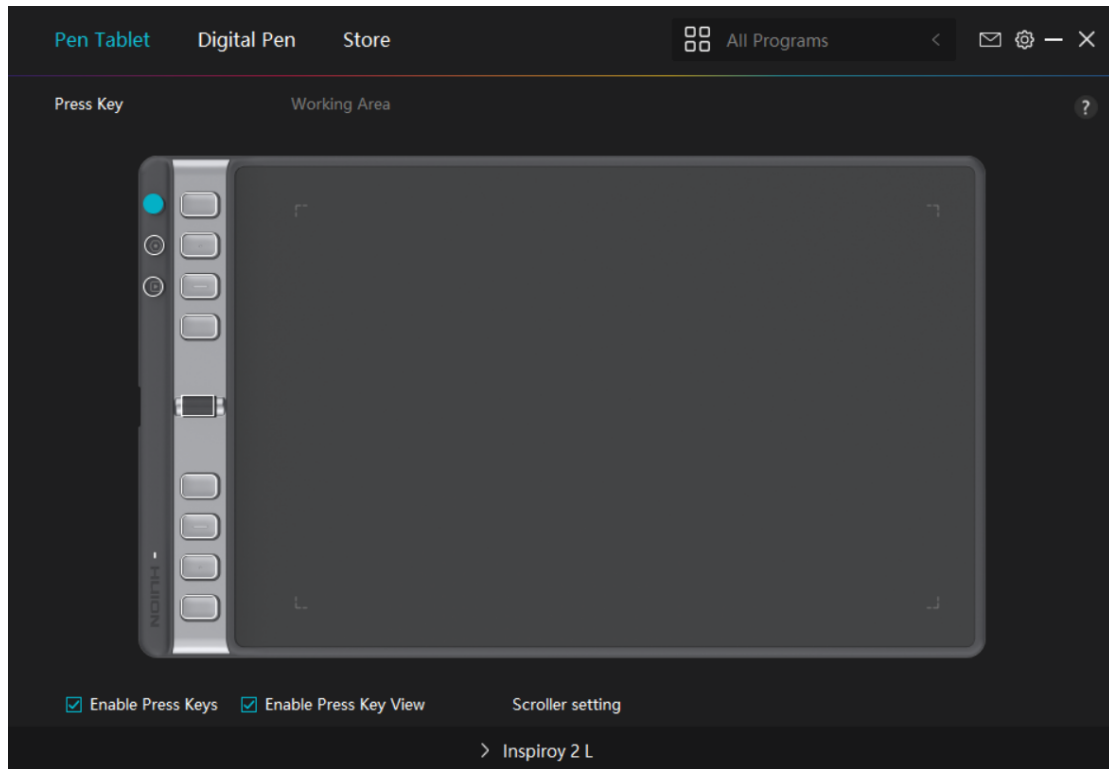


3.3.1.2. Steps to Uninstall:


1. Open the command window in the folder of the driver.

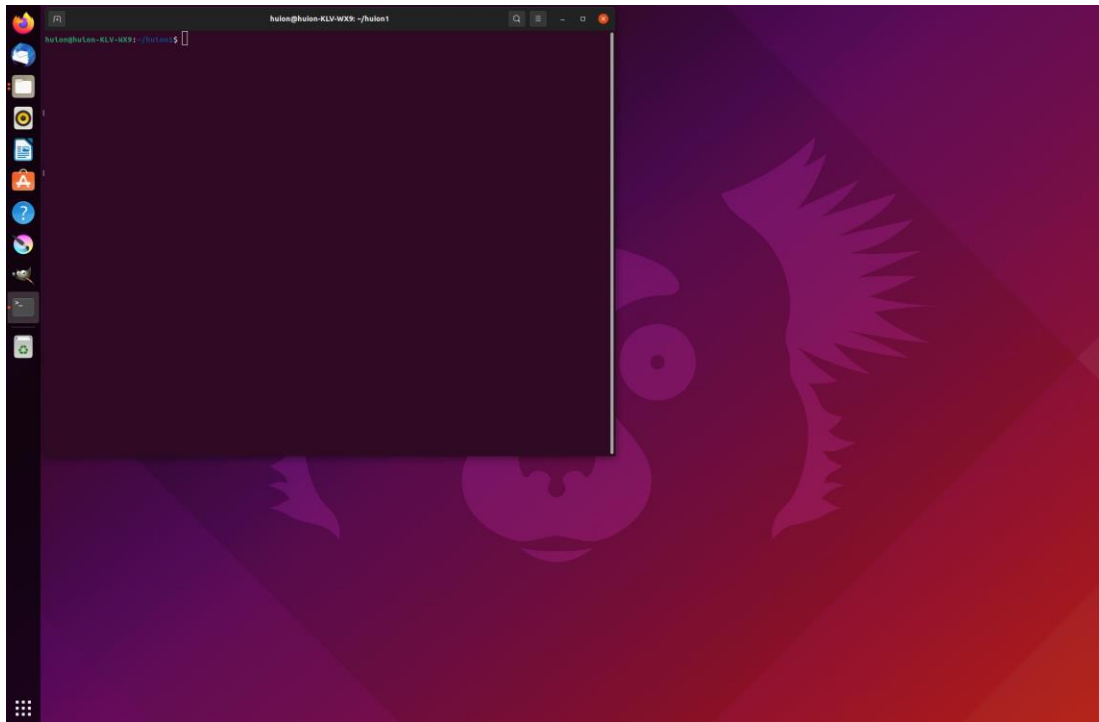

2. Input the following command in the command window: “sudo sh uninstall.sh”, and press the enter key on the keyboard to make your Linux device execute it.

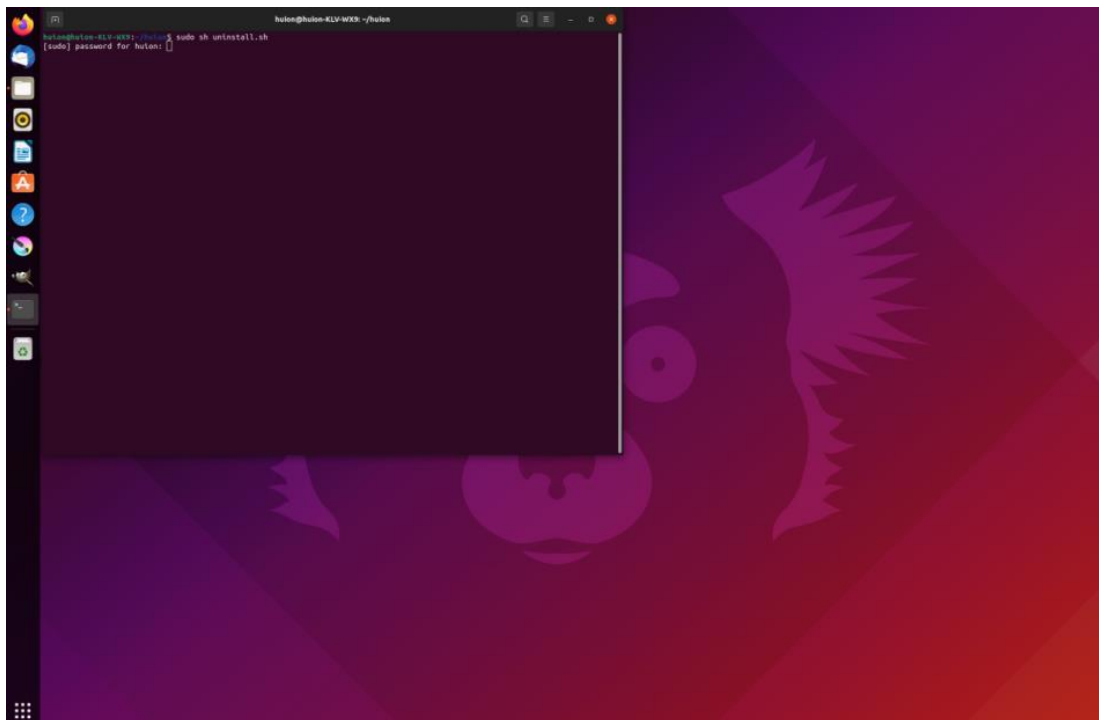

3. Enter the user password to complete the uninstallation.

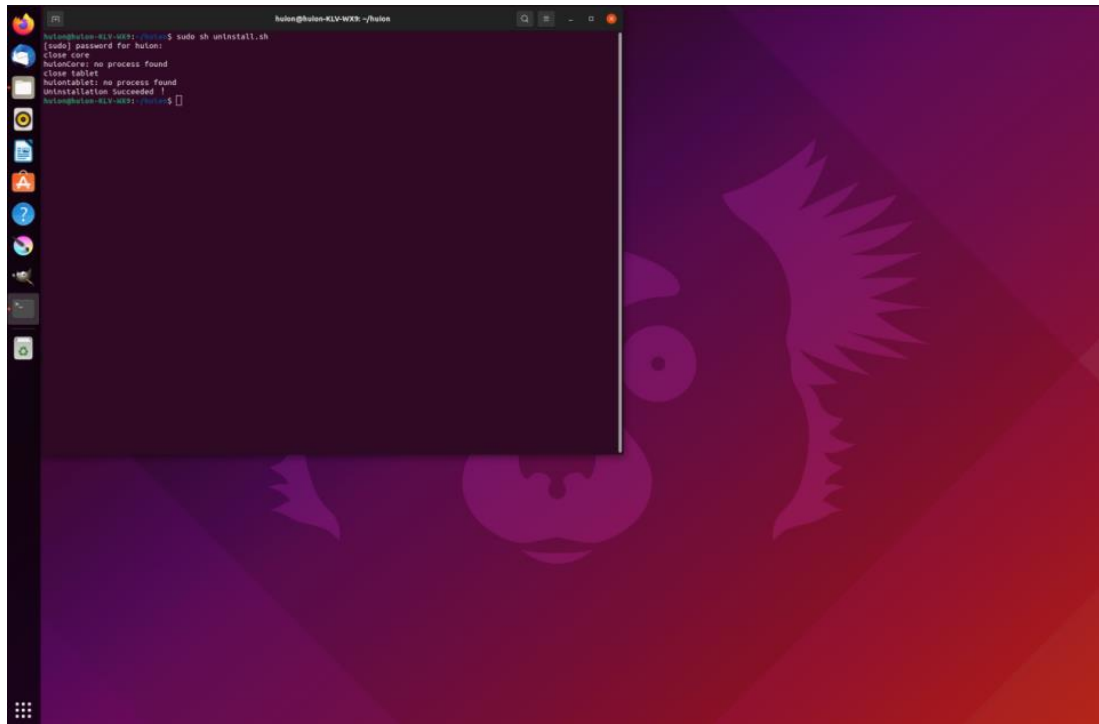


3.3.2. Instructions for installing the driver package file in deb format.



Linux operating systems supported:Ubuntu

3.3.2.1. Steps to Install:


1. Open the folder and double-click the driver file in deb format to enter the system default interface of installing the driver on the application store, then click to install.

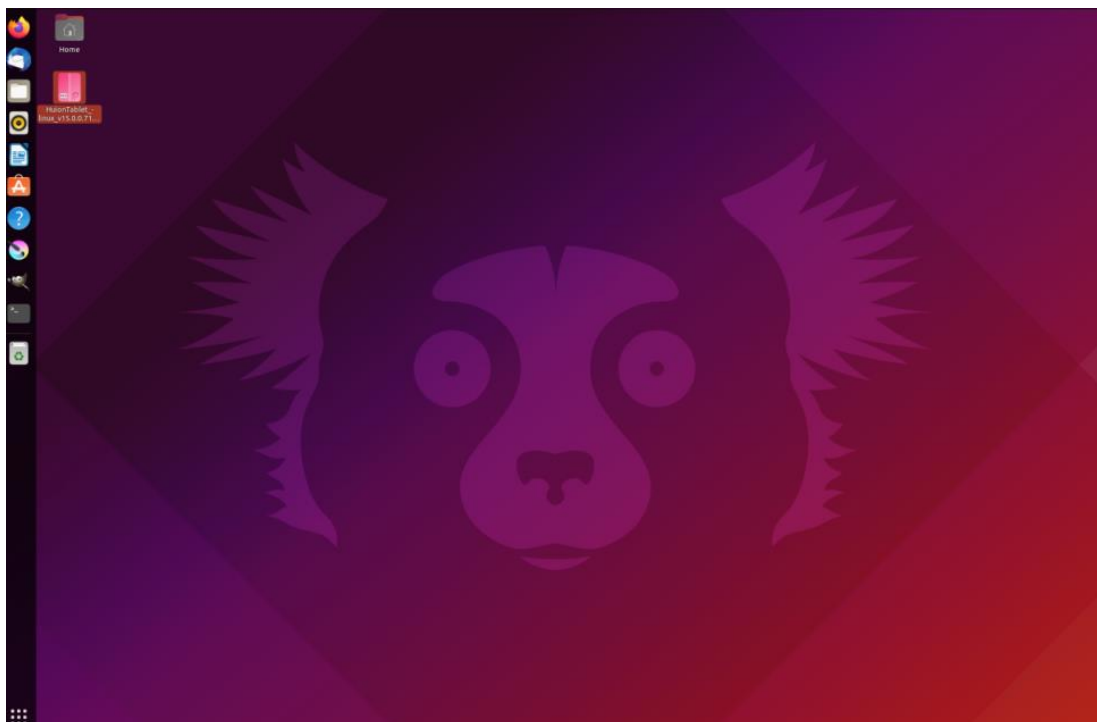

2. Enter the user password to complete the installation.

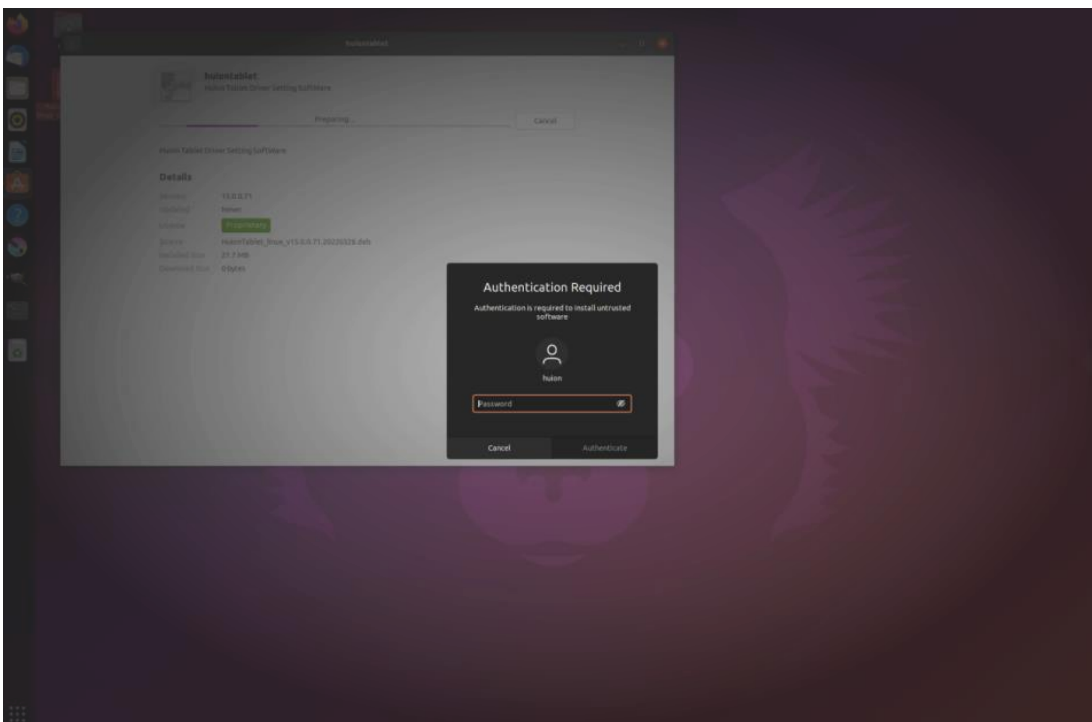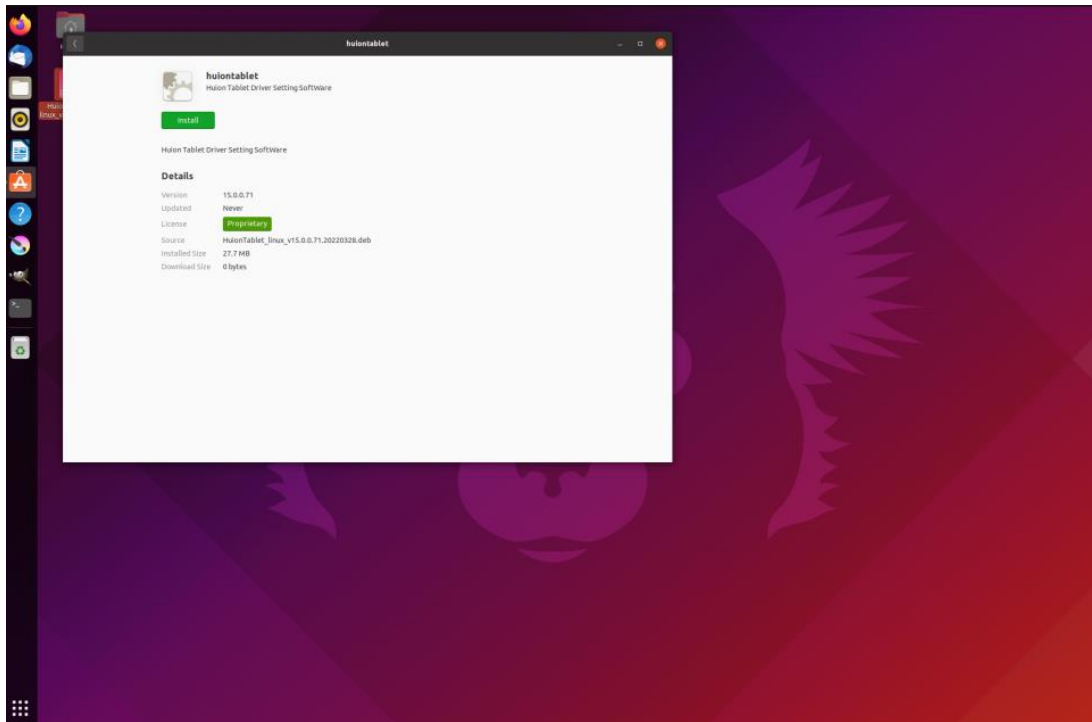


3. Please reboot your Linux device to run the driver, or the driver will not be useful.

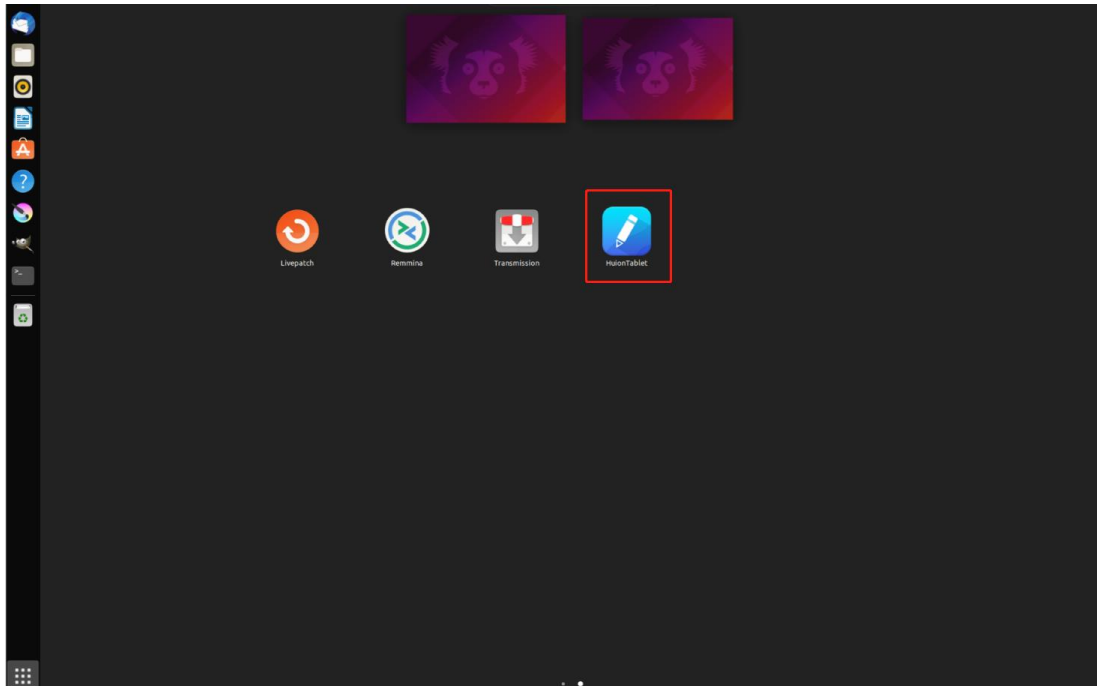


Tip: Please ensure that your Linux device has been connected to the internet when installing the driver, or the installation will fail when entering the application store interface.

4. A picture of Inspiroy S/M/L will appear on the driver interface to indicate a successful connection. Now you can use your tablet.

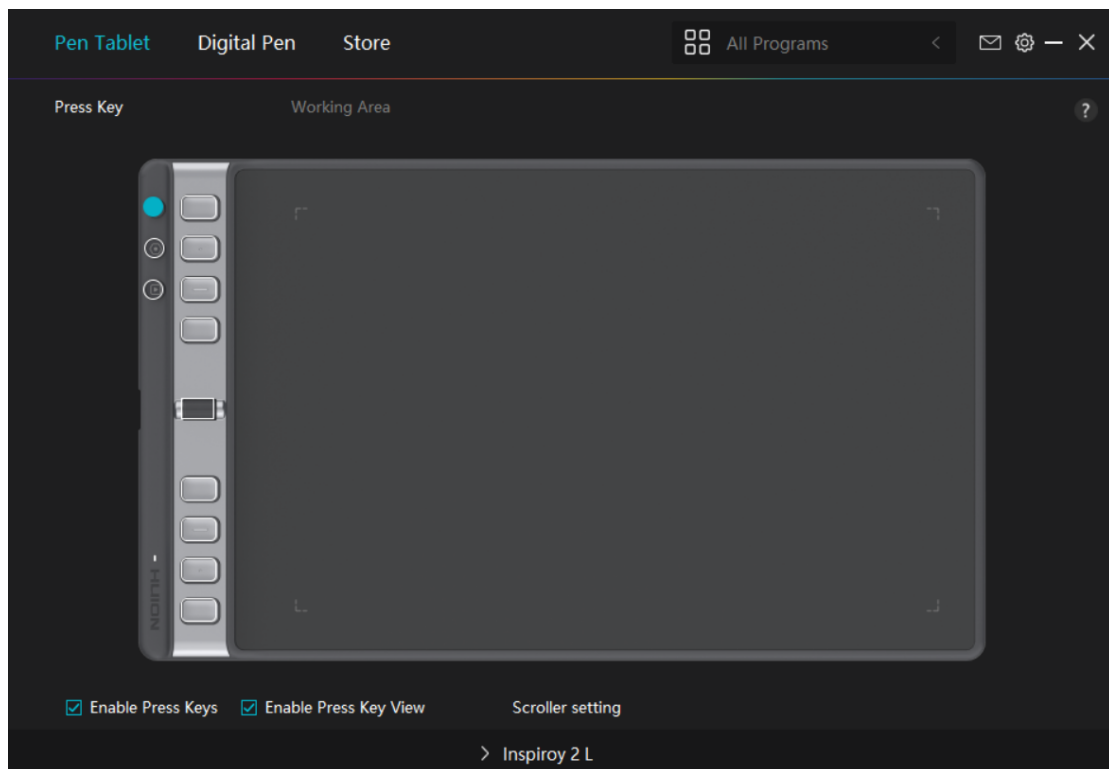

3.3.2.2. Steps to Uninstall:


1. Enter the interface of the installed applications on the system's built-in application store.
2. Find the driver and click to uninstall it.

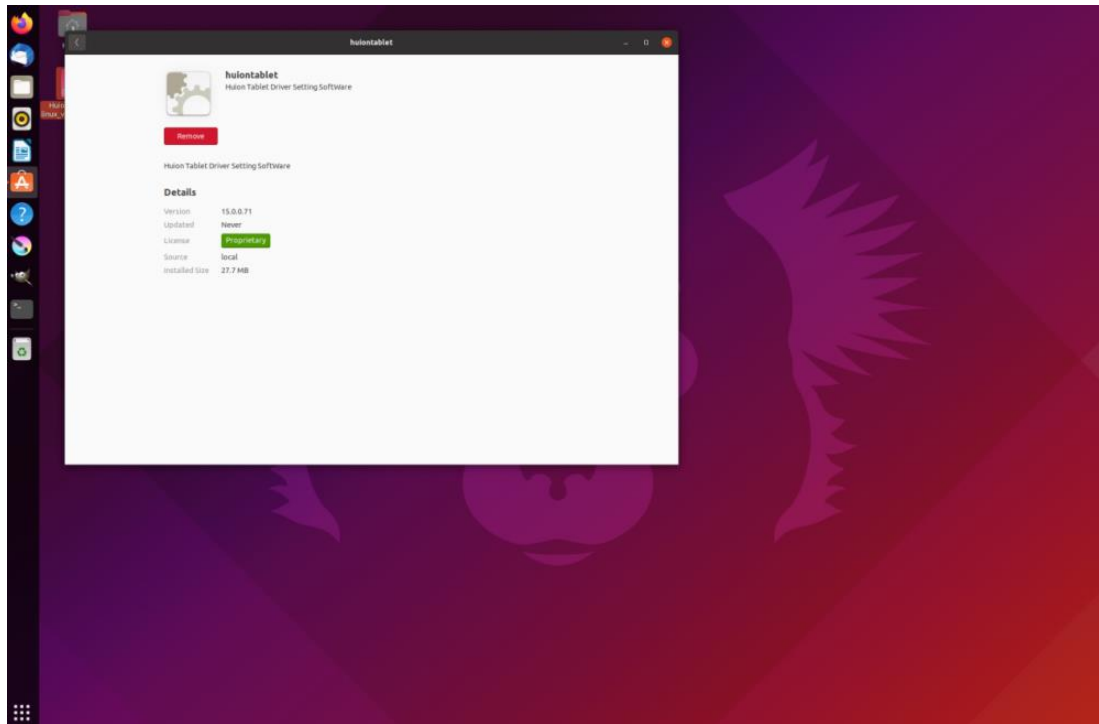

Tip: If you can't access the system's built-in application store, you can search out the driver file, huiontablet_xxx.deb, then double-click it to enter the installation interface, and click the remove button to uninstall it.

4. Driver Setting and Functions

4.1. Driver Interface Overview

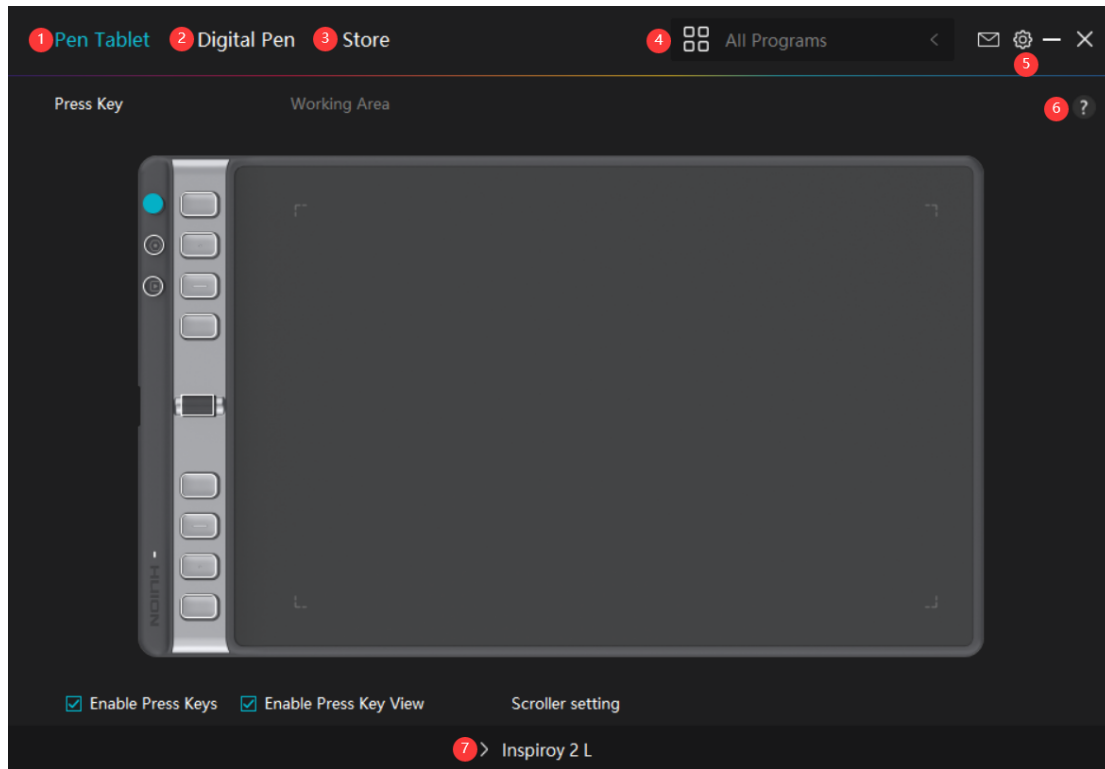

① Pen Display

On the “Pen Tablet” interface, Users can set functions of the tablet, including Press Key and Working Area Set. [See Section](#)

② Digital Pen

Users can set functions of the pen on this “Digital Pen” interface, including Press Key, Mode selection, Pressure Sensitivity Adjustment, and Pressure Test. [See Section](#)

③ Store

Huion Store is where you can get the latest information about the product such as its FAQ or sales promotion. In addition, you can also purchase Huion’s other products or accessories here.

④ Add Programs

- 1) Some programs which have already been opened will appear for you to choose from after clicking Add a Program on the screen. For more programs, you need to open them and then enter this interface to add, or click Browser, select the program on your computer, and click Open to get it added.
- 2) For different programs, you can make different settings for the working area and the digital pen. Then when you launch another program, the Driver will automatically recognize it and the setting features will change to its corresponding ones.
- 3) When you select All programs, settings for the working area and the functions of the digital

pen are valid for every program that is not customized.

⑤ Setting

Users can set the functions of a driver on this interface, including check out Device information, Backup setting, General setting, and its version. [See Section](#)

⑥ Common Problems

Click "?" and jump to Forum in our website <https://support.huion.com/en/support/home> to get a user manual or feed back the problems to us.

⑦ Switch between Devices


The Driver is able to support two devices at most. Functions of them can be customized by users respectively. When switch to one of them, functions change to its corresponding ones.

4.2. Pen Tablet Setting

4.2.1. Press Key

You can customize the functions of these press keys according to your own habits. (You can also uncheck "Enable press keys" in the lower left corner to turn off these functions.)

1. Place the cursor over one of the buttons on the screen of your computer to check its default value.
2. Click a button and assign the function you want to it. (You can choose among the functions below.)

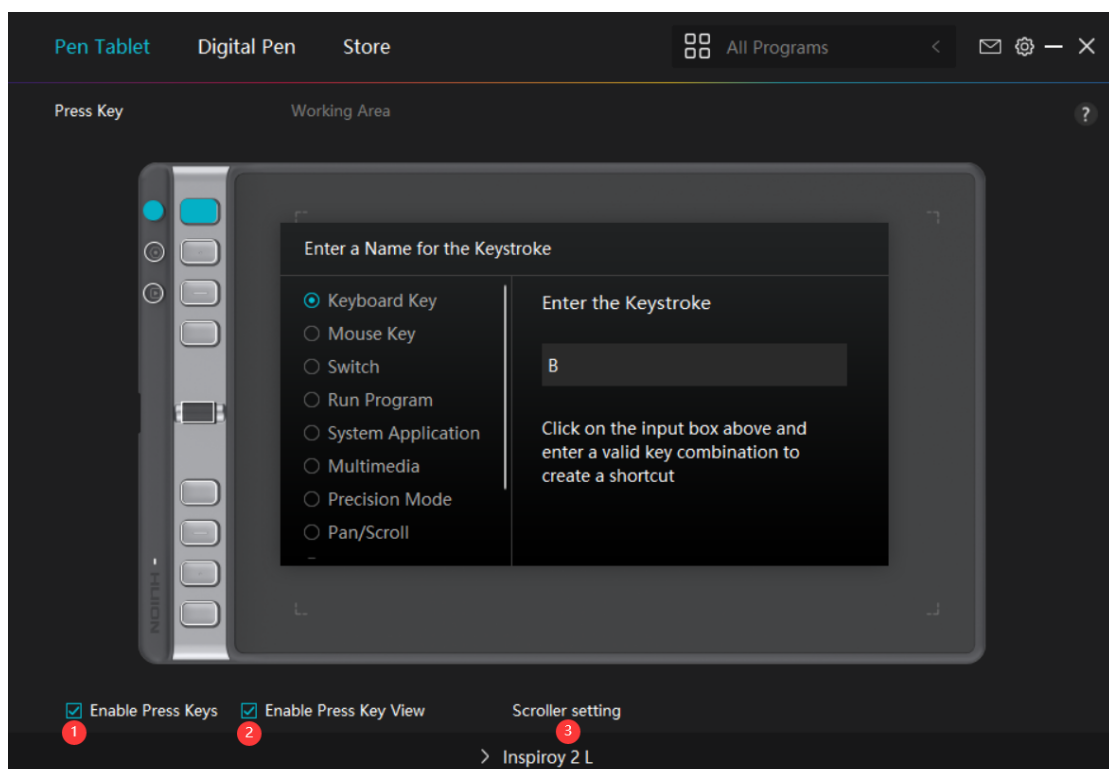

Refer to this table of settings below to help you decide if you want to change the existing settings.


Note: The performance of functions in the table below is up to the device that you have connected. And this table is subject to change without notice.

The settings of the press keys' functions can be found in the following list. The functions of the press keys can be set as:


Keyboard Key	Click on the input box above and enter a valid key combination to create a shortcut.
Mouse Key	Select the functions of a Mouse or Wheel. Mouse: Mouse Left Button, Mouse Right Button, Mouse Middle Button, and Double-left Click. Wheel: Wheel Forward and Wheel Backward. Other functions: Ctrl, Alt, Shift, and Win.
Switch	Select between Switch Screen, Switch Brush, Mouse Mode On/Off, and Game Mode On/Off.
Run Program	Click Browse and select the program that you want to run quickly. After that, press the key to launch the item.
System Application	You can apply these functions to press keys: Lock the Screen, Sleep, Power Off, Show/Hide Desktop, Task View, Start Menu, and Calculator.
Multimedia	You can apply these functions to press keys: Previous Song, Next Song, Play/Pause, Volume up, Volume down, and Muted.
Precision Mode	You can toggle between normal precision and a precision that you choose, from Fine to Ultra Fine. In the Precision Mode window that appears, move the slider to set the precision that you toggle into. For example, if you assign Precision Mode to a pen button, when you press the pen button, you switch to working in the precision that you selected from the slider. When you press the pen button again, you switch back to working in the normal precision. Press "Esc" or press the pen button for the third time to exit Precision Mode.
Pan/Scroll	This function allows you to pan and scroll in a document or item by moving the pen tip up and down or right and left. When you select Pan/Scroll, the Scroll Speed window appears. Move the slider to your preferred scrolling speed.
Quick Menu	Pick it up and you can use the key to pull up the Quick Menu. Detailed information for reference is down below this table.
Fixed Pressure Sensitivity	You can lock the pressure at the current level until you release the component. For example, if you assign this setting to a pen button, you can paint with pressure sensitivity enabled in your application until you reach the brush size you like. Then, press and hold the pen button to lock in that brush size as long as you are pressing and holding the button.
None	When select None, the keys will not work.

Note: The pictures are for reference only.

The specific settings of the Quick Menu are as follows:

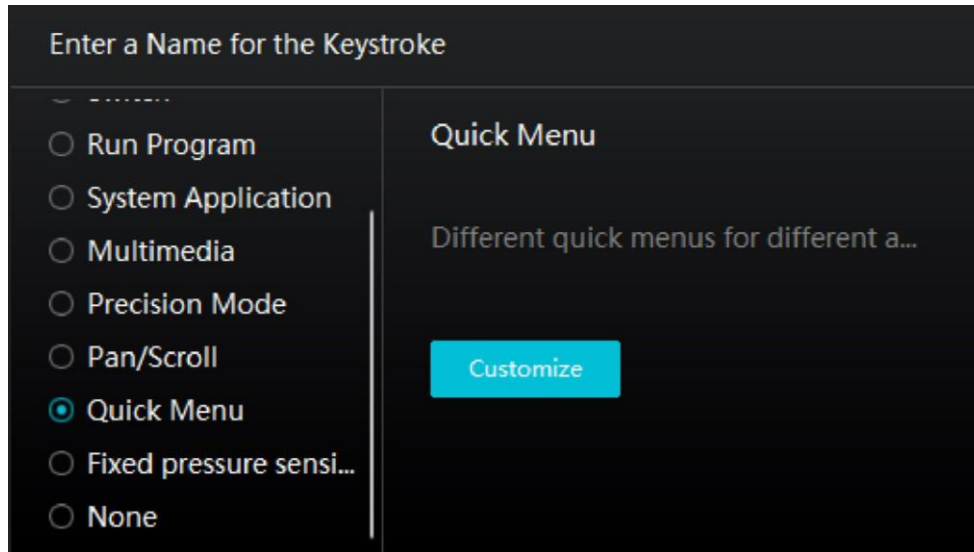

Click Customize in the picture above to call out a quick menu (see picture 1). For each of the six buttons on the left, users can enter a name for it and set unique function for it. After that, users can call up the Quick Menu by pressing the key (see picture 2). The menu disappears after a click on any of the six buttons. By clicking “Fix” once the menu will be fixed on the desktop while after a second try the “Fix” button changes to “Close” and the menu disappears (see picture 3). Put the cursor on the menu to drag it.

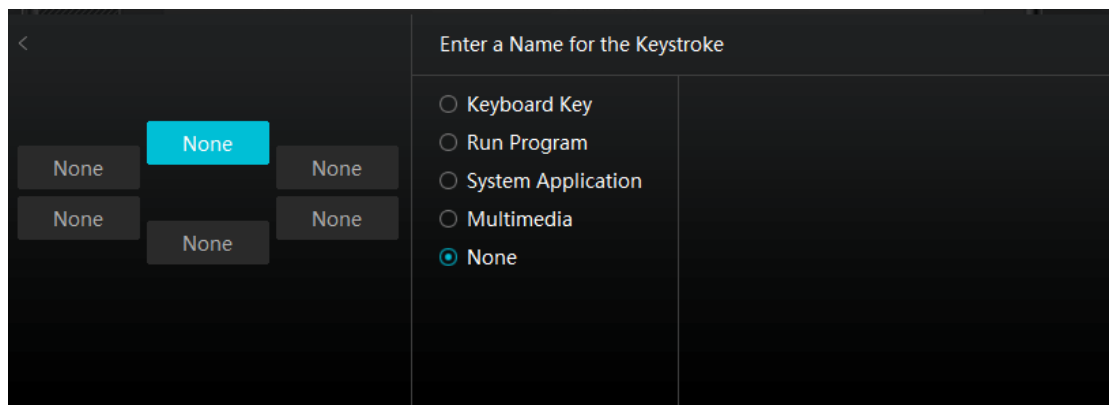

Picture 1




Picture 2



Picture 3


① Enable Press Keys

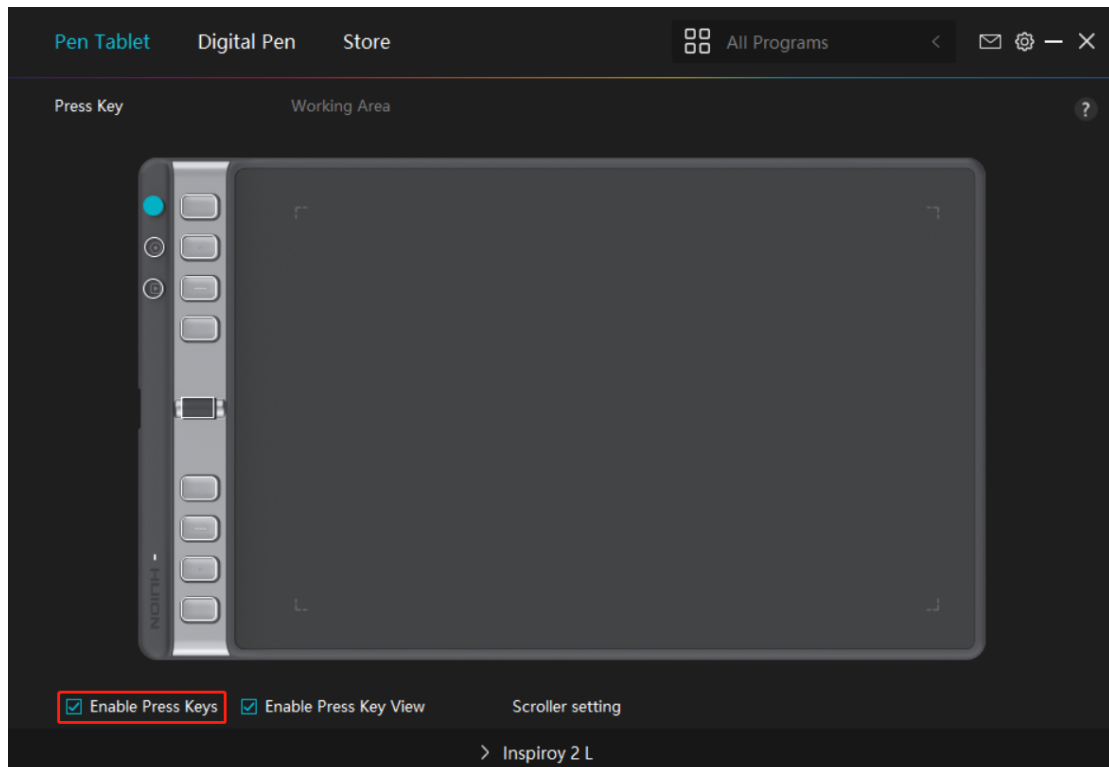


When you click to select “Enable Press Keys”, all the press keys on the pen tablet are enabled and their functions can be set.

When you deselect this function, only the Group Keys on the pen tablet can change the functions of the Scroller, all other press keys will be disabled and their functions can't be set.


② Enable Press Key View

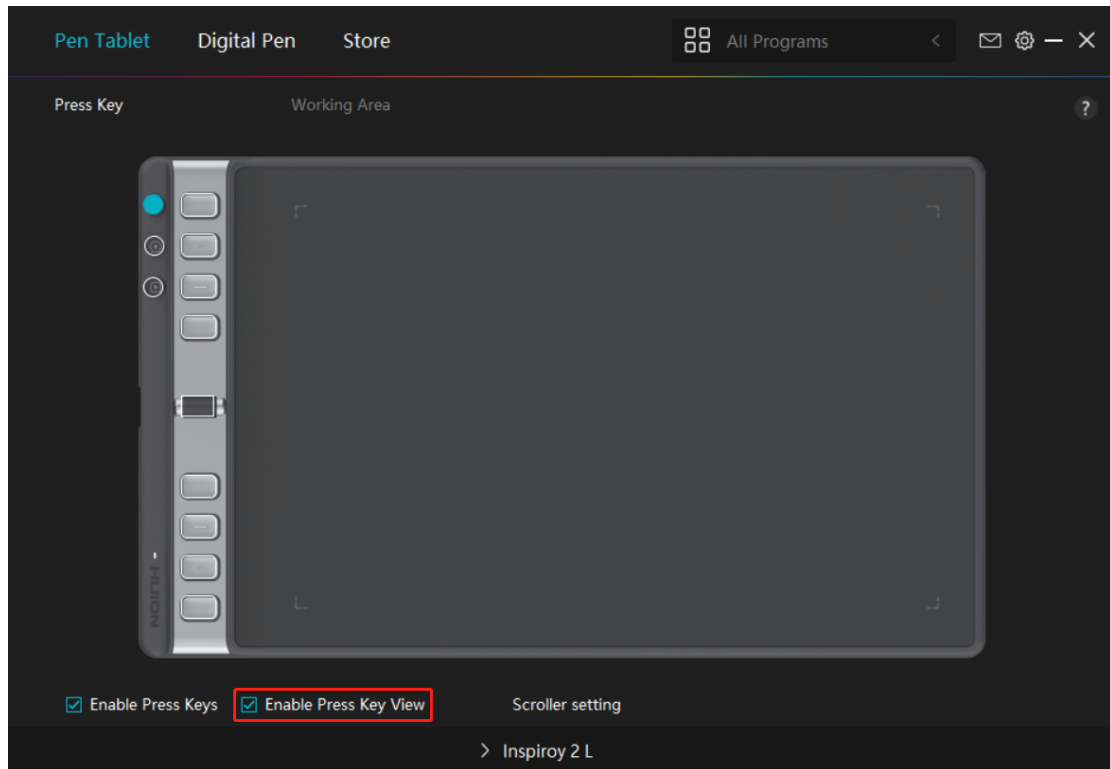


By selecting "Enable Press Key View", when you press a key on your pen tablet, the Press Key View will be displayed on the left by default. It shows the corresponding group of user-defined shortcuts assigned to the 8 press keys and the Scroller.

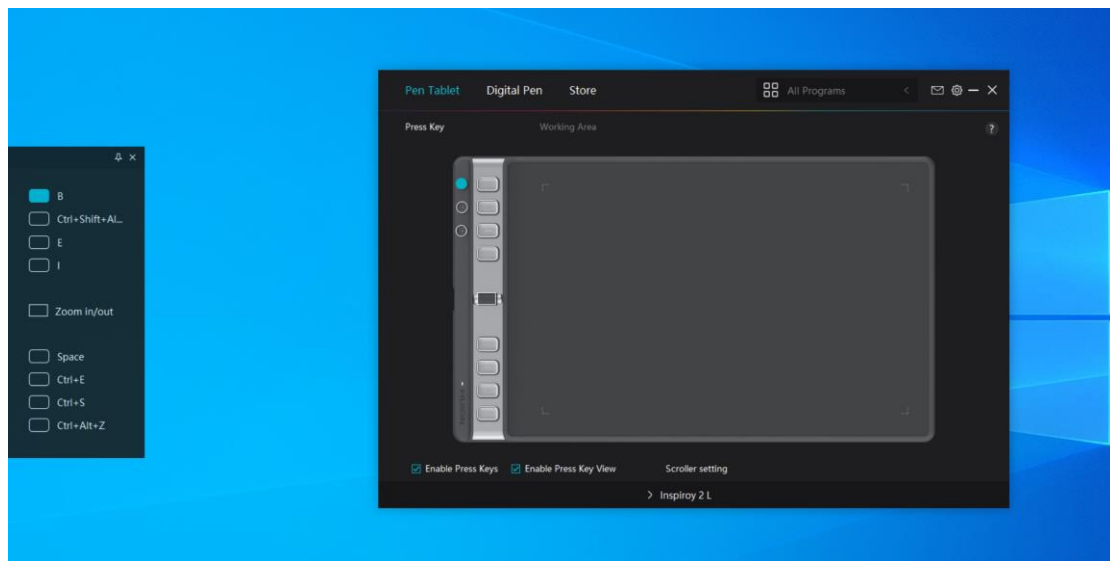

You can adjust the position of the Press Key View optionally, or fix it on the desktop by clicking the icon on the top right corner, as shown in the figure below.

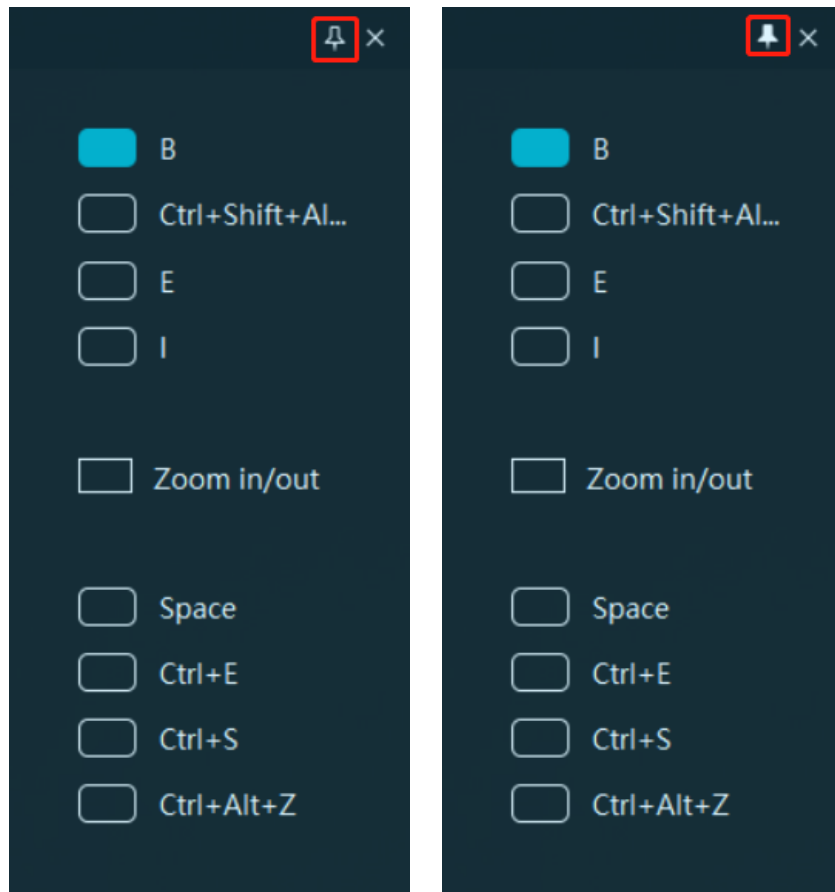


③ Scroller Setting

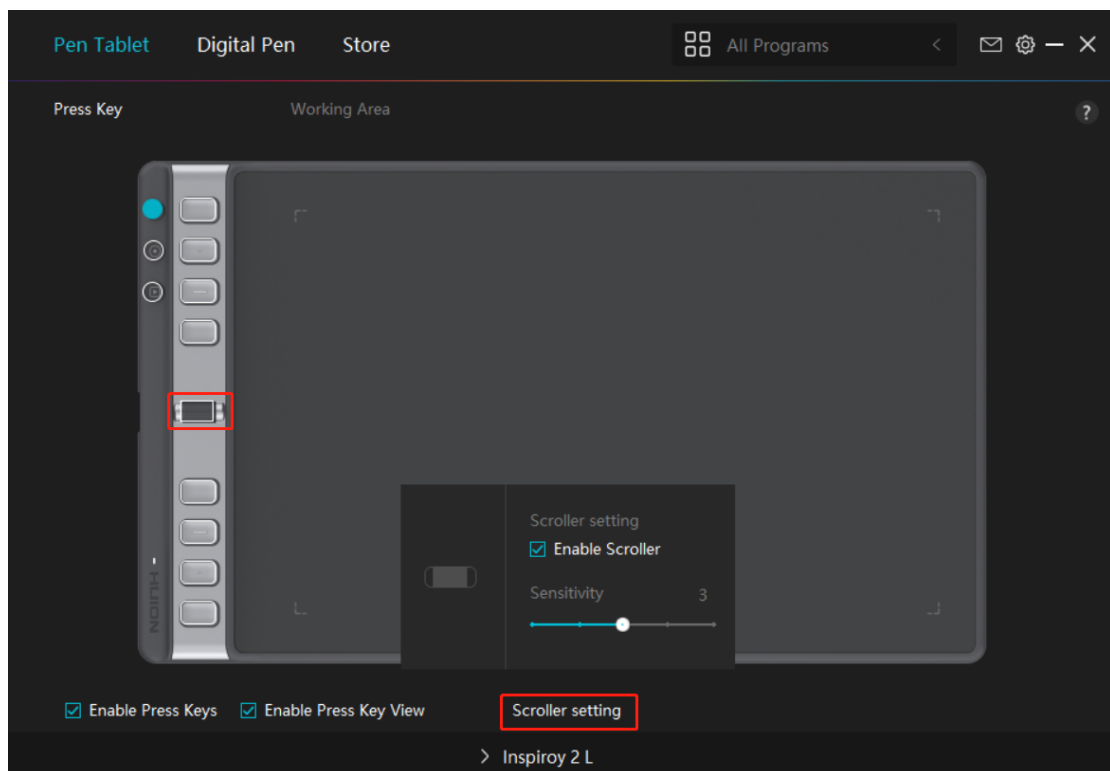

Click "Scroller setting" and select "Enable Scroller", now you can set functions for the Scroller and

use them. You can also move the Sensitivity slider to set the scrolling speed (at five levels) according to your usage habits.

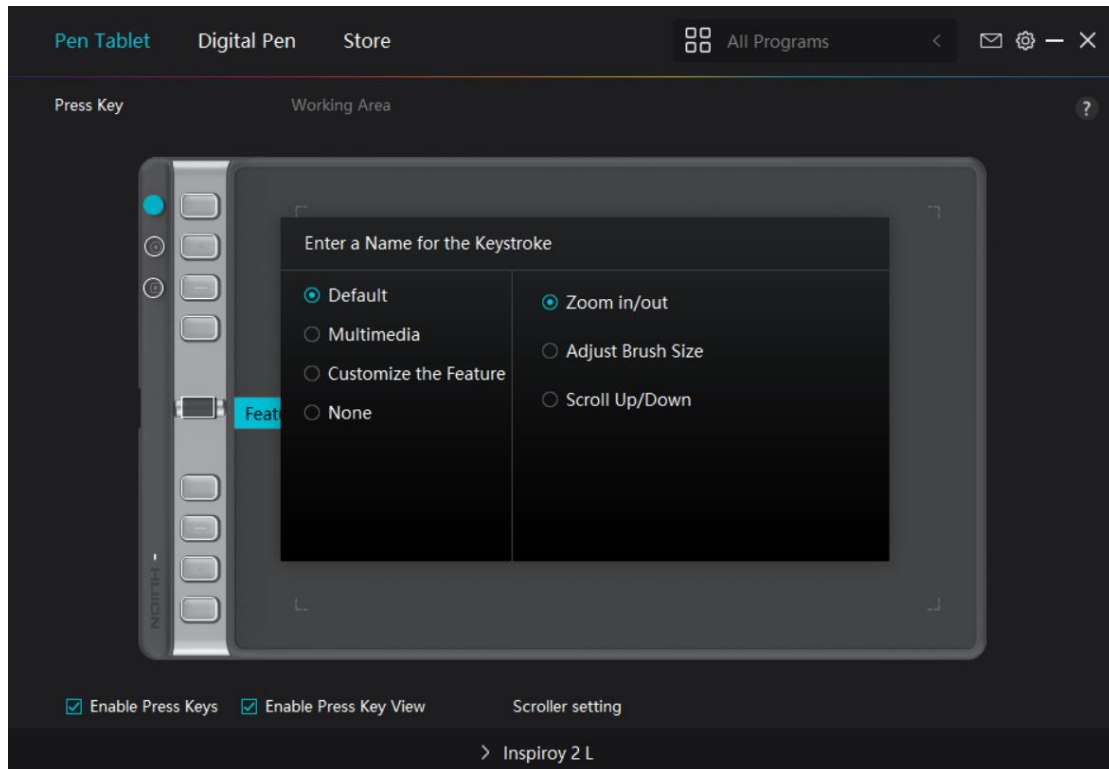

In the driver program, click Scroller to pop up current functions. Click the drop-down box of the function group to display the current three default functions (Zoom in/out, Adjust Brush Size, and Scroll Up/Down). Click any of the functions to change it. There are four optional attributes, i.e., "Default", "Multimedia", "Customize the Feature" and "None". When you select different Group Keys, the functions of the corresponding press keys and the Scroller will be changed.

For detailed information about the functions of the Scroller, please refer to the table of settings below.

Default	The default three functions of the Scroller are "Zoom in/out", "Adjust Brush Size", and "Scroll Up/Down".
Multimedia	You can turn the Scroller to play the previous song or next song. You can also rotate it to turn the volume up and down.
Customize	Click on the input box (Clockwise/Anticlockwise) and enter a valid key combination to create a shortcut. You can turn the Scroller clockwise or anticlockwise to perform the shortcuts you entered.
None	Selecting "None" means the Scroller will perform no function when you turn it.

4.2.2. Working Area Setting

Select the Working Area tab to adjust the ratio of the distance of pen movement on the pen tablet to that of the corresponding cursor movement on the monitor.


If only one monitor is in use:

By default the entire active area of pen tablet maps to the whole monitor.

If more than one monitor is in use:

- ① Extended mode: The monitors are in extended mode, and you need to choose one that will be mapped to on the driver interface and the other monitors will work as external displays.
- ② Mirror mode: In mirror mode (all monitors display the same content), the pen tablet maps to the entire screen on each monitor and cursors displayed on them move simultaneously.

Define the active working area of Inspiroy S/M/L that will be mapped to the monitor. Three modes on the driver can be chosen:

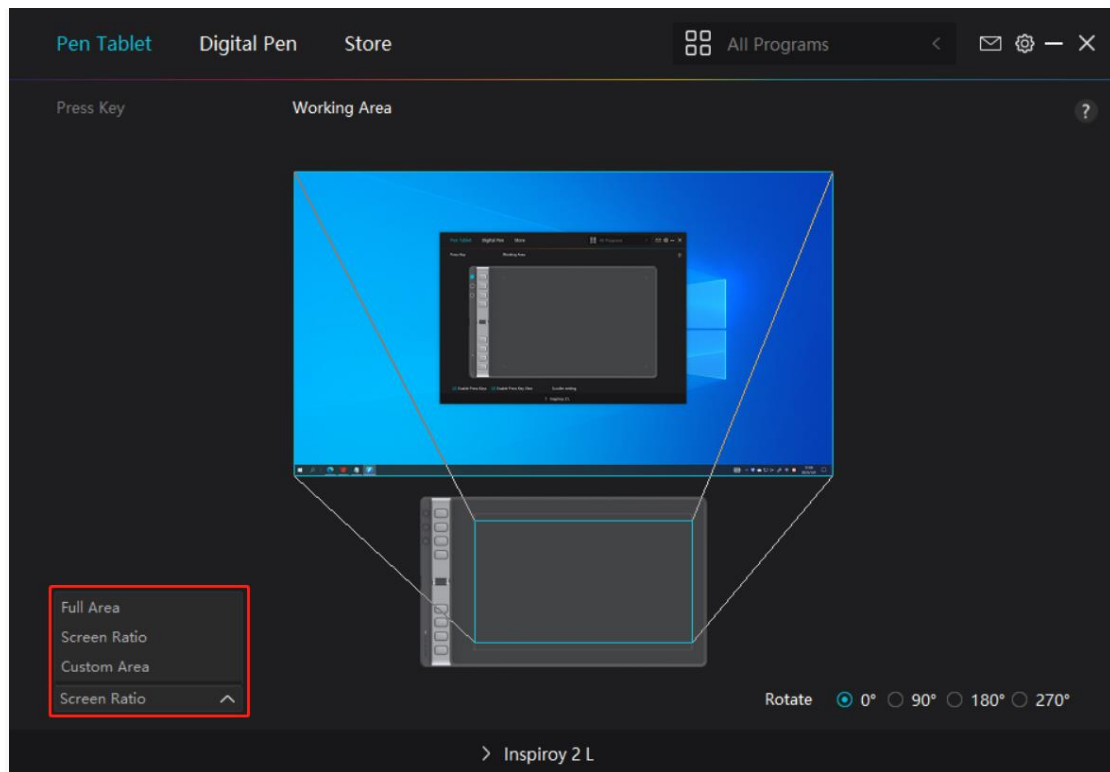

[1] Full Area:


The entire active area of the pen tablet will be mapped to the monitor. It is the default setting.

[2] Screen Ratio:


The aspect ratio of the active pen tablet area depends on that of the display device. In Screen Ratio mode, these two ratios keep the same.

[3] Custom Area:

- ① Enter coordinate values.
- ② You can adjust the working area of the pen tablet by changing the outlines of the smaller rectangle (see picture 1). You can also drag the two blue rectangles to select the active areas of the digital pen on the screen and the pen tablet. (see picture 2 and 3).

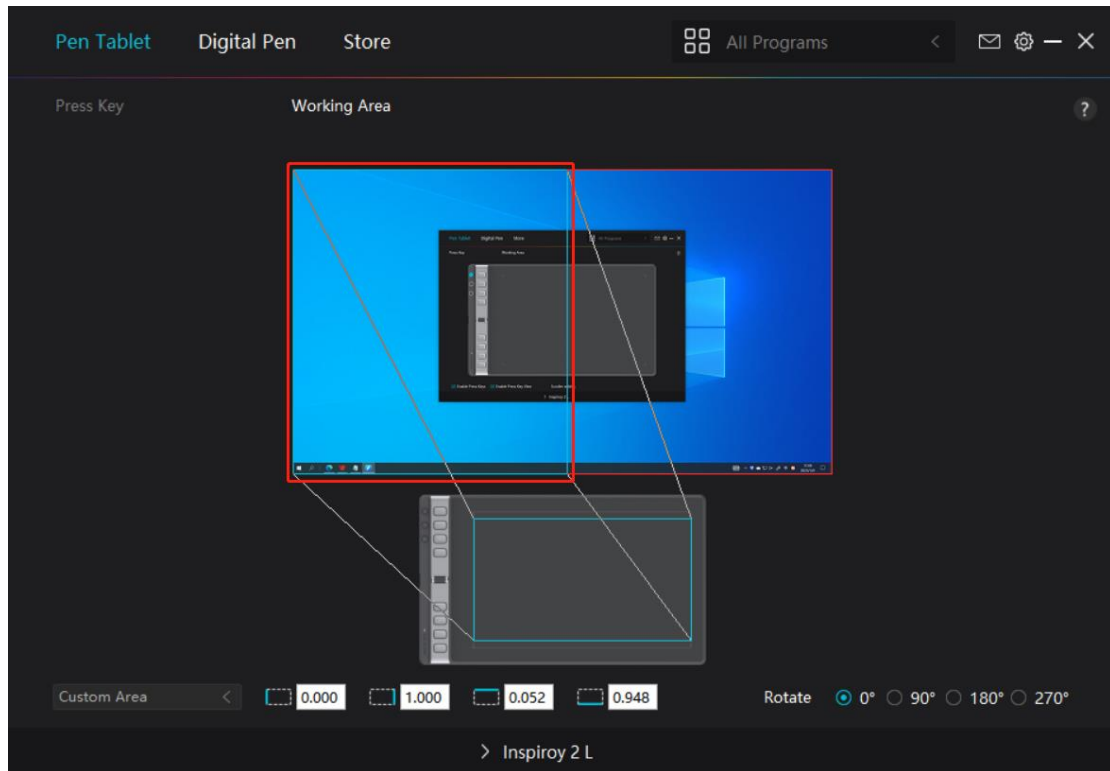


Picture 1

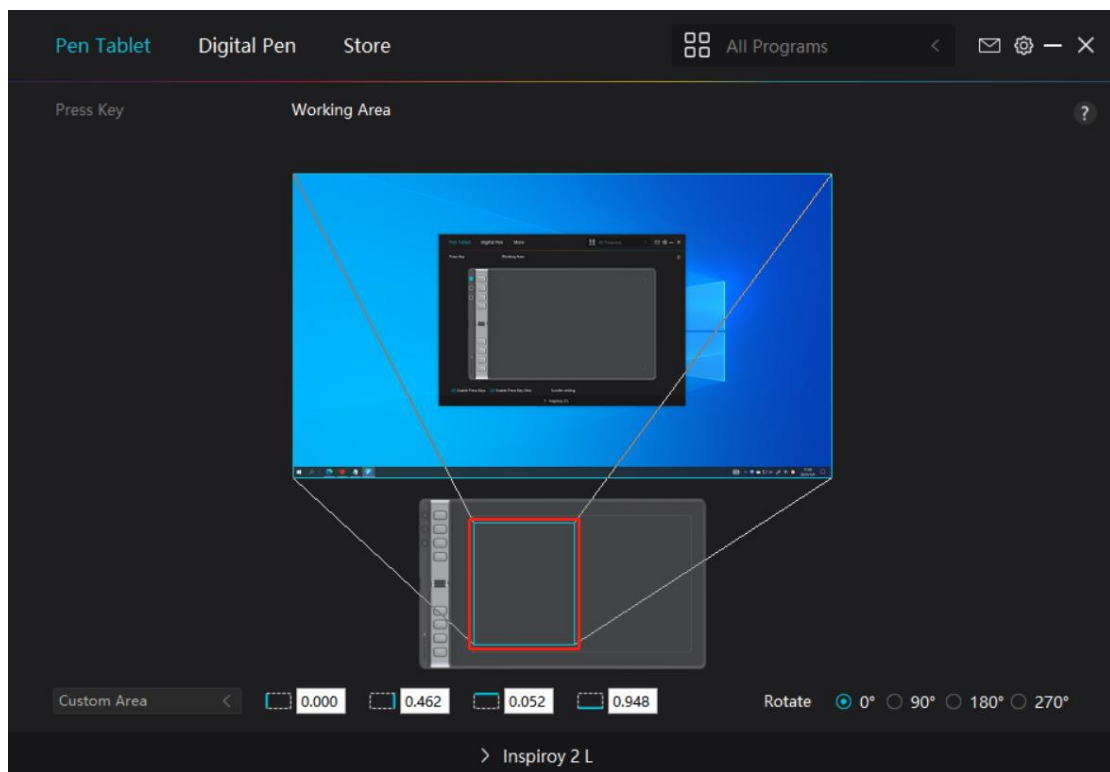

Picture 2

4.2.3. Rotate Working Area

Both left-handed and right-handed users can freely use the pen tablet because it can be rotated by 0°, 90°, 180° or 270°.

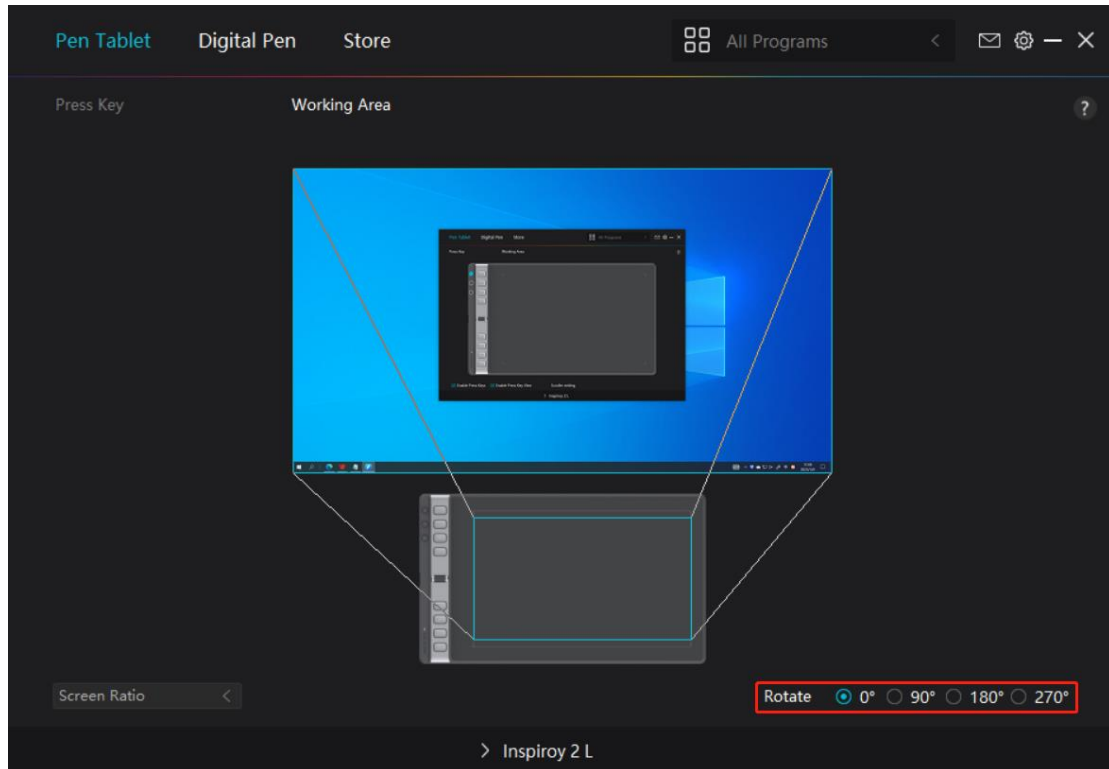


4.3. Digital Pen Setting

1. Press Key


You can use this digital pen to interact with your device, including drawing, writing, moving files, or activating the functions of pen press keys.

The setting of the pen press keys is the same as the Press Key setting of the tablet. Please refer to it. [See Section](#)

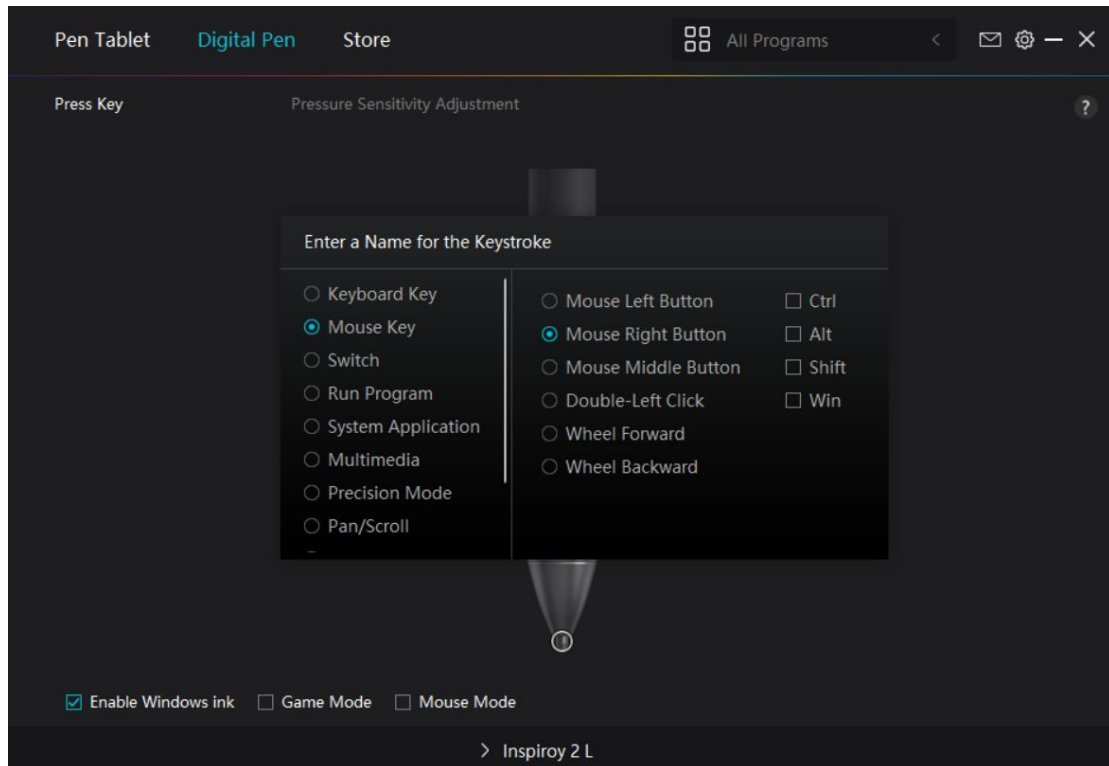

2. Pen Nib Activity


The pen nib of the digital pen can be set as Valid/Invalid according to users' needs. Click the drop-down button to set its activity. In Valid mode, the pen works well, and in Invalid mode, the pen has a cursor movement, but cannot complete specified actions.

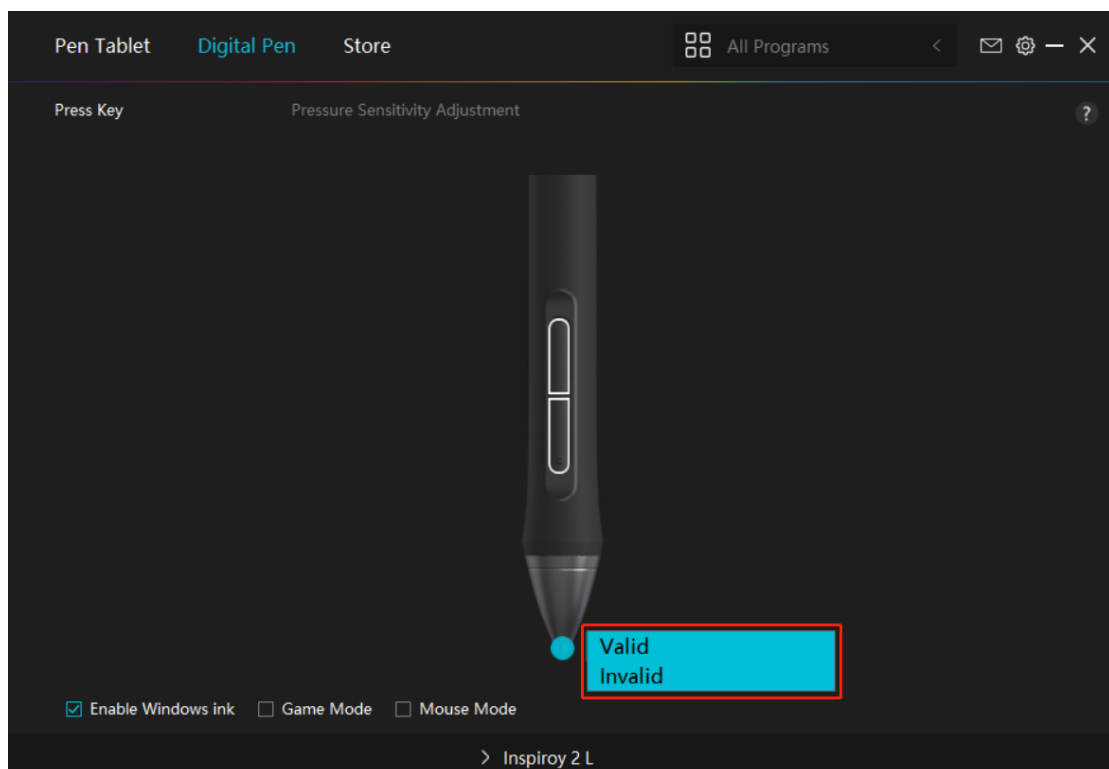

3. Enable Windows ink

Microsoft Windows provides extensive support for pen input. When the "Enable Windows


Ink" option is ticked, pen features are supported in software such as Microsoft Office, Windows Whiteboard, Adobe Photoshop CC, SketchBook 6, etc.

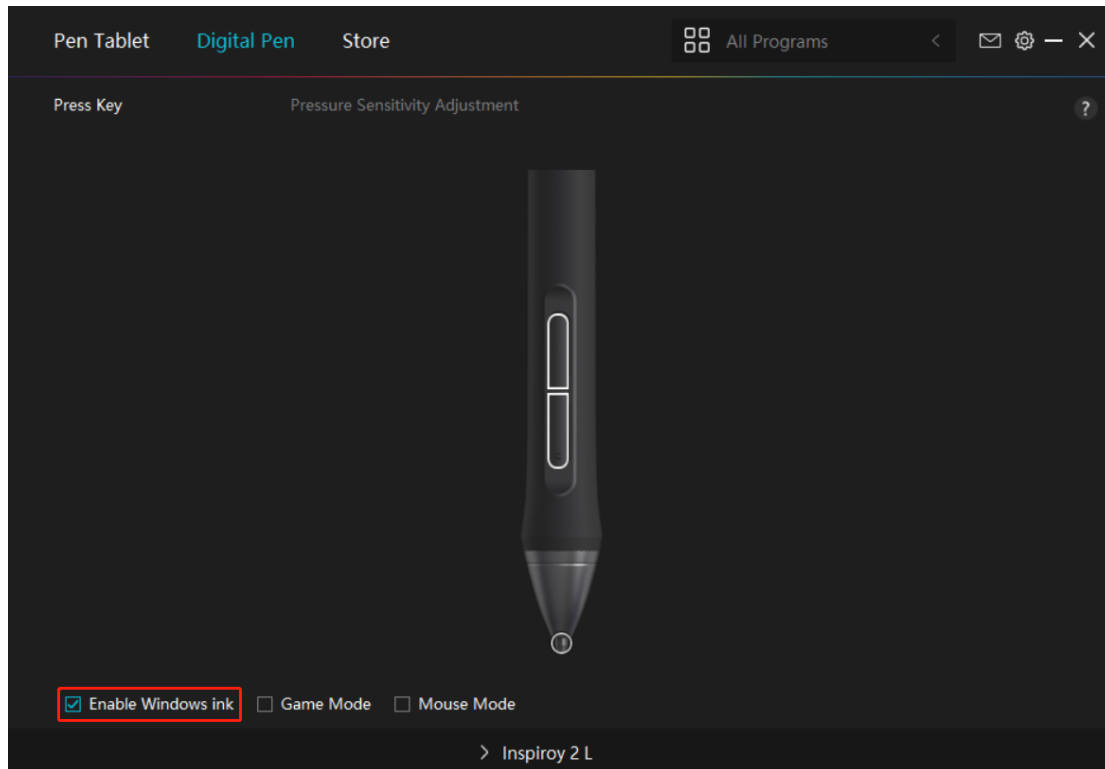

4. Game Mode/Mouse Mode

Game Mode: This mode is ideal for OSU gaming. In Game Mode, you can enjoy exciting OSU games as the cursor on the monitor speeds up to follow the pen movement. It is not suggested to choose the Game Mode if you are not playing OSU games.

Mouse Mode: In Mouse Mode, the digital pen acts as a mouse. Move the pen nib across the tablet and the cursor on the monitor move to a new position accordingly. The cursor will stop moving and stay in that place when you raise the pen off the tablet. So you can use the pen to interact with your computer as you are using a mouse or a touchpad. You can also adjust the speed of cursor in Sensitivity setting according to your habits. There are 8 levels for you to choose.

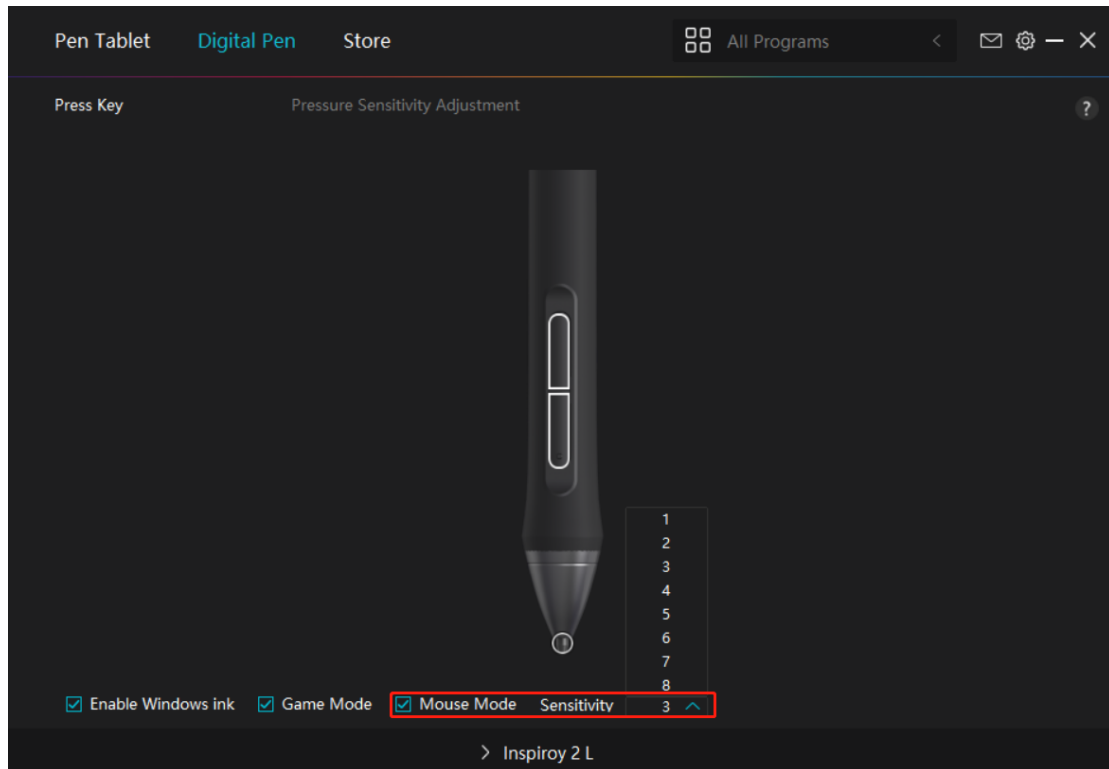

5. Pressure Sensitivity Adjustment

Users can adjust the pressure sensitivity level by dragging the slider in the Pressure Sensitivity Adjustment box according to your usage habits. Users can also check the five options from soft to hard on the right of the box to find the proper pressure sensitivity for themselves. Click the redo button at the top right to revert to the default pressure.


(1) To decide the force required for a pen to produce a click or a pressure sensation.

(2) You can change the slope of the pressure response curve.

(3) To determine how much pressure needs to be applied to the pen nib to reach the highest pressure sensitivity level.

*Draw lines in the Pressure Test box with the pen, and the bar on the right will simultaneously show the pressure changes on the pen nib. Click the “Delete” button above to remove the lines, reset the pressure sensitivity level and test it until you find the appropriate pressure sensitivity level.


*A steep curve means a more sensitive response.

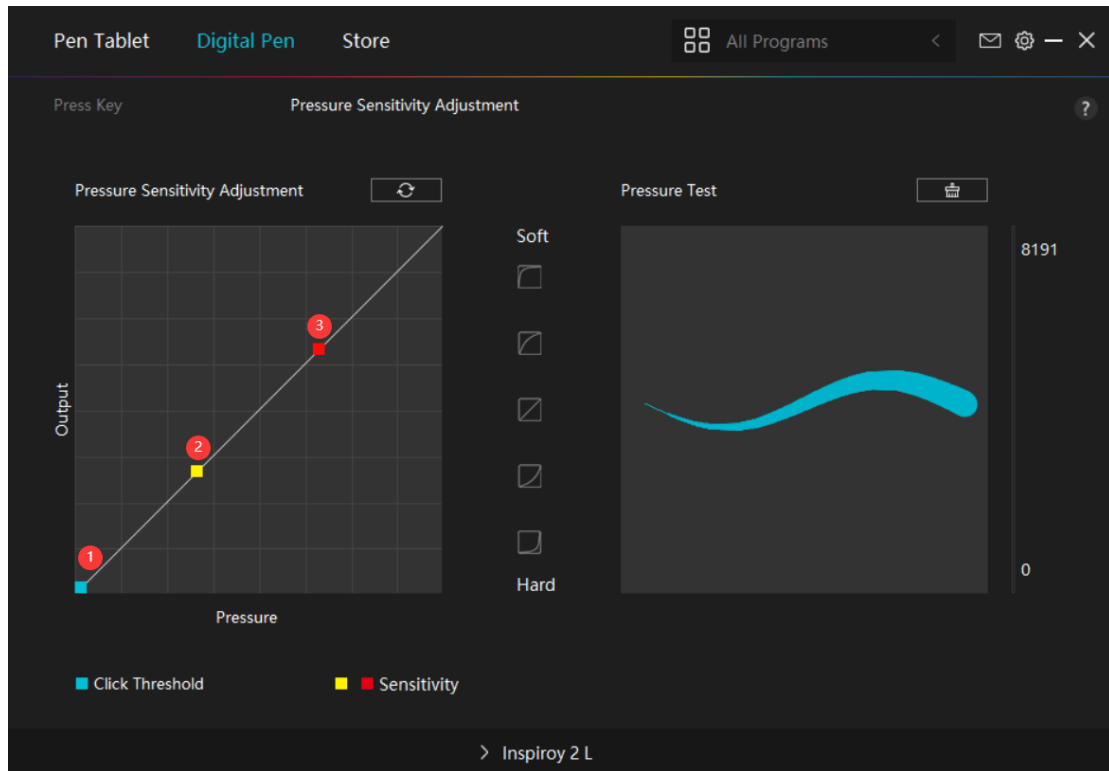

4.4. Driver Setting


1. Device

You can view the information of the firmware, the connected product, sleep time, and Device Diagnosis here. You can also move the bar to adjust the brightness of smart LCD screen on the top left of your tablet.

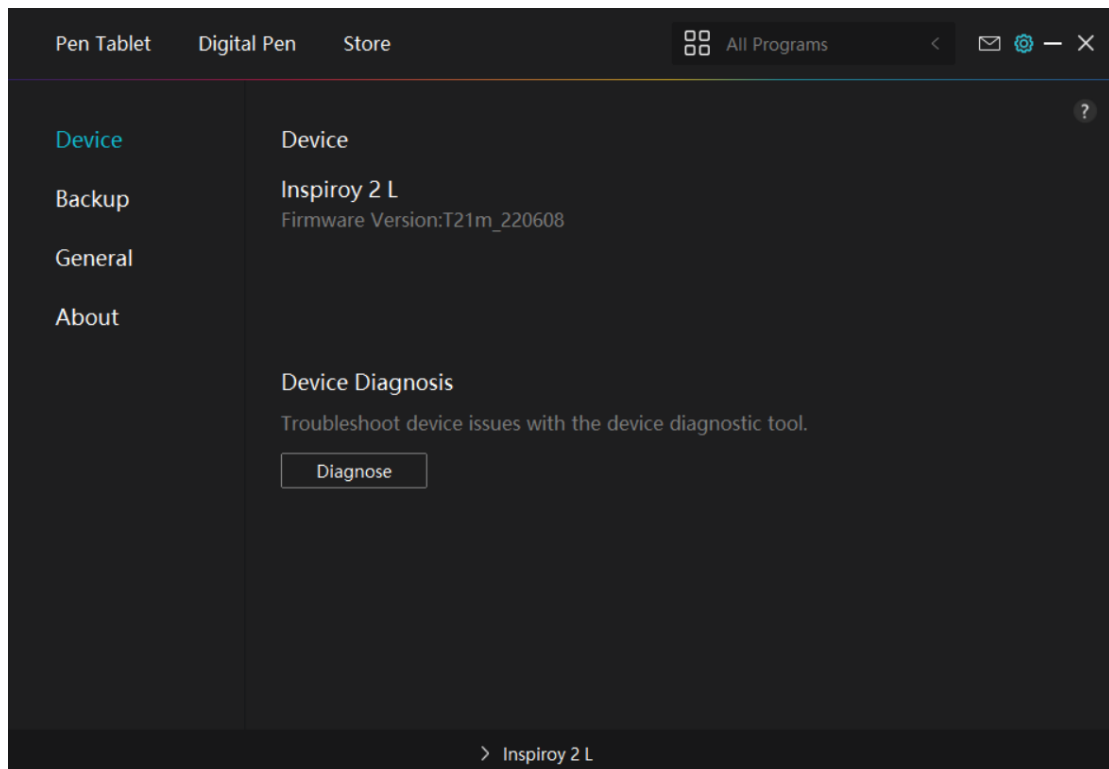

2. Backup

The Driver can import and export your custom settings, which helps to avoid repeated settings when launching a different program.

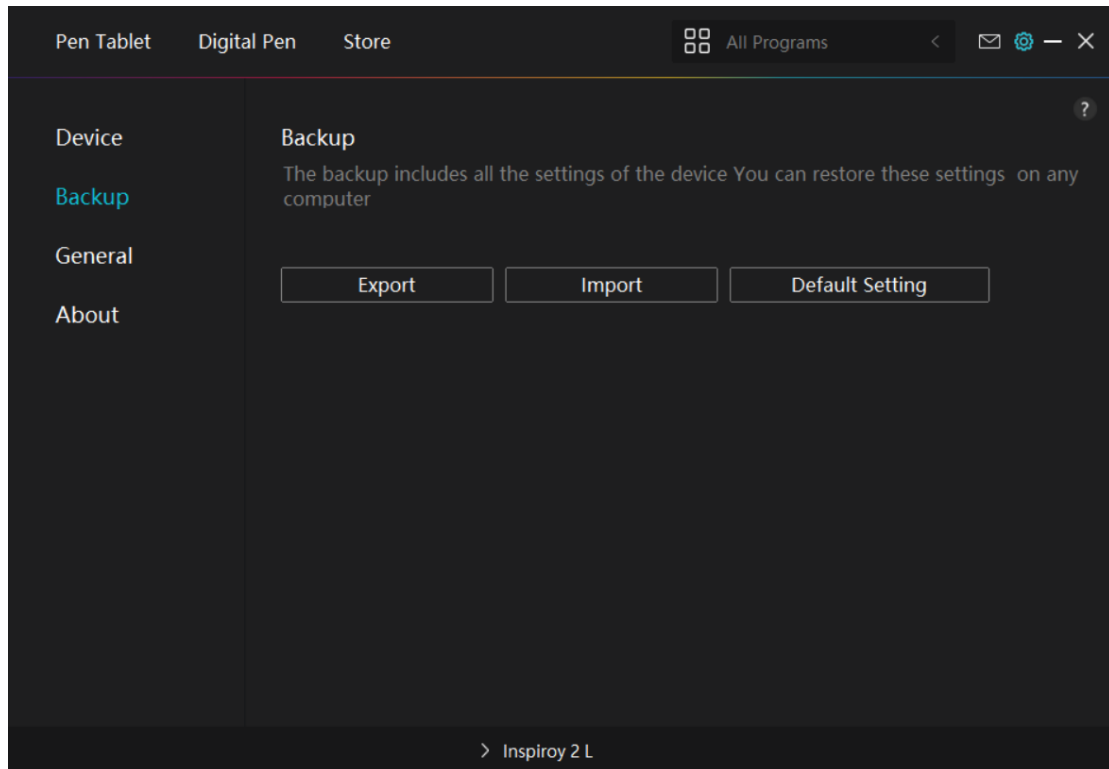

3. General Setting


Language: Click the drop-down button to switch between 14 languages.

Color: You can select the color of the Driver interface among Dark, Blue, and Light according to your preference.

Start Menu: Click to select boot options. Click to enable "Auto-Start", "New Message Alert", "Automatic Updates", and "Share diagnostic and usage data" so as to help us improve our products and services. They can also be disabled anytime.

Hotkey: You can set a hotkey to call out the Driver interface quickly according to your usage habits. When you want to restore the press key for opening the driver page by default, click "Reset to Default".

Administrator privilege: This item is only available for Windows OS. The driver will identify whether or not the current driver interface is opened with administrator privilege. If it is opened with administrator privilege, this item will not be displayed. If it is not opened with administrator privilege, this item will be displayed.

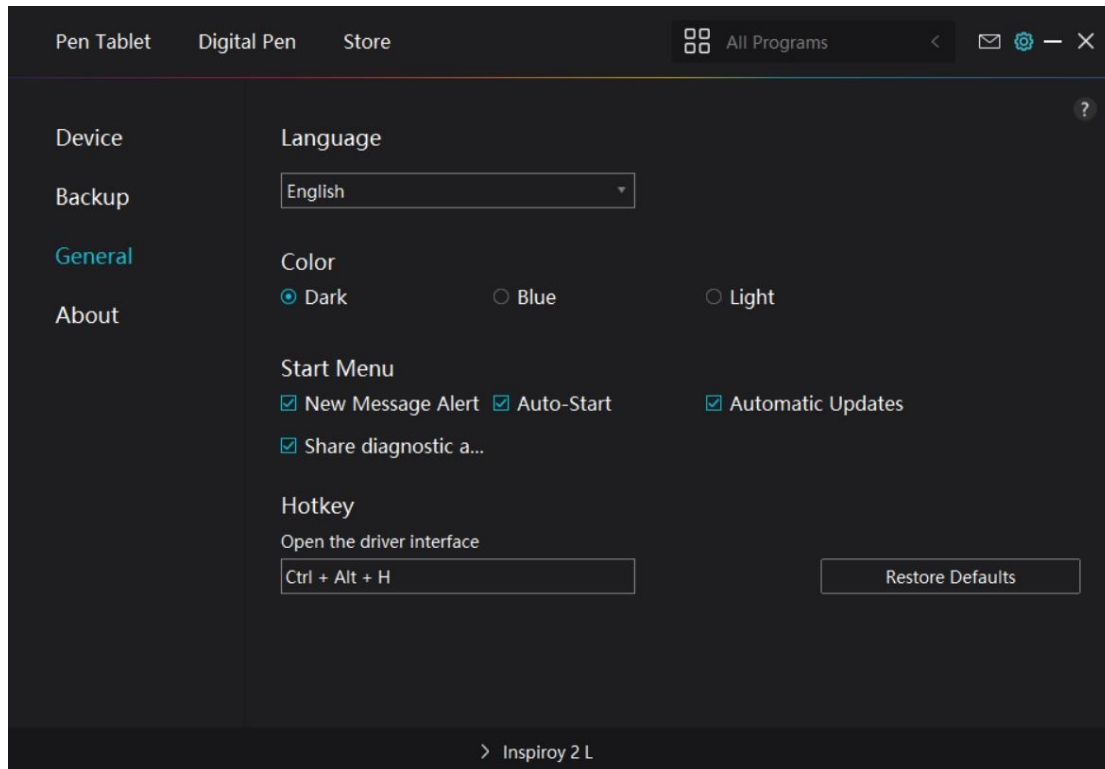


4. About

Users can check the Driver version here. Click “Check for Updates” to find the latest Driver version and then follow the prompts to update the Driver if needed;

Click "Feedback" to send a feedback email if you have any question about the driver;

Click "Uninstall" to delete the current driver.

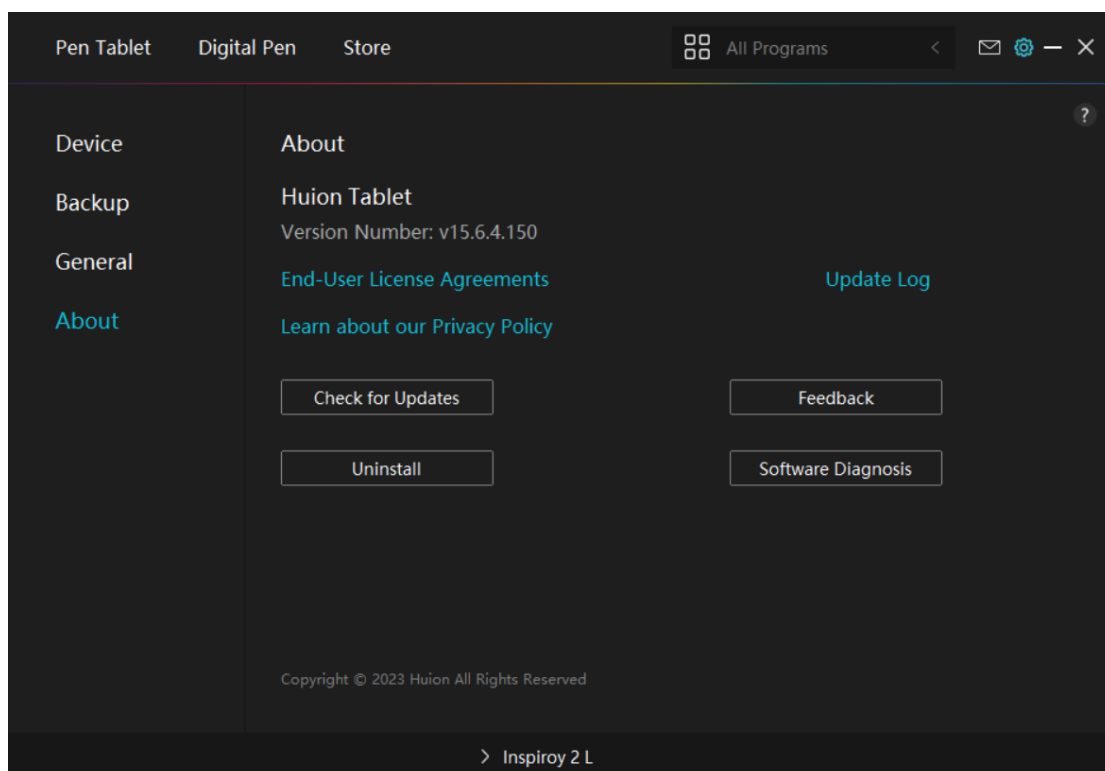

5. How to Use the Digital Pen

Hold the Pen:

Hold the digital pen as you hold a real pen. Adjust your grip so that you can toggle the pen press keys easily with your thumb or index finger. Be careful not to accidentally press the key while drawing with the pen.

Note: Please place the pen on the table when it is not in use. Do not put the pen on the pen tablet, otherwise it may interfere with the function of the mouse and other devices, and it may also prevent your computer from entering sleeping mode.

Cursor Movement:

Move the pen slightly above the working area of the tablet without touching the surface of pen tablet, and the cursor on the screen will move to the new position accordingly.

Click:

Tap on the pen display with the pen to register a click. Press lightly to highlight or select an item on the screen and double-click to open it.

Move:

Pick up a file or icon, then slide the pen nib across the display to move it.

Use the Pen Press Keys:

There are two press keys on the digital pen, whose functions can be programmed on the driver interface. The press keys on the pen will work as long as the vertical distance between the pen nib and the tablet is within 10mm.

Replace the Pen Nib:

Tip: When the pen nib is badly worn, please replace it with a new pen nib timely.

1. Rotate the pen holder counterclockwise and take out a replacement nib.
2. Tilt the pen, and pull the nib out of the pen through a nib clip.
3. Insert the replacement nib straight into the barrel of the pen until the nib stops moving forward.



6. Troubleshooting

Problems	Solutions
The pen tablet cannot sense the pen pressure while the cursor can move.	You may have installed other drivers or run the drawing software when installing the driver. Please uninstall all the drivers, close the drawing software, and then reinstall the Huion driver. It is suggested to restart your computer after finishing the installation. In addition, if the application is not compatible with the driver or does not support pressure sensitivity, there will also be no pressure sensitivity in this application.
The digital pen does not work.	1. Make sure you are using the pen that originally came with your tablet. 2. Make sure you installed the driver correctly.
The press key does not work.	1. Make sure you are using the pen that originally came with your tablet. 2. Make sure you installed the driver correctly.
The computer cannot enter sleeping mode.	Please do not place the digital pen on the working area of the pen tablet when you are not using it, otherwise the computer will not be able to enter sleeping mode.
The press key of the digital pen does not work.	The press keys of the digital pen will not work when the vertical distance between the pen nib and the tablet is over 10mm. If the vertical distance is within 10mm and the pen press key does not work, please check whether the driver works well and whether you have assigned functions to the two keys correctly or not. Then if the keys still do not work, maybe your pen is broken and you can contact our service team as long as the pen is under warranty.
The computer cannot recognize the pen tablet.	Please check whether the USB port of your computer functions well. If not, please try another USB port.
Failed to connect Inspiroy S/M/L to other device and "Device Disconnected" appears.	Please restart your computer or driver; make sure the USB port and USB-C cable work well; unplug the USB cable and plug it again; try another USB port; download and reinstall the latest driver; please whitelist the driver on macOS devices.

If your problem is not resolved, please click [FAQs](#) to view more troubleshooting methods or send an email to us (service@huion.com).

Safety Warnings and Information

All information regarding the operation of the device can be found in the user manual. Before you begin using it, please familiarize yourself with its contents and adhere to the guidelines provided.

Additionally, review the following information before use:

Usage Warnings

1. Safety Considerations for Using a Graphic Tablet:

Graphic tablets are precision devices; they should not be subjected to strong shocks, pressure, or contact with liquids. Use them only on a stable work surface.

Always use the device in accordance with the manufacturer's recommendations – do not open the casing or modify the electronic components.

2. Stylus and Working Surface:

Use only compatible styluses. Excessive pressure or the use of sharp objects may damage the surface of the tablet.

Store the stylus in a secure location, away from children, due to the risk of swallowing small parts or injury from the tip.

3. Power and Battery (if applicable):

Charge the graphic tablet (if it is battery-powered) only with original or certified chargers. Do not leave the device connected to power without supervision for an extended period.

Avoid using the device while it is charging to prevent overheating.

4. Working at the computer:

When using the graphic tablet for extended periods, take regular breaks to minimize the risk of strain on your wrists, arms, or eyes.

Position the tablet and computer screen ergonomically.

Information on Proper Usage

1. Installation and Configuration:

Before first use, install the latest drivers and software recommended by the manufacturer. Ensure that the computer's operating system meets the device's technical requirements.

2. Software and Updates:

Regularly update the device's software and firmware to ensure stability, security, and full functionality of the tablet.

3. Device Compatibility:

Use the tablet with computers that meet the technical requirements specified by the manufacturer. Using incompatible systems may result in errors during the device's operation.

4. Access for Children:

Graphic tablets are not intended for children under the age of 14. Supervision of device use by minors is essential, particularly in the presence of a power supply or small components.

Additional Precautions

1. Storage and Maintenance:

The tablet should be stored in a dry and clean location, away from sources of heat and moisture. Regularly clean the working surface with a soft, dry cloth; do not use chemical cleaners.

If the device will not be used for an extended period, disconnect it from the computer and store it in the original packaging or a protective case.

2. Disposal:

Used graphic tablets, styluses, and batteries (if applicable) must be disposed of in accordance with local electronic waste regulations. Do not dispose of electronic devices in municipal waste.

3. Environmental Protection and Energy Efficiency:

Disconnect the tablet from the power source and the computer when not in use. Make use of the energy-saving modes provided by the device's software.

EC REP: Dilectro Spółka z Organiczoną Odpowiedzialnością, ul. Brukselska 4, 03-973 Warsaw, Vat no: PL5223032301, rafal.pacula@dilectro.pl