

Huion Kamvas Ink Ψηφιακό σημειωματάριο 10 EB1011

Huion · EAN 6930444806071

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

User Manual Huion Ink

(For model EB1011)

Statement: The illustrations in this user guide are for reference only; the actual product is binding. If some content of the guide exceeds the scope of the product, please skip it. Table of Contents

1. Safety Instructions.....	3
2. Product View.....	4
3. Notes.....	6
4. Book Shelf.....	35
5. Applications.....	62
6. Settings.....	65
7. Graphics Tablet Mode.....	68
8. System Gestures.....	69
9. Frequently Asked Questions (FAQ).....	73
10. Feedback.....	75
11. Copyright Information.....	76
12. Disclaimers.....	76

1. Safety Instructions

□ Operating Temperature

Do not place this product in an environment with excessively high or low temperatures to avoid damaging the device's circuits. Use the device within the optimal operating temperature range of 0°C to 35°C.

□ Screen Protection

The device is equipped with a delicate E Ink screen. Do not throw, hit, or press the screen too hard. If the screen is cracked, stop using the device and contact the official Huion service or another qualified specialist for replacement. Do not disassemble or replace the screen yourself.

□ Use Certified Accessories

Use a certified 5V/2A adapter along with the included USB-C cable for charging. The battery

of this product cannot be replaced. Do not disassemble or replace the battery without authorization. Using an incorrect type of battery may pose a risk of explosion. You bear all consequences resulting from unauthorized disassembly.

❑ Avoid Contact with Liquids and Chemicals

The product is not waterproof. Do not expose the device to humid environments or use it during rain. Please keep the device away from corrosive substances and do not use strong chemicals, cleaning agents, or harsh detergents to clean the device.

2. Product View

Power Button

TF Card Slot

Speaker Speaker

Type-C Port

2.1. Button Functions

- ❑ Press the power button to turn on the device.
- ❑ Press and hold the power button for 2 seconds, then tap the “Power Off” option in the menu to turn off the device.
- ❑ Press the power button and immediately release it, and the device will enter sleep mode.
- ❑ While in sleep mode, press and immediately release the power button to wake the device.
- ❑ Hold for 10 seconds to force the device to turn off.
- ❑ Charge the device using the USB-C cable.

USB-C Port ❑ Switch to graphics tablet mode using the USB-C cable.

❑ Transfer files using the USB-C cable.

TF Card Slot ❑ Memory can be expanded up to 2 TB using a TF card.

3. Notes

3.1. All Notes

The notes list displays all the notes you have created. The number of notes can be seen in the bottom right corner; swipe left/right or up/down or tap the page buttons to navigate between pages. You can also tap the page number at the bottom, enter the number, and go to a specific page.

3.1.1. Searching Notes

Tap the “Search” button in the top right corner of the notes list interface and enter keywords from the note's name to find notes. Desired notes can be searched by handwriting in the note or by the note's name.

3.1.2. Batch Management of Notes

You can share, group, or delete notes in bulk by tapping the button in the top right corner of

the notes list interface and selecting "Batch Management."

3.1.3.

Group management of notes

You can add, rename, or delete created groups by tapping the button in the upper right corner of the notes list interface and selecting "Manage Groups."

3.1.4. Set the sorting method for notes

You can choose the sorting method for notes by tapping the button in the upper right corner of the notes list interface and selecting "Sort Notes." You can sort notes in ascending or descending order by creation time, modification time, or file name.

3.2. Create a new note

Tap the "New Note" button in the upper right corner of the notes list interface to create a new note.

3.3. Rename a note

In the notes list interface, tap the button " " in the lower right corner of the note, then in the pop-up window select "Rename" to change the name of the note.

3.4. Sharing notes

You can tap the button " " in the lower right corner of the note, then select "Share" to send the note via QR code or Google Drive. You can also tap the button in the upper right corner of the notes list interface, tap the "Batch Management" button, and select multiple notes to share (sharing multiple files is currently supported only by Google Drive).

3.5. Export notes to local storage

You can tap the button " " in the lower right corner of the note on the notes list, select "Share," and then "Locally" to convert the note to PDF/HTML/PNG format and save it locally. You can also tap the button in the upper right corner of the note writing interface, tap the "Share and Export" button, and save the required pages of the note locally. Exported notes will be stored in the local "Exported" folder. Notes in PDF and HTML format will be synchronized and displayed on the bookshelf.

3.6. Transferring exported notes to a computer

First, you need to export the note in PDF/HTML/PNG format on the Huion Ink device. After connecting the Huion Ink device to the computer using a data cable, find the exported notes in the "Exported" folder in the Huion Ink device's memory space, and then copy or move the files to the computer.

3.7. Writing notes

After creating a new note, you will enter the writing interface where you can start creating.

Tap the "Close" button in the upper left corner of the top toolbar to exit the note writing interface. You can also exit to the default home page using system gestures. Notes will be automatically saved upon exit.

3.7.1. Pen type

Huion Ink supports 5 types of pens: fountain pen, ballpoint pen, pencil, marker, and brush. You can click the pen tool at the bottom of the note writing page to change the pen type. Each pen type offers 10 color options: black, red, blue, green, white, dark gray, light gray, orange, purple, and yellow, and allows for line width adjustment in 20 levels.

3.7.2. Eraser

It supports five erasing methods: eraser, area erasing, stroke erasing, and erase all. You can click the eraser tool at the bottom of the note writing page to switch between these methods. Eraser: Removes traces at the point of contact between the pen tip and the surface. Area erasing: Removes pen strokes in the selected area. Stroke eraser: Removes the entire line at the point of contact between the pen tip and the surface. Erase all: Removes all content on the current page.

3.7.3. Undo and redo

Press the "Undo" and "Redo" buttons on the top toolbar to undo or redo the previous action.

3.7.4. Full screen

In the writing interface, double-tap the screen with your finger to hide the toolbar and write in full-screen mode. Double-tap the screen again or press the "Full Screen" button to exit full-screen mode and expand the toolbar.

3.7.5. Add page

Press the page button on the top toolbar. If the current page is the last one, a new page will be automatically added. You can also add a new page by swiping left (the swipe length must be greater than half the width of the screen).

3.7.6. Delete page

Press the button in the toolbar at the top and select "Delete this page" to remove the current page. You can also tap the page number in the top toolbar to enter the page management interface. Click the "Edit Page" button to select multiple pages for deletion. Removing a page is irreversible, so please proceed with caution.

3.7.7. Scrolling pages

Use finger touch to scroll the page: Swipe from left to right on the writing page to scroll one page forward, and from right to left to scroll back one page (make sure the Finger Touch feature is enabled). Press the button to scroll the page: Tap the Scroll Forward and Scroll Back buttons in the top toolbar to scroll through pages.

3.7.8.

Handwriting Recognition OCR

The handwriting recognition OCR function helps convert handwritten texts into typed text. After writing, press the button in the upper right corner of the top toolbar and select the "AI convert to text" function to convert handwritten text into typed text. On the OCR conversion page, you can edit the processed text. After editing, press the "Export and Share" button to export the recognized text in PDF/TXT format or share it with others using a QR code. Writing in a standardized manner improves recognition accuracy.

3.7.8.1. Supported OCR Languages and Language Settings

OCR supports handwriting recognition in the following languages: Chinese (China), Chinese (Taiwan), Chinese (Hong Kong), English (United States), Japanese (Japan), Afrikaans (South Africa), Azerbaijani (Azerbaijan), Belarusian (Belarus), Bulgarian (Bulgaria), Bosnian (Bosnia and Herzegovina), Catalan (Spain), Cebuano (Philippines), Czech (Czech Republic), Danish (Denmark), German (Austria), German (Germany), English (Canada), English (United Kingdom), English (Philippines), English (South Africa), Spanish (Colombia), Spanish (Mexico), Estonian (Estonia), Basque (Spain), Finnish (Finland), Filipino (Philippines), French (Canada), French (France), Irish (Ireland), Galician (Spain), Hebrew (Israel), Croatian (Croatia), Hungarian (Hungary), Armenian (Armenia), Indonesian (Indonesia), Icelandic (Iceland), Italian (Italy), Georgian (Georgia), Kazakh (Kazakhstan), Korean (Republic of Korea), Lithuanian (Lithuania), Latvian (Latvia), Malagasy (Madagascar), Macedonian (North Macedonia), Mongolian (Mongolia), Malay (Malaysia), Dutch (Belgium), Dutch (Netherlands), Norwegian (Norway), Polish (Poland), Portuguese (Brazil), Portuguese (Portugal), Romanian (Romania), Russian (Russia), Slovak (Slovakia), Slovenian (Slovenia), Albanian (Albania), Serbian (Serbia), Swedish (Sweden), Swahili (Tanzania), Turkish (Turkey), Tatar (Russia), Ukrainian (Ukraine), Vietnamese (Vietnam). Before using the OCR function, make sure the correct language is selected in "Settings" - "Device Settings" - "AI Settings - Handwriting Recognition."

3.7.9. View All Notebook Pages

Tap the page number display area on the top toolbar to enter the page management interface, where you can browse all pages of the notebook. In the page management interface, tap the "Manage" button in the upper right corner to move and delete pages.

3.7.10. Copy Page

Tap the button in the upper right corner of the top toolbar and select "Copy this page" to create a copy of the current page and place it as the last page of the notebook.

3.7.11. Selection Tool

Click the "Select" button on the top toolbar to select handwritten text and perform operations on the selected handwriting. After selecting the handwritten text, you can rotate, scale, copy, and delete it. After choosing the copy option, the handwritten text will be saved to the clipboard. Tap the button in the upper right corner of the writing interface and select "Select and Paste" to paste the copied handwriting onto this page.

3.7.12. Insertion Tool

Tap the "Insert" button on the top toolbar to insert pages, shapes, text, or images onto the note page. Insert page: tap "Insert new page" to add a blank page after the current page. Insert shape: tap "Shape" to insert lines, rectangles, circles, and triangles. Select the shape you want to insert and move the pen tip across the writing interface. The shape will be displayed in the appropriate size according to the distance the pen tip is moved. Insert text: tap "Text" and enter the required text using the keyboard. Inserting images: Tap "Image" to select images from the device and insert them into the writing interface.

3.7.13. Change Page Paper

Tap the button in the upper right corner of the top toolbar and select "Switch paper" to reselect the page paper. There are 47 popular types of paper available.

3.7.14. Finger Touch

Click the "Finger Touch" button to enable or disable the finger touch feature. When finger touch is disabled, you cannot flip pages using touch gestures.

3.8. Share Note Pages

Tap the button in the upper right corner of the top toolbar, select "Share and Export," and share the selected note pages using a QR code or Google Drive. To share using Google Drive, you must first add a Google Drive account in the "Cloud" app.

4. Bookshelf

4.1. Book List

All your books will be displayed on the bookshelf.

Shelf pages can be scrolled by swiping left or right using gestures or by tapping the page scrolling button at the bottom.

4.2. Importing Books

4.2.1. Transfer Book via Wi-Fi

Find and open the "Transfer Book via Wi-Fi" app from the app list. Enter and access the transfer address displayed by the Huion Ink device in your computer's browser or use your mobile device's browser to scan the transfer QR code and enter the Wi-Fi transfer interface.

Tap the upload button to load reading files from your computer or mobile phone to the Huion Ink device. When using the book transfer via Wi-Fi, ensure that both the computer or mobile device and the Huion Ink device are connected to the same Wi-Fi network.

4.2.2. Import Book via USB

Connect the Huion Ink device to the computer using a data cable. At this point, the Huion Ink device will be recognized by the computer as a storage device. To import a book, simply move it to the "Books" folder, and it will appear on the bookshelf.

4.3. Searching for Books

Tap the button in the upper right corner of the bookshelf and select "Search Books" from the dropdown menu to search for books by title, author, or publisher.

4.4. Recently Added List

The recently added list by default displays the most recently added books at the top. Folders are not displayed on this list. Books cannot be copied or moved from the recently added list.

4.5. Bookshelf List

The bookshelf list displays all folders and all books and by default shows the most read books and folders at the top. In the bookshelf list, you can move and sort books using the Batch Management feature.

4.5.1. Batch Management of Books on the Shelf

Tap the button in the upper right corner of the bookshelf and select "Batch Management" to perform more operations on the books on the shelf. In Batch Management, you can mark books as read/unread, copy, cut, and delete in bulk.

4.5.2. Moving and Copying Books

To facilitate the classification of books, you can move or copy books to folders you have created. In the bookshelf interface, tap the button in the upper right corner, then select "Batch Management," check the books you want to move, and then tap the "Cut" or "Copy" button at the bottom; the selected books will be saved to the clipboard. Go to the target folder and tap the "Paste" button at the bottom to move or copy the books to that folder.

- Before moving or copying books, you must create a folder.
- Moving and copying in batches is only possible in the batch management operation on the bookshelf; only marking as read, marking as unread, and deleting operations are available on the recently added list.

4.5.3. Create New Folder

Tap the "New Folder" button at the top of the bookshelf interface to create folders and categorize your books.

4.5.4. Sorting Method

Tap the button in the upper right corner of the bookshelf and select "Sort by File" to choose the method for sorting books.

4.5.5. Display Method

Press the button in the upper right corner of the bookshelf to adjust how books are displayed on the list, for example, by showing their covers or in list view.

4.6. Notes List

Books in which you made handwritten notes while reading will be displayed here. In the notes list, you can share or delete books with notes using batch management.

4.7. Personal Space

At the top of the bookshelf, the "Personal Space" folder will be displayed. This folder can be password protected. Books placed in this folder will not be displayed on the recently added books list or on the bookshelf. You can also press the button in the upper right corner of the bookshelf and select "Bookshelf Settings" to hide the Personal Space folder using the "Bookshelf Hiding Personal Space" switch. In this case, the Personal Space folder and the books within it will be invisible on the shelf, on the recently added list, and on the notes list.

- After entering a password to access the Personal Space folder, access without a password will be maintained until the next sleep mode. The password will be re-enabled after the device has been in sleep mode for one minute.

4.8. Reader

4.8.1. Making Handwritten Notes on Books

You can make handwritten annotations while reading. After tapping the center of the reading interface, you can close or open the pen tool in the upper toolbar.

4.8.2.

Removing handwritten notes in books

You can erase saved annotations using the eraser at the end of the digital pen. You can also tap the button in the upper right corner of the notes list, select "Batch Management," then check the books whose notes you want to delete, and remove notes from the entire book. ⚠ Note! Deleted notes cannot be recovered!

4.8.3. Adding a bookmark

After tapping the center of the reading interface, you can tap the button in the upper right corner of the top toolbar and select "Add Bookmark" to add a bookmark on the current page. Bookmarks can be viewed in the table of contents interface.

4.8.4. Table of contents

After touching the center of the reading interface, tap the "Table of Contents" button on the

bottom toolbar to go to the book list interface, where you can browse the list of books and the list of bookmarks.

4.8.5. Side notes

After touching the center of the reading interface, tap the "Side Notes" button on the top toolbar to create side notes for the book. When reading in landscape mode, opening side notes will display the book and side notes on a split screen, with the book content on the left and handwritten notes on the right. Tap the "Exit Side Notes" button in the upper left corner of the side notes to leave this interface.

4.8.6. Reading on a split screen

After touching the center of the reading interface, tap the "Split Screen" button on the bottom toolbar to select "Current Document in Split View" or "Split View of Two Documents" and enable reading on a split screen of the current document or two different documents.

4.8.7. Translation

△ Due to copyright restrictions on dictionaries, Huion Ink does not provide multilingual dictionaries by default. You need to download dictionary files in StarDict, Mobi, Prc, Mdx formats or other formats suitable for the specific language and copy them to the Dict folder on the device.

4.8.7.1. Highlighted translation

Press and hold the screen for 1 second, then drag to select a paragraph or sentence. After selecting, tap the "Translate" button to translate the highlighted sentence.

4.8.7.2. Full text translation in split screen mode

After touching the center of the reading interface, tap the "Split Screen" button on the bottom toolbar, then select "Translation in Split View" to translate the entire page of the article in split screen mode.

4.8.8. Format

After touching the center of the reading interface, tap the "Format" button on the bottom toolbar to adjust the font size, layout, and other parameters of the book.

4.8.9. Book settings

After touching the center of the reading interface, tap the "Settings" button on the bottom toolbar to configure page scrolling gestures, refresh mode, full refresh frequency, health reminder time while reading, and other options.

4.8.10. Audiobook

After touching the center of the reading interface, tap the "Audiobook" button on the bottom toolbar to switch to audiobook mode. In audiobook mode, you can adjust parameters such as volume, reading speed, and timer. Tap the "Close TTS Reading" button to exit audiobook

mode.

4.8.11. Press and hold to select content

By pressing and dragging your finger over the text, you can select a portion of the content for highlighting, copying, adding notes, searching Wikipedia, or searching the entire book.

4.8.12. Supported file formats for reading

Huion Ink currently supports reading files in TXT, EPUB, PDF, MOBI, AZW3, DOCX, DOC, HTML, FB2, DJVU, CBZ, CBR, CBT, and RTF formats.

4.8.13. Reading gestures

While reading, you can use gestures such as pressing and holding to select content, swiping left and right or up and down to change pages, tapping the center of the page to invoke the function menu, swiping down from the top of the screen to invoke the notification center and control center, swiping up from the bottom of the screen to invoke the task manager, swiping up from the bottom of the screen to return to the home page, swiping up from the bottom of the screen to refresh, and pressing and dragging on the left and right sides to adjust the front lighting.

5. Applications

5.1. How to install an application

Installation via the App Store:

You can select and download the necessary applications from the built-in app marketplace on your device. Installation of applications by importing an APK file using a data cable:

You can import the APK file of the application to the device for installation via USB transfer.

△ First, connect the device to the computer using a USB cable and select the data transfer mode on the device.

- On your computer, place the APK file in the directory: This computer\EB1011\Shared internal storage\Download.

- On the device, go to the Apps interface, open the File Manager app, navigate to the Download folder, and tap the APK file to complete the installation.

- After the application is installed, its launch icon will appear in the list of applications.

- Due to the difference in display principles between E Ink screens and traditional screens, Huion Ink does not guarantee the proper functioning of third-party applications that you install.

5.2. How to uninstall an application

Go to the Apps interface using the bottom navigation bar, find the icon of the application you want to uninstall, press and hold the icon to display the operation window, and then select

"Uninstall" to remove the application.

5.3. File Manager

Go to the Apps interface, open the File Manager app, where you can manage graphic, audio, video files, and downloaded files on the device.

5.4. Dictionary

In the Dictionary app, you can search for words and translate them.

- This app also offers translation features for the Reader; however, you must download and import the dictionary files yourself.

5.5. Application Management

In Application Management, you can restrict the launching of applications and their background activity, as well as hide application icons from the application list.

6. Settings

6.1. Wireless Settings

You can enable or disable WLAN, Bluetooth, and airplane mode, as well as switch between devices connected via WLAN and Bluetooth. The same operations can also be performed in the Control Center.

6.2. Account Management

Manage accounts logged into third-party applications.

6.3. User Settings

Configure the desktop display mode, refresh rate, and desktop home screen modules.

6.4. Power Management

Configure sleep time, auto power-off, Wi-Fi and Bluetooth auto power-off policy, enable or disable power-saving mode, and check battery usage.

6.5. Device Settings

Set the device language, date and time, keyboard, gestures, and enable Google Assistant, enable/disable device sleep mode, and set the screen lock password.

- Please remember the screen lock password. It cannot be recovered if forgotten.

6.6. Font Replacement

You can copy your favorite font to the "Fonts" folder on the device, and then select it in the font settings to change the default font style for the entire system.

6.7. System Update

If system updates are available, you will receive a notification. Click on the notification message and start the system update; you can also check the latest system version in "Settings" - "System Update" and perform the update. Before updating the system, ensure that the device has sufficient battery level or is connected to power.

6.8. Factory Reset Settings

Go to the Settings interface, tap the button next to device information, and select "Clear all data" to restore the device to factory settings. After restoring factory settings, the device will restart, and all data will be deleted, including: notes, books, files, user data, system and application data, settings parameters, and downloaded applications.

7. Graphics Tablet Mode

First, connect a Windows computer to the Huion Ink device using a data cable and open the "Digitizer Tablet" app from the application list. Once in graphics tablet mode, you can draw on the screen using graphic software on the Windows computer; tap the "Back" button in the upper left corner of the graphics tablet mode interface to exit this mode.

8. System Gestures

Below are the default gestures for the device, which can be changed in Settings.

Return to the previous step: Swipe from the left or right edge of the screen towards the center to go back one step.

Refresh: Swipe up from the bottom right corner of the screen to refresh the screen.

Task Management: Swipe up from the bottom left corner of the screen to open the task manager.

Return to the home screen: Swipe up from the bottom center of the screen to return to the home screen.

Notification Center: Swipe down from the top left corner of the screen to open the notification center.

Control Center: Swipe down from the top right corner of the screen to open the control center.

Adjust front lighting: Press and hold on both sides of the screen, then swipe up or down to adjust the brightness of the cool and warm front light.

9. Frequently Asked Questions (FAQ)

P1. Why does the device respond slower than a tablet or smartphone?

The E Ink screen consists of small capsules containing tiny particles of black and white ink, which create an image by moving the particles and arranging them in specific patterns using an electric pulse. The speed at which these particles move affects the rate of image display. Tablets and smartphones use LCD screens. An LCD screen displays an image by changing the light permeability through the orientation change of liquid crystal molecules under the influence of an electric field. Since liquid crystal molecules change orientation faster than the particles on an E Ink screen, tablets and smartphones respond faster than devices with E Ink screens.

Q2. Why does ghosting occur when switching pages on an E Ink screen? The E Ink screen consists of small capsules containing black and white ink particles that create an image by moving to the surface of the display and arranging in specific patterns. Once the particles are in place, they will not move until the next electric pulse arranges them in a different pattern—even if the screen is not powered. Because the particles remain static until the next power pulse, the shadow of the previous image may sometimes remain visible after refreshing part of the screen. This phenomenon is called "ghosting."

Q3. How to remove ghosting effect on the screen? To resolve the ghosting issue, you can press the Refresh button in the Control Center or in the Assistive Ball menu to force a refresh, or press the power button to put the device to sleep and then wake it up. If the above actions do not resolve the issue, please contact us via Settings > Help and Feedback for further assistance.

Q4. What is the operating temperature of the E Ink screen? Due to the operating principle of the E Ink screen—creating an image by moving particles and arranging them in patterns—the operating temperature range of the E Ink screen is from 0°C to 50°C, with an optimal operating range of 0°C to 35°C. If the E Ink screen is used outside this temperature range, page switching may be slower than usual, and the ghosting effect may be more pronounced than usual.

Q5. Why is Wi-Fi transfer not working? Wi-Fi transfer is carried out via a local network. The reader and the transfer device (mobile phone or computer) must be on the same network for file transfer to be possible. If, after entering the URL displayed on the Wi-Fi Book Transfer app interface on the transfer device, the webpage cannot be opened, please check if the reader's IP address and the transfer device's IP address are in the same network segment (the first three octets of the IP address must be identical). If, after opening the webpage on the transfer device, you cannot select books, please try using a different browser.

Q6. Why is the translation feature not working? Due to copyright restrictions regarding dictionaries, the device does not come pre-equipped with a translation dictionary. You can download dictionary files (supporting StarDict, mobi, prc, mdx, BlueDict, etc.) and place them in the "Dict" folder in the root directory (if the folder does not exist, you can create it manually).

Q7. Why do copied books not appear on the bookshelf? Regardless of whether the books have been copied to the device's internal memory or to an SD card, they must be placed in a folder named "Books" for the system to recognize them.

10. Feedback You can provide your feedback in Settings – Help and Feedback if you encounter any issues while using Huion Ink or have suggestions. Your feedback is valuable to us and will contribute to improving the product.

11. Copyright Information Shenzhen Huion Trend Technology Co., Ltd. reserves the right to make changes to product specifications and other content of the Huion Ink User Guide without prior notice.

12. Disclaimers This manual is intended solely as a user guide. We have made every effort to ensure the accuracy of the content contained herein; however, we do not guarantee that it is completely free from errors or omissions. The information contained in this manual does not constitute any express or implied warranty. This document is a translation of the original user manual created by the manufacturer. Detailed information about the distributor/manufacturer's warranty conditions is available on the website <https://serwis.innpro.pl/gwarancja>. The product should be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and responsibility.

In the absence of information about necessary periodic maintenance or service actions in the user manual, the physical condition of the product should be assessed regularly, at least once a week, against that of a physically new product. If any deviation is detected or identified, urgent maintenance (cleaning) or service steps should be taken. Failure to perform proper maintenance (cleaning) and to respond upon detecting a deviation may lead to permanent damage to the product. The warranty does not cover damages resulting from neglect.

Warnings and safety information

All information regarding the operation of the device can be found in the user manual. Before you start using it, familiarize yourself with its content and follow the guidelines

contained therein. Also, review the following information before use:

Usage warnings

Screen safety: Tablet screens are larger and more susceptible to mechanical damage. Use a case with corner protection and a film or tempered glass. Avoid excessive pressure on the screen, especially when using styluses or accessories. • Tablet screens are larger and more susceptible to mechanical damage. Use a case with corner protection and a film or tempered glass. • Avoid excessive pressure on the screen, especially when using styluses or accessories.

Battery and charging: The tablet, like a smartphone, should be charged using original chargers. Avoid using the tablet while it is charging to prevent overheating. For tablets with larger screens, battery life may be shorter – use power-saving modes if available. • The tablet, like a smartphone, should be charged using original chargers. Avoid using the tablet while it is charging to prevent overheating. • For tablets with larger screens, battery life may be shorter – use power-saving modes if available.

Water resistance and protection: If the tablet is water-resistant, follow the manufacturer's guidelines regarding depth and duration of immersion. Remember that water resistance does not mean resistance to saltwater or detergents. Avoid using water-resistant tablets in harsh conditions, such as under running water, unless the manufacturer recommends it. • If the tablet is water-resistant, follow the manufacturer's guidelines regarding depth and duration of immersion. Remember that water resistance does not mean resistance to saltwater or detergents. • Avoid using water-resistant tablets in harsh conditions, such as under running water, unless the manufacturer recommends it.

Using 5G: Tablets equipped with 5G support may significantly increase battery consumption during intensive use of mobile data. In areas with weak 5G coverage, it is recommended to use Wi-Fi to optimize device performance. • Tablets equipped with 5G support may significantly increase battery consumption during intensive use of mobile data. • In areas with weak 5G coverage, it is recommended to use Wi-Fi to optimize device performance.

Child safety and privacy: Tablets, especially those used by children, should be secured with parental controls. Enable appropriate restrictions to limit access to applications, online purchases, and age-inappropriate content. • Tablets, especially those used by children, should be secured with parental controls. Enable appropriate restrictions to limit access to applications, online purchases, and age-inappropriate content.

Information on proper usage

Cameras and video: Tablets with advanced cameras offer features such as wide-angle photos and 4K recording. Use them according to the manufacturer's instructions to achieve the best results. Remember that tablets cannot replace professional cameras – their main advantages are convenience and functionality.

- Tablets with advanced cameras offer features such as wide-angle photos and 4K recording. Use them according to the manufacturer's instructions to achieve the best results.
- Remember that tablets cannot replace professional cameras – their main advantages are convenience and functionality.

Biometrics and data security: Tablets equipped with biometric features, such as facial recognition or fingerprint scanning, should be configured to protect the device from unauthorized access. Regularly update the operating system to secure the device against potential threats, such as malware.

- Tablets equipped with biometric features, such as facial recognition or fingerprint scanning, should be configured to protect the device from unauthorized access.

- Regularly update the operating system to secure the device against potential threats such as malware.

Maintenance and storage: Tablets are more susceptible to mechanical damage than smartphones. Store the device in a protective case, especially during transport. Avoid storing the tablet in places with high humidity or extreme temperatures.

- Tablets are more susceptible to mechanical damage than smartphones. Store the device in a protective case, especially during transport.
- Avoid storing the tablet in places with high humidity or extreme temperatures.

Accessories and extended functionality: Take advantage of the tablet's extended functionality by using dedicated accessories such as keyboards, styluses, mounts, or wireless chargers.

- Take advantage of the tablet's extended functionality by using dedicated accessories such as keyboards, styluses, mounts, or wireless chargers.

Additional precautions

- **Environmental protection:** Used batteries and devices should be disposed of according to local regulations regarding electrical waste. Return them to an e-waste collection point. Choose energy-saving modes of operation for the device (e.g., battery saver mode) to reduce energy consumption.
- Used batteries and devices should be disposed of according to local regulations regarding electrical waste. Return them to an e-waste collection point.
- Choose energy-saving modes of operation for the device (e.g., battery saver mode) to reduce energy consumption.
- **User efficiency:** Turn off the device when not in use for an extended period to save battery. Use original accessories such as headphones or styluses to ensure compatibility and full utilization of the device's features.
- Turn off the device when not in use for an extended period to save battery.
- Use original

accessories such as headphones or styluses to ensure compatibility and full utilization of the device's features. Safety measures Before charging, check that the device's contacts are clean. Never leave the device unattended while in use and charging. Ensure that you can quickly disconnect the device from the power source in an emergency. Never expose the device to high temperatures. Charge the device in a dry, well-ventilated place away from flammable materials, keeping a minimum distance of 1m from other objects. Never cover the device while charging. Never use a power supply, charging station, cables, etc., without the manufacturer's recommendation and certification. Take care of your property; the device is equipped with cells that are difficult to extinguish, so have a fire blanket on hand.

LI-ION Battery The device is equipped with a LI-ION (lithium-ion) battery, which ages over time and usage due to its physical and chemical structure. The manufacturer specifies the maximum operating time of the device under laboratory conditions, where optimal working conditions for the device exist, and the battery itself is new and fully charged. The actual operating time may differ from what is declared in the offer and this is not a defect of the device but a feature of the product. To maintain maximum battery life, it is not recommended to discharge it below 3.18V or 15% of total capacity. Lower values, such as 2.5V for the cell, cause permanent damage and are not covered by warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50% and its charge level should be checked periodically every two months. Store the battery and device in a dry place, away from sunlight and negative temperatures.

LI-PO Battery The device is equipped with a LI-PO (lithium-polymer) battery, which ages over time and usage due to its physical and chemical structure. The manufacturer specifies the maximum operating time of the device under laboratory conditions, where optimal working conditions for the device exist, and the battery itself is new and fully charged. The actual operating time may differ from what is declared in the offer and this is not a defect of the device but a feature of the product. To maintain maximum battery life, it is not recommended to discharge it below 3.5V or 5% of total capacity. Lower values, such as 3.2V for the cell, cause permanent damage and are not covered by warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50% and its charge level should be checked periodically every two months. Store the battery and device in a dry place, away from sunlight and negative temperatures.

Charging capabilities of radio devices and compatible charging devices

SIMPLIFIED EU DECLARATION OF CONFORMITY

Shenzhen Huion Trend Technology Co., Ltd. hereby declares that the type of radio device

Huion Kamvas Ink 10 Digital Notebook EB1011 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following website:

<https://files.innpro.pl/huion>

Manufacturer's address: Park, Keji 1st Road, Tangtou Community, Bao'an District Bld.1
Shiyan Street Fl.1, 518000 Shenzhen, cn

Radio frequency: 2.4GHz (2400MHz - 2483.5MHz)

Maximum radio frequency power: <20dBm

Environmental Protection

Waste electrical and electronic equipment marked in accordance with European Union directive must not be disposed of together with other municipal waste. It is subject to selective collection and recycling at designated points. By ensuring its proper disposal, you prevent potential negative consequences for the natural environment and human health. The system for collecting waste equipment complies with locally applicable environmental protection regulations regarding waste disposal. Detailed information on this matter can be obtained from the municipal office, waste management facility, or the store where the product was purchased. The product meets the requirements of the so-called New Approach directives of the European Union (EU) concerning issues related to user safety, health protection, and environmental protection, specifying hazards that should be detected and eliminated.

Importer:

INNPRO Robert Błędowski sp. z o.o. Rudzka 65c

44-200 Rybnik, Poland

tel. +48 533 234 303

hurt@innpro.pl / www.innpro.pl

Representative in the EU:

Dilectro Spółka z Ograniczoną Odpowiedzialnością

ul. Brukselska 4

03-973 Warsaw, PL

rafal.pacula@dilectro.pl

Battery information:

Type: lithium-ion battery

Net weight: 0.7159 kg

Capacity: 4650 mAh

Exceeded permissible cadmium content (0.002%) or lead (0.004%): no