

Κωπηλατική μηχανή MERACH MR-R10B2 (Μαύρη)

MERACH · EAN 5905156109452

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

USER MANUAL

WATER ROWER

MODEL: MR-R15

Do you have questions or need assistance? IMPORTANT! Please read this manual carefully before use and keep it for future reference. Feel free to contact us: support.eu@merach.com
Phone: +44 1942 946399 Monday-Friday 10:00-19:00 PST UK/DE/FR/ES/IT/NL/PT/PL

WHO WE ARE

Our customers mean much more to us than just important; their health, fitness, and true joy are the foundation of everything we do at MERACH. From innovative research on fitness to modern product development, to exceptional shopping service and after-sales support — we are a life partner for our customers on the path to a better future in health and fitness.

Through high-quality equipment that burns fat and builds muscle, such as our valued rowers and exercise bikes, as well as the innovative MERACH app and digital courses, we provide everyone with the opportunity and support to achieve their health and fitness goals and discover a new healthy lifestyle. Welcome to MERACH

THANK YOU FOR YOUR PURCHASE! (We hope you enjoy your new Rider machine as much as we do.)

Discover

Discover fitness courses

EU: merachfit.eu

DE: merachfit.de

FR: fr.merachfit.com

UK: uk.merachfit.com

(The official website address for your region is below. If your region is not listed, please contact customer service.)

Enjoy

Enjoy weekly featured courses created exclusively by our in-house fitness instructor

Train

Unlock unlimited access to live classes and never train alone again with MERACH.

WARRANTY REGISTRATION

Please register your warranty to maintain protection! Send the product model to register@merach.com

If you purchased the product from an authorized distributor, please contact them directly for warranty registration.

Table of Contents

Safety Instructions 140

Specifications 144

Parts List 145

Tools List 146

Assembly Instructions 147

Product Operating Instructions 151

Monitor Operating Instructions 155

App Configuration Instructions 157

Troubleshooting 158

Warm-Up 159

Warranty Information 160

Register your warranty to maintain protection! Send the product model to the email address: support.eu@merach.com

Register your warranty via the website: merachfit.com/pages/warranty-europe

139

Safety Instructions

Please keep this manual in a safe place for future reference. Safe and effective training is only possible when the device is properly assembled, maintained, and used. Ensure that all users are familiar with all warnings and precautions regarding this device. Before starting to use the device, consult a doctor to determine if you have any medical conditions or physical limitations that could pose a health risk or prevent proper use of the equipment. Medical advice is essential if you are taking medications that affect heart rate, blood pressure, or cholesterol levels. Always pay attention to the signals your body sends. Improper use of the device can negatively affect your health. If you experience symptoms (including headache, chest pain, irregular heartbeat, shortness of breath, dizziness, or any discomfort), immediately stop exercising and consult a doctor. Resume training only after receiving medical clearance. Use the device only on a stable and level surface. Place a protective mat on the floor or carpet to prevent damage. Maintain at least 0.6 m of clearance between the device and obstacles. Wear appropriate sports clothing and footwear. Loose clothing is not

recommended as it may get caught in the device and cause injury. Use the device according to the instructions in this manual. Immediately stop using the device if you notice defective parts or hear unusual noises. Use the device again only after all faults have been rectified. Safe use of the device is only possible with regular maintenance and repairs and replacement of worn or damaged parts. Before each use, check that all screws and nuts are properly tightened. Keep children and pets away from the device. The device is intended for use by adults only. The device is intended for home use only.

Maximum user weight is 136 kg. The overall functionality of the device and all moving parts should be regularly checked to ensure safety. Keep children away from the device. The equipment is not intended for use or play by children, as they may accidentally sustain injuries.

140

Safety Instructions

Use the equipment only on a stable and level surface. Place a protective mat on the floor or carpet to prevent damage. Ensure there is a minimum distance of 0.6 m between the equipment and any obstacles. Wear appropriate sports clothing and footwear. Loose clothing is not recommended, as it may get caught in the equipment and cause injuries. Use the equipment according to the instructions in this manual. Stop using it immediately if you detect defective parts or hear unusual noises. Use the equipment again only after resolving all issues. Safe use of the equipment is guaranteed only with regular maintenance and repairs, as well as the replacement of worn or damaged parts. Before each use, check that all screws and nuts are properly tightened. Keep children and pets away from the equipment. The equipment is intended exclusively for adults. This equipment is for home use only. The maximum user weight is 158 kg. The overall performance of the equipment and all moving parts should be regularly checked to ensure safety. Keep children away from the equipment. The equipment is not intended for use or play by children, as they may injure themselves accidentally.

If moving parts are damaged, do not use the device until they are repaired. The device is not intended for professional medical treatment. The product is intended for home use only. The rowing machine is a training device independent of speed. When lifting or moving the equipment, exercise caution. If necessary, use proper techniques or ask others for assistance. When storing in an upright position, place the equipment against a wall or on a stable surface. Store it in a safe place, away from children, to prevent injuries caused by the device tipping over.

Safety Instructions

Care and Maintenance

Do not store the device in places exposed to direct sunlight, wind, rain, or high humidity. If necessary, pack the device to prevent it from being touched or played with by children. After long-term storage, check for rust or cracks. It should be noted that consumable parts may wear out even with proper maintenance. For long-term use, regularly remove dust. Do not wash the device directly with water or clean it with gasoline or abrasive powders, as this may cause cracks, electric shock, or fire. Use diluted, neutral detergent for cleaning.

Precautions Before Use

Guide: Before taking your place, ensure that the seat wheels and guide rail are free from dust and foreign bodies. Small objects may hinder movement and damage the surface. The guide rail should be checked before each use and cleaned regularly. **Fastening Elements:** Screws should be checked for tightness after the first month of use, and then every 12 months. **Setting:** When storing the rowing machine in an upright position, choose an appropriate location. Use the rowing machine on a flat surface to avoid wobbling and premature wear.

Safety Instructions

This symbol indicates "Conformité Européenne," which means "compliance with EU directives." The CE marking confirms that the manufacturer declares the compliance of this product with applicable European directives and regulations. This symbol indicates "UK Conformity Assessed," which means "compliance with British standards." The UKCA marking confirms that the manufacturer declares the compliance of this product with applicable British standards. **SIMPLIFIED EU DECLARATION OF CONFORMITY**

Hereby, Zhejiang Yulu Electronic Technology Co., Ltd. declares that the fitness equipment MR-R10 complies with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following website:

<https://merachfit.com/pages/declarations-of-conformity>

DISPOSAL INFORMATION

Packaging materials are raw materials and can be recycled. Packaging materials should be properly sorted and disposed of in an environmentally friendly manner. Additional information can be provided by the local administration office. Used devices must not be disposed of with municipal waste! They must be disposed of properly. In this way, you contribute to environmental protection.

Information about collection points and their opening hours can be obtained from local authorities. Batteries must not be disposed of with municipal waste! As an end user, you are legally obliged to return used batteries to the appropriate collection point. Used batteries can be returned at public collection points in your area or at places where batteries of the same type are sold. Manufactured by: Imported by:

Zhejiang Yulu Electronic Technology Co., Ltd. HANGZHOU JINGGE E-COMMERCE LTD. Room 805, 8th Floor, Xianfeng Room 1205, Xianfeng Technology Building, Technology Building, 298 Weiye Road, 298 Weiye Road, Puyan Subdistrict, Binjiang District, Hangzhou, Binjiang District, Hangzhou, Zhejiang Province, China Zhejiang Province, China
yulu_mrk@merach.com jingge_mrk@163.com

143

Specification

Model: MR-R10

Name: Merach Water Rowing Machine

Power Supply: 2 AA batteries

Maximum Load: 136kg

Product Dimensions: 1903*497*614 mm

Net Weight: 21.57kg

Radio Frequency: 2.4 GHz

Radio Frequency Band: 2402-2480 MHz

Maximum RF Power: 2.94 dBm

144

Parts List

First, check if all parts and accessories are included in the package.

#A1 Main Frame x 1 #A2 Rail x 1 #A3 Front Tube x 1

#A5 Frame Assembly Kit

#A4 Rear Tube x 1 Limiting x 1 #A6 Seat Cushion x 1

#A7 Monitor x 1 #A8 Left Pedal x 1

#A6 Handlebar x 1 AAA Batteries x 2 #A9 Right Pedal x 1

USER MANUAL

MERACH Water Rowing Machine

EN·DE·FR·ES·IT·NL·PT·PL

Questions or Concerns? IMPORTANT! Please read all details before use, and keep this user manual for future reference. PLEASE FEEL FREE TO CONTACT US: support.eu@merach.com

MODEL: MR-R15

Phone: +44 1942 946399 Mon-Fri 10am-7pm PST UK/DE/FR/ES/IT/NL/PT/PL

#T3 Electric Water Pump X 1 Screws and Accessories X 1 User Manual X 1
145

Tool List

Make sure all parts and accessories are complete. Step 1 Step 2

#6 Handle Bracket *1 #27 Flat Head Allen Screws *3

T2 Allen Key *1 #47 Standard Spring Washers *3

#44 Flat Washers *3

T2 Allen Key *1

Step 3 Step 4

#27 Flat Head Allen Screws *3 #27 Flat Head Allen Screws

#47 Standard Spring Washers *3 Round *4

#44 Flat Washers *3 #47 Standard Spring Washers *4

T2 Allen Key *1 #44 Flat Washers *4

T2 Allen Key *1

Step 5 Step 6

#27 Flat Head Allen Screws

#26 Allen Screws *2

Round *4

T1 Multi-tool *1

#47 Standard Spring Washers *4 T2 Allen Key *1

#44 Flat Washers *4

T2 Allen Key *1

146

Assembly Instructions

STEP 1: 

A. Rotate the monitor bracket of the main frame (#A1) upwards to the position shown in the illustration. B. Unscrew the pre-installed Allen screw (#32) and flat washer (#43) on the main frame (#A1) using the Allen key (#T2) and set them aside. C. Attach the handle bracket (#6) to the main frame (#A1) using the Allen screw (#32) and flat washer (#43) with the Allen key (#T2). D. Pull the handle to the position shown in the illustration. 

STEP 2: 

A. Using the Allen key (#T2), flat head Allen screws (#27), standard spring washers (#47),

and flat washers (#44), attach the front base tube (A3) to the main frame (A1) and secure it in place. 147

Assembly Instructions

STEP 3: ♦

A. Using the Allen key (#T2), flat head Allen screws (#27), standard spring washers (#47), and flat washers (#44), attach the limiting frame set (A5) to the main frame (A1) and tighten it. STEP 4: ♦

A. Slide the seat cushion (#A6) onto the rail (#A2) in the direction shown in the illustration. B. Using the Allen key (#T2), flat head Allen screw (#27), standard spring washer (#47), and flat washer (#44), attach the rear base tube (#A4) to the rail (#A2), then secure it. 148

Assembly Instructions

STEP 5: ♦

A. Align the rail (#A2) with the main frame (#A1), ensuring it is properly secured. B. Using the Allen key (#T2), Allen screws (#27), standard spring washers (#47), and flat washers (#44), attach the rail (#A2) to the main frame (#A1) and tighten it. Note:

The Allen screws (#27) are pre-installed to the main frame (#A1). During assembly in this step, hold the seat cushion (#A6) to prevent it from shifting. 149

Assembly Instructions

STEP 6: ♦

A. Using the multi-tool (#T1) and Allen screws (#26), attach the left pedal (#A8) and right pedal (#A9) to the main frame (#A1). B. As shown below, align the inductive wires of the main frame (#A1) with the monitor and connect the additional wires to the hole at the back of the monitor (#A7). C. Using the Allen key (#T2) and cross screw (#36), attach the monitor (#A7) to the main frame (#A1). Note: The cross screws (#36) are pre-installed at the back of the monitor (#A7). 150

Product Operating Instructions

Adjusting the Footrests:

A. Adjustable footrests of the rear base:

Depending on individual needs, adjust the adjustable footrests (#63) on the rear base (#A4) to ensure the device is stable and does not wobble. B. Adjusting the footrest:

Set the device flat on the ground and adjust the footrest (#63) so that it is 5-10 mm above the ground. 151

Product Operating Instructions

Storing the Product

A. Grasp the rear base tube (#A4) with both hands and lift the device in the direction

indicated by the arrow, so that the transport wheels (#62) and foot pads (#54) drop to the ground at the same time. Note: When setting it upright, ensure that the rower is leaning against a wall or in front of a stable surface, and that the placement area is safe and inaccessible to children to prevent accidents. Moving the Device

A. Grasp the rear base tube (#A4) with both hands and lift the device in the direction indicated by the arrow, so that the set of transport wheels (#62) is on the ground. 152

Product Operating Instructions

Product User Manual

A. The electric water pump (#T3) comes with the following accessories:

Electric Water Pump (T3-1) ◆ Discharge Pipe (T3-2) ◆

Suction Pipe (T3-3) USB Charging Cable (T3-4)

B.

Install the outlet pipe (T3-2) and the suction pipe (T3-3) in the appropriate holes of the electric water pump (T3-1), as shown in the drawing. C. Press the switch button to pump water from the suction pipe (T3-3) to the outlet pipe (T3-2). D. After the power is exhausted, you can use a 5V-1A adapter (not included) and a USB cable (T3-4) to charge in the appropriate charging port. Note: Before installation, carefully read the user manual attached to the electric water pump (#T3). Charging port

Switch button

Warnings:

A. If the water in the tank is cloudy, it should be replaced. B. The replaced water should be treated as wastewater. 153

Product Manual

Resistance Adjustment:

A. The resistance of the device depends on the amount of water in the tank. The lowest level means minimal resistance, and the highest level means maximum resistance. B. The water level markers in the illustration show the maximum and minimum water levels. Do not exceed the maximum water level while pumping water, as any damage to the product will not be covered by warranty. 154

Monitor User Manual

Button Function

MODE - Press briefly to select; Press and hold to reset time/count/calories. SET - Set time/number/calories in non-scanning mode. RESET - Press to reset the set time/count/calories.

User Manual

1. SCAN:

Press the "MODE" button to switch to "SCAN" display. The monitor will switch the display every 6 seconds in the following order: TIME, DIST, CAL, COUNT, and T-CNT.

2. TIME:
(1) Time from the start to the end of the exercise. (2) Press the "MODE" button to switch to "TIME" display, then press the "SET" button to set the target exercise time. When the countdown reaches 0, it will stop for about 1 second and start counting up.

3. DIST:
Measures the distance from the start to the end of the movement. You can set an exercise goal.

4. CAL:
(1) Calculates the number of calories burned from the start to the end of the exercise. (2) Press the "MODE" button to switch to "CAL" display, then press the "SET" button to set the target calorie consumption. When the calorie countdown reaches 0, it will stop for about 1 second and start counting up.

5. COUNT:

(1) Displays the current exercise time. (2) Press the "MODE" button to switch the display screen to "COUNT", then press the "SET" button to set the target number of repetitions. When the set number of repetitions counts down to 0, the counter will stop for about 1 second and then start counting up.

6. T-CNT:
Total number of exercises since the battery was inserted.

Precautions
1. If the monitor displays nothing or the image is blurred, replace the battery. 2. After 4 minutes of inactivity, the monitor will automatically turn off. 3. After resuming exercise or pressing a button, the monitor will turn on automatically. 4. After starting the exercise, the monitor automatically calculates training data and stops calculating it 4 seconds after the exercise ends.

Battery Replacement Instructions
Manually remove the back cover (figure A), then insert two batteries (figure B), and then put the back cover on (figure C) – battery installation is complete.

5. COUNT:

(1) Displays the current exercise time. (2) Press the "MODE" button to switch the display screen to "COUNT", then press the "SET" button to set the target number of repetitions. When the set number of repetitions counts down to 0, the counter will stop for about 1 second and then start counting up.

6. T-CNT:
Total number of exercises since the battery was inserted.

Precautions
1. If the monitor displays nothing or the image is blurred, replace the battery. 2. After 4 minutes of inactivity, the monitor will automatically turn off. 3. After resuming exercise or pressing a button, the monitor will turn on automatically. 4. After starting the exercise, the

monitor automatically calculates training data and stops calculating it 4 seconds after the exercise ends. Battery Replacement Instructions

Manually remove the back cover (figure A), then insert two batteries (figure B), and then put the back cover on (figure C) – battery installation is complete. NOTE:

- Using the wrong battery may cause fire or explosion. · Disposable batteries must not be recharged. · Do not short-circuit the power terminals. · Do not mix different types of batteries. · Do not mix new and used batteries. · Do not swallow batteries; there is a risk of chemical burn. · New and used batteries should be stored out of reach of children. · If the battery compartment does not close properly, stop using the product and store it out of reach of children.
- If there is a suspicion that batteries have been swallowed or placed in any part of the body, you should immediately see a doctor.

156

Application Configuration Instructions

Connect the MERACH app to your devices to synchronize training data and track your physical progress; offering many training modes: Training Courses, Free Training, Real Scene Mode, Map Mode, and Online Game Mode – fully meeting your fitness needs. Downloading and using MERACH

1. To download the MERACH app, scan the QR code or search for "MERACH" in the Apple App Store® or Google Play Store. MERACH APP Download
2. Open the MERACH app, log in or register. 3. Follow the instructions in the app to set up your device. 4. Select "Rowing Ergometer" and find your "MRK-R10-XXXX". 5. Start enjoying your workouts. Does it support connecting to other apps? 1. To download the Kinomap app, search for "Kinomap" in the Apple App Store® or Google Play Store. 2. Open the Kinomap app. Log in or register. 3. Follow the instructions in the app to set up your device.

157

Troubleshooting

Questions Possible solutions

What to do when

you hear noise? You can apply some polishing wax to the strap while rowing cars.

What to do when the rowing machine does not connect to the app? 1. Check if other members are connected to

Bluetooth at the same time. If so, disconnect and reconnect. 2. The rowing machine is still malfunctioning. Contact

customer service (see page 141). 1. Change the location of the rowing machine to reduce direct sunlight. What to do when

the water changes color

or becomes cloudy? 2. Replace the water or treat it according to the description in the user manual. Consider using distilled water to refill the tank.

158

Warm-up

Before starting exercises, perform stretching exercises. Warmed muscles stretch more easily, so start with 5-10 minutes of warm-up, then perform the following stretching exercises, holding for 5 repetitions, 10 seconds or longer on each leg. After

finishing your workout, repeat the stretching exercises. 1. Forward bend

Slightly bend your knees, slowly lean your torso forward, relax your back and shoulders, and then try to touch your toes with your hands. Hold the position for 10-15 seconds, then relax your body. Repeat 3 times (see figure 1).

2. Seated hamstring stretch

Sit with one leg extended. Bend the other leg and rest your foot against the inner side of the extended leg. Try to reach your hand to the toes of the extended leg. Hold the position for 10-15 seconds, then relax your body. Repeat 3 times on each leg (see figure 2).

3. Calf and Achilles tendon stretch

Stand facing a wall or tree, place your hands on it and extend one leg back. Keep the back leg straight and press the heel to the ground. Lean towards the wall or tree. Hold the position for 10-15 seconds, then relax your body. Repeat 3 times on each leg (see figure 3).

4. Quadriceps stretch

Reach back with your right hand, grab your right foot and slowly pull it towards your hips until you feel tension

in the front of your thigh. Hold the position for 10-15 seconds, then relax your body. Repeat 3 times on each leg (see figure 4).

5. Sartorius stretch (inner thigh)

Sit with the soles of your feet together and your knees pointing outward. Grab your feet with both hands and pull them towards your groin. Hold the position for 10-15 seconds, then relax your body. Repeat 3 times (see figure 5). Note: The device is designed for full-body training. It is essential to perform a warm-up according to the above instructions before starting exercises.

159

Warranty Information

Product Name:

MERACH Water Rower

Model: MR-R10

Default Warranty Period: 12 months

For your own needs, we strongly recommend recording the order number and purchase date. Purchase Date:

Serial Number:

Terms and Conditions

MERACH products are characterized by high quality of materials, workmanship, and service. The limited one-year warranty for MERACH is valid from the date of purchase. MERACH will replace defective products based on eligibility. Returns are available for the original purchasers of our products within the first 30 days of purchase. This warranty applies only to personal use and does not apply to commercial use, rental, or any other use for which the product is not intended. There are no other warranties than those expressly stated for each product. This warranty is non-transferable.

MERACH is not responsible for any damages, losses, or inconveniences caused by equipment failure, user negligence, improper use, or incorrect operation not in accordance with the included user manual. The warranty does not cover the following situations: Damage resulting from abuse, accident, modification, or vandalism. Improper or insufficient maintenance. Damage during return shipping. Unsupervised use by children under 14 years

of age. MERACH and its subsidiaries are only liable for damages caused in accordance with the intended use or in accordance with the user manual. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. All expressed and implied warranties, including merchantability, are limited to the duration of the limited warranty.

Warranty Information

Additional 12-month warranty:

You can take advantage of an additional 12-month warranty. To activate the warranty, simply send the product model to register@merach.com or log in to the website and enter the order number (e.g., Amazon) within 14 days of the purchase date, which will allow you to register the new product and cover it with an extended warranty. If you are unable to provide the product order number, please write a short note in the order number field along with the date you received the product.

Defective products and returns:

If the product turns out to be defective during the warranty period, please contact Customer Service at support.eu@merach.com, providing the invoice number and order number. Please DO NOT dispose of the product before contacting us. As soon as our customer service team approves your request, please return the product along with a copy of the invoice and order number.

Customer Service

Your satisfaction is our goal! If you have any problems or questions regarding the new product, please contact our customer service team at support.eu@merach.com or by phone: +44 1942 946399 Monday-Friday 10:00-19:00 PST

(UK/Germany/France/Spain/Italy/Netherlands/Portugal/Poland)

Exclusive after-sales service TikTok Shop: service@merach.com

*Before contacting customer service, please prepare your order number and serial number (usually located on the device).

Product battery specifications

Feature Value

Battery identification number WOF6B2S

Battery category General-purpose portable battery

Battery type Portable alkaline batteries (manganese zinc) (LR)

Contains Cadmium/Lead (>0.002% Cd, Not >0.004% Pb)

Net weight (kg) 0.0012

Capacity (mAh) 850

This document is a translation of the original user manual created by the manufacturer.

Detailed information about the distributor/manufacturer warranty conditions is available on the website <https://serwis.innpro.pl/gwarancja>

The product must be regularly maintained (cleaned) at your own expense or by specialized service points. In the absence of information about necessary periodic or service maintenance actions in the user manual, the condition of the product should be assessed regularly, at least once a week, to determine any deviation from the condition of a physically new product. If any deviation is detected or noted, urgent maintenance (cleaning) or service steps should be taken. Failure to properly maintain (clean) and respond upon detecting a state of deviation may lead to permanent damage to the product. The warranty does not cover damages resulting from negligence.

Warnings and safety information

The magnetic rower is intended for home use only and recreational training. Before first use, please read the user manual and all safety information. Improper use of the device may lead to injuries, musculoskeletal overloads, or equipment damage. The device is not a toy. Keep it out of reach of children; use by minors is only allowed under the supervision of an adult. Do not use the rower if it is damaged, unstable, or shows abnormal operation. In case of pain, dizziness, shortness of breath, or other concerning symptoms, training should be stopped immediately.

The product meets the safety requirements specified in Regulation (EU) 2023/988 regarding the general safety of products. Information on proper use

- Set the rowing machine on a stable, flat, and non-slip surface.
- Use the device according to the manufacturer's recommendations regarding the maximum user weight and training intensity.
- Before starting exercises, ensure that all components are properly secured and locked.
- Wear appropriate sports shoes and clothing that do not restrict movement.
- Bluetooth functions and the mobile application should only be used according to the manufacturer's instructions.
- When using the mobile application, do not lose control of the exercises or focus on the mobile device at the expense of safety.
- After completing the workout, store the equipment in a way that prevents it from tipping over or accidentally turning on. Additional precautions
- Regularly check the technical condition of moving parts, belts, rollers, and the magnetic

resistance system.

- Do not make any modifications to the device's construction or electronic systems on your own.
- When folding or unfolding the rowing machine, exercise particular caution to avoid pinching fingers.
- Mobile devices used to operate the Bluetooth application should be stored in a safe place to prevent them from falling during training.
- Dispose of worn-out components and the device at the end of its service life in accordance with local environmental protection and waste regulations.

SIMPLIFIED EU DECLARATION OF CONFORMITY

Zhejiang Yulu Electronic Technology Co. Ltd hereby declares that the type of radio device Rowing Machine MERACH MR-R02B10 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following website:

<https://files.innpro.pl/merach>

Manufacturer's address: Xianfeng Technology, Weiye Road, Binjiang District, Hangzhou R805, Bd298, 0000 Hangzhou, cn

Radio frequency: 2.4Ghz (2400Mhz - 2483.5Mhz)

Maximum radio frequency power: <20dBm

Environmental Protection

Waste electrical and electronic equipment marked in accordance with the European Union directive must not be placed together with other municipal waste. It is subject to selective collection and recycling at designated points. By ensuring its proper disposal, you prevent potential negative consequences for the natural environment and human health. The system for collecting used equipment complies with locally applicable environmental protection regulations regarding waste disposal. Detailed information on this topic can be obtained from the municipal office, cleaning facility, or store where the product was purchased. The product meets the requirements of the so-called New Approach directives of the European Union (EU) concerning issues related to safety, health protection, and environmental protection, specifying hazards that should be detected and eliminated. Importer:

INNPRO Robert Błędowski sp. z o.o. Rudzka 65c

44-200 Rybnik, Poland

tel. +48 533 234 303

hurt@innpro.pl

www.innpro.pl

Representative in the EU:

INNPRO Robert Błędowski

Rudzka 65c

44-200 Rybnik, Poland

zgloszenia@innpro.pl

Contact: 44-1315070255 Monday - Friday 10:00–19:00 PST UK / DE / FR / ES / IT / NL

Customer Service: support.eu@merach.com

Official Website: merachDt.com