

Pet Grooming Vacuum and Dryer
Model:BM1



ON-D94

Safety Warnings

- This product is intended for home grooming only, not for commercial or industrial use, nor for use outdoors or in humid places.
- Supervise use for children and people with physical and mental disabilities.
- Please use the machine in a safe environment and under the instruction. Supervision of a person who understands the safe use method and dangers of the product. In the absence of such a person, never let a child use it.
- Please pay attention when using it near children and pets. In addition, please do not let children and pets play with this product.
- Please do not touch the power plug and the product with wet hands.
- Do not use this product if the power cord or power plug is damaged.
- If you find the product can not work or damage or immersion in liquid, contact us. Please do not disassemble the product; the wrong assembly method may cause electric shock or fire; please contact our company if maintenance is needed.
- Please do not inhale flammable or combustible liquids such as gasoline. In addition, please do not use the machine in or near an environment with flammable or combustible gases.
- Do not pull the power cord, do not put heavy objects on top of the machine, and do not pinch the cord.
- Do not use it while smoking or working with other high-temperature items (matches, hot ash, etc.).
- Ensure that the opening is not blocked before use.
- Please unplug the power cord when you need to conduct maintenance.
- Please do not use or keep it outdoors or in other wet places.
- Please do not use products with fragrance as the fragrance may contain flammable chemicals.
- Please only use this product under the specified voltage, which can be found at the bottom of the machine.

Use Precautions

DO NOT operate with wet hands or unplug the power cord to avoid electric shock.
DO NOT smoke or use other flammable material.
Please do not use the machine in or near an environment with flammable or combustible gases.

There may be a strange smell during the first use; however, it will not cause adverse effects on the body and will disappear after a while.
If the scorching smell persists, stop using it immediately!

Please keep the dust cup and filter clean.
If the dust cup and filter are used while dirty, they may cause product issue.

During maintenance, turn off the power supply and unplug the power cord before proceeding.
If the power is turned on for maintenance, it will cause electric shock, unexpected accidents, or injury.

The product will stop working when the temperature rises abnormally.
In case of abnormal heating of the motor, stop using it immediately.

If the suction opening is blocked, please stop using it immediately.
Take out the dust cup and clean the inlet and filter, then open it again after 60 minutes.

 
Please be sure to install and use the filter.
If you remove the filter, it will damage the motor.

Use Precautions


Package List	01
Product Overview	02
How to Do if My Pets Get Nervous?	03
Start to Vacuum Hair	04
Start to Dry Hair	06
Tips for Accessories Option	08
Maintenance	12
Specifications	16
Warranty	17




Package List

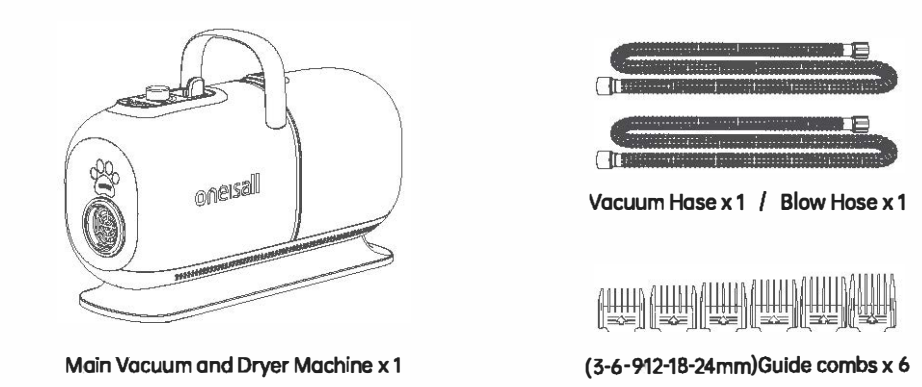



Vacuum Accessories

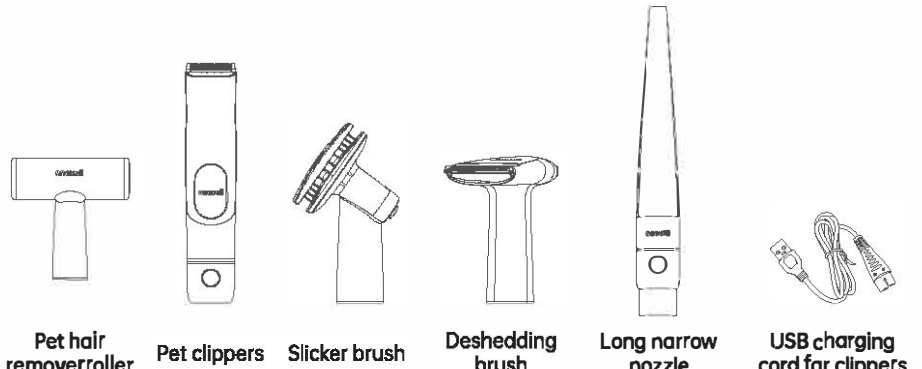 

Dryer Accessories

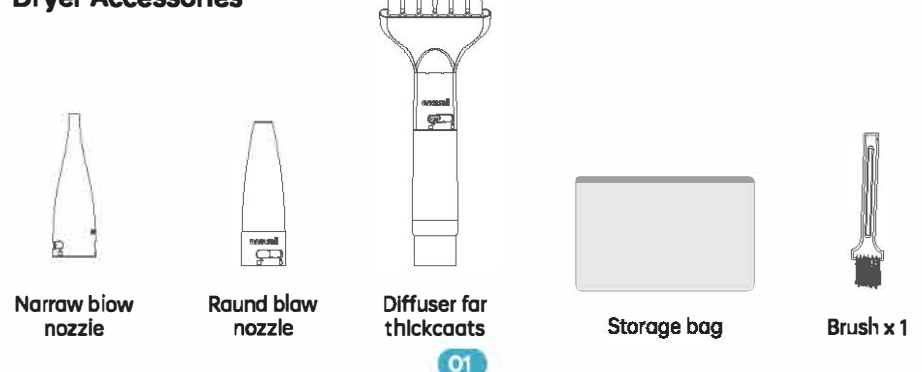 


Product Overview

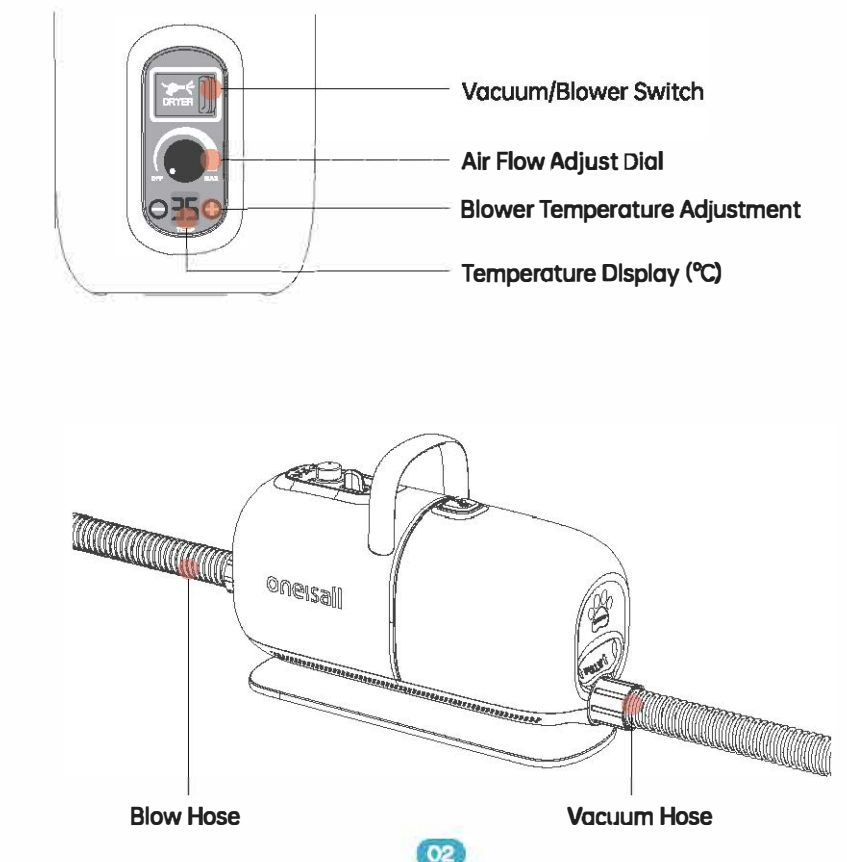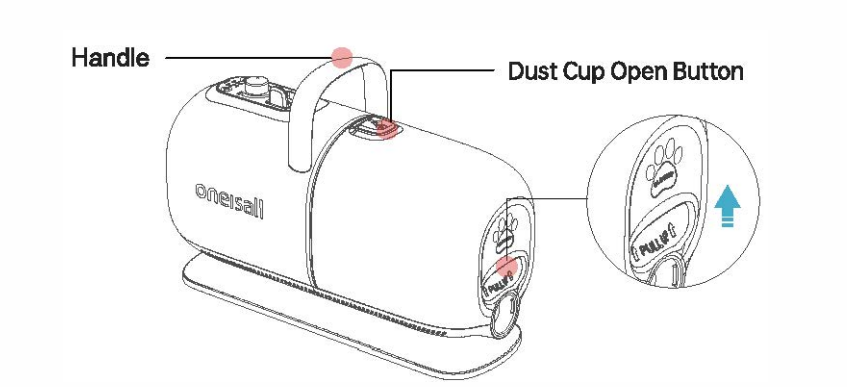  


How to Do if My Pets Get Nervous?

If your pet is nervous about the noise or the air flow, you may need to let him get used to the machine at first.

 
1. Let your pet hear the sound of the machine or feel the slower air flow.

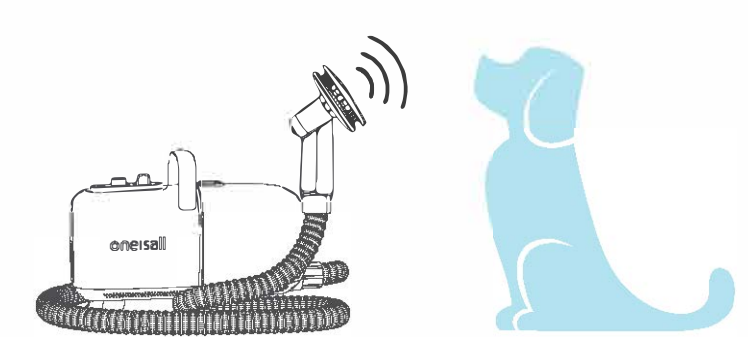

 2. Treat your pet with snack.

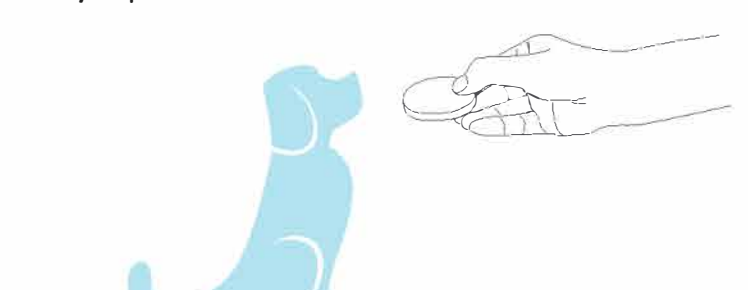


 3. Start to use the vacuum or dryer. If your pet still get nervous, try to repeat 1-2 to let him know that this machine would not do harm to him.

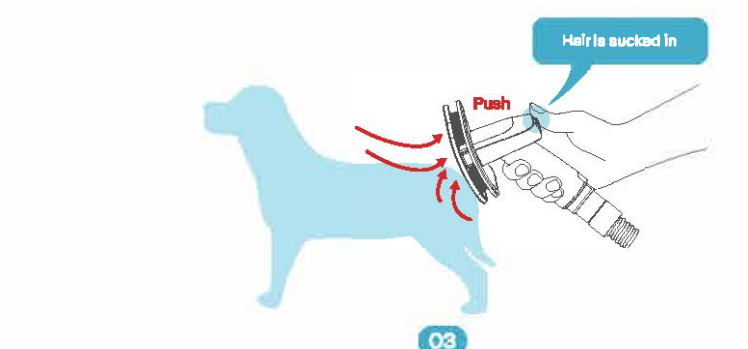


Start to Vacuum Hair

 
1. Install the vacuum hose.

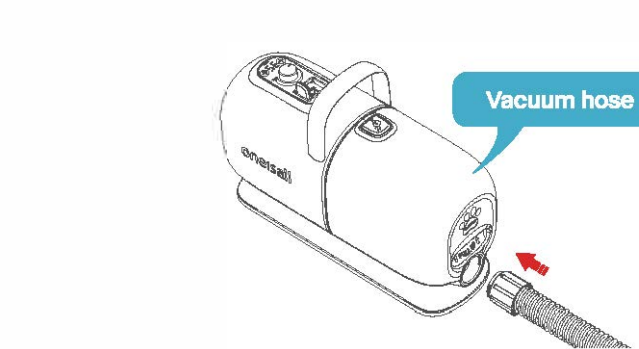

 2. Install suction head accessories.

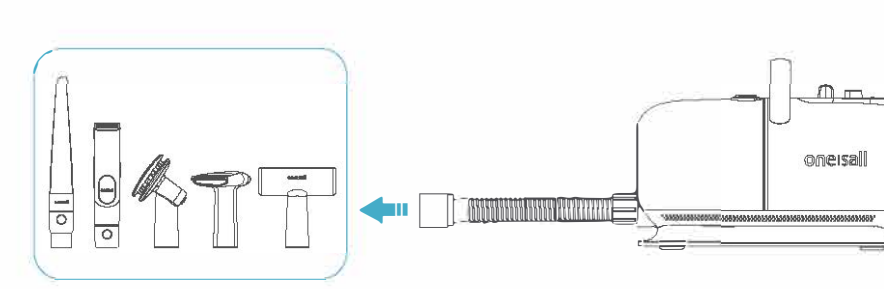

 
3. Connect the power supply.

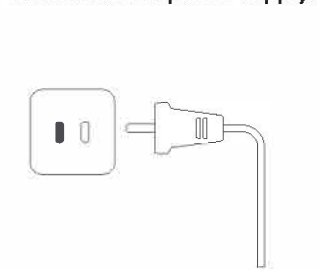

4. Switch to Cleaner mode.




 5. Select speed.

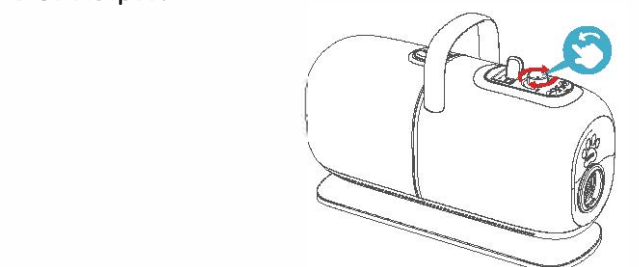


NOTE
In the vacuuming mode, you can't adjust the temperature. Only speed can be adjustable in this mode.

 6. Groom your pet.

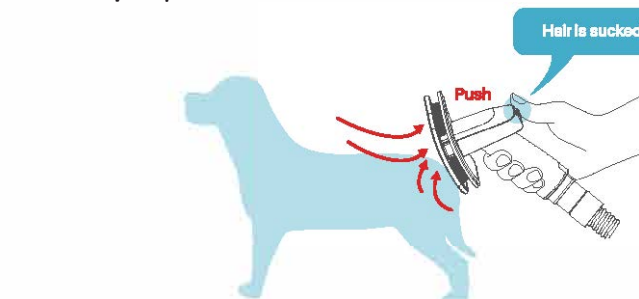

 7. Clean the dust cup.

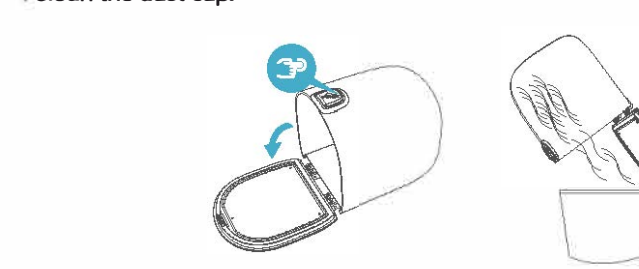


NOTE
We suggest starting with the low speed for first-time use as your pet will slowly get used to the noise.

Start to Dry Hair


1. Please use towel to absorb the dripping water at first.



 2. Install the blow hose

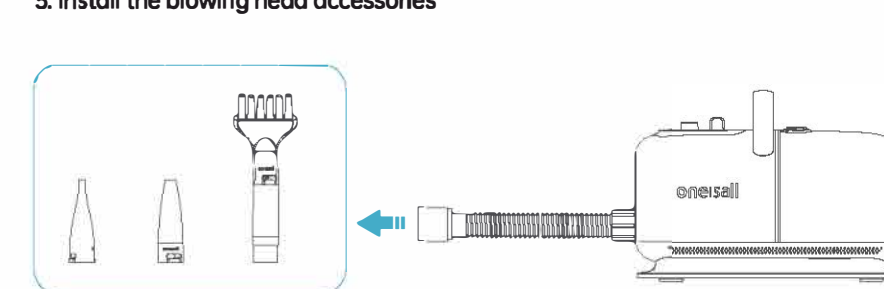

 3. Install the blowing head accessories

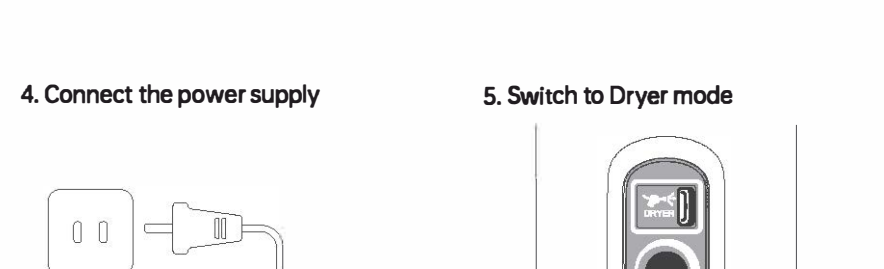


4. Connect the power supply



5. Switch to Dryer mode



 
6. Select wind speed.

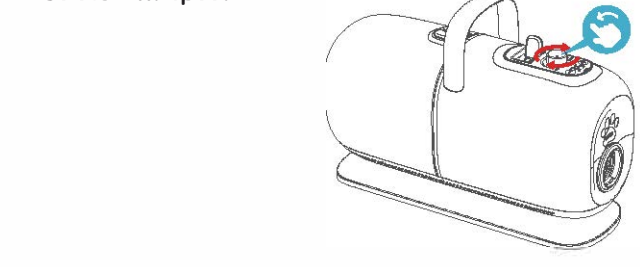

7. Select temperature
Seven different degrees Celsius to choose from 35-40-45-50-55-60-65.



 8. Start blowing hair.

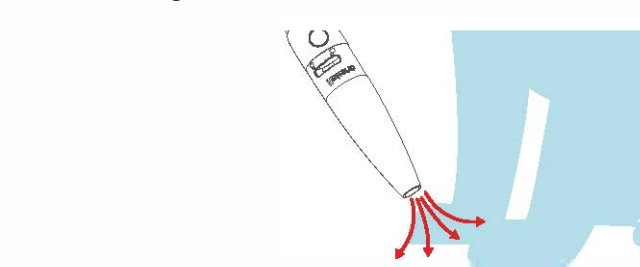


NOTE
1. You could switch Dryer/Cleaner without cutting power.
2. In the drying mode, both speed and temperature are adjustable.
3. For the sensitive area, we suggest you to use lower temperature and soft air flow firstly.
4. You could rise the temperature during the drying process.

Tips for Accessories Option

Deshedding brush

 Curved comb teeth can fit the back and head well. Used to remove the pet's long and unnecessary thick hair.

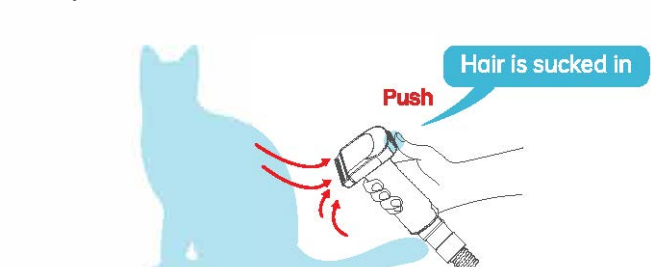


NOTE

Please be careful with the soft parts of your pet and do not use excessive force to cause skin scratches.
Please pop up the PUSH button when you do not need to use it.



Slicker brush

 A larger area of comb teeth is suitable for large dogs with thickfur, used to remove the loosen hair and the dander inside the coats. Making the hair more fluffy and healthy.

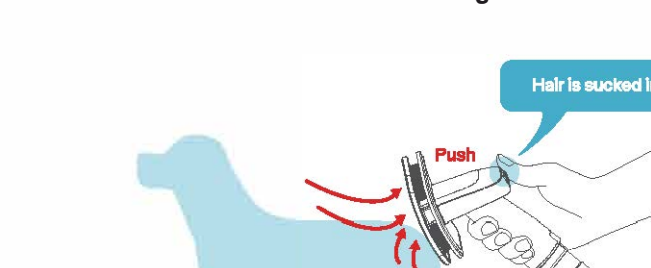

Pet Clippers

  1) Used to trim the pet's hair without leaving a mess as the hair will not fly around.
2) While cutting, it sucks the cut hair!

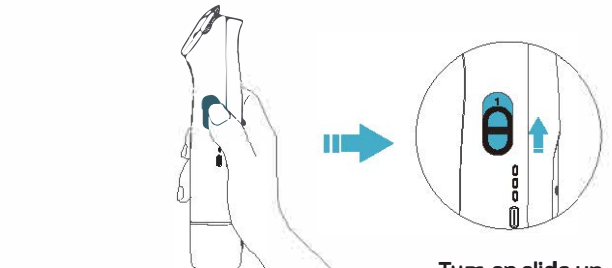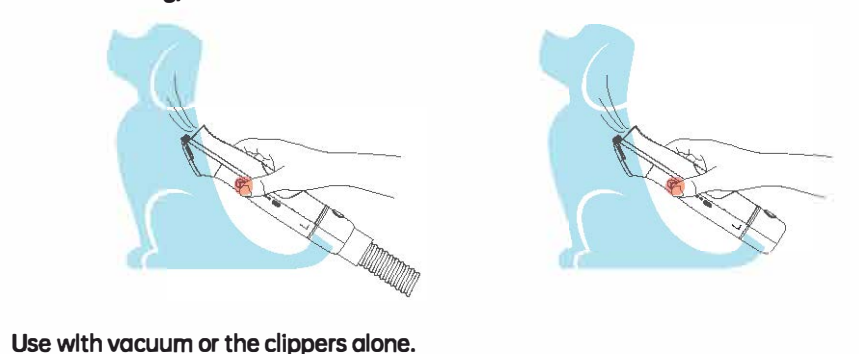


70%-100% battery left (Blue lights stay on when fully charged)
40%-69% battery left
0-39% battery left (Red light flashes when less than 10% battery left)

NOTE
Remember to pay attention to the cutting edge and position, and do not use excessive force as it causes skin irritation.


Install Guide Comb (used with electric clippers)

 Choose the length guide comb according to the length of pet hair you want to leave.
The guide comb (3mm/6mm/9mm/12mm/18mm/24mm) is applicable for grooming different hair lengths.
The guide comb set is small; keep it stored properly when it is not in use.

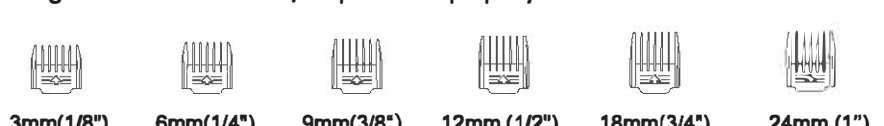


Long narrow nozzle

 Used to clean carpet, sofa corners, car, cat tree and cat nest.

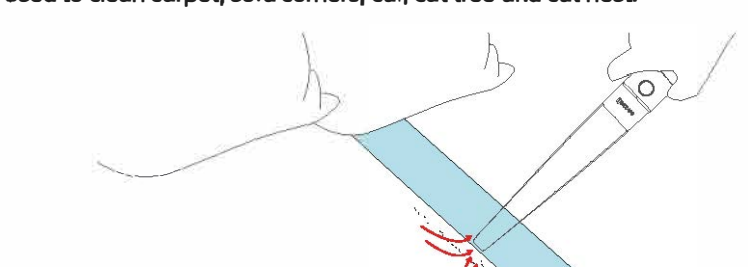

Pet hair remover roller

 
Effectively remove pet hair that stuck to clothing.

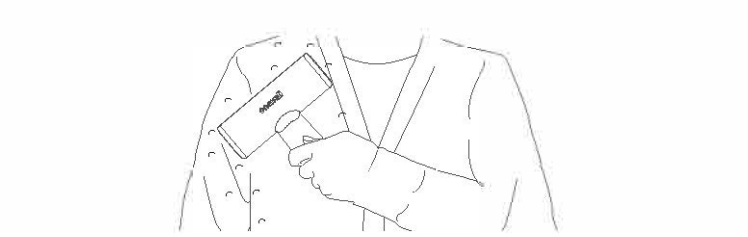

NOTE
Roll the remover back and forth.
Do Not roll it in one direction all the time.


Round blow nozzle

 Concentrates air flow, used to blow dry the undercoat or small area quick dry.
Recommended for pets with undercoat or sensitive parts, heads, and paws in large dogs.

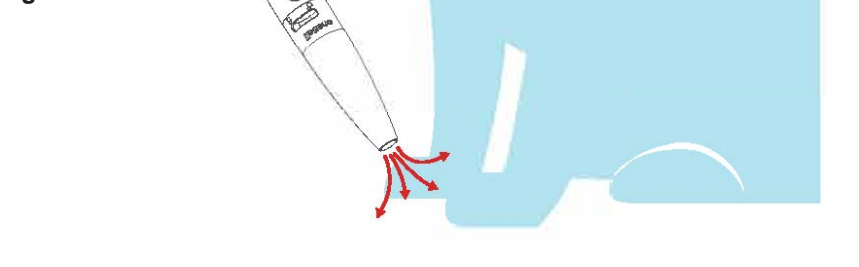


Narrow blow nozzle

 Concentrates air flow for large area hair drying.
Recommended for quick dry hair all over the body.

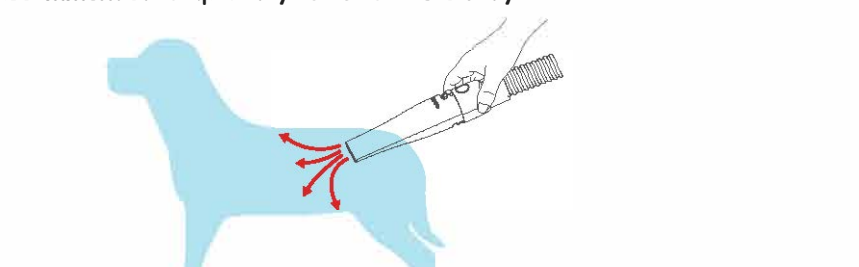

Diffuser for thick coats

 Disperses the air flow. Dry and comb the hair on the surface. Make hair smooth and fluffy.
Recommended for dry hair on back, belly and head. For thick, long-haired dogs or cats.

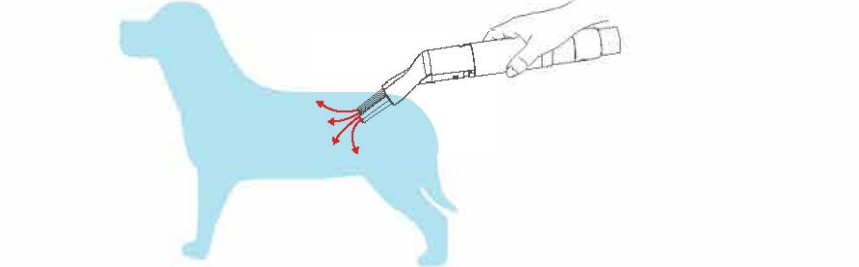


Tips for pet hair drying:

Use a round blow nozzle first to dry the undercoats, then use a narrow blow nozzle or the diffuser to dry the top surface hair.

Maintenance

Clean the dust cup

 1. Cut off the power.
Put your finger on the tail of the dust cup.
2. Press the release button and pour out the hair.

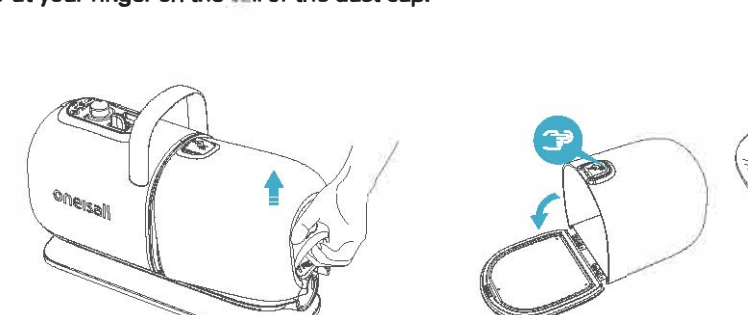


NOTE

1. If the removed dust cup is cleaned with water or a wet cloth, be sure to install it after the dust cup is completely dry. Otherwise, it will damage the motor.
2. Please take dust cup lightly. If it drops will be damaged easily. If have any problems with the cup, please contact us on Amazon or contact us email: support@oneisall.com

Clean the blades of pet clippers

 1. Push the blades out by hands.
2. Brush and wash the blades.
3. Dry the blades with cloth and dropoil.
4. Align the slot under the blades and press to install the blades.

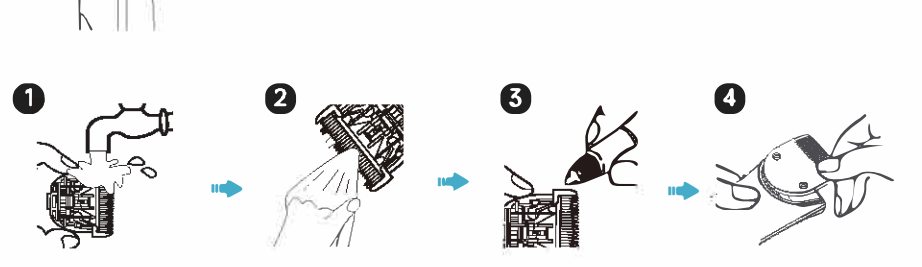


NOTE

Oil is not included in the package. Please order it by yourself.

Cleaning the HEPA & Sponge Filter

 
1. Remove the dust cup and remove the HEPA & sponge filter.

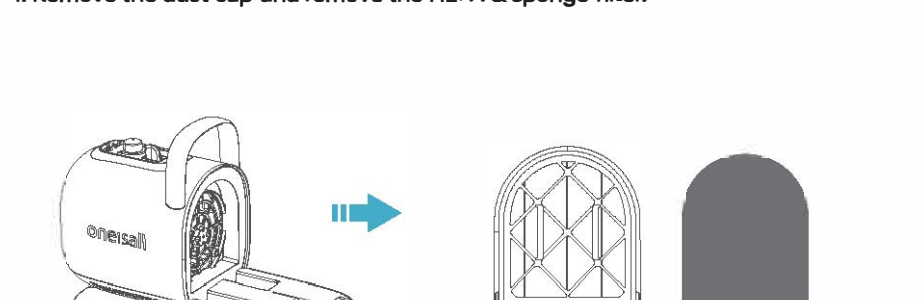

2. Clean them with brush, do not wash them with water.



 3. Place the HEPA & sponge filter back into the machine.

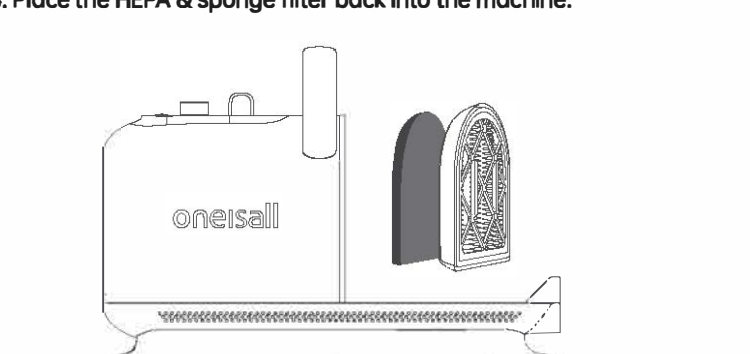

Troubleshooting

Problems	Possible Causes	Solutions
Cannot be turned on	Plug not been inserted well Switch has not been turned on right	Plug the charger again Turn the switch to Dryer or Cleaner function
Weak suction	Hose is clogged Dust cup is too full Filter is dirty	Clean the hose and joint Empty dust cup Clean filter
The Pet Clippers heats up during use	Debris stay in the internal parts of the clippers	Please remove the blade, wash and oil
The hose is broken	Accidental damage Bitten by pets at home	Remove the hoses and store them in the bag we provided.

• If the above solutions do not solve the problem, please stop using the product, and contact our customer support: support@oneisall.com

Specifications

The Main Machine

Input voltage	120V-60Hz
Rated power	1100W
Hose length	59 inch
Dust cup capacity	70 oz
Size of the main machine	12.8 x 8.7 x 5 inch
Power cord length	78.7 inch
Maximum noise	60dB

Pet Clippers

Input voltage	DC 5V=1A
Rated power	5W
Charging time	About 3h
Working time	About 2h
Battery capacity	1400mAh

Warranty

The Warranty Team Provides You With Specific Legal Rights.
You May Also Have Other Rights Which Vary From State To State.

12-Month Warranty & Lifetime Customer Support

Only applies to eligible purchases made directly from oneisall authorized distributors.
Warranty coverage applies to the original owner and to the original product only and is not transferable.

How to Initiate a Warranty Claim?

If your appliance operates improperly while in use under normal household conditions within the warranty period, please contact our customer support team [support@oneisall.com] to initiate a warranty claim.

For more warranty details, please refer to www.oneisall.com.
All rights are reserved by oneisall official website.