
Automatic double pet feeder WiFi Oneisall


Oneisall · EAN 6934399223204

Machine translation from Čeština. In case of doubt the manufacturer's original document prevails.

oneisall®

Automatic pet feeder with WIFI


PFD-002 Pro

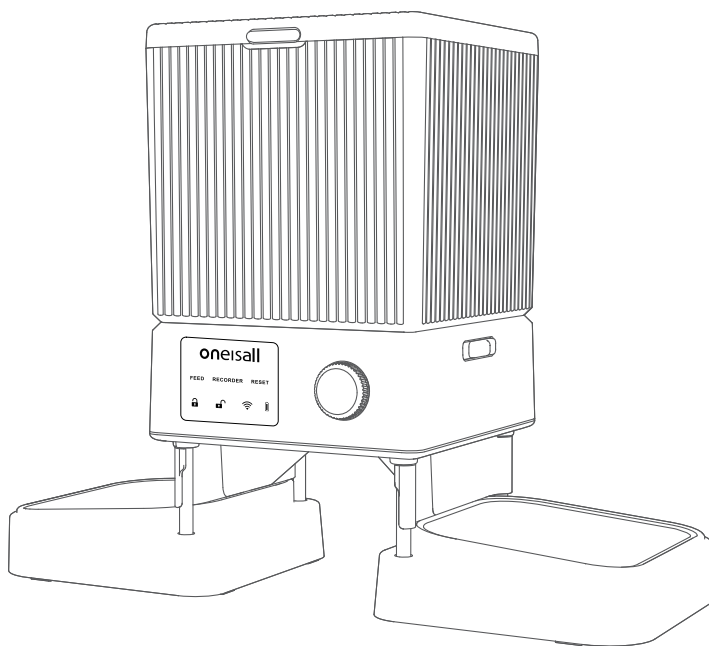


User manual

ON-D97


In the package

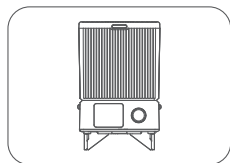

1x automatic feeder

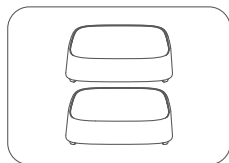

2x stainless steel bowl and holder

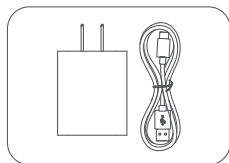


1x power cable with adapter






1x bag with moisture absorbing agent





1x user manual
1x sponge
2x food dispenser

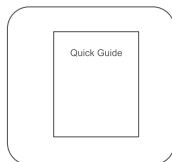


1x quick guide
4x support legs

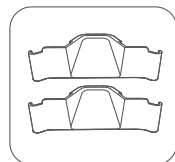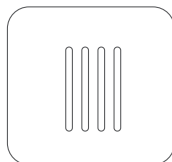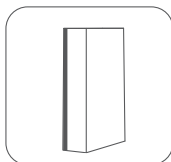

Product overview

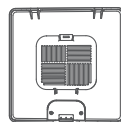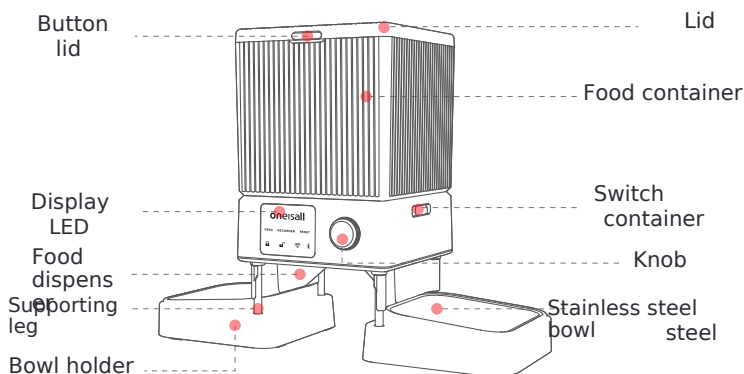

Container with moisture absorbing material
Battery compartment

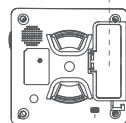


Power socket

Introduction to the LED display

FEED: Manual feeding

RECORDER: Recording messages

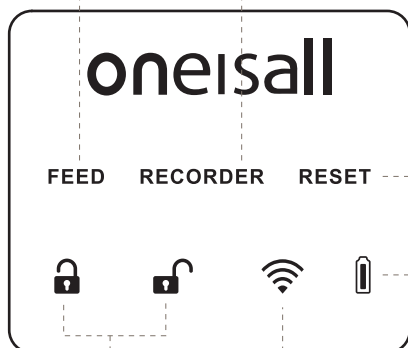

FEED

RECORDER

RESET

RESET: Clear all
settings


Battery icon

Lock/Unlock

WIFI indicator


Assembling the feeder

1. Remove the device, press the button on the front of the top cover, open the container and remove all accessories.

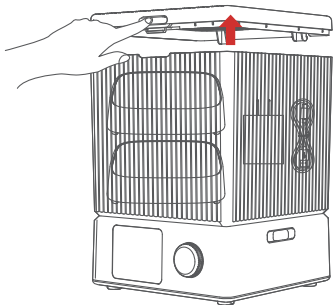


2. Turn the device over and install 4 AA batteries.


Note:
Spare batteries are not included.

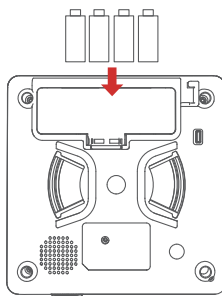



3. Install the charging cable. Insert the Type C plug into the socket in the feeder.

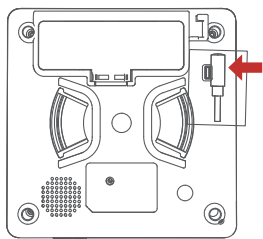


4. Remove the two food containers, insert them into the feeder.

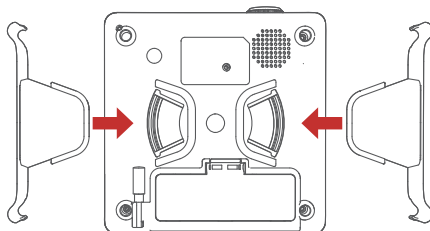

5. Remove the 4 support legs and insert them into the four holes at the bottom of the device.
6. Align the 2 holes on the bottom of the bowl holder with the 2 support legs and mount them correctly. Do the same on the other side.

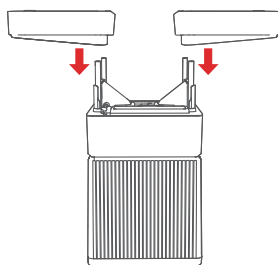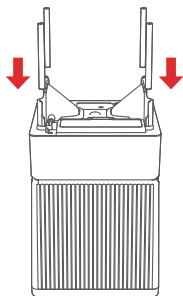


7. Turn the device after installing all components. Place the bag with the moisture absorbing material into the designated container.

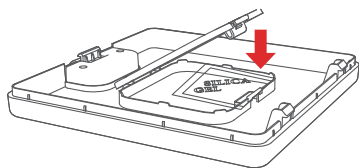

8. Fill the container with dry pet food. Place the stainless steel bowls and connect the charging cable to power.

Note:
Acceptable food size: diameter 4-12 mm. Do not use canned or wet food.

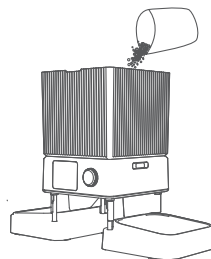

Tips:

1. The batteries ensure the operation of the feeder during a power outage.
2. It is recommended to use the included 5V/1A adapter daily.

Connecting to the app

The feeder supports both 2.4 GHz and 5 GHz WiFi

System requirements
iPhone with iOS 10.0 or later. Smartphone with
Android 5.0 or later.



1. Download and install the Smart Life app.




Smart Life

Note:

To continue with the installation and registration, necessary permissions must be granted. After entering your email address, you will receive a verification code. This code must be entered before setting the account password.

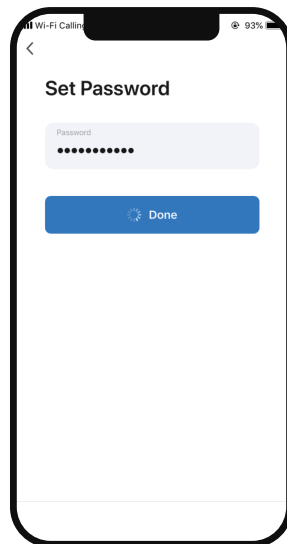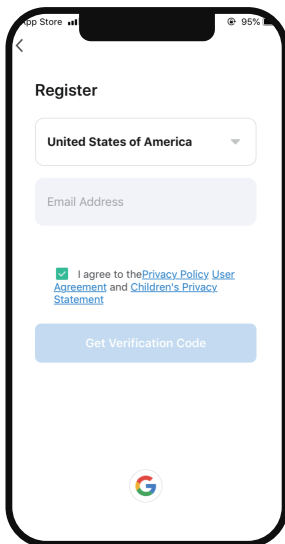

2. Turn on Bluetooth on your mobile phone. Then connect the phone to the Wi-Fi network and activate the GPS location service.

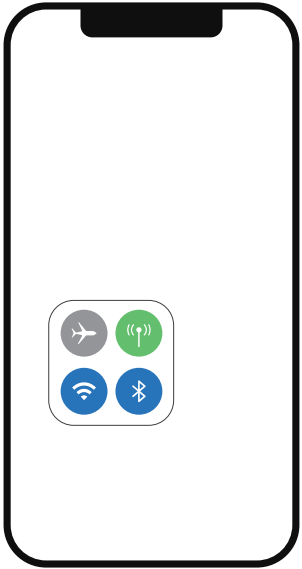


3. To activate the feeder, you must first turn it on. Press and hold the control knob for about 3 seconds to unlock it. Then turn the knob to the RESET icon and hold it for 5 seconds. You will notice that the WIFI icon changes to red and starts blinking.




Note:
If you are using batteries as the only power source for the feeder, the battery icon will be displayed on the device.

4. In the app, find the "+" symbol on the right and click on it to add a new feeder to your account.


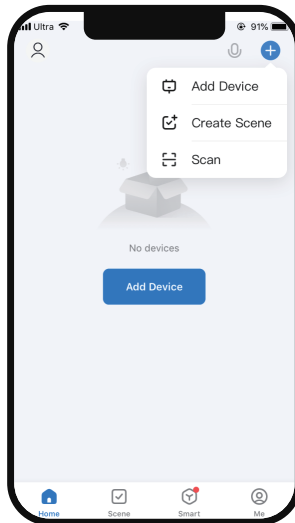


5. In the app, use the "Add Device" function to detect the device, as shown in the attached image.
The model name of the device should be PFD-002 PRO. After identifying the device, click the "Add" button to continue.

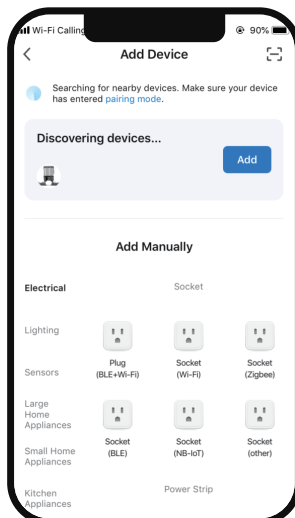

6. When connecting the feeder for the first time or switching to a new Wi-Fi network, you will be prompted to enter the Wi-Fi password. Enter the password in the appropriate field and click the "Next" button to continue.

7. Wait patiently for the connection to be established and completed successfully. It may take a while.

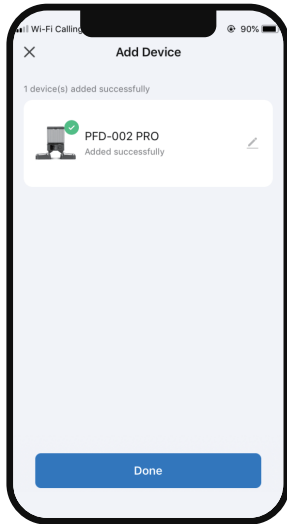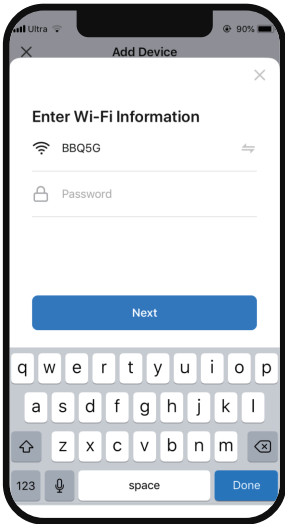

8. After a successful connection, click the "Done" button to complete the configuration. You will notice that the WIFI icon on the device changes to white and stops blinking.



Note:



● When connecting the feeder to the power socket, keep in mind that the middle menu bar on the device will automatically disappear after 5 seconds of user inactivity.

● If using the battery as the only power source, keep in mind that after 30 seconds of inactivity, the entire display will go black. To reactivate the display, simply turn the knob in the desired direction and the display will light up again.

Manual feeding settings


1. After completing the connection process, the mobile phone will automatically open the settings.

2. Select the desired number of portions by choosing the appropriate value and then click on the "Manual" option. According to the provided image, the feeder will dispense 5 portions.

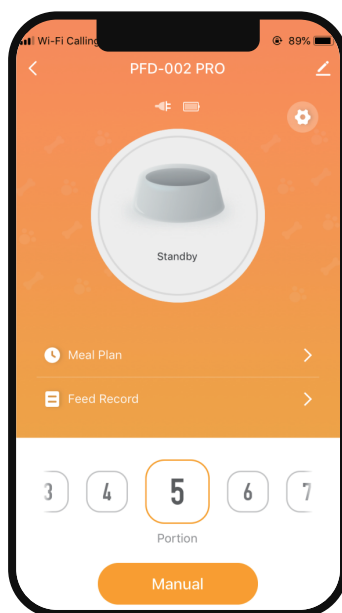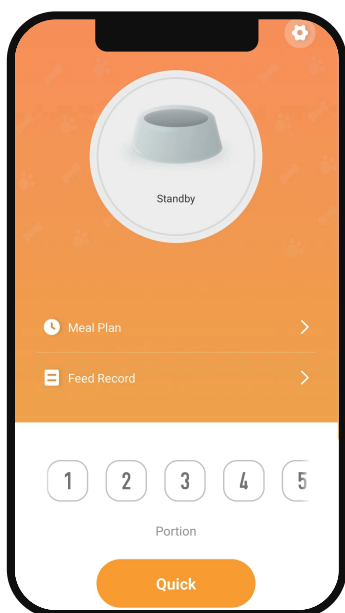


Feeding schedule settings


1. Click on the "Meal Plan" option to access the feeding schedule settings interface. Press the "Add" option to set up the feeding schedule.

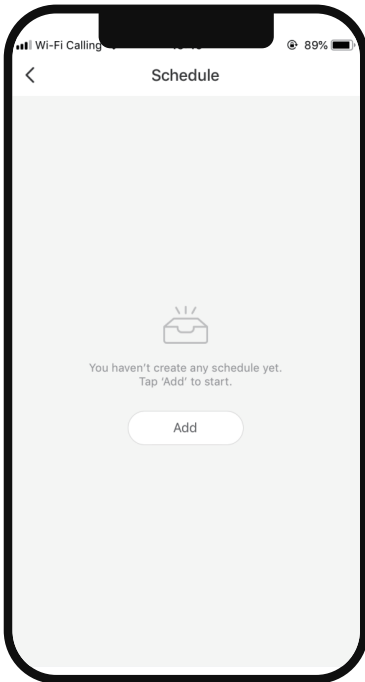

2. Select the desired number of days in the week when feeding should occur. Then select the feeding time and specify the number of portions for each feeding.

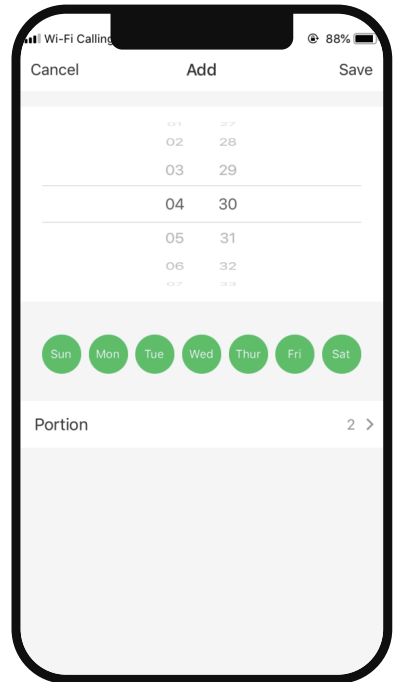


After correctly configuring the settings, you will receive a schedule as shown below:

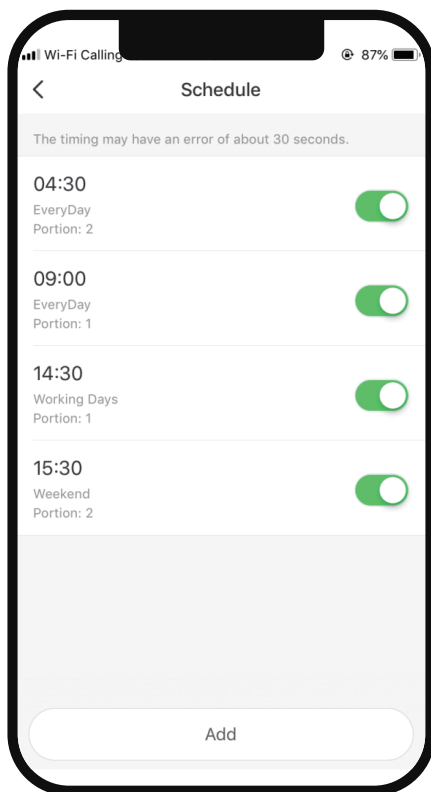

You can set up to 10 meals, with a maximum of 60 portions per meal.


View feeding record

1. Click on the "Feed Record" option to view weekly feeding records, which will appear after each feeding session.

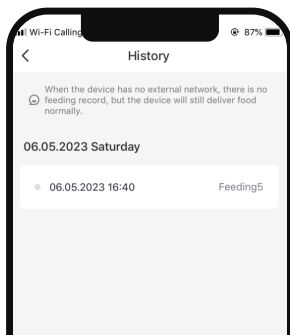

Slow feeding settings

Click on the settings icon. From here you can turn off the indicator. Additionally, you can turn on the Slow Feed switch, which sets the interval between portions to 10 seconds.


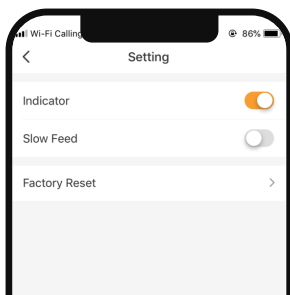


Device sharing and removal

Device sharing.


1. To go to the edit page, click on the pencil icon in the upper right corner of the feeding interface in the app.

2. Press "Share Device" to share the feeder with family and friends.

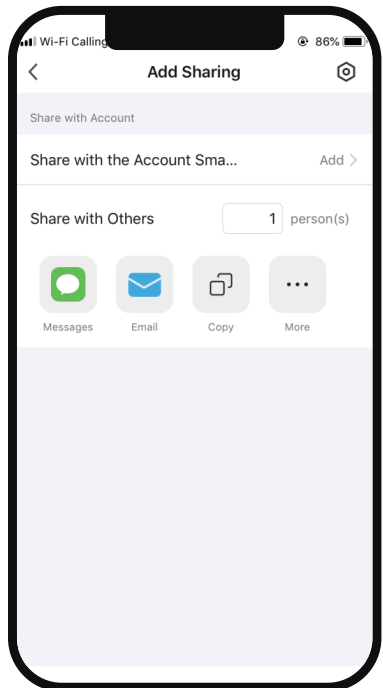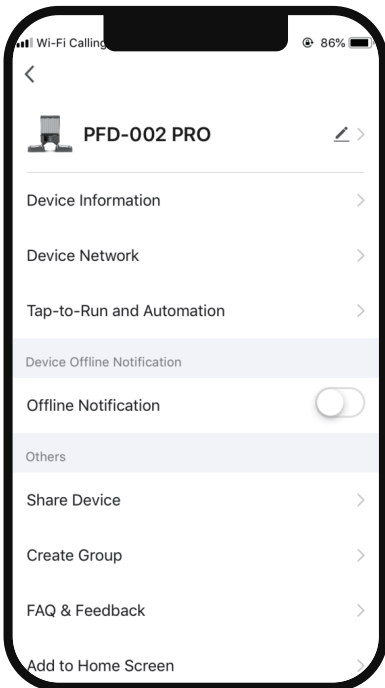

Removing a device

On the device list screen, press and hold the selected device for 3 seconds to go to the "Remove Device" screen. Then select the device you want to remove and click the "Remove Device" button.

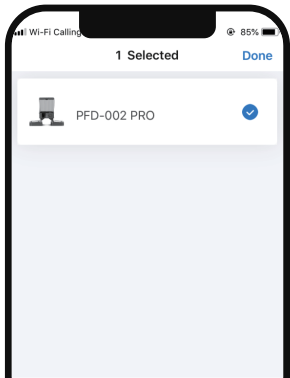

WiFi indicator reporting

Icon status Indicates	
Red + blinking	Connected to network
White + solid	Connected to network
White + fast blinking	Disconnected from the network, the device retains the memory of the last mobile phone it was connected to.
White + slow blinking	Disconnected from the network and the device does not have the memory of the last mobile phone.

Battery icon message

If the battery is fully charged, the battery icon will appear white. However, if the battery level is low, the icon will change to red and start blinking as a warning signal.

If you notice that the battery icon changes to red and blinks, it means that the battery needs to be replaced.

Recording a message

1. In the unlocked state, turn the knob and select the "RECORDER" icon. The icon will start blinking. Press and hold the control button. You will hear two beeps, indicating the start of recording. To record a personalized message, start speaking.



2. Release the control button after finishing the message recording. After finishing the recording, the message will automatically play back for confirmation.

3. To change the recording, simply repeat steps 1 and 2. This will allow you to record a new message.

Remember that each message can last a maximum of 10 seconds.

Required amount of food

Based on our laboratory experiment, the food we used had a diameter of approximately 0.8 cm.

Below are the data from our trial

Cup	Portion	Grams
1/8	2	15
1/4	3	29
1/3	4	38
1/2	6	57
1	12	114

Please note that the provided data is for reference only.

It is essential to conduct your own tests to determine the appropriate amount of dry food for a specific animal, taking into account the brand and type of dry food used.

Note:

1. The number displayed on the device as "PORTION" indicates the amount of food that will be dispensed into each bowl.
2. It should be noted that the device does not support simultaneous dispensing of different portion sizes into individual bowls. The same portion size will be dispensed into all bowls.

Here are the steps:



1. In the steps below, we assume that both animals need the same amount of food.
2. For example, if 1/2 cup of food corresponds to 6 portions, then 1/4 cup corresponds to 3 portions.
3. Set the number of portions on the device to 3.
4. Measure the dispensed food. If the amount matches the desired amount, it means the setting is correct.
5. If the dispensed amount does not match the desired amount, adjust the portion number until it gets closer.

Cleaning instruc

1. Before cleaning, disconnect the charging cable from the feeder.

2. According to the attached instructions, unlock the container and carefully remove it from the feeder.

Emptying leftover food from the container.

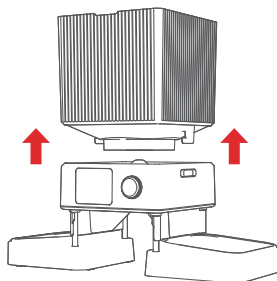
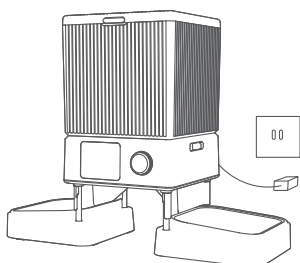


3. Wash the cover, food container, stainless steel bowl, and bowl holder with mild soap and warm water.

Rinse thoroughly. Then let them air dry or dry with a clean cloth.

4. The device and the base of the container should only be cleaned with a soft dry cloth.

These parts are not removable or waterproof, so avoid their contact with water or other liquids.

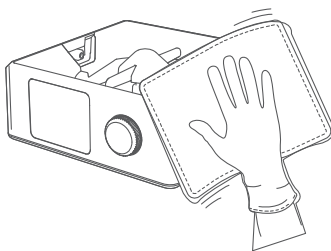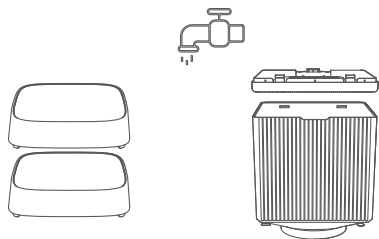

Specifications

Model:	PFD-002 PRO
FCC NR ID:	2BBAWPFD-002
Dimensions:	18.8 cm × 18.3 cm × 25.1 cm
Capacity:	20 cups (2.1 kg of dry food)
Portion size:	6 portions = 1/2 cup = 55 g
Material:	ABS + 304 stainless steel
Input:	5V DC/1A
Food:	Dry food with a diameter of less than 1.3 cm
Power:	Recommended cable / backup battery

Safety precautions when using

1. This feeder is recommended for animals over 6 months old. Before using the feeder, ensure that the animal meets the minimum age requirement.
2. The feeder is intended for indoor use only. Avoid placing it in direct sunlight and keep it away from potential sources of fire or heat.
3. Always use the supplied adapter to power the feeder. Using another power source may cause damage to the feeder or improper operation.
4. The main unit of the device must not be submerged in water or other liquids. It is essential to keep the main unit dry to prevent damage and ensure its proper functioning.
5. To prevent the feeder from being tipped over by pets, it is recommended to place it against a wall or in a secure location.
6. Children should use the feeder only under adult supervision to ensure safe and proper use.
7. If you notice that the bag with the moisture absorbing agent is damaged, immediately stop using it. Contact the distributor's technical support for assistance or replacement of the moisture absorbing bag.
8. If you decide to stop using the feeder, remember to disconnect the power cable and remove the batteries located in the bottom of the feeder.

Troubleshooting

Problems	Solutions
The feeder does not work	Check if the cable is properly connected.
	Do not use batteries, use another Type C charging cable to verify if the feeder works.
	Disconnect the cable and use new batteries to see if the device works.
Replacing the moisture absorbing agent	Contact the retailer
The control knob does not work	Try holding the button for 3 seconds to unlock the feeder.
Food is stuck or error code E-01 is displayed	Make sure the diameter of the food is less than 1.3 cm.
	Check if the container and food outlet are dry.
	Check if the food is dry and fresh.
	If the food is stopping at the outlet, clean it.
	When using the device without the power cable, it is necessary to replace the batteries.
The LED display is off	When using the battery as the only power source, the display will be off to save energy. However, the feeder will operate normally.

Connection issues

A: Cannot connect to the network.

1. Make sure you are not in Airplane mode. Register an app account for the first login.
2. Ensure that the feeder is properly connected to power.
3. Double-check the accuracy of the entered WiFi account details and password.
4. Ensure that the WiFi signal is strong enough. For optimal performance, keep the distance between the router and the feeder under 10 meters to avoid signal weakening.
5. Make sure the red WiFi icon is blinking slowly.

B: Device cannot be found.

1. Check if you have WiFi and Bluetooth functions turned on your mobile phone.
2. If the device cannot be found during the connection process even after a long time, perform a reset of the device. Turn the knob to the RESET position and hold it for 5 seconds to restore the WiFi connection. You will hear two beeps and the WiFi indicator will start blinking, indicating that the reset is complete. You can now start adding the device.

C: The feeder's display is offline.

1. Check if your mobile phone is properly connected to the network.
2. Ensure that the distance between the feeder and the home router is less than 10 meters and that there are no walls blocking the signal between them. The WiFi signal significantly weakens when passing through walls, leading to unstable offline connections.
3. Check if the home network is functioning properly. If you are away from home, you can be assured that the feeder will continue to operate according to the schedule, even if the network is disconnected. Your pet's feeding routine will remain preserved, so you don't have to worry about it going hungry.
4. Plan and set the feeding schedule well in advance of your trip to avoid interruptions caused by disconnection from the internet or the device being offline.

SIMPLIFIED EU DECLARATION OF CONFORMITY

NANBANQIU TECHNOLOGY CO., LIMITED hereby declares that the type of
radio

Automatic pet feeder is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following
internet address: <https://files.innpro.pl/Oneisall>

Manufacturer's address: FLAT/RM 185 G/F HANG WAI IND CENTRE NO.6 KIN
TAT ST
TUEN MUN, HONG KONG

Radio frequency: 2400 - 2483.5 MHz

Maximum radio frequency power: 40 dBm

Environmental Protection



The used electronic device marked in accordance with European directives must not be disposed of together with regular municipal waste. It is subject to selective collection and recycling at designated locations. By ensuring its proper disposal, you prevent potential negative impacts on the environment and human health.

The collection system for used equipment complies with locally applicable environmental protection regulations regarding waste disposal. Detailed information on this topic can be obtained from the municipal office, the waste management company, or the store where the product was purchased.



The product meets the requirements of the so-called New Approach directives of the European Union (EU), which relate to safety in use, health protection, and environmental protection, and establish risks that must be identified and eliminated.

This document is a translation of the original user manual created by the manufacturer.

Detailed information about the warranty conditions of the distributor/manufacturer is available on the website <https://serwis.innpro.pl/gwarancja>

The product must be regularly maintained (cleaned) by the user or through specialized service centers at the user's expense and to the extent required. If the user manual does not contain information about necessary periodic maintenance or service interventions, the physical condition of the product must be evaluated regularly, at least once a week, against the condition of a new product. If any deviation is detected or observed, maintenance (cleaning) or service intervention must be carried out immediately. Insufficient maintenance (cleaning) and failure to take action upon detecting a deviation may lead to permanent damage to the product. The warranty provider is not responsible for damages resulting from negligence.

Importer **INNPRO**
:

INNPRO Robert Błędowski sp. z o.o.
Rudzka 65c
44-200 Rybnik, Poland
tel. +48 533 234 303
hurt@innpro.pl
www.innpro.pl

Responsible entity in the EU:
Enbaoixin Germany Maternal
and Infant Supplies GmbH
Laubenhof 23 45326 Essen,
Germany [jasvigor2020@
hmail.com](mailto:jasvigor2020@gmail.com)

Záruka

Při změnách a/nebo modifikacích výrobku zanikne záruka. Při nesprávném používání tohoto výrobku výrobce nenese odpovědnost za vzniklé škody.

Likvidace

- Likvidaci tohoto produktu provádějte v příslušné sběrně. Nevyhazujte tento výrobek s komunálním odpadem.
- Pro více informací se obraťte na prodejce nebo místní orgány odpovědné za nakládání s odpady.

Dokumentace

Tento produkt byl vyroben a je dodáván v souladu se všemi příslušnými nařízeními a směrnicemi platnými ve všech členských státech Evropské Unie. Splňuje také veškeré relevantní specifikace a předpisy v zemi prodeje. Oficiální dokumentaci lze získat na vyžádání. Oficiální dokumentace zahrnuje také (avšak nejenom) Prohlášení o shodě, Bezpečnostní technické listy materiálu a správu o testování produktu.

Vyloučení zodpovědnosti

Design a specifikace výrobku mohou být změněny bez předchozího upozornění. Všechna loga a obchodní názvy jsou registrované obchodní značky příslušných vlastníků a jsou chráněny zákonem.