 


正面

oneisall®

Pet Paw Clipper

User Manual

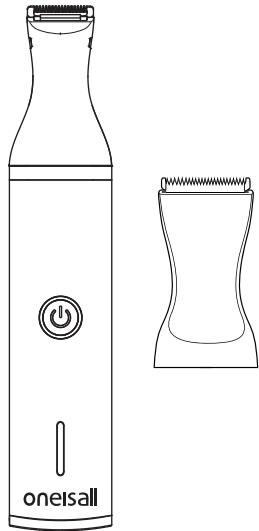

If you have any questions, you can contact us:
support@oneisall.com ON-G-P24

 
Before We Start




1. Please do not disassemble the product.



2. The paw clipper can not be washed. Please keep it away from water

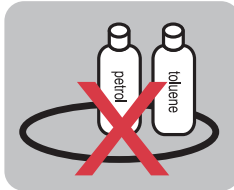

 
3. The product can only be cleaned by cloth with little water or mild soap .

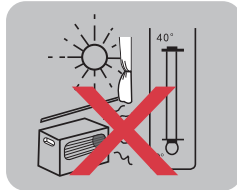


4. Do not charge the product under environment above 40°C or below 0°C

• The product can produce little heat during using or charging, which is phenomenon.

 
How to Cleaning

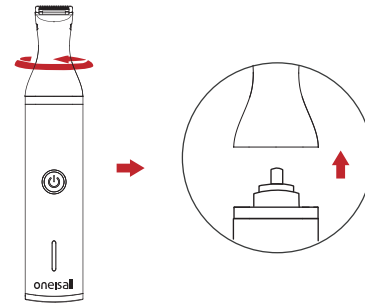

 Remove the blade counter clockwise rotate and pull out the blade.

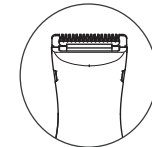

 1. Use a clean brush to clean the dirt and hairs around the blade.

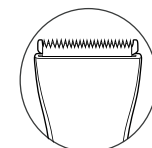


2. The blade can be removed out for washing and cleaning.

Note: If there is white lubricant on the blade, it is normal.

背面

 What You Have

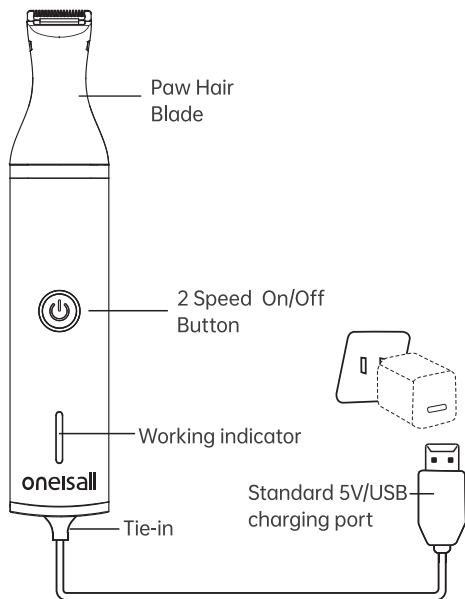

Accessories:



How to Recharge



1. Insert the usb cable into the tail of clipper
2. 5V/USB connect with adapter
3. The charge light is on when in charging. Please charge in 2hrs for first use or unused for more than half year

When the power is less than 10%, the red light flashes, prompting charging. When charging is complete: the green light is on, the red light is off

Specifications

Pet Paw Clipper	Motor	Operating Voltage: 3V
	Battery	Battery type: 600mAh
		Charge time: 2h
		Operating time: 2h
	Charge	USB connect with adapter 5V=1A Power: 5W

Contact Us

WE ARE READY TO HELP

Oneisall offers a standard 2-year warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

✉ Email: support@oneisall.com
☎ Phone : +1 877-522-8578 (US) Mon-Fri 8am-5pm(PST)
🌐 Web: www.oneisall.com



Guide video



@Oneisall Official

