


4 in 1 Pet Grooming Kit

Model: FC10

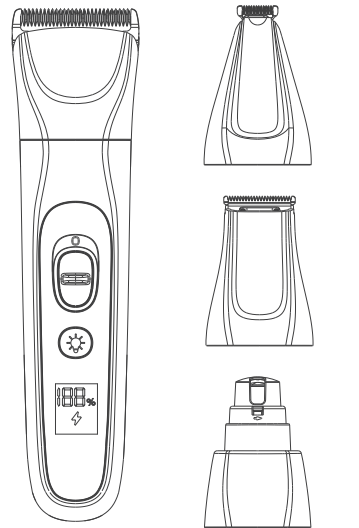

User Manual

Any problems you have, please contact us:
support@oneisall.com

ON-D168

Warnings and safety information
All information regarding the use of the product can be found in the instruction manual. Before using it, read its contents and follow the instructions contained therein.
Also read the following information before use:

Warnings for use
Risk of product damage:
Use shavers and trimmers only as intended, avoiding attempts to modify the device.
Avoid using the devices near water (unless they are waterproof and the manufacturer recommends it).
Do not immerse non-waterproof devices in water to avoid electrical short circuits.
Regularly check the condition of mechanical components, such as blades and heads. In case of visible damage, replace the components or contact the manufacturer's service department.
Risk to the user:
Do not use devices on skin that is irritated, injured or inflamed.
Keep devices with blades out of the reach of children.
When using battery-powered shavers, avoid using them while they are charging, unless expressly permitted by the manufacturer.
If you experience an allergic reaction to blade or head materials, stop using immediately and consult a doctor.

Information on proper use
Recommendations for use:
Make sure the device is charged or connected to a power source if required.
Make sure heads and blades are properly attached before use.
After using trimmers and waterproof shavers, thoroughly dry the device after each use to prevent corrosion of components.
Use original parts and accessories, such as heads or attachments, recommended by the manufacturer.
Maintenance and storage:
Clean the blades and heads after each use with the included brush or according to the manufacturer's instructions.
If the device is waterproof, rinse it under running water and then dry it with a soft cloth.
Store the devices in a dry place, preferably in the original case, to protect them from dust and mechanical damage.

Additional precautions
Adaptation to the user:
Before using the device, make sure its features are suitable for your grooming needs.
When using a shaver or trimmer for the first time, perform a test on a small area of skin to make sure there is no allergic reaction.
Damage and service:
If you detect mechanical damage, such as cracks in the housing or power problems, stop using the device immediately and contact the manufacturer's authorized service center.
Use only original parts and accessories supplied by the manufacturer to maintain the warranty and safety of the device.
Statement of compliance
The products have been designed in accordance with the safety requirements of Regulation (EU) 2023/988. They meet the relevant technical standards, including those for safety of use, electromagnetic compatibility and durability of materials.

Contents

English	01-06
Deutsch	07-12
Français	13-18
Italiano	19-24
Español	25-30


Safety Warning Contents

English	31
Deutsch	32
Frangais	33
Italiano	34
Español	35
Nederland/België	36
Polska	37
Sverige	38

Product Composition

UK/US

Names of Each Part

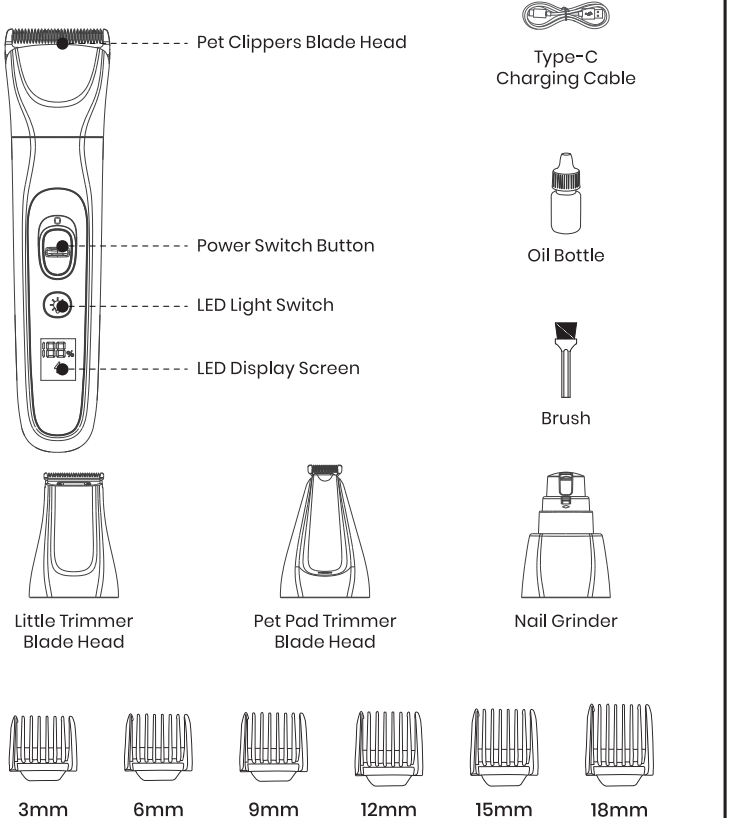

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268