

ONIKUMA

MANUAL

T37

*Please read the manual carefully and keep it for future use.

ENGLISH

Descriptions




1.Right earpiece

3.Multi-function button (MFB)

5.Volume "+" button

7.Earphone indicator/MIC hole

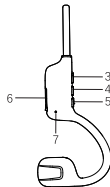

2.Left earpiece

4.Volume "-" button

6.Type-C charging port

Wearing

(The lightweight body combined with the ear hook design creates a stable "golden triangle" wearing experience, allowing for an open, comfortable and light wearing sensation.)

Correct Wearing Method:



Instructions

1. Product Charging

a. Use a Type-C charging head with DC 5V-1A to charge the earphones. The earphone indicator light will stay solid red during charging and turn solid blue once fully charged.

2. Pairing the Earphones with Your Device

a. Power on the earphones.
b. Refresh the bluetooth device and search for T37. Then click to connect successfully.

3. Resetting to Factory Settings (when the earphones are unresponsive or cannot be found by a Bluetooth device)

a. When the earphones are in a powered on but unconnected state, press and hold both the volume "+" and volume "-" buttons for approximately 4 seconds until you hear a "beep" sound. This indicates that the earphones have been reset.

Function control

Power On	Press and hold the MFB button for 3S
Power Off	Press and hold the MFB button for 5 seconds
Play/Pause Music	Single press the MFB button
Increase Volume	Single press the Volume "+" button
Decrease Volume	Single press the Volume "-" button
Previous Track	Press and hold the Volume "+" button
Next Track	Press and hold the Volume "-" button
Answer/End Call	Single press the MFB button
Reject Call	Press and hold the MFB button for 2 seconds
Activate Voice Assistant	Triple-click the MFB key
Game Mode	Double-click the MFB key

Product Parameter

Bluetooth version	5.3
Audio Formats	SBC、 AAC
Working time	10H
Charging time (box)	2H
Working distance	10m
Product size	98,7x132,9x47,5mm

Frequently Asked Questions

1. The earphone cannot be detected by the mobile
a. To determine whether the headset is turned on, restart the earphone and mobile phone, and repeat the above actions to search.
b. To make sure that the headset is not connected to other Bluetooth devices.

2. There is disconnections or noises in the connection between the earphone and the mobile phone
a. There are obstacles or other electrical signal interferences between the device and the earphone. Please keep the earphone and the device free of obstacles, and try not to use it in a complex environment.
b. The effective working range of earphones and equipment is up to 10 meters. Generally, the situation without obstacles can achieve the best results. There will be noises and disconnections beyond the effective distance.

Product Battery Specifications

Feature	Value
Battery Category	Portable battery
Battery Type	Portable lithium-polymer rechargeable batteries (Li-Po)
Contains Cadmium/Lead (>0.002% Cd, >0.004% Pb)	No
Battery weight net (kg)	1.4g
Rated capacity (mAh)	55mAh
Power (kWh)	0.198Wh