 


PERLEGEGEAR

INSTRUCTION MANUAL

BEDIENUNGSANLEITUNG | MANUEL D'INSTRUCTIONS |
MANUAL DE INSTRUCCIONES | MANUALE DI ISTRUZIONI

PGTVS26 V0

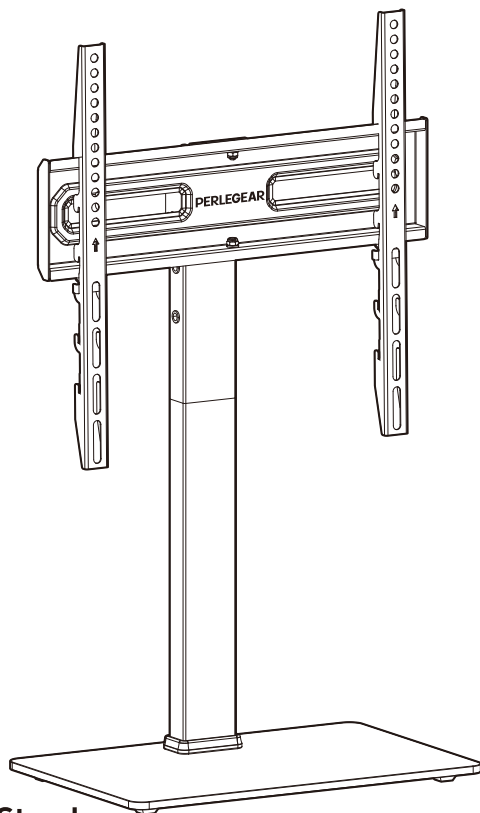

[EN] Tabletop TV Stand



1-800-456-5231 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-4165 (UK) Mon-Fri, 2pm-10pm (UTC)



support@perlegear.com

 


www.perlegear.com

BEFORE GETTING STARTED, LET'S MAKE SURE THIS STAND IS COMPATIBLE

1

Check VESA
Pattern
Compatibility

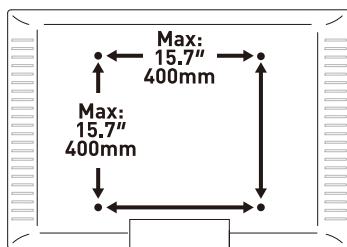

Compatible VESA Patterns:

100 x 100mm	200 x 300mm	400 x 300mm
100 x 200mm	300 x 200mm	400 x 400mm
200 x 100mm	300 x 300mm	
200 x 200mm	400 x 200mm	

Maximum/Minimum:

400 x 400mm (15.7 x 15.7")
100 x 100mm (3.9 x 3.9")

If this stand is not compatible, please contact product support.

2

Check Max
Load



⚠ WARNING

DO NOT exceed the Max Load. Exceeding the Max Load can cause the mount to fail, leading to personal injury and/or property damage.

 
If your TV weighs more, this stand is NOT compatible.

3

Tools Needed
(not included)



Phillips Screwdriver



Level
(Optional)

4

Important
Safety
Information

⚠ CAUTION: Avoid the risk of personal injury and property damage!

 
 
- Please carefully read all instructions before attempting installation. If you do not understand the instructions or if you have any questions or concerns, please call technical support or email customer service.
- This product contains small parts that may pose a choking hazard.
- Do not use this product for any purpose that is NOT explicitly specified in this manual. Do not exceed the maximum weight capacity. We are not liable for damage or injury caused by incorrect assembly, improper mounting, or inappropriate use.
- Before starting assembly, verify all parts are included and undamaged. Do not use damaged or defective parts. If you require replacement parts, please call technical support or email customer service.

 
⚠ WARNING: All fasteners must be firmly tightened!

SAVE THESE INSTRUCTIONS.

- 01** TV Bracket
- 02** Tempered Glass Base
- 03** Support Pillar
- 04** Extension Pillar
- 05** Plastic Cover
- 06** TV Plate

- A** Bolt
- B** Steel Washer
- C** Plastic Washer
- D** Bolt
- E** Safety Lock
- F** Foot Pad
- G** Cable Clip
- H** Allen Key
- I** Wrench

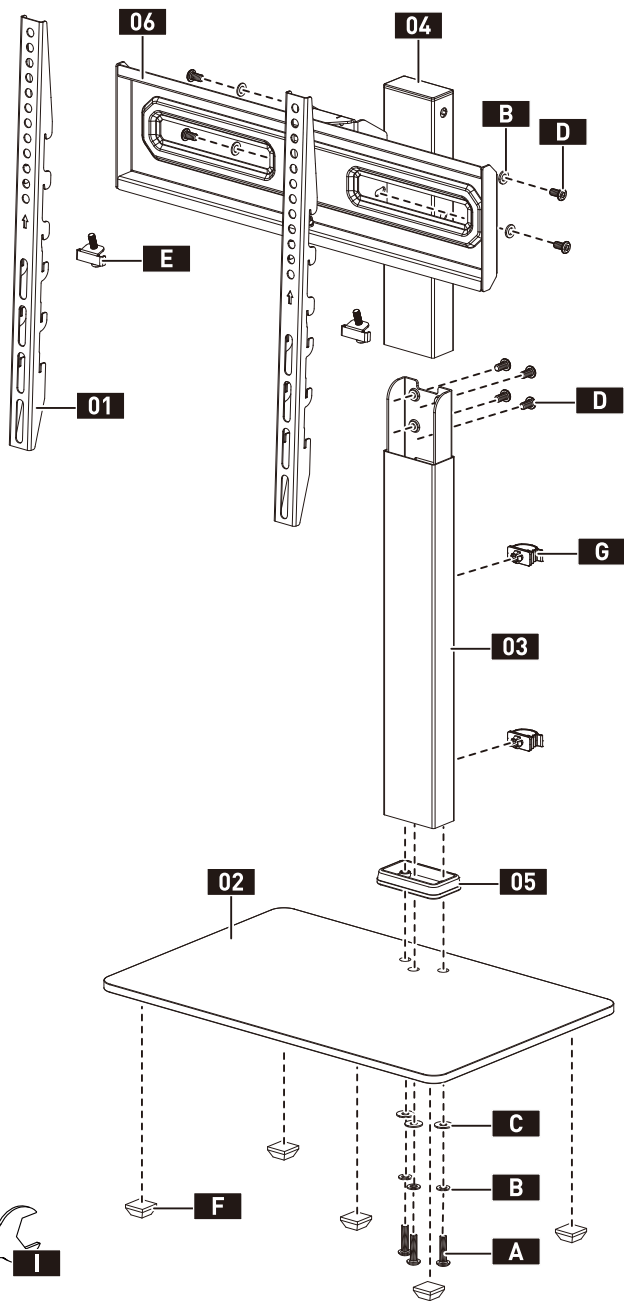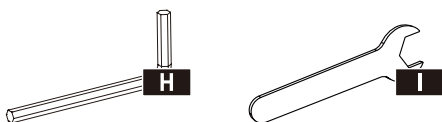

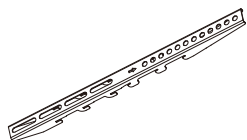

TV Bracket

01 x 2



M4/M5
Washer

TV6 x 4



M6/M8
Washer

TV7 x 4



L2.5mm
Spacer

TV8 x 8



L10mm
Spacer

TV9 x 4



L22mm
Spacer

TV10 x 4

M4



M4 x 12mm
TV Bolt

 
TV1[01] x 4



M4 x 30mm
TV Bolt

TV1[02] x 4

M8



M8 x 25mm
TV Bolt

TV4 x 4

M6



 
M6 x 15mm
TV Bolt

TV2 x 4



M6 x 35mm
TV Bolt


TV3 x 4



M8 x 50mm
TV Bolt


TV5 x 4

 Step 2 -




Tempered Glass Base

 02 x 1



Support Pillar

 03 x 1




Extension Pillar

04 x 1



Plastic Cover

 05 x 1



M6 x 25mm
Bolt

A x 3



M6 x 16 x 1mm
Steel Washer

B x 3



M6 x 18 x 1.5mm
Plastic Washer

C x 3



M6 x 12mm
Bolt

D x 4



Foot Pad

 
F x 5



5/32" (4mm)
Allen Key

H x 1

Step 3 -

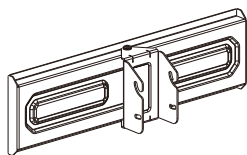

TV Plate

06 x 1



M6 x 16 x 1mm
Steel Washer

B x 4



M6 x 12mm
Bolt

D x 4



5/32" (4mm)
Allen Key

H x 1

Step 4 -



Safety Lock

E x 2

Step 5 -



Cable Clip

 
G x 2

Step 6 & 7 -



5/32" (4mm)
Allen Key

H x 1



3/8" (10mm)
Wrench

 
 
I x 1

INSTALLATION


STEP 1 Attach the TV Brackets to Your TV

1-1 Select TV Bolts

The correct bolt diameter will thread smoothly into your TV.

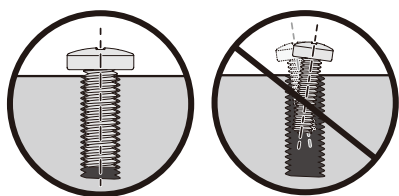
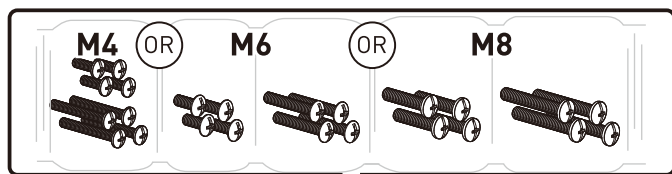


 Save the bolts that fit (M4, M6, or M8) for Step 1-3.



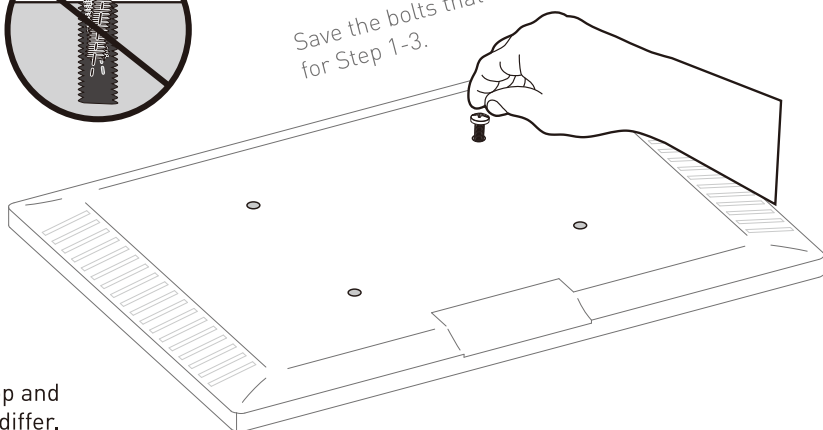


The depth of the top and bottom holes may differ.

  1-2 Position the TV Brackets

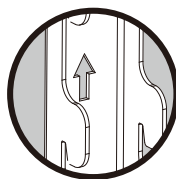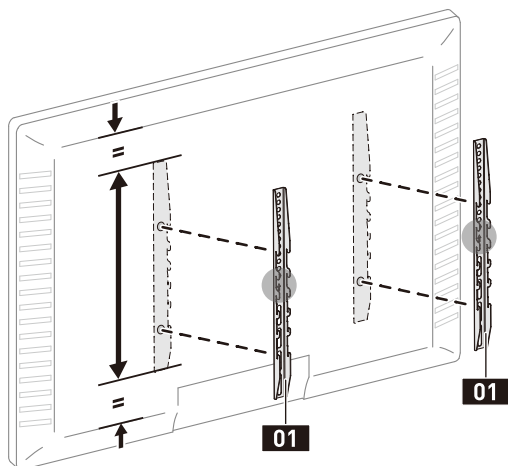

Arrow Up

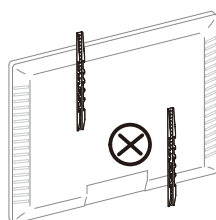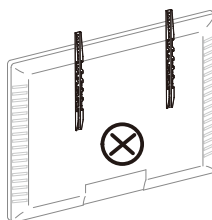  
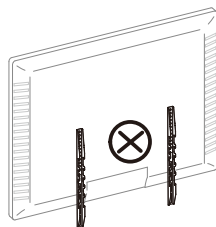 


1-3 Secure the TV Brackets

For Flat-Back TV, go to **Option A** on page 08 to 09.
For Bump, Curved TV, Recessed Holes and Cables, go to **Option B** on page 10 to 11.

⚠ WARNING:

  - DO NOT turn the bolt past the bottom of the hole.
- If the bolt is too short, it may not adequately support the TV.
- If the bolt is too long, it could damage the TV.
- At least 4–5 turns into the threading is required.
- **The depth of the bottom holes may be different from the top holes.**

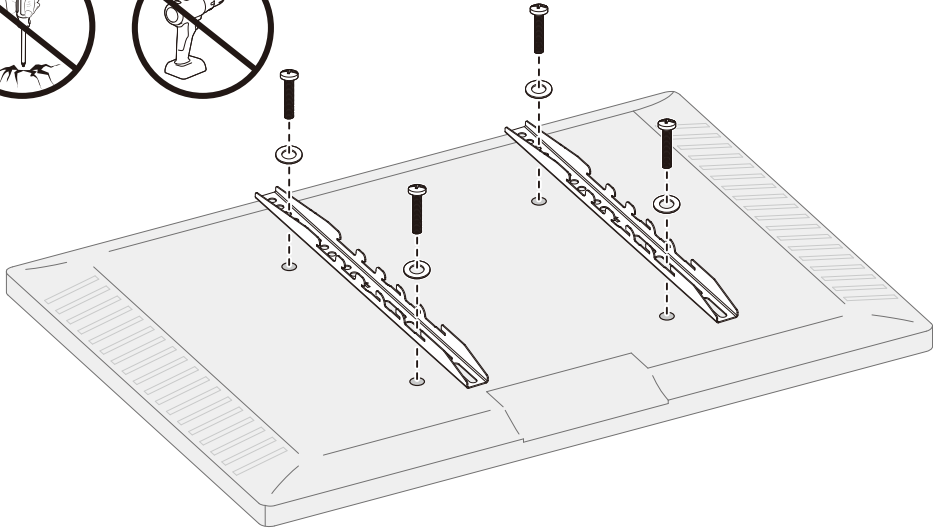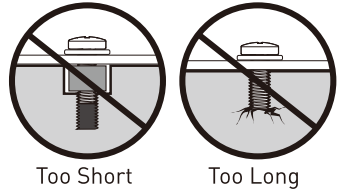


Option A

Use **short** TV bolts with washers.



 Flat-Back TV

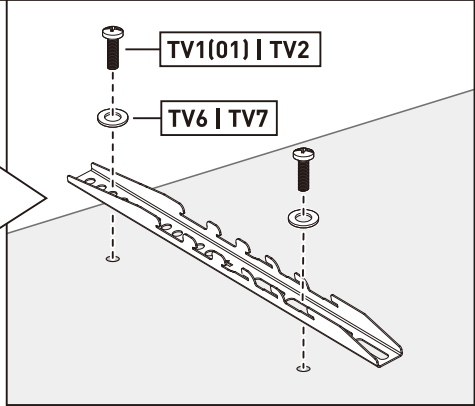


Option B


Use **long** TV bolts with washers and spacers to create extra space between the TV and brackets.



 
Bump

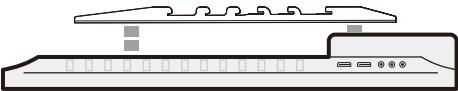

TV with Mounting Restrictions


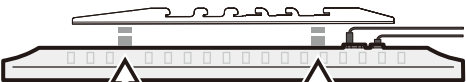 


Recessed Holes

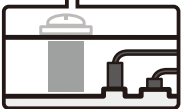 


Protruding Cables

  Curved TV

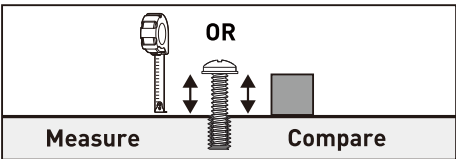

 You can use a tape measure to measure the protruding bolts or hold spacers next to them to choose the right spacer combination.

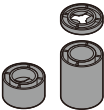

Note:

 
There are many possible spacer combinations that can be used.



1-800-456-5231 (US/CA)
44-808-196-4165 (UK)




support@perlegear.com

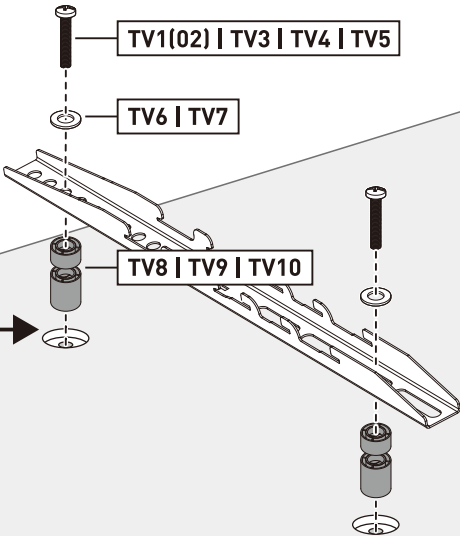


STEP 2 Connect the Support Pillar to the Base

 1

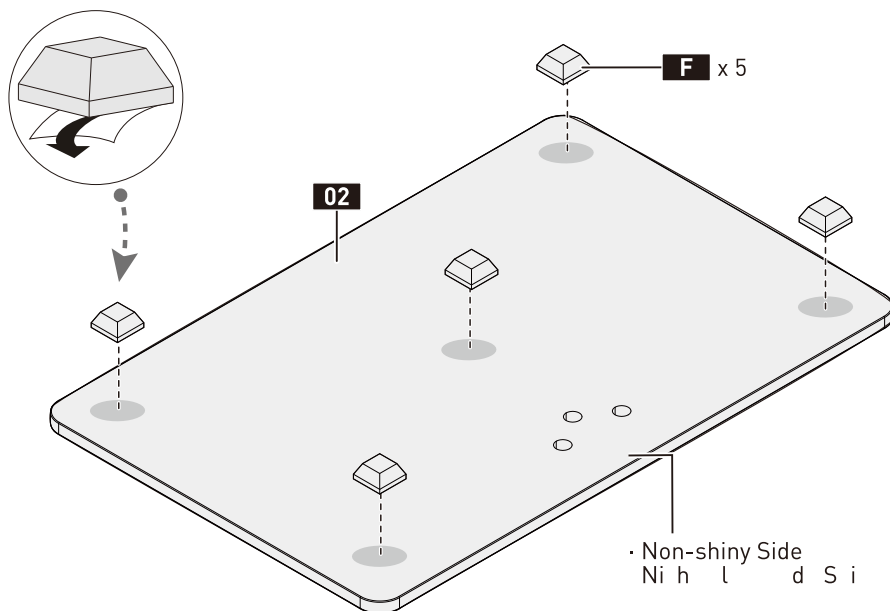


 [EN] TIP: Leave a small gap between the edge of the glass and the foot pads.

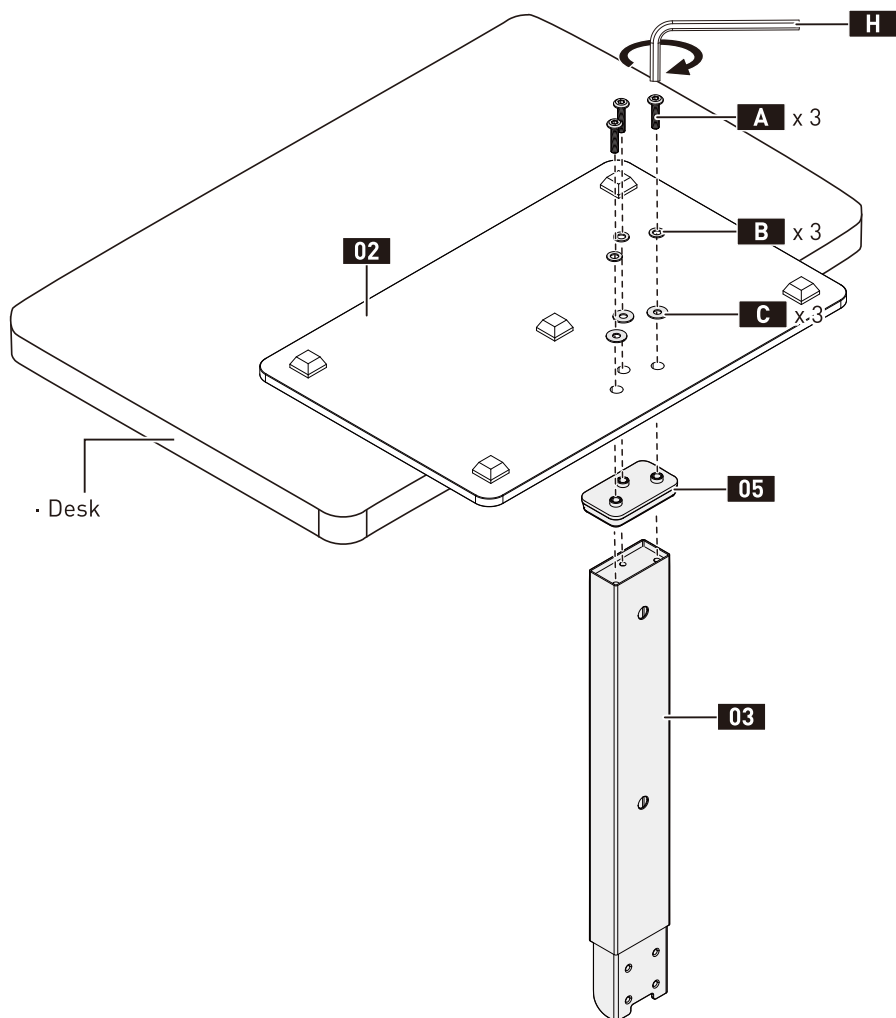


 
[EN] **Note:** Plastic washers **C** contact the glass.



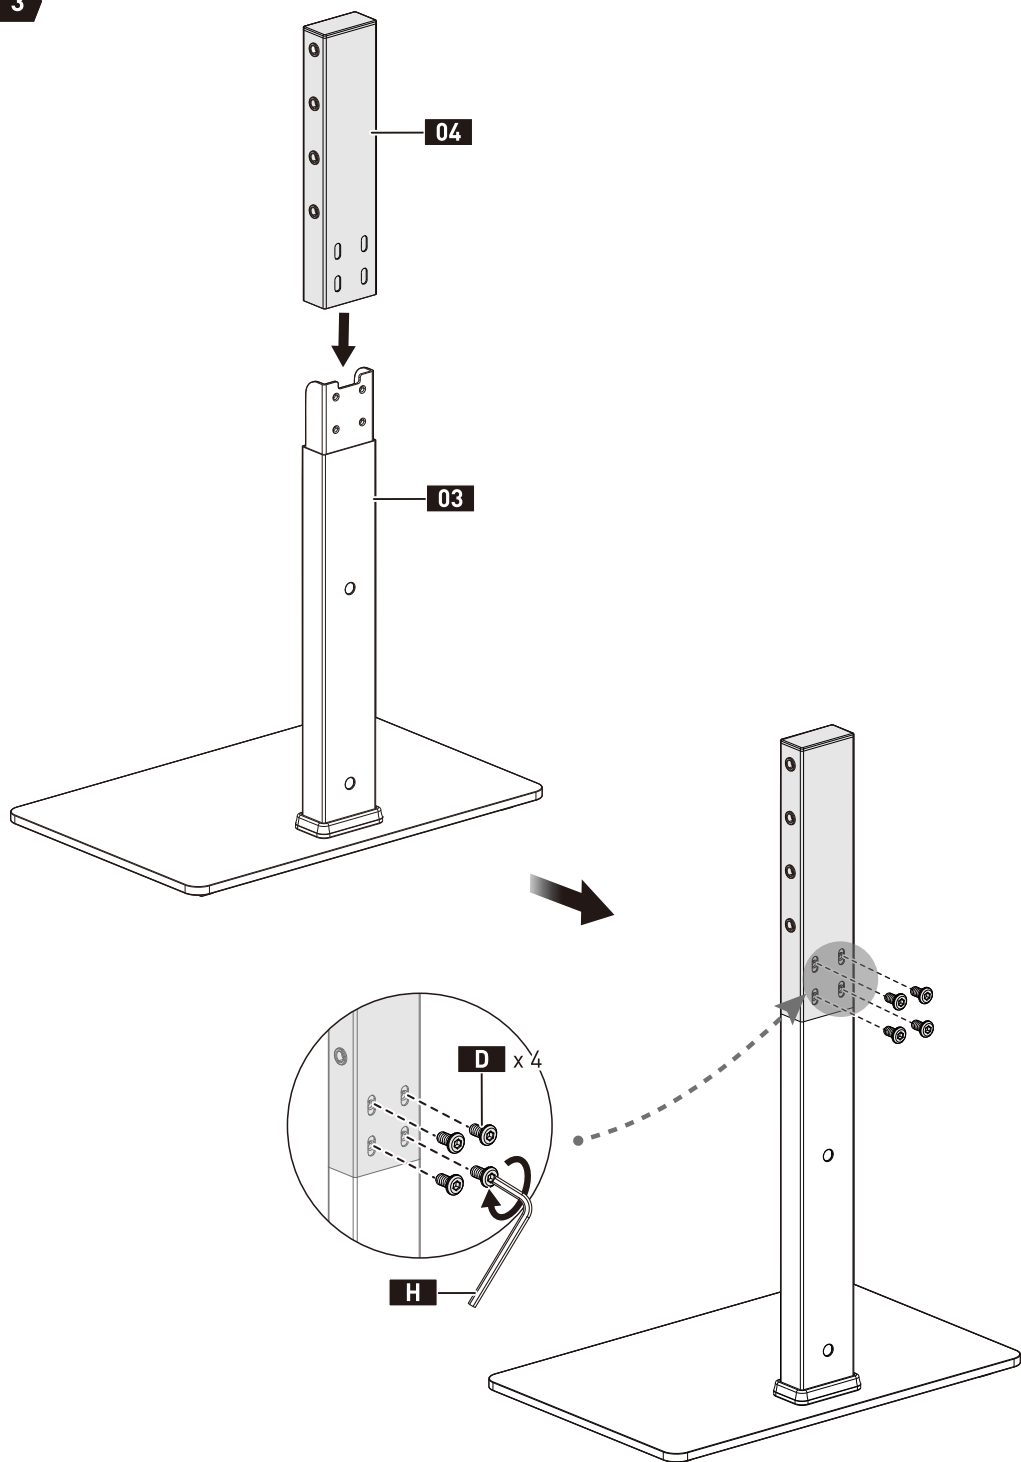

STEP 3 Secure the TV Plate to the Extension Pillar

  
· 3 Height Options ·

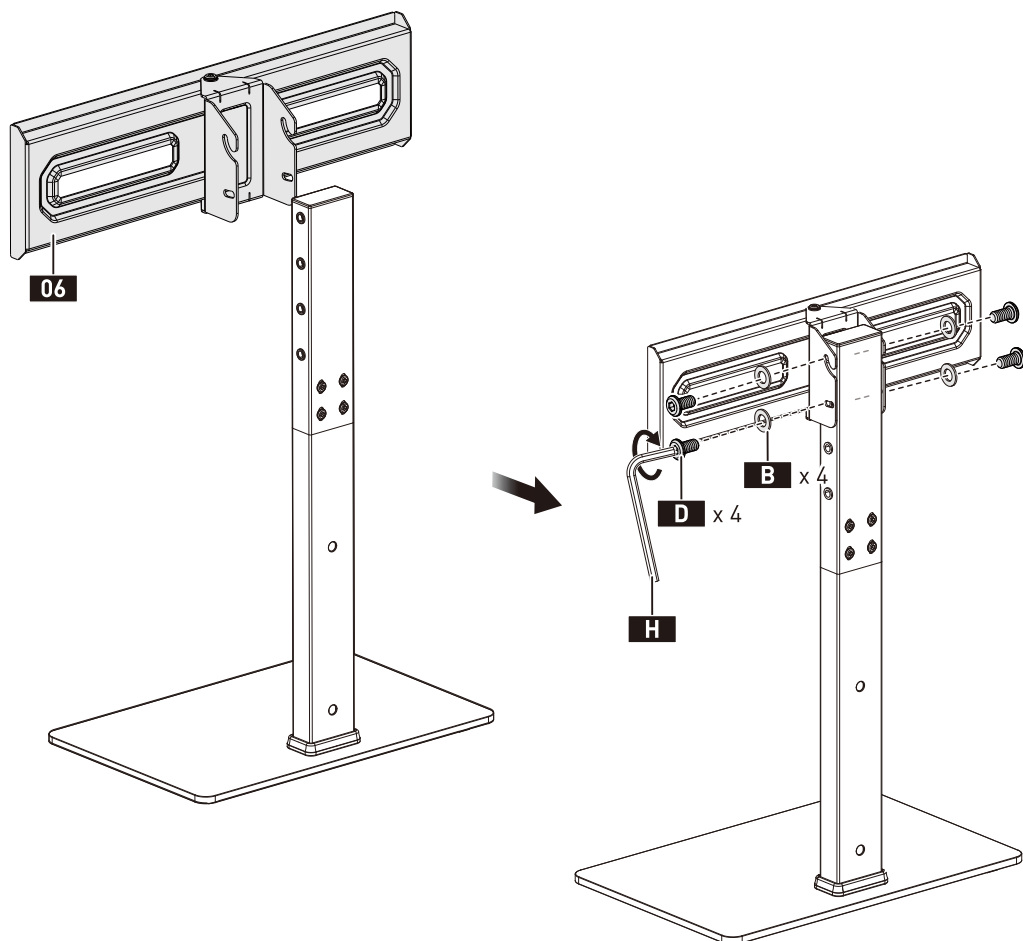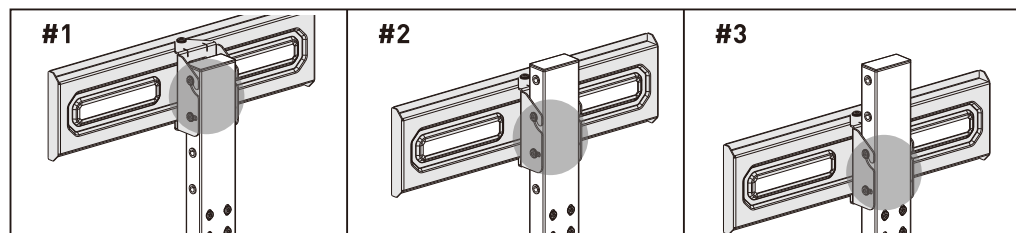

STEP 4 Hang the TV on the TV Plate


1

 
· 3 Height Options ·

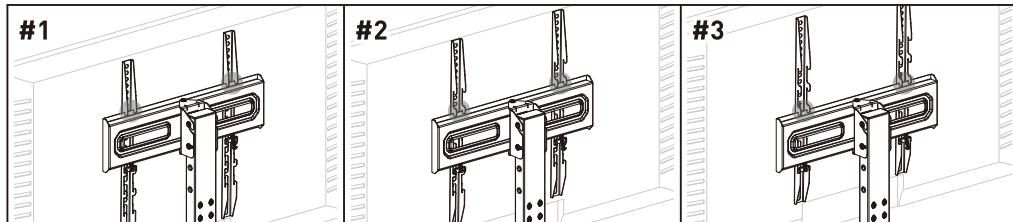

[EN] Note:

  
- Place the stand in the intended viewing location before hanging the TV.
- Hang the TV on the center of the TV plate.

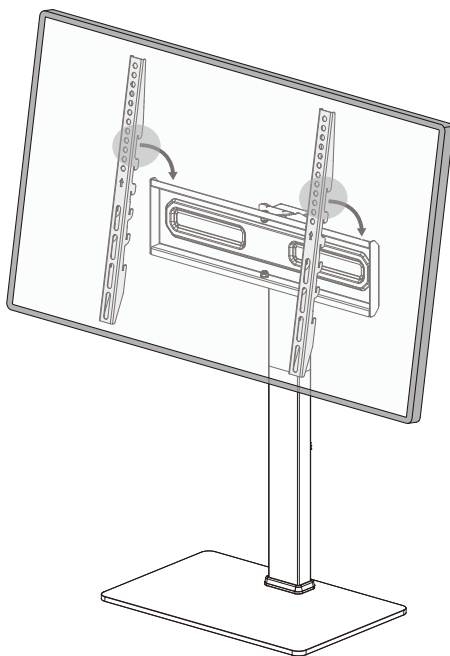

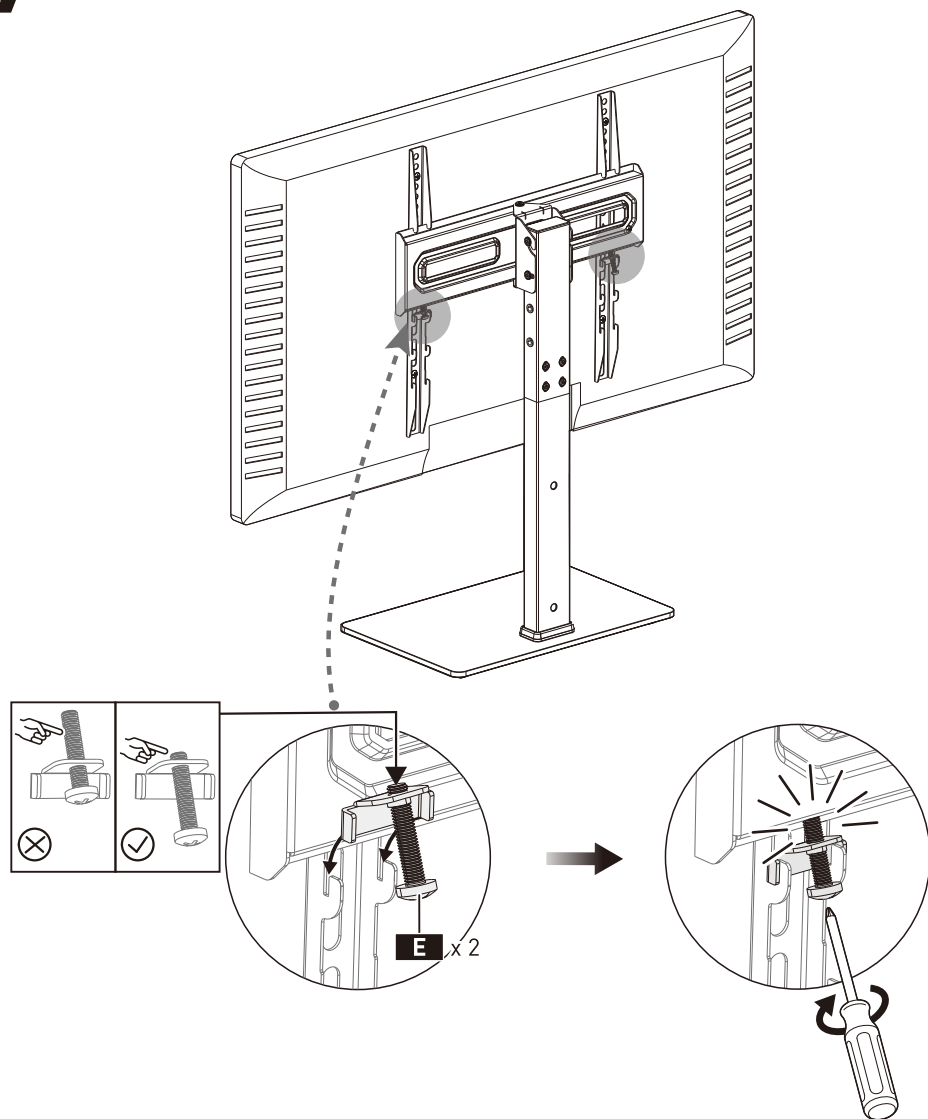


[EN] Note: Tighten the safety locks **E** until they secure against the TV plate.

 STEP 5 Cable Management

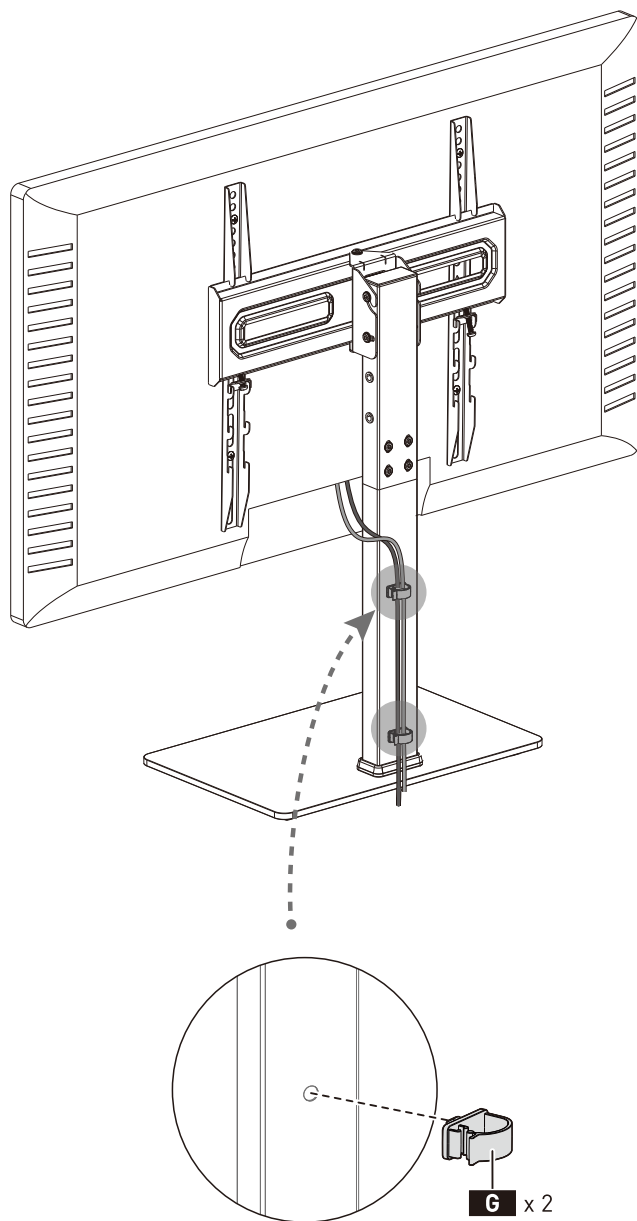

 
STEP 6 Tilt Adjustment

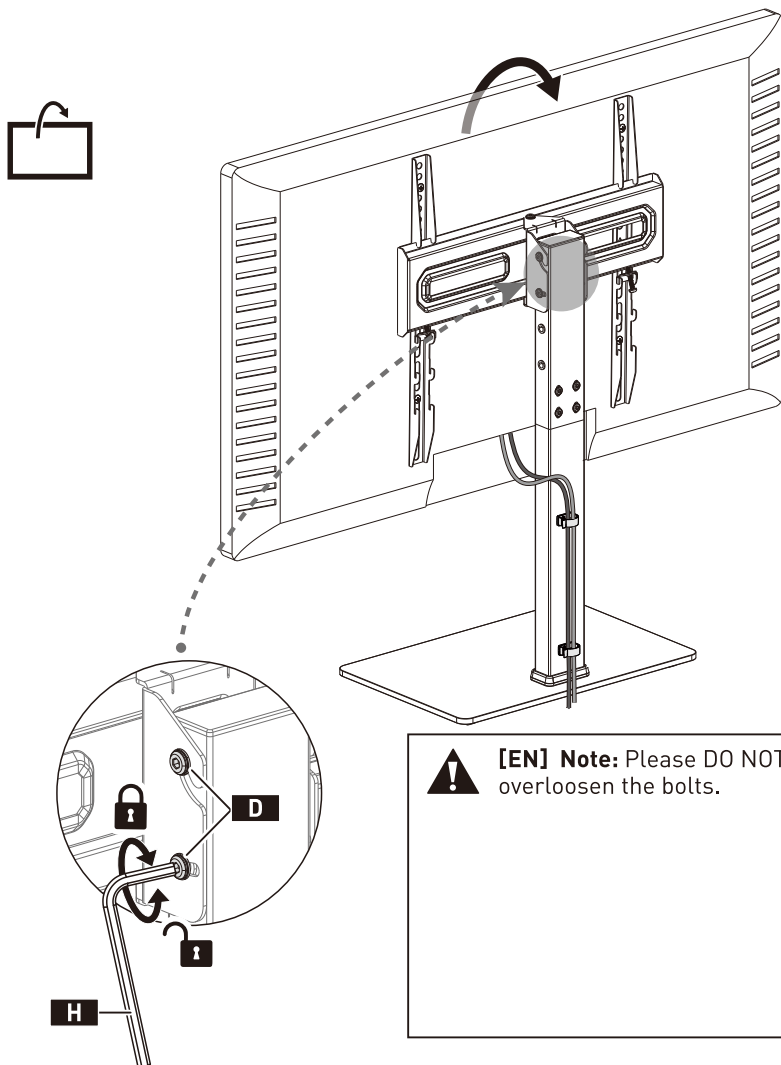

[EN] Note: Please DO NOT overtighten or overloosen the bolts.

[EN] Slightly loosen the bolts **D**. Tilt the TV to the desired angle. Retighten the bolts **D** to hold the TV in position.

 STEP 7 Swivel Adjustment

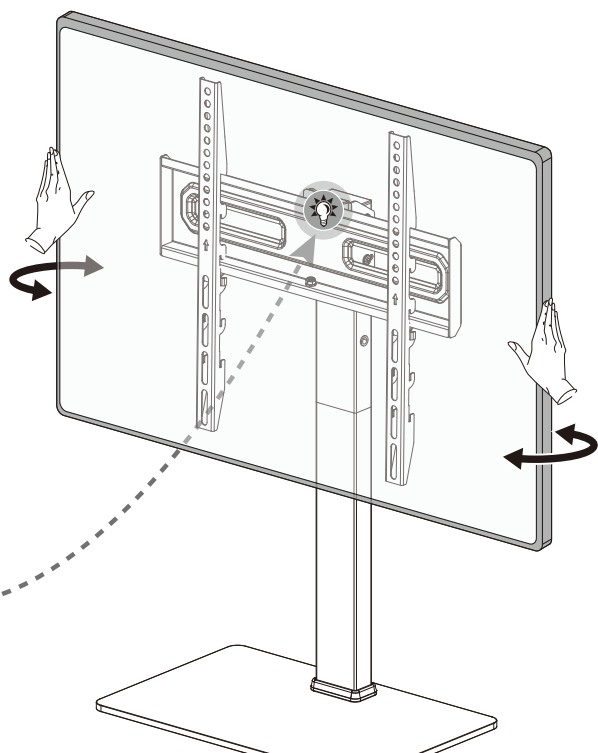

[EN] Note: Please DO NOT overtighten or overloosen the bolts.

 


[EN] TIP: If it is difficult to swivel, remove the TV, slightly loosen the preassembled bolts, then swivel. Retighten the bolts and reattach the TV.

FREQUENTLY ASKED QUESTIONS

QUESTION ► How can I level the TV after installation?

[EN] If the TV brackets and TV are properly installed, but the TV is still not level:
Slightly loosen the bolts **D** . Level your TV. Retighten the bolts **D** to hold the TV in position.

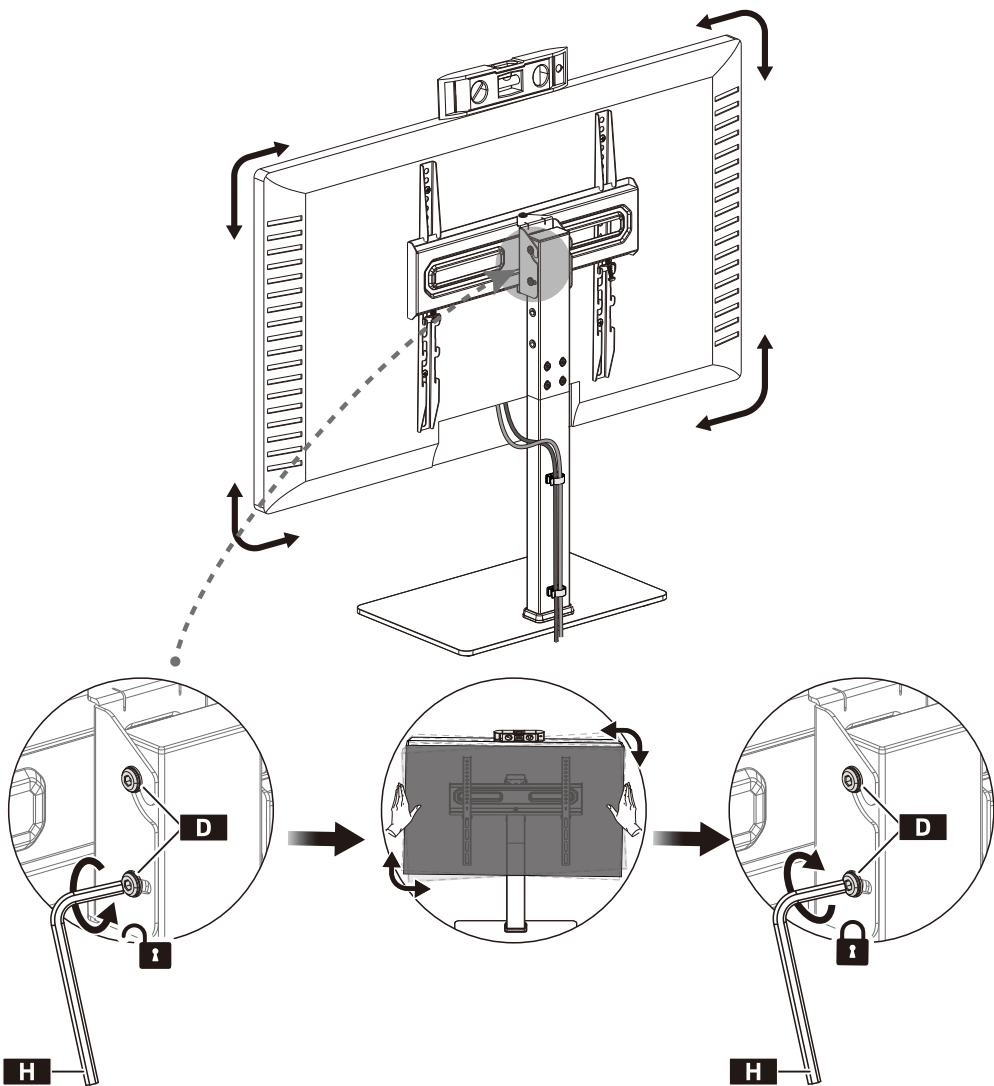


[EN] Note: Please DO NOT overtighten or overloosen the bolts.




Perlegear offers products in these categories

PERLEGEAR

 
The Mounts Expert
for Family Home Entertainment

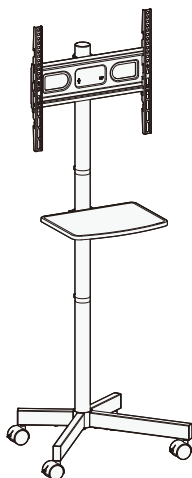



TV Cart

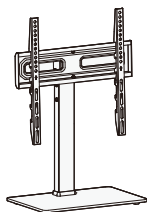 

Tabletop TV Stand

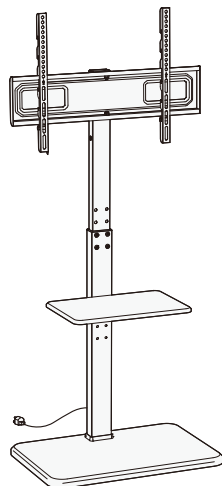 


Floor TV Stand

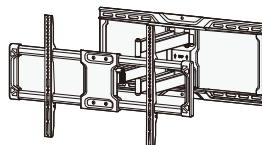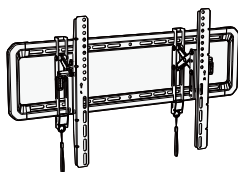  

TV Wall Mount

Please remember us for all your A/V needs.

 THANK YOU FOR CHOOSING THIS PERLEGEAR PRODUCT

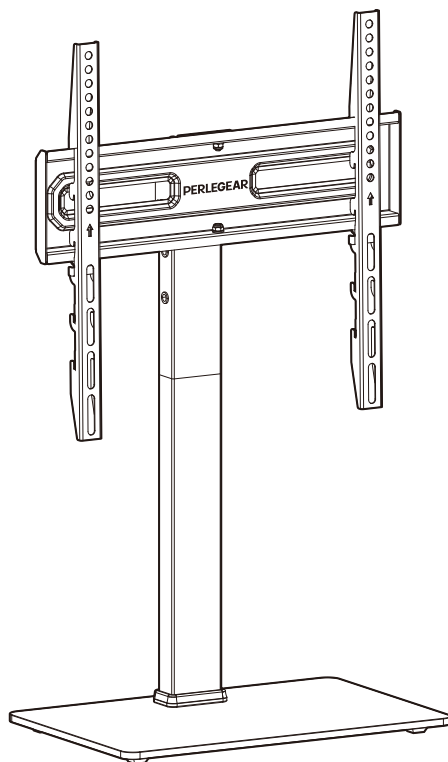

PERLEGEAR



1-800-456-5231 (US/CA) Mon-Fri, 8am-8pm (CST)

44-808-196-4165 (UK) Mon-Fri, 2pm-10pm (UTC)



support@perlegear.com



www.perlegear.com