


PERLEGGEAR

INSTRUCTION MANUAL

BEDIENUNGSANLEITUNG | MANUEL D'UTILISATION |
MANUAL DE INSTRUCCIONES | MANUALE D'ISTRUZIONI

PGMFK6

 Rev00

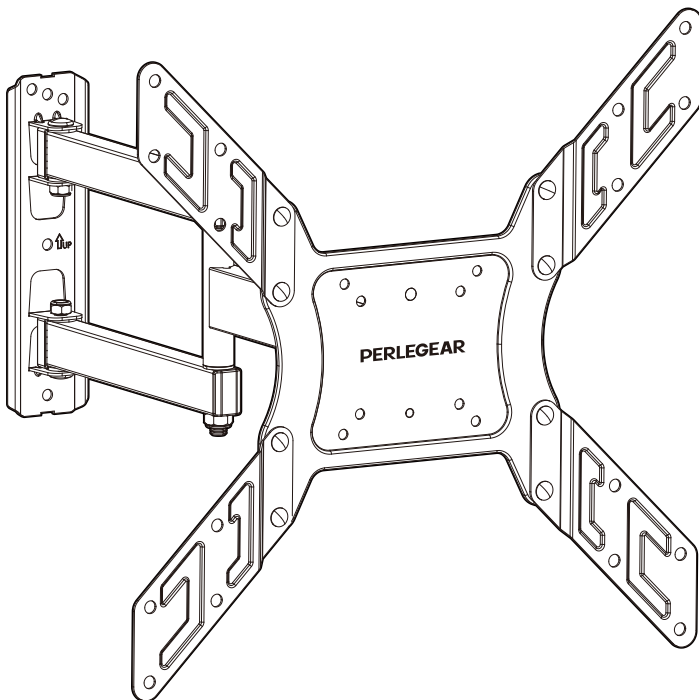

[EN] Full-Motion TV Wall Mount



1-800-456-5231 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-4165 (UK) Mon-Fri, 2pm-10pm (UTC)



support@perlegear.com




www.perlegear.com

Check 1–5 Before Getting Started

1

 Is your TV VESA greater than or equal to 75 x 75mm / 3 x 3" or less than or equal to 400 x 400mm / 15.7 x 15.7" ?

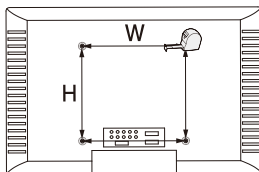

- ☐ Yes – Perfect!
- ☐ No – This mount is NOT compatible.

2

Does your TV weigh less than 99 lbs (45kg) ?



 
- ☐ Yes – Perfect!
- ☐ No – This mount is NOT compatible.

3


Verify your wall type.



Solid Concrete

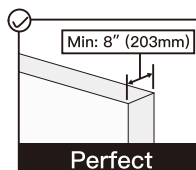


Wood (with or Without Drywall)

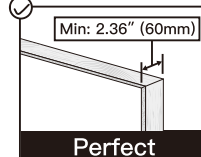 

4

 Tools Needed (NOT Included)




Electric Drill



Pencil

Phillips
Screwdriver7/16" (11mm)
Socket Wrench

 For Solid Concrete



Hammer

3/8" (10mm)
Concrete Drill Bit

For Wood Walls

5/32" (4mm)
Wood Drill Bit

5

Important Safety Information

NOTE

 
- Not all hardware included in this package will be used.

CAUTION

- DO NOT use this product for any purpose that is NOT explicitly specified in this manual. DO NOT exceed weight capacity. We are NOT liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

WARNING

- This product contains small parts that may pose a choking hazard.

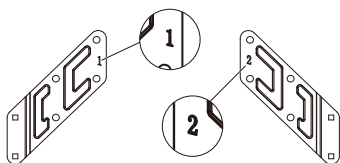


Extender Bracket

01 x 2


Extender Bracket

 02 x 2

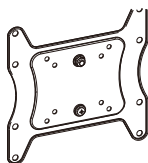


Faceplate

 03 x 1

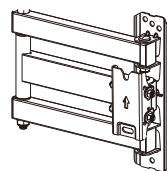

Arm Assembly / Wall Plate

 04 x 1



Level

05 x 1



 
M6
Nut

[T1-1] x 8




M6 x 12mm
Bolt

[T2] x 8




Wrench

 [T1-2] x 1




M4/M5
Washer
[B1] x 4

 


M6/M8
Washer
[B2] x 4



 L2.5mm
Spacer
[F1] x 8

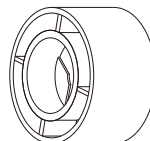

L10mm
Spacer
[F2] x 4

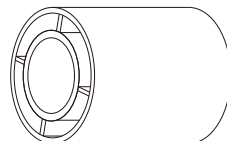 

L22mm
Spacer
[F3] x 4

M4

 


M4 x 12mm
TV Bolt [C1] x 4




M4 x 30mm
TV Bolt [C2] x 4

M6




M6 x 15mm
TV Bolt [D1] x 4

 


M6 x 35mm
TV Bolt [D2] x 4

 M8

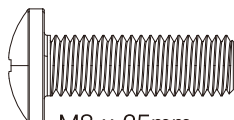


M8 x 25mm
TV Bolt [E1] x 4

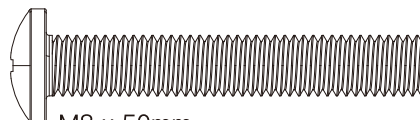 

M8 x 50mm
TV Bolt [E2] x 4

ST6 x 60mm
Lag Screw

 A1 x 4



Wall Anchor

A2 x 4

 


Step 1 Choose the Combination that Fits Your VESA Hole Pattern



A

A

- ✓ 75 x 75mm (3 x 3")
- ✓ 100 x 100mm (3.9 x 3.9")
- ✓ 200 x 100mm (7.9 x 3.9")
- ✓ 200 x 200mm (7.9 x 7.9")


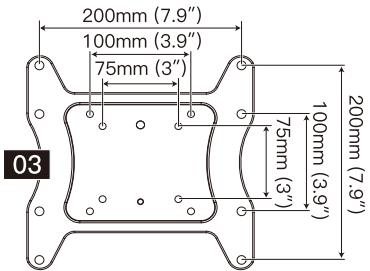


  NOTE: DO NOT fully tighten nuts [T1-1] until Step 2 is finished. The extender brackets should connect to the faceplate as demonstrated on the left below.

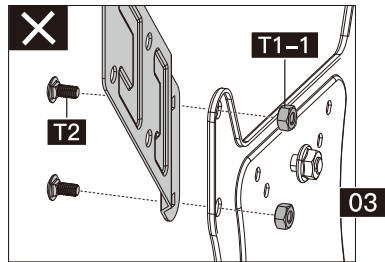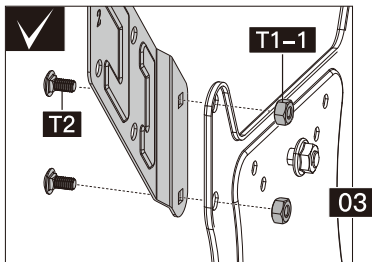

B

  
- ✓ 300 x 300mm (11.8 x 11.8")
- ✓ 400 x 300mm (15.7 x 11.8")
- ✓ 400 x 400mm (15.7 x 15.7")

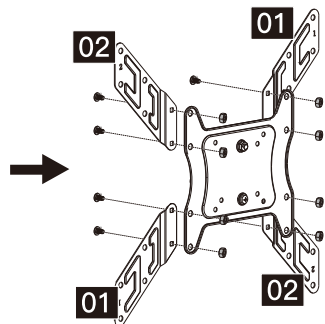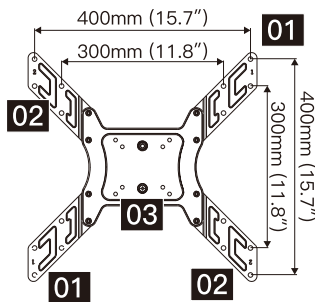

C



☑ 300 x 200mm
(11.8 x 7.9")

 ☑ 400 x 200mm
(15.7 x 7.9")

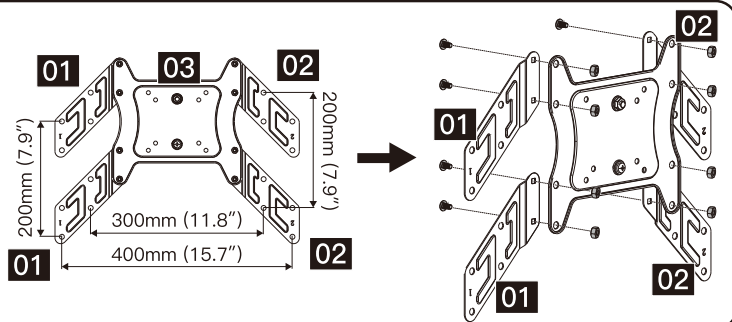


Step 2 Secure the Faceplate with Extender Brackets to the TV

  2-1 Select TV Bolts

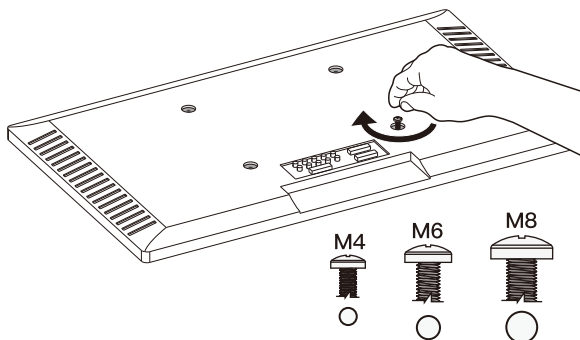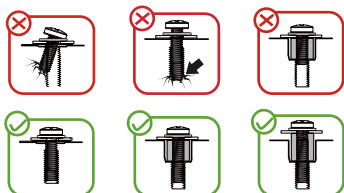


EN Hand thread bolts into the threaded inserts on the back of your TV to determine which bolt (M4, M6 or M8) to use. A minimum of 4–5 turns into the threading is required. Do not turn past the bottom of the hole.




 
2-2 Select Spacers (If Needed)

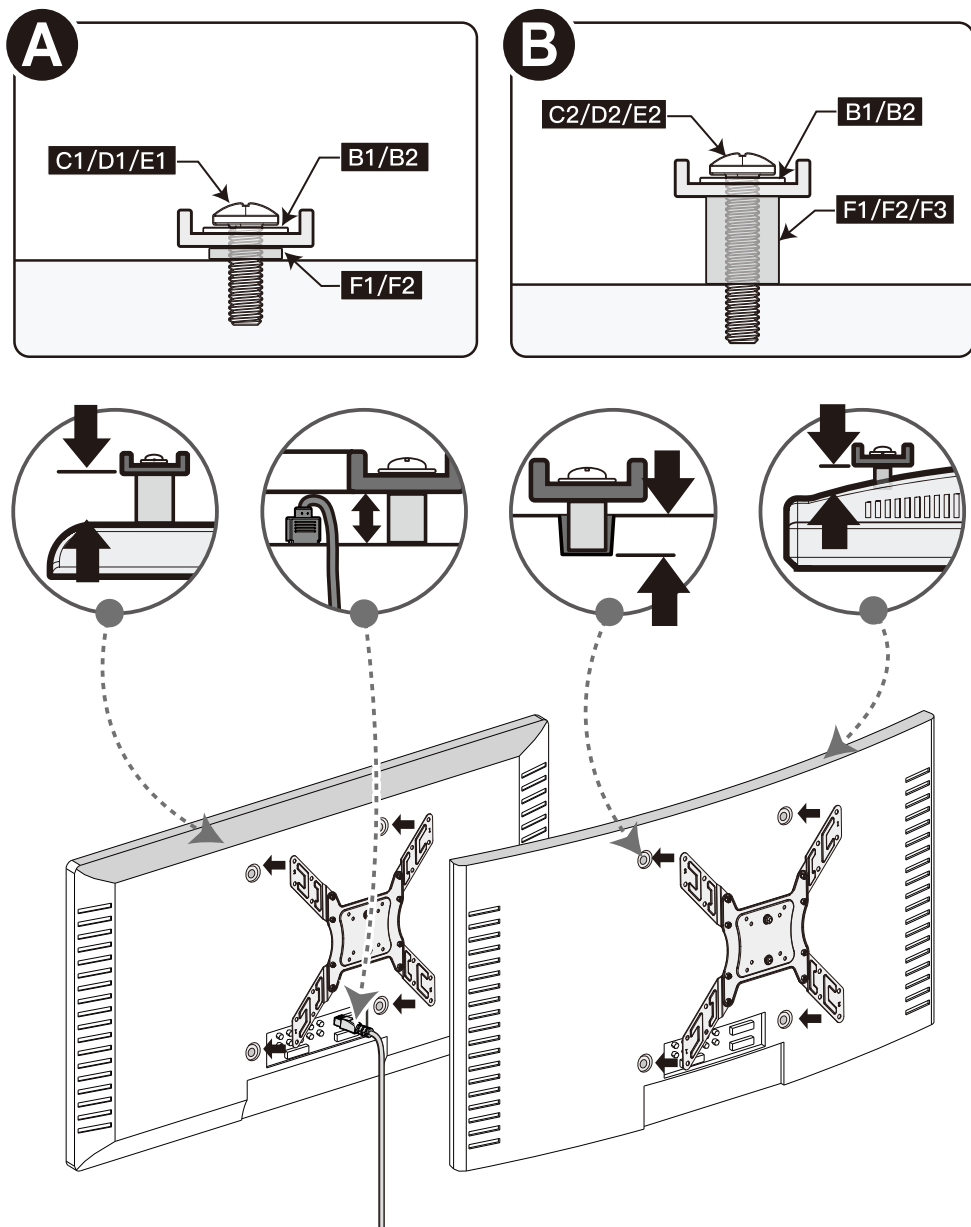


 2-3 Secure the Faceplate with Extender Brackets to Your TV

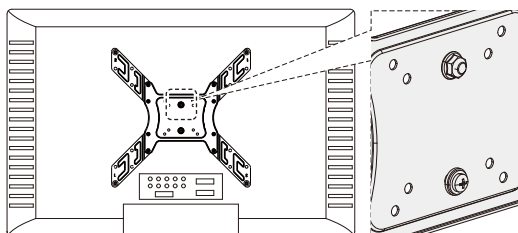

•The big nut faces up.

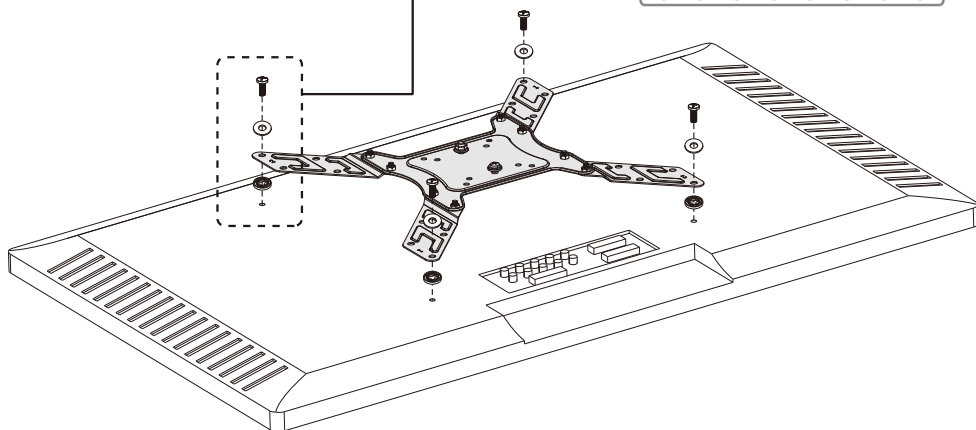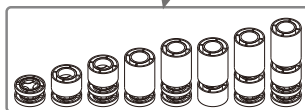  
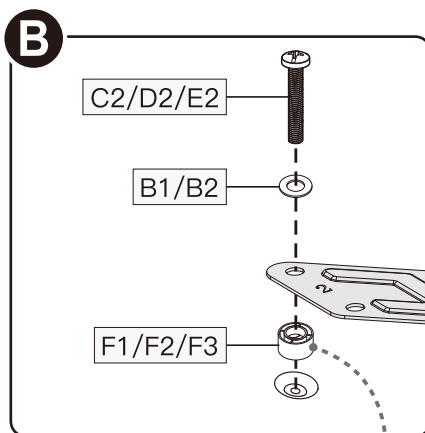 
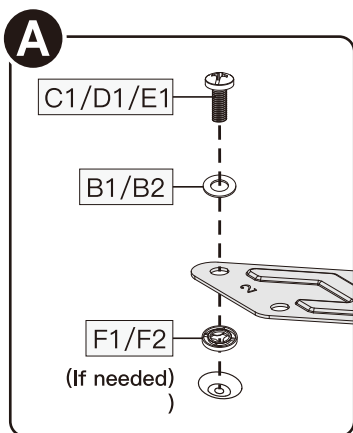 







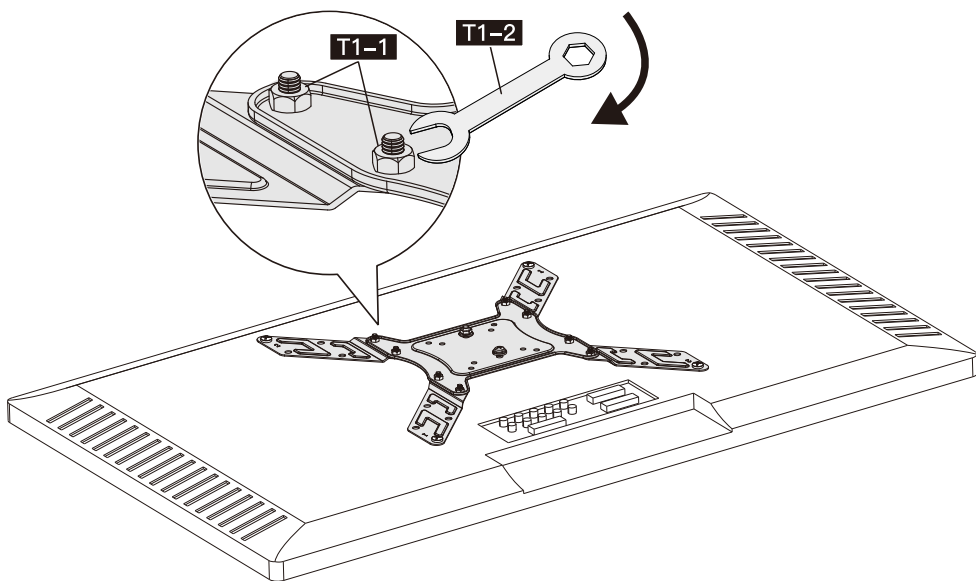 


Step 3 Mount the Arm Assembly / Wall Plate on the Wall

A

       
 
 
Solid Concrete Option


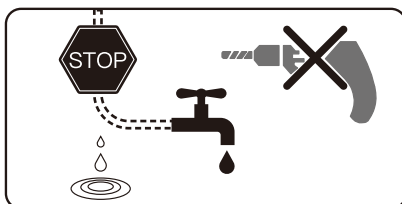
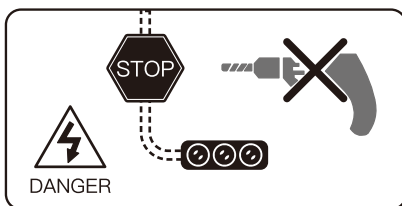
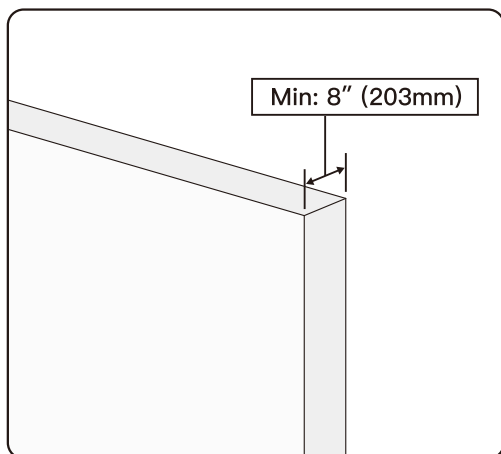


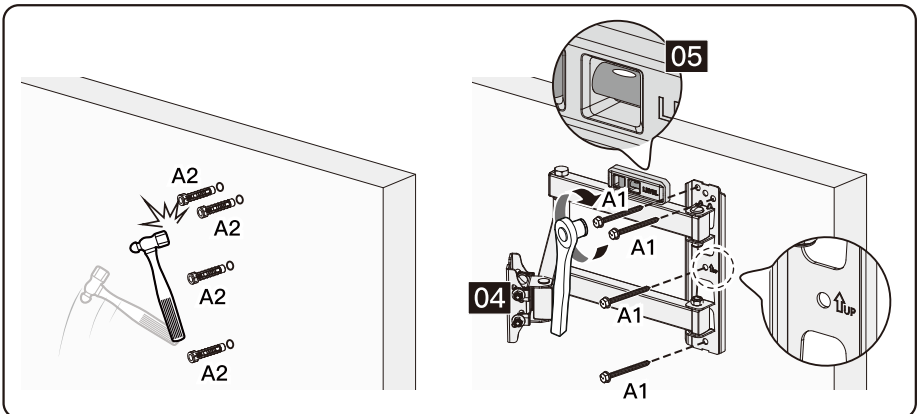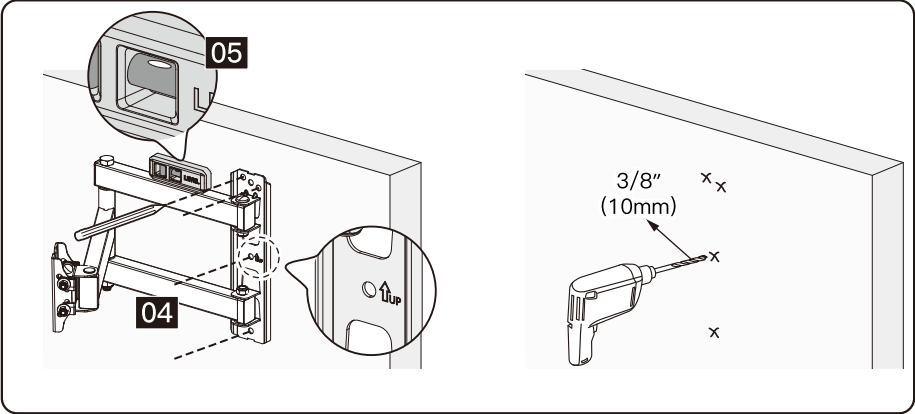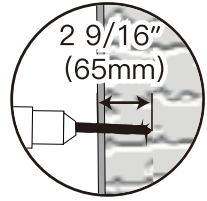




B

       Wood Walls Option

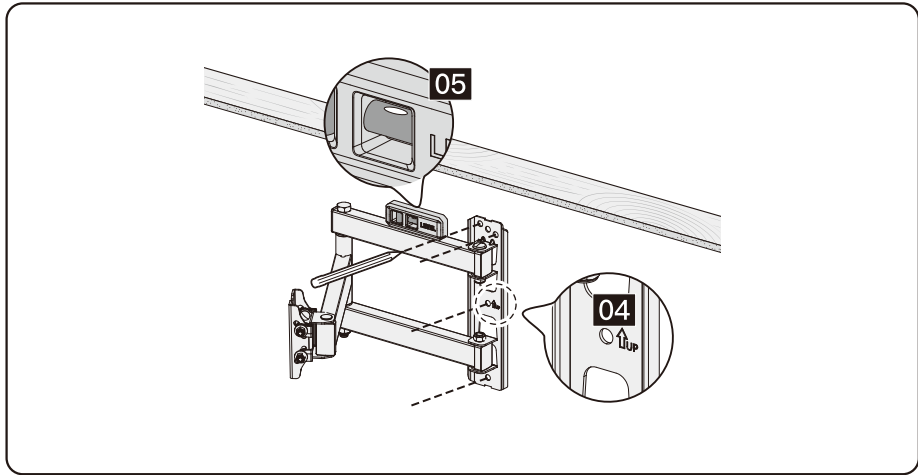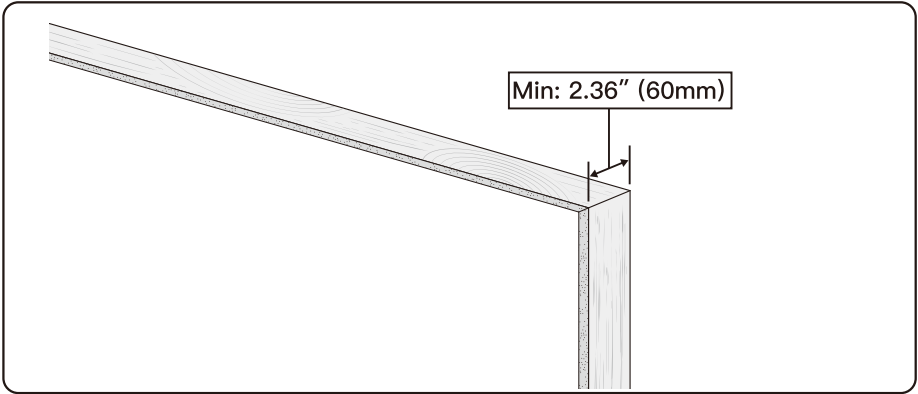


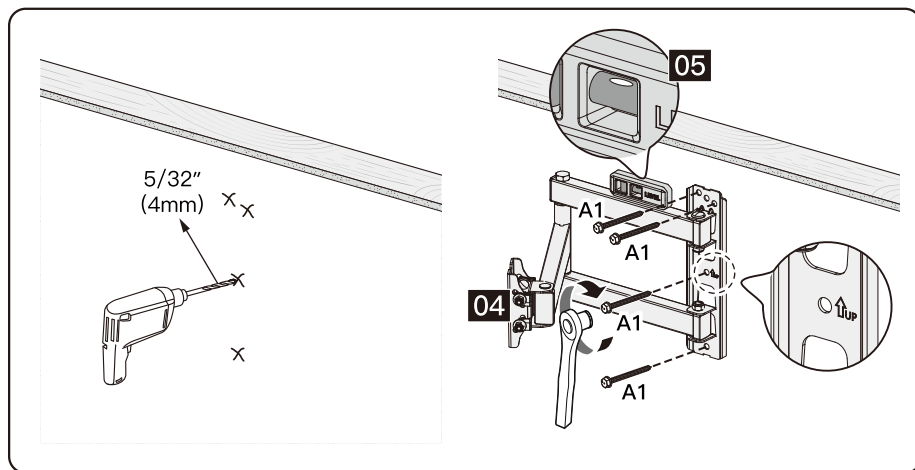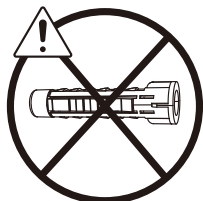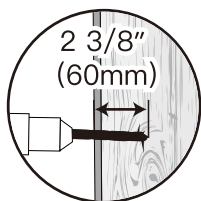

   
Step 4 Verify that the Mount is Firmly Mounted

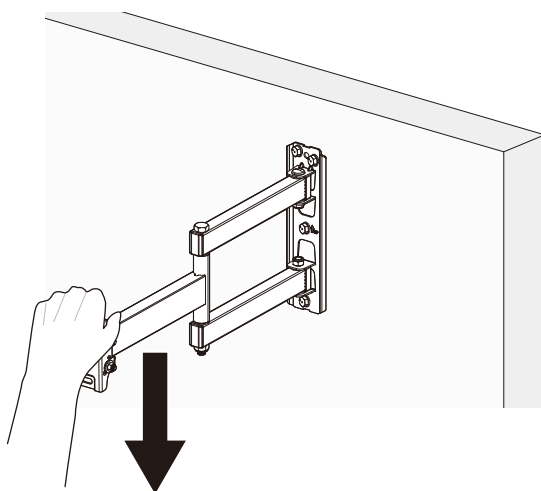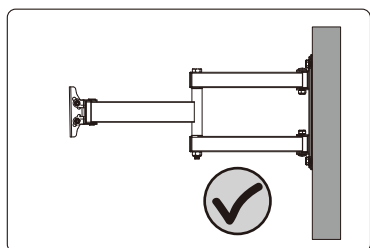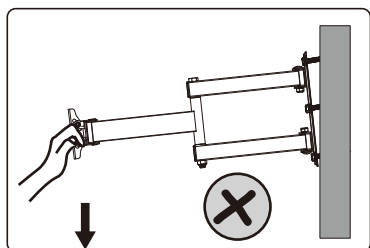

 Step 5 Hang the TV on the Arm Assembly / Wall Plate

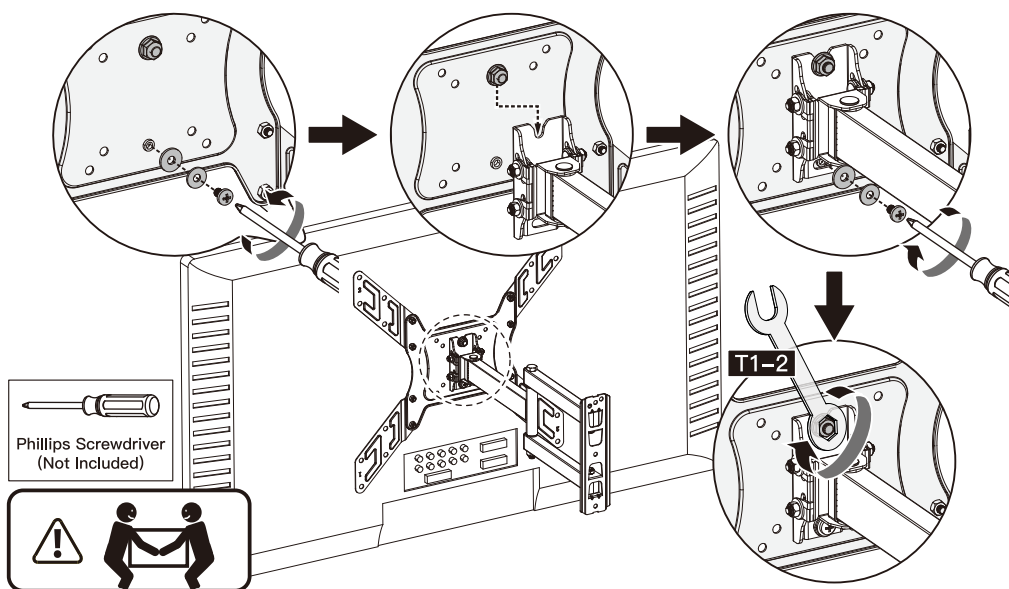

 Step 6 Adjustments

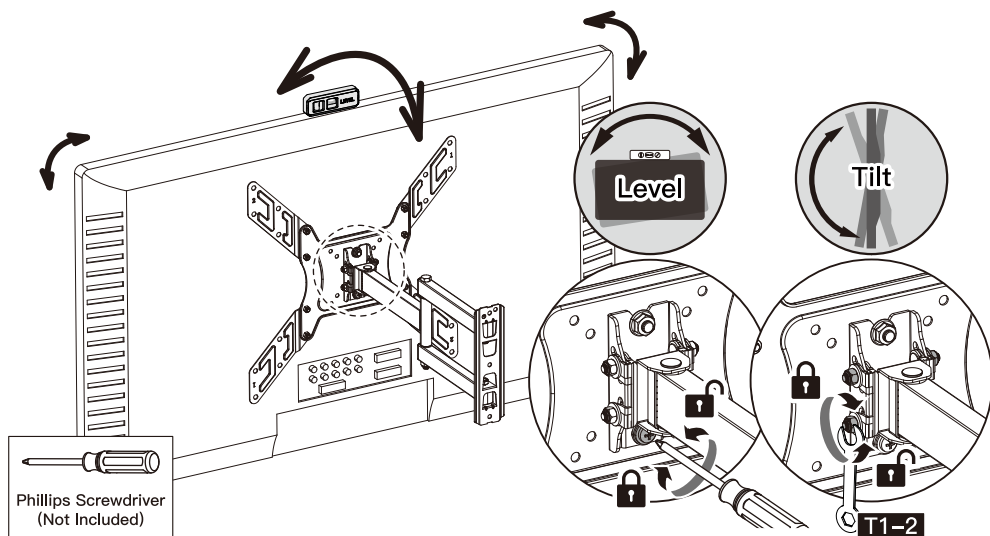

Warnings and safety information

All information regarding the use of the product can be found in the instruction manual. Before using it, read its contents and follow the instructions contained therein.

Also read the following information before use:

Warnings for use

Risk of equipment damage and falling of the device:

- Before mounting the mount, make sure that the wall, desk or other mounting surface is strong enough to support the weight of the device and the mount.
- Use only screws, dowels and other mounting hardware supplied by the manufacturer. Replacements may not provide adequate security.
- Do not mount the mount on surfaces made of low load-bearing materials (e.g., thin drywall) without appropriate reinforcements.
- Make sure that the TV, monitor or other equipment does not exceed the maximum load specified in the mount's specifications.
- Do not hang additional items such as cables, speakers or accessories on the mount, which may cause overloading.

Hazard to users:

- Always follow the manufacturer's recommendations when mounting and adjusting the mount to avoid the risk of injury. Do not undertake installation yourself if it requires specialized tools or work at height.
- After mounting the handle, regularly check that all screws and fasteners are stable and well tightened.

Hazard to children:

- Keep handles, screws and other mounting components out of reach of children to prevent accidental swallowing or injury.
- Make sure the mounted bracket and equipment are out of children's reach to avoid the risk of the unit tipping or falling.

Information on proper use

Installation recommendations:

- Before mounting, carefully read the user manual and check that the mounting kit contains all the required components.
- Make sure your TV or monitor has the appropriate mounts (e.g., VESA standard) that are compatible with your mount model.
- When mounting, use a spirit level to ensure that the mount is properly aligned and to avoid unevenness that may affect the stability of the device.
- If the mount allows you to adjust the angle of tilt or rotation, perform these operations with care to avoid damage to the mechanism or screen.
- Avoid sudden movements when repositioning the mount - they can cause the mounting components to come loose.
- For height-adjustable mounts, make sure the mechanism is locked after setting the desired position.

Maintenance and storage:

- Regularly check the condition of the handle, including the screws, hinges and mounting surface, to make sure there are no signs of wear or corrosion.
- Clean the handle with a soft, dry cloth. Avoid using aggressive chemicals that can damage the protective coating.
- For handles with spring or gas mechanisms, make sure they operate smoothly and without resistance. If necessary, contact the manufacturer's service department.
- If the handle will not be used for a long time, store it in a dry place protected from moisture and dust.
- When transporting the handle, use the original packaging or suitable protection to avoid mechanical damage.

Additional precautions

Adaptation to the user:

- Choose a mount model that is compatible with the size and weight of your TV or monitor - pay attention to the screen diagonal range and maximum load specified.
- If you plan to mount the mount on a non-standard surface, consult a professional to select the appropriate mounts.

Damage and service:

- If you detect damage, such as cracks, loose screws or difficulty in adjustment, stop using the mount immediately and contact the manufacturer's authorized service center.
- Do not attempt to repair the mount yourself - any repairs should be performed by a specialist to ensure safety.
- Replace worn mounting parts only with original parts supplied by the manufacturer.

Statement of conformity

The products have been designed in accordance with the safety requirements of Regulation (EU) 2023/988. They meet the relevant technical standards, including safety of use, compliance with international mounting standards, and protection of users from mechanical and environmental risks.