

2in1 Pet Trimmer Petkit

Petkit · EAN 6973293801309

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

PET TRIMMER

2in1

User Manual

1. Trimmer Attachments

1. Full Body Trimmer (1)

Used for shortening fur all over the pet's body. Attach the combs to set the fur length. The markings and measurements on the device allow for even trimming of the pet, even if the user has no experience in grooming.

2. Paw Trimmer (2)

Trimmer used on pets with very short fur, or for trimming delicate areas, such as paws, rear end, or behind the ears. Attach the combs to set the fur length. The blade of the attachment is small and can be safely used by beginners.

2. Attaching and Detaching the Attachment

Attaching the Attachment

Align attachment A with the main device (B). Press until you hear a click.

Detaching the Attachment

Pull to disconnect attachment A from the main device (B).

3. Attaching and Detaching the Full Body Trimmer

* Detaching the Body Trimmer

To disconnect, turn off the device and press with your thumb as shown in the illustration. To prevent the attachment from falling to the floor and getting damaged during removal, make sure to hold it with your fingers.

* Attaching the Body Trimmer

Hook point A of the attachment to B. After attaching, press the attachment on the device from the back with your finger until you hear a click.

Note:

The white ceramic plate can be easily damaged. When attaching or detaching, be careful not to damage this component. If the plate is damaged, it may cause the device to jam.

Cleaning and Maintenance of the Attachment

Removable Attachment (1)

Using a brush, remove hair and dirt from the attachment (applies to all attachments). You can move the blade back and forth to thoroughly clean all the teeth.

Note:

Do not remove the spring from under the attachment of the device. The spring cannot be reattached once removed and the attachment must then be disposed of. It is recommended to regularly clean the blade to prevent dirt and hair from dulling the blades.

2. Oiling the Attachment

It is recommended to add a little oil between each tooth of the blade. The blade operates very quickly and the appropriate oil should be used. Do not use grease or mixed oils with petroleum or other additives.

Note:

The lifespan of the trimmer depends on the frequency of use, the type of fur being trimmed, and the maintenance of the device. Replace the attachment as soon as it becomes worn. This will help prevent jamming due to fur. Consult with service before replacing the attachment and do not use attachments from other manufacturers. The attachment may become warm during use, but this does not affect the performance or operation of the device.

Combs

Use the provided comb to adjust the desired fur length. The measurements will help you avoid mistakes while trimming.

Attaching and Detaching the Comb

(1) Trimmer Attachment: 3/6mm, 9/12mm

How to Attach: Align the comb with the grooves on the device, slide it in, and press until you hear a click.

Adjusting: For both combs (3/6mm, 9/12mm), after putting them on, press them with both fingers and then slide to adjust the length.

Detaching: Hold the attachment with both hands and press down with your thumbs. Be careful not to press too hard on the teeth to avoid damaging them.

(2) Paw Trimmer: 2mm Comb

Attaching: Align the comb with the grooves on the side of the device. Attach and secure one side, then the other. Press until you hear a click.

Detaching: Use your fingers to disconnect the comb from one clip and then pull and remove the rest. Be careful not to press your fingers on the blade (this may damage it).

- Before using the trimmer, it is recommended to first wash the fur, dry it, and then comb it.

Cut out any tangled fur.

- The performance and lifespan of the trimmer attachment may decrease if the pet's fur is dirty or tangled.

How to Trim Your Pet's Fur

Using the Comb

Choose a comb for the device, depending on the type of your pet's fur. Hold the trimmer with the blade facing up. Gently place the trimmer attachment on the area to be trimmed and shave against the direction of fur growth.

Not Using the Comb

Individuals who do not wish to use a comb must have experience in trimming. Without a comb, fur can be trimmed to a length of 1mm – almost down to the skin. Do not direct the blade downwards while trimming. This may result in cutting the fur too short or causing injury. Ensure before trimming that the pet's fur is dry. Wet fur may make trimming difficult and damage the blade. Never press the blade against the pet's skin – this may result in injury.

Shaving Different Areas on Your Pet's Body

Using the paw attachment, you can trim the area around the neck, rear end, and paws.

Cleaning the Trimmer

Use the included brush to clean the trimmer of remaining fur (inside and blade).

The trimmer can also be cleaned with water and dried with a dry cloth. Apply oil to the blade after washing. Do not rinse the device with gasoline, alcohol, solvent, or other corrosive substances. Do not disassemble the device yourself. Contact service in case of problems.

Connecting the charging cable/charging the trimmer

Connect the USB cable to the trimmer. Note: the trimmer must be fully charged before first use. If you are using a non-standard 5V charger, the current must be 1A. Do not use chargers with different parameters. Make sure the device is turned off, then connect the USB cable to the power supply - you can connect it to a computer, power bank, or charger plugged into an outlet. The product uses a rechargeable battery. If the product is to be disposed of, the battery must be removed beforehand, and the power must be turned off before removal. The battery should be disposed of at an appropriate battery collection point and electronic devices. Warning

- If your hands are wet, do not connect the device cable to the power supply - this may result in electric shock.
- Do not pull hard on the adapter. This may lead to leakage, short circuit, or fire. The adapter should be replaced immediately if it has visible damage.
- The

product and its accessories are not toys. Keep the set out of reach of children. • If the cable appears to be malfunctioning, stop using it immediately. Using a damaged cable may pose a risk of short circuit or fire. • The device should only be used for trimming pet fur. It should not be used for any other purposes. To avoid blockage, do not use the trimmer on fur that is wet or has been recently dyed. • The device should be charged with the included charger.

Device specifications

Name: PETKIT 2 IN 1 PET TRIMMER

Battery type: Ni-MH 600mah

Usage time: approx. 1.5 hours

Rated power: DC 5V 1A

Charging time: approx. 5 hours

Standards: GB 4706.1 GB 4706.9

Weight (including the trimmer):

With body trimming attachment: 120g

With paw trimming attachment: 114.4g

Dimensions:

With body trimming attachment: 115.5mm*36.5mm*27mm

With paw trimming attachment: 165.4mm*32.2mm*28.8mm

Accessories: comb (2 for body trimming, one for paw trimming), USB cable, fur comb, manual.

Technical parameters

Safe trimmer blades

The tips are R-shaped and rounded, which reduces the chance of injuring your pet's skin when the blade is applied.

Washable

The device can be rinsed with water.

Interchangeable attachments

The set includes attachments for body and paw trimming.

Low noise, low vibration

The device's motor operates quietly.

Removable attachments

The trimmer attachment can be removed, allowing for thorough cleaning of the device and removal of remaining fur.

Auxiliary combs

The set includes combs that allow for precise and safe shortening of your pet's fur.

Element Harmful substances

Pb Hg Cd CrVI PBB PBDE

Housing O O O O O O

Charger O O O O O O

Battery O O O O O O

Electronics X O O O O O

Warnings and safety information

All information regarding the use of the product can be found in the user manual. Before you start using it, familiarize yourself with its content and follow the instructions contained therein. Before use, also review the following information:

Usage warnings

Risk of product damage:

- Products should only be used for their intended purpose, as described in the user manual.
- Regularly check the condition of devices and accessories, such as dryers, trimmers, brushes, and fur vacuums. In case of visible damage, such as cracks, abrasions, or mechanical problems, stop using to avoid hazards for animals and users.
- Mechanical and electrical components should be used according to the manufacturer's recommendations to avoid overheating or damage.

Risk to animals:

- Grooming tools and devices (e.g., trimmers, furminators, brushes) should be matched to the size, type of fur, and skin sensitivity of the animal to prevent irritation or injury.
- Ensure that the animal is calm and properly restrained before starting grooming. Excessive stress in the animal may lead to unforeseen reactions.
- In the case of dryers or devices with steam functions, do not direct hot air directly onto the animal's skin for an extended period to prevent burns.

Hazard for children:

- Pet care products, especially those with sharp elements (e.g., trimmers, scissors) or electronic components (e.g., dryers, vacuum cleaners), are not toys. Keep them out of reach of children.
- Do not allow children to use devices unsupervised.

Risk associated with electronic components:

- Regularly check the condition of power cords, batteries, and other electrical components. If damaged, discontinue use of the device.
- Electrical devices (e.g., dryers, vacuum cleaners) should not be used in damp areas or

near water unless they are marked as waterproof.

- For battery-operated devices, use only batteries recommended by the manufacturer and replace them regularly according to the instructions.

Information on proper use

Recommendations for use:

- Before first use, read the user manual and ensure that the device is properly configured for the type of fur and the needs of the pet.
- Ensure that all components (e.g., blades in trimmers, heads in brushes) are correctly attached and in good technical condition.
- When using dryers, vacuum cleaners, or other electrical devices, keep them away from the eyes, ears, and nose of the pet to avoid irritation.

Maintenance and storage:

- Products should be stored in a dry and clean place, free from moisture and extreme temperatures.
- Regularly clean the devices after each use according to the manufacturer's recommendations to maintain their effectiveness and safety.
- For replaceable parts (e.g., blades, filters), use only original or manufacturer-recommended components.

Battery safety:

- In battery-operated devices, use only batteries that comply with the manufacturer's recommendations.
- Used batteries should be disposed of according to local environmental regulations.
- Remove batteries from the device if it will not be used for an extended period to prevent leakage.

Additional precautions

Adaptation to the pet:

- Observe the pet's reactions during grooming – if the pet shows signs of stress or discomfort, stop the procedure.
- Regularly check the condition of the pet's skin and fur. If there are irritations, wounds, or other concerning symptoms, consult a veterinarian.

Damage and service:

- Any repairs to mechanical or electronic devices should only be performed at authorized service points.

- Do not make modifications to the product yourself, as this may affect its safety and functionality.

Declaration of conformity

The products have been designed in accordance with the safety requirements specified in Regulation (EU) 2023/988. They meet the relevant technical standards, including those concerning user safety, electromagnetic compatibility, and material durability.

Environmental protection

Used electronic equipment marked in accordance with the European Union directive must not be placed together with other municipal waste. It is subject to selective collection and recycling at designated points. By ensuring its proper disposal, you prevent potential negative consequences for the natural environment and human health. The system for collecting used equipment complies with locally applicable environmental regulations regarding waste disposal. Detailed information on this can be obtained from the municipal office, waste management facility, or the store where the product was purchased. The product meets the requirements of the so-called New Approach directives of the European Union (EU) concerning issues related to user safety, health protection, and environmental protection, identifying hazards that should be detected and eliminated. This document is a translation of the original user manual created by the manufacturer. Detailed information about the distributor/manufacturer's warranty conditions is available on the website <https://serwis.innpro.pl/gwarancja>.

The product should be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and responsibility. In the absence of information about necessary periodic or service maintenance actions in the user manual, the physical condition of the product should be assessed regularly, at least once a week, for deviations from that of a physically new product. If any deviation is detected or identified, urgent maintenance (cleaning) or service steps should be taken. Failure to perform proper maintenance (cleaning) and respond upon detecting a state of deviation may lead to permanent damage to the product. The guarantor is not responsible for damages resulting from negligence.

Importer:

INNPRO Robert Błędowski sp. z o.o.

Rudzka 65c

44-200 Rybnik, Poland

tel. +48 533 234 303

hurt@innpro.pl

www.innpro.pl

Manufacturer:

Apex CE Specialists GmbH

Habichtweg 1

41468 Neuss, Germany

support@petkit.com

Responsible entity in the EU:

Apex CE Specialists GmbH

Habichtweg 1

41468 Neuss, Germany

info@apex-ce.com

Safety precautions

Before charging, check that the device contacts are clean. Never leave the device unattended while in use and charging. Ensure that you can quickly disconnect the device from the power source in an emergency. Never expose the device to high temperatures. Charge the device in a dry and well-ventilated area away from flammable materials, maintaining a minimum distance of 1m from other objects. Never cover the device while charging. Never use a power supply, charging station, cables, etc. without the manufacturer's recommendation and certification. Take care of your property; the device is equipped with cells that are difficult to extinguish, so equip yourself with a fire blanket. LI-ION Battery

The device is equipped with a LI ION (lithium-ion) battery, which ages over time and with use due to its physical and chemical structure. The manufacturer specifies the maximum operating time of the device under laboratory conditions, where optimal working conditions for the device exist, and the battery itself is new and fully charged. Actual operating time may differ from the declared value in the offer and this is not a defect of the device but a characteristic of the product. To maintain maximum battery life, it is not recommended to discharge it below 3.18V or 15% of total capacity. Lower values, such as 2.5V for the cell, permanently damage it and this is not covered by warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50% and its charge level should be checked periodically every two months. Store the battery and device in a dry place, away from sunlight and negative temperatures. LI-PO Battery

The device is equipped with a LI PO (lithium-polymer) battery, which ages over time and with use due to its physical and chemical structure. The manufacturer specifies the maximum

operating time of the device under laboratory conditions, where optimal working conditions for the device exist, and the battery itself is new and fully charged. Actual operating time may differ from the declared value in the offer and this is not a defect of the device but a characteristic of the product. To maintain maximum battery life, it is not recommended to discharge it below 3.5V or 5% of total capacity. Lower values, such as 3.2V for the cell, permanently damage it and this is not covered by warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50% and its charge level should be checked periodically every two months. Store the battery and device in a dry place, away from sunlight and negative temperatures. Product battery specifications

Feature Value

Battery category Portable battery

Battery type Portable nickel-metal hydride rechargeable batteries (Ni - MH)

Contains Cadmium/Lead No

(>0.002% Cd, >0.004% Pb)

Net weight (kg) 0.026

Capacity (mAh) 600

Power (kWh) 0.00144