 


PETKIT

USER MANUAL

2 IN 1 PET TRIMMER PRO



Thank you for buying our product. Please read this manual carefully before you use this product. After that, just keep it in the place where you will find it easily. All pictures only for your reference, actual product is subject to real article.

■ PRODUCT DESCRIPTION

1. Basic Parameters

Product Name: PETKIT 2 In 1 Pet Trimmer PRO
Rated Power: 5V $\square$ 1A
Battery Type: 600mah lithium battery
Charge Time: about 120 minutes
Usage Time: Body trimmer head (about 60 minutes)
Paw trimmer head (about 90 minutes)
Body trimmer head (with main body): about 138g (4.87 ounces)
Paw trimmer head (with main body): about 131g (4.62 ounces)
Product Dimensions:
Body trimmer head (160.5 x 39.8 x 34.5 mm) (6.32 x 1.57 x 1.36 inches)
Paw trimmer head (178.5 x 33.6 x 30.2 mm) (7.03 x 1.32 x 1.19 inches)
Accessories: guide comb(3mm), guide comb(9mm), cleaning brush, USB charging cable, User Manual

■ TRIMMER ATTACHMENTS

1. Types of trimmer attachments




① Body trimmer attachment
Used for trimming most of the fur on your pet's body. Use it together with the guide combs to control hair length. For first timers, the length guides makes it easy to give your pet an even trim, with no need for prior grooming experience.



② Paw trimmer attachment
Great for use on pets with short hair, or on sensitive spots like the paws, posterior, or around the ears. Can also be used alongside the body trimmer attachment to achieve any style.

2. Attaching and detaching the trimmer heads

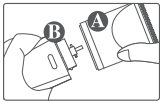

Attaching the trimmer head
Align the trimmer head A with trimmer body B; After aligning, press together firmly until you hear it click into place.

Detaching the trimmer head
Pull trimmer head A apart from trimmer body B.



3. Attaching and detaching the body trimmer head

① Detaching the body trimmer head



To detach, turn off the device and use thumb to press upward against the teeth of the body trimmer head, in the direction shown in the illustration. To avoid letting the trimmer head fall to the floor and become damaged when detaching, make sure you have a good grip on the trimmer head.

② Attaching the body trimmer head

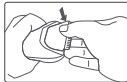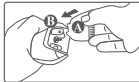


Attach location A on the trimmer head to location B on the trimmer body; When in place, press firmly on the back of the trimmer head until you hear it click in place.

Note:
The white ceramic plate can break easily. When attaching or detaching, take care not to damage this part. If the ceramic plate is damaged, it may result in jamming or loss of functionality, and the trimmer head will need to be replaced.

■ CLEANING AND MAINTAINING TRIMMER ATTACHMENTS

① Removable body trimmer attachment

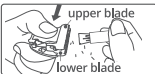

Use the cleaning brush to brush out hair and debris off of the trimmer body (applies to all attachments). You can clean out hair from between the teeth of the body trimmer head with the cleaning brush. If you press the clipper blade back and forth along its direction of motion, you can clean the spaces in between the teeth, removing any debris with the brush.

Do not remove the spring from beneath the trimmer head, otherwise it cannot be fixed and will have to be discarded. You should clean the debris and hair from the surface and teeth of the trimmer blades after each use to avoid dulling the blades. If you clean using water, make sure to wipe it dry afterward to prevent corrosion.




Note:
The lifetime of the trimmer head is directly related to the frequency of use, the type of pet hair being trimmed, and the maintenance of the product. Replace trimmer head whenever they become worn out. This will help avoid hair jams. Please do not use incompatible trimmer heads from other manufacturers. During use, the trimmer head may become slightly hot, which is a normal phenomenon and does not affect normal use.

■ GUIDE COMBS

Use the guide combs to ensure an even length trim. The guides can help you avoid mistakes when trimming, resulting in trimming your pet's hair too short. They are also effective at controlling the overall length of your pet's hair to achieve any desired hair style.

Attaching and detaching the guide combs

① Body trimmer head: 3mm, 9mm guide combs

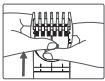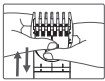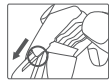

How to attach: Line the guide comb up with the groove on each side of the trimmer attachment and slide it along the groove until you hear it click into place.

How to adjust: For the two guide combs for the body trimmer (3mm, 9mm), after attaching use both thumbs to press down on the top of the guide comb, then slide up or down to adjust the length.

How to detach: Grasp the trimmer head with both hands and press down on the top of the guide comb with both thumbs, then slide it forward and off. Please be careful not to press down too hard on the teeth of the guide comb to avoid damaging them.

■ HOW TO TRIM YOUR PET'S HAIR

Using the guide combs

According to the type of hair being trimmed, choose an appropriate guide comb. To trim your pet's hair, firmly grasp the trimmer with the trimmer head facing up. Lightly place the flat of the trimmer head on the area to be trimmed and proceed to trim against the direction of hair growth, slowly and steadily passing over area to be trimmed.



Not using the guide combs

Anyone not using the guide combs when using this trimmer should have prior grooming experience. When trimming your pet's hair, slide the back of the electric trimmer along the fur, adjusting to trim to the desired length. (If you trim your pet's hair without using the guide comb, the trimmed hair will be around 1mm in length, close to a complete shave.)


How to trim in different locations on your pet

Using the paw trimmer attachment, you can trim the area around the ears on smaller breeds, the posterior, and the paws.




NOTE:

- If you point the trimming head down toward your pet when trimming, it may result in trimming the hair shorter than intended or damaging your pet's skin.
- When trimming, make sure your pet's hair is dry. If your pet's hair is overly wet, it will make trimming more difficult and dull the trimming blade.
- Do not press the trimmer head against the skin when trimming, otherwise the skin will be scratched.

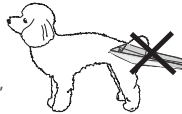

■ CLEANING THE BODY OF THE TRIMMER

Warning: Be sure to unplug the power cord before cleaning. Only the main unit can be washed to avoid damage to the product.

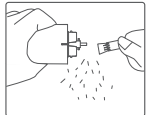



Use the cleaning brush to brush out hair and debris off of the trimmer body, the trimmer blade, and the attachment grooves. You can use water to clean the trimmer body. After cleaning, use a dry cloth to dry off the device.



Waterproof design, washable main body

Note:
Please do not use gasoline, alcohol, thinner, or any other corrosive chemicals to clean the device. Please do not disassemble or repair this product by yourself.

■ ATTACHING THE CHARGING CABLE/CHARGING THE TRIMMER

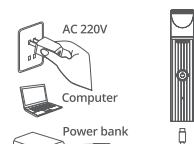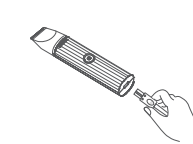

Take the USB charging cable and attach it to the trimmer body. Friendly reminder: After buying, please charge the device before using it. If using a non-standard 5V charger, the current must be 1A. Otherwise, do not use it to charge the device.

Make sure the device is turned off. Plug the USB charging cable into a power source. (The USB charging cable can be plugged into any USB charging port, phone charger, desktop computer, laptop computer, or travel charger.)

* If you need to connect the adapter, please purchase it yourself.

This product uses a rechargeable battery. If the device cannot be repaired and must be discarded, you must remove the battery before discarding. When removing the battery, you must turn off the power. The battery should be recycled at a safe recycling facility.

■ INDICATOR LIGHT

Indicator Light	Status
Constant white light	Device is in use/fully charged
Blinking red light	Low battery/device is charging

■ CAUTIONS

• Please do not plug-in or unplug the power cable when your hands are wet, or it may cause leakage of electricity.

• Do not pull forcefully on the power adapter cable or it may cause leakage of electricity, short-circuiting, or a fire. To avoid causing an accident, if the power adapter cable has been damaged, stop using it immediately and replace it.

• This product is not a toy, nor are any of its parts or accessories. Please store accessories out of reach of small children to avoid unwanted accidents.

• You can use a screwdriver to pry open the shell of the device's main body and remove the inside portion. Then, using pliers or a soldering iron, remove the battery. Never connect the device to a power source after removing the battery.

• If you discover any irregularities in the power adapter cable, stop using it immediately, otherwise there is a chance it may cause leakage of electricity, a short-circuit, or a fire.

• This product is only intended to be used to trim pet hair. Please do not use it for any other purpose. To avoid jamming the device, do not use this product on freshly dyed or wet pet hair.

• Please only use the provided power adapter cable. This product's power adapter cable cannot be used with any other models, otherwise it may result in unintended consequences.

⚠ WARNING

- It is prohibited to use non-rechargeable batteries in this product.
- The battery should have a spare capacity before charging, and only use an adapter or USB socket with an output of DC5V 1A that meets international standards.
- This product is only used for the purpose described in the manual.



RECYCLING

- The battery of this product contains contaminants. If you want to dispose of this machine, you must first cut off the power of the trimmer (let the trimmer work until the battery runs out); then unscrew all the screws on the main unit, disassemble the shell, remove the battery, and drop it off at a government-designated recycling point.
- Do not short-circuit the battery to prevent it from burning and causing a fire.
- Do not put the battery into the fire to prevent explosion or release of toxic substances.
- If the battery is found to be leaking, wipe the main unit with a cloth and put the leaking battery in a plastic bag, and give it to an organization qualified to recycle. Do not discard it at will to avoid environmental pollution. If the battery leakage comes into contact with the skin, rinse immediately and seek medical attention if you feel unwell.

Disposal

The European directive 2012 / 19 / CE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and ;
(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IC warning

- English:
This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) This device may not cause interference, and
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

- French:
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.