

Petlibro Granary διανομέας τροφής με διπλό μπολ 5L (Λευκό)

Petlibro · EAN 0754932367921

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

Petlibro Granary Pet Feeder

with Double Bowl 5L

USER MANUAL

This user manual applies only to the PETLIBRO Granary automatic pet feeder with double bowls. Please read this manual and keep it for future reference. **SAFETY GUIDELINES**

! WARNING

- All packaging materials must be disposed of properly. Some components may be packed in plastic bags, which can cause suffocation. Keep them out of reach of children and pets.
- DO NOT allow small children to play with the pet feeder, near it, or inside it.
- To reduce the risk of injury, exercise extreme caution when using the device near children.
- DO NOT use the feeder for pets that cannot reach the food tray or have physical disabilities.
- NEVER immerse the base in water, as this may damage electronic components, such as the control panel.
- DO NOT place any foreign objects in the pet feeder.
- DO NOT use outdoors. Frequently check the operation of the device to ensure it is functioning properly.
- DO NOT use wet, canned, or moist food.
- DO NOT disassemble the device in any way other than described in this user manual.
- DO NOT use the feeder for purposes other than intended.
- Use only accessories recommended or sold by the manufacturer. Using accessories not recommended or not sold by the manufacturer may create hazardous conditions.
- Do not modify the pet feeder.
- Do not use the device if it is malfunctioning or damaged. Do not attempt to repair the pet feeder yourself. Contact our customer service department immediately for further instructions.
- Always disconnect the device from the power supply when not in use and before cleaning.

- Never pull the power cord to unplug it from the wall outlet.
- If the plug of this device gets wet, turn off the power to the wall outlet. Do not attempt to unplug the plug.
- After installation, check the power supply. Do not connect the device if there is water on the power cord or plug.
- To avoid tripping, always place the power cord away from areas where people walk.
- The device may be used by children aged 8 years and older and by persons with reduced physical, sensory, or mental capabilities or persons lacking experience and knowledge, provided they are supervised or have received instructions regarding the safe use of the device and understand the associated hazards. Children should not play with the device. Cleaning and maintenance of the device should not be performed by children without supervision.
- The device may only be used with the power supply provided with the device.
- If the power cord set is damaged, it must be replaced with a special power cord set available from the manufacturer or its service agent.

NOTE

- DO NOT ALLOW pets to bite or swallow any parts of the device. If you are concerned about the power cord, purchase a cord cover (hard plastic cover) from a hardware store to protect the power cord.
- If it is necessary to use an extension cord, use only one extension cord with the appropriate current rating.
- DO NOT install or store the pet feeder in locations exposed to weather conditions or temperatures below 4°C / 40°F.
- Use only D-type alkaline batteries for power. DO NOT use rechargeable batteries.
- Regularly check the batteries. Always replace the batteries with new ones before a long trip. DO NOT lift the feeder by the lid, food tank, or food tray. Lift and carry it with both hands, holding the base and keeping the device in an upright position.
- Suitable ONLY for dry food with a pellet diameter of 2 to 15 mm / 0.07-0.6 inches. Larger pellets may get stuck in the outlet hole.
- Do not insert fingers into the outlet hole or touch the rotor.
- Read and follow all important information provided on the pet feeder and on the packaging.

EXTERNAL POWER SUPPLY

Use only with the power supply provided with the device. Model list:

USA: TPA-46B050100U U

EU: TPA-147K050100VU01

TPA-67B050100VU01

TPA-46050100VU

UK: TPA-38A050100BU01

JP: TPA-95A050100UU01

TPA-98B050100PU01

Information on disposal and recycling of used electrical and electronic equipment (WEEE)

All products bearing this symbol are used electrical and electronic equipment (WEEE according to Directive 2012/19/EU) and should not be mixed with unsorted municipal waste.

In order to protect human health and the natural environment, used equipment should be handed over to a designated collection point for used electrical and electronic equipment, appointed by the government or local authorities. Proper disposal and recycling will help prevent potential negative impacts on the environment and human health. For more information on the locations and operating conditions of such collection points, please contact the installer or local authorities. CONTENTS OF THE PACKAGE

Double food bowls

Food dispenser with handle

Portion divider

Power adapter

User manual

Moisture absorber bag

PRODUCT APPEARANCE

1: Lid

2: Seal

3: Food tank

4: Transparent window

5: Tank base

6: Anti-clogging sensor

7: Portion divider

8: Stainless steel bowls

9: Control panel

10: Display panel

11: Food outlet

12: Bowl holder

13: Feeder base

17: Battery compartment

14: Moisture absorber container

18: Chamber cover

15: Hydraulic lift

19: Speaker

16: Power adapter

BUTTON AND DISPLAY OVERVIEW

Unlock button

Press and hold for 3 seconds to unlock the remaining buttons and screen.

Meal count decrease button

(Unlock state) Press to switch between meal numbers. (Setting state) Press to decrease the number.

Manual feeding button

Press 1-5 times to dispense 1-5 portions of food.

Meal count increase button

(Unlock state) Press to switch between meal numbers. (Setting state) Press to increase the number.

Recording button

Press once, you will hear a beep, record a message (max. 10 seconds), then press again to save.

Settings button

(Setting state) Press to confirm and proceed to the next step. Press and hold for 3 seconds to return to the locked interface. You will hear a double beep.

Battery power level icon

Time setting icon

Ready to set current time.

Lights up when batteries are installed. Lights up red and blinks when the battery power level is low and needs to be replaced.

Lock icon

Lights up when other buttons are locked.

Recording icon

Ready to set time

Playback

Reminder signal

for meals.

USAGE INSTRUCTIONS

Assembly and preparation for setting

1. Turn the knob counterclockwise to open the lid.
2. Place the moisture absorber bag in the inner box under the lid.

Notes:

- It is recommended to replace the moisture absorber bag every 15 days to prevent mold growth.
- Remove the moisture absorber bag before cleaning the lid.

3. Add dry pet food to the food tank.

Notes:

- To prevent uneven food dispensing, add enough food to the visible level.
 - Recommended kibble size: 2-15 mm/0.07-0.6 inches in diameter.
 - Do not use canned, wet, or moist food. Minimum food level.
4. Put the lid back on. To snap the lid closed, turn it clockwise from the right rotation mark to the left rotation mark.
 5. Remove and install the double food tray. Attach the double food tray to the cutout under the feeder base.
 6. Install the portion divider, aligning it with the round hole. To dispense the same amount of food, slide the divider all the way to the right. (Slightly tilt it to the right from the center of the food outlet until it can no longer be moved).

Amount of food: Left side = Right side

Amount of food: Left side # Right side

Note: If the divider is in the middle, the feeder may not dispense equal amounts of food.

Note: To remove the bowl holder from the feeder base, move the portion divider away from the food outlet. If there are pellets in the food bowl, handle it gently to avoid spilling them.

When lifting the feeder, hold it by the base, not by other parts.

7. Connect the power

- 1) Plug the 5V power adapter into an electrical outlet and the USB cable into the USB port at the back of the feeder.
- 2) The LED display will light up automatically, indicating that the feeder is turned on.
- 3) Open the battery compartment at the bottom of the feeder. In case of a power failure, insert three D-type alkaline batteries (not included). Make sure the batteries are inserted according to the positive and negative pole markings in the compartment.

4) After inserting the batteries, the battery icon will light up on the screen; when the icon changes color to red and starts flashing, it means that the battery power level is low and they need to be replaced. Notes:

- Batteries are not included.
- To avoid sudden power interruptions and disruptions in feeding the pet, do not use batteries as the only power source for the feeder. Batteries can only serve as backup power.
- To prevent battery leakage, remove the batteries if the device will not be used for an extended period. View from the bottom

Program Settings

1. Set the current time

Note the 12-hour AM/PM format. The time will automatically change from AM to PM according to the setting. Time chart in 12-hour format

- 1) Press and hold the unlock button for 3 seconds to unlock the remaining buttons and the screen. The current time setting icon on the screen will start flashing, indicating the transition to settings mode.
- 2) Press the settings button, the hour digits will flash.
- 3) Use the increase/decrease button to set the current hour, then press the setting button (to save and proceed to set the minutes).
- 4) The tens digit of the minutes will flash, press the increase/decrease button to first set the tens digit, then press the setting button to save, then set the single digit and press the setting button to save. Setting the current time is complete. Note: The control buttons and screen will automatically lock after 1 minute of inactivity.

2. Set the time and portions of meals

Set the time for the first meal

- 1) After setting the current time, the feeder enters meal schedule setting mode. The icon will flash, signaling readiness to set the first meal time.
- 2) Press the settings button to set the time for the first meal. The hour digits will flash.
- 3) Press the increase/decrease button to set the hour. Then press the setting button to save and proceed to set the minutes. The tens digit of the minutes will flash, press the increase/decrease button to first set the tens digit, then press the setting button to save, then set the single digit and press the setting button to save.

Set the portion for the first meal

After setting and saving the time for the first meal, the feeder enters portion setting mode. The screen will display P-XX, indicating portions.

- 1) Press the button to set portions (max. 50), first set the tens digit and press the button to

save, then set the single digit and press the button to save.

2) Repeat the above steps to set the time and portion for the remaining meals, if necessary.

The feeder supports up to 6 scheduled meals per day. Note: The default time for the first four meals is 6:00, 12:00, 18:00, and 24:00, and the time for the fifth and sixth meals is 1:00. The default portion is 0. You can change these settings.

3. Record a meal message

1) In the unlocked state, press the recording button once, you will hear a beep.

2) Record your message (maximum recording time is 10 seconds). Press the recording button again to finish, you will hear two beeps indicating that the recording has been saved.

3) The recording will be played back automatically once so you can check the recorded voice. Notes:

- By default, the meal reminder signal is played 2 times and sounds after the feeding time has elapsed.

- The meal reminder signal is not played during manual feeding, only at the designated meal times.

4. Set the meal reminder signal playback times

The playback time for the meal reminder signal can be set from 0 to 5. If the time is set to zero, the meal reminder signal will not be played at the appropriate time.

1) In the unlocked state, press and hold the recording button for 3 seconds, the recording icon will light up, and the meal icon will flash.

2) Press the button to select the number of meals you want to set, then press the settings button once to save.

3) The screen will display F-XX, indicating the playback time. Press the increase/decrease button to set the playback time for the meal reminder signal, then press the settings button to save.

4) Repeat the above steps to set the number of repetitions for the meal reminder signal for other meals. Note: After completing all settings, press and hold the settings button for 3 seconds to return to the locked interface.

5.

Manual Feeding of the Pet

In the unlocked state, press the manual feeding button once, and the feeder will dispense one portion of food. The manual feeding button can be pressed a maximum of 5 times, and the feeder will dispense 5 portions of food. Note: This does not affect the normal schedule and portions.

6. Cleaning All Settings

Press and hold the increase/decrease buttons simultaneously for 6 seconds until the device emits three beeps, and all icons on the screen light up, indicating that the reset is complete.

CLEANING AND MAINTENANCE

For the health of pets, regular cleaning of the feeder is recommended. The parts that can be washed are: the lid, food container, container base, stainless steel bowl, and bowl holder. The remaining parts should be cleaned with a dry cloth. Clean the container lid, food container, and container base. Before removing the food container, ensure that it is empty to avoid spilling food.

1. Before cleaning, disconnect the power supply.
2. Turn counterclockwise to remove the lid, then remove the moisture-absorbing bag from the inner box under the lid.
3. Pull along the notches to remove the tank.
4. Turn left to remove the tank base.
5. Rinse and dry the lid, tank, and tank base thoroughly.
6. Reinstall them in the device. Rotate the tank base clockwise until it clicks into place.
7. Then install the tank and lid.

Clean the Bowls and Holder

1. Remove the bowl holder from the feeder base.
2. Rinse the stainless steel bowls and holder, then dry them thoroughly before reinstalling in the device.

SPECIFICATION

Model PLAF006

Capacity 5 liters

Screen LED Screen

Power DC 5 V Power Adapter; 3 D alkaline batteries (not included)

Adapter AC Input 100–240 V, DC Output 5 V

Operating Temperature 0°C – 58°C / 32°F – 131°F

Dimensions 34.6 x 19 x 19 cm / 13.6 x 7.5 x 7.5 inches

Weight 2 kg / 4 pounds

TROUBLESHOOTING

Answers to these questions should help resolve most issues related to the pet feeder. If not, please contact our Customer Service Center at support@petlibro.com.

Problem Solution

The screen displays “E1” and blinks. 1) Remove blockages from the product outlet.

2) The anti-jam sensor needs cleaning.

I press the buttons, but they do not work. Press and hold the unlock button for 3 seconds to enter settings mode.

I forgot the meal settings. 1) The number of set meals will be displayed on the locked interface. (It does not display if not set).

2) In the unlocked state, press the Increase/Decrease button to select the meal number you want to check, then press the settings button to check the settings.

Food does not come out of the device. 1) Ensure that the food in the tank is dry and its size is within the range of 2-15 mm / 0.07-0.6 inches in diameter.

2) Remove the food tank and tank base, check if the chute inside is blocked.

3) Check if the anti-jam sensor at the food outlet is dirty or blocked.

4) Check if the battery level is low, if the power adapter is connected, or if there is a power interruption when the adapter is connected and batteries are not installed.

Problem Solution

The LED display is off. 1) Press and hold the unlock button for 3 seconds to unlock the screen.

2) Check if the power adapter is connected.

3) If the display still does not light up, even though the device is properly connected to power, contact the technical support team at support@petlibro.com.

I cannot remove the food tank. To remove the food tank, pull up along the cutouts on both sides.

The amount of food in each portion is not the same. The first few portions may vary, but this does not mean the product is defective. After about 6 feedings, it should be almost even.

Manufacturer Information:

Name: LIBRO TECHNOLOGY CO., LIMITED

Address: Room 616, 6/F, Kam Tim Industrial Building, 135 Connaught Road West, Western District, Hong Kong

leo.wang@designlibro.com

Responsible Entity in the EU: SUCCESS COURIER SL
CALLE RIO TORMES NUM. 1, PLANTA 1, DERECHA, OFICINA 3,
Fuenlabrada, Madrid, 28947 Spain
support@petlibro.com

Warnings and Safety Information

All information regarding the use of the product can be found in the user manual.

Before you start using it,
familiarize yourself with its content and follow the instructions provided. Before use, also
review the information below:

Usage Warnings

Risk of product damage:

- Products should only be used for their intended purpose, as described in the user manual.
- Regularly check the condition of the food dispenser or bowl, especially mechanical components such as lids, handles, dispensing mechanisms, or food tanks. In case of visible damage, stop using it and contact service.
- Do not overload the food or water tanks – adhere to the recommended capacities specified by the manufacturer.

Risk to animals:

- Ensure that the food dispenser is suitable for the size, age, and dietary needs of the animal.
- Regularly check the quality of the stored food – ensure it is fresh and stored in dry conditions to prevent spoilage.
- Place the device in a stable location, easily accessible to the animal, but away from areas exposed to excessive sunlight, moisture, or contact with other animals.

Risk to children:

- Food dispensers are not toys. Keep them out of reach of children to avoid accidental damage to the device.
- Do not allow children to operate the device without adult supervision, especially when filling it with food or maintaining the mechanisms.

Risk associated with electronic components:

- Regularly check the condition of power cords, batteries, and electronic components. In case of damage, stop using the device.
- For electrically powered models, ensure that the device is connected to a stable power source.

- If the device is battery-operated, replace the batteries according to the user manual and use only batteries recommended by the manufacturer.

Information on proper usage

Recommendations for use:

- Before first use, read the user manual and ensure that all components, such as lids, dispensing mechanisms, and food tanks, are properly installed.
- Regularly refill the food tank with food that complies with the manufacturer's recommendations, avoiding products that may cause blockages in the mechanisms.
- For models with automatic functions, ensure that the feeding schedule is set correctly.

Maintenance and storage:

- Products should be stored in a dry and clean place, away from moisture and extreme temperatures.
- Regularly clean dispensers and bowls according to the manufacturer's instructions, using mild detergents and soft materials. Do not use harsh chemicals or tools that may damage the device.
- Replace consumable parts, such as filters (if applicable), according to the manufacturer's recommendations.

Battery safety:

- In battery-operated devices, use only batteries recommended by the manufacturer.
- Used batteries should be disposed of according to local environmental regulations.
- If the device will not be used for an extended period, remove the batteries to prevent leakage.

Additional precautions

Adjustment to the animal:

- Observe the animal's reactions to the food dispenser or bowl – ensure that using the device does not cause stress or discomfort.
- For animals prone to overeating, set appropriate food portions or feeding schedules to prevent health issues.

Damage and service:

- Any repairs to mechanical or electronic devices should be carried out only at authorized service centers.
- Do not make modifications to the device yourself, as this may affect its safety and functionality.

Declaration of conformity

The products have been designed in accordance with the safety requirements specified in

Regulation (EU) 2023/988. They meet the relevant technical standards, including those concerning user safety, electromagnetic compatibility, and material durability.

SIMPLIFIED EU DECLARATION OF CONFORMITY

LIBRO TECHNOLOGY CO., LIMITED hereby declares that the type of radio device Petlibro Granary 5L Food Dispenser with Double Bowl is compliant with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following website: <https://files.innpro.pl/petlibro>

Manufacturer's address: Room 616, 6/F, Kam Tim Industrial Building, 135 Connaught Road West, Western District, Hong Kong

Radio frequency: 2400MHz-283.5MHz

Maximum radio frequency power: <20dBm

Environmental protection

Waste electrical and electronic equipment marked in accordance with the European Union directive must not be disposed of together with other municipal waste. It is subject to selective collection and recycling at designated points.

By ensuring its proper disposal, you prevent potential negative consequences for the natural environment and human health. The waste equipment collection system complies with locally applicable environmental protection regulations regarding waste disposal. Detailed information on this can be obtained from the municipal office, waste management facility, or the store where the product was purchased. The product meets the requirements of the so-called New Approach directives of the European Union (EU) concerning issues related to user safety, health protection, and environmental protection, identifying hazards that should be detected and eliminated. This document is a translation of the original user manual created by the manufacturer. Detailed information about the distributor/manufacturer warranty conditions is available on the website <https://serwis.innpro.pl/gwarancja>. The product should be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and responsibility. In the absence of information about necessary periodic maintenance or service actions in the user manual, the user should regularly, at least once a week, assess the physical condition of the product against that of a physically new product. If any deviation is detected or identified, urgent maintenance (cleaning) or service steps should be taken. Failure to properly maintain (clean) and respond upon detecting a deviation may lead to permanent damage to the product. The warranty provider is not responsible for damages resulting from neglect. Importer: INNPRO Robert Błędowski sp. z o.o. ul. Rudzka 65c 44-200 Rybnik, Poland tel. +48 533 234 303 hurt@innpro.pl www.innpro.pl Safety

precautions Before starting to charge, check if the device contacts are clean. Never leave the device unattended while in use and charging. Ensure that you can quickly disconnect the device from the power source in an emergency. Never expose the device to high temperatures. Charge the device in a dry and well-ventilated place away from flammable materials, maintaining a clear space of at least 1m from other objects. Never cover the device while charging. Never use a power supply, charging station, cables, etc., without the manufacturer's recommendation and certification. Take care of your property; the device is equipped with cells that are difficult to extinguish, so equip yourself with a fire blanket.

LI-ION Battery The device is equipped with a LI ION (lithium-ion) battery, which, due to its physical and chemical structure, ages over time and with use. The manufacturer specifies the maximum operating time of the device under laboratory conditions, where optimal working conditions for the device exist, and the battery itself is new and fully charged. Actual operating time may differ from that declared in the offer and this is not a defect of the device but a feature of the product. To maintain maximum battery life, it is not recommended to discharge it below 3.18V or 15% of total capacity. Lower values, such as 2.5V for the cell, permanently damage it and this is not covered by warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50% and its charge level should be checked periodically every two months. Store the battery and device in a dry place, away from sunlight and negative temperatures.

LI-PO Battery The device is equipped with a LI PO (lithium-polymer) battery, which, due to its physical and chemical structure, ages over time and with use. The manufacturer specifies the maximum operating time of the device under laboratory conditions, where optimal working conditions for the device exist, and the battery itself is new and fully charged. Actual operating time may differ from that declared in the offer and this is not a defect of the device but a feature of the product. To maintain maximum battery life, it is not recommended to discharge it below 3.5V or 5% of total capacity. Lower values, such as 3.2V for the cell, permanently damage it and this is not covered by warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50% and its charge level should be checked periodically every two months. Store the battery and device in a dry place, away from sunlight and negative temperatures.

Model: PLAFOO6 ©PETLIBRO All rights reserved
Manufacturer: Shenzhen Libro Technology Co., Ltd. Address: 12/F, Tower B, GALAXY WORLD, Yabao Road, Longgang District, Shenzhen, China Manufactured in China