

For Insta360 X5 Invisible Dive Case

全隐形潜水壳



MADE IN CHINA

English/ 中文 V1.0


For Insta360 X5 Invisible Dive Case

Instructions for Use / 使用说明

Specifications

Maximum Depth: 60m (164ft)
In the Box: 1x For Insta360 X5 Invisible Dive Case, 10x Anti-Fog Inserts, 1x 1/4" Mount Adapter, 1x 1/4" Thumb Screw, 1x Protective Pouch, 1x Thumb Screw Wrench and 1x Lens Cloth.
Weight: 155g (4.7oz)

Names of Parts

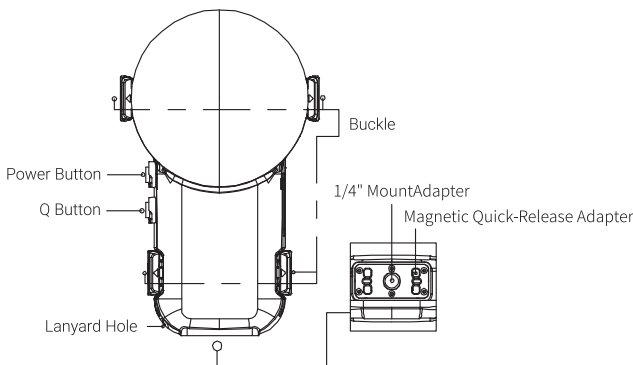

Before Use

- Before using the Dive Case, please update your camera's firmware to the latest version.
- Please read this document carefully and prepare the Dive Case properly before use. Failure to observe these instructions may cause damage to the camera, battery, microSD card, or other parts, for which Insta360 won't assume responsibility. Please use this product responsibly to prevent accidental damage.
- Please note, incorrect maintenance may affect product performance. Each time before placing the camera in the Dive Case, it's suggested to close and latch the Dive Case without the camera inserted and immerse it in water (Note: the dive case without camera inserted should not be submerged in water more than 98.4ft, otherwise it may be damaged.) to check for leaks as described below.
 - Securely close and latch the Dive Case and then slowly immerse it in water, stopping if air is expelled from inside the Dive Case.
 - Immerse the Dive Case and operate the buttons underwater for 2-3 minutes, checking for any air bubbles.
 - Take the Dive Case out of the water and dry the outside thoroughly with a soft, dry cloth, then check for any water inside.
- When sealing the Dive Case, be sure that the parts of the Dive Case in contact with its rubber seal are free of any foreign objects and that the rubber seal has not moved off the rim.
- Never open or close the Dive Case in a location with a lot of sand, dirt, dust, or other small particles. Otherwise, the performance could be affected and/or the camera may be damaged.
- To ensure the Dive Case is securely sealed, check the rubber seal is not protruding and that no foreign matter is stuck in the Dive Case once closed.


1

⑦ The Dive Case is not shock-resistant. Applying strong vibrations, shocks, or pressure to the product may result in damage, failure or reduced waterproofing performance. While using Insta360 X5 in the Dive Case, the maximum height from which you can dive into water is 2 meters (6.6ft). The Dive Case is protected against drops onto solid ground from a maximum height of 1 meter (3.3ft).
⑧ Glue may be visible inside the outer edge of the Dive Case lenses. This is normal and will not affect waterproofing performance.

How to Use


① Open the Case

Lift the buckle as shown below (①), then pull it down to remove from the hook (②). Repeat with the other 3 buckles, then open the Dive Case.

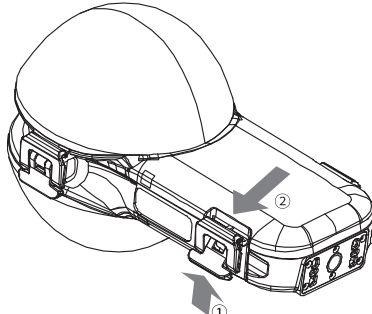

② Attach the Anti-Fog Inserts

Ensure that the anti-fog inserts are inserted as shown below.

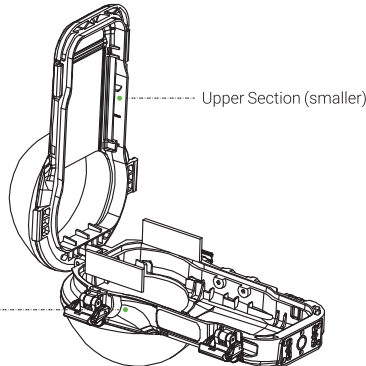

Note: When using third-party anti-fog inserts, ensure that the size is within 37.1x16.0x1.2 mm. If the insert is too large, it will cause water leakage and potentially damage the camera.


2

免责声明

请仔细阅读本声明，一旦使用本产品，即视为对本声明的全部认可和接受。使用本产品，就意味着您认可并同意，您将对本产品的行为和可能产生的后果负全部责任。您承诺仅会出于正当合法的目的使用本产品。每次使用前，请仔细检查配件，若出现破损、变形，请勿使用。

10

③ Insert the Camera

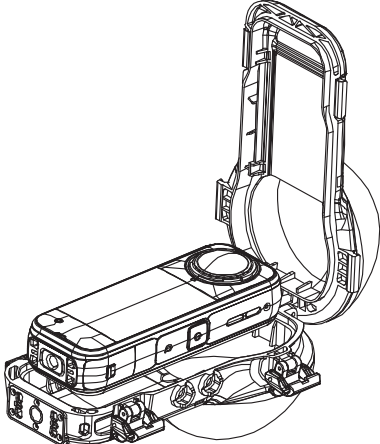


Note:

- Before use, please update your camera's firmware to the latest version.
- Before inserting the camera, press and hold the Q Button to enter Dive Case Mode. Alternatively, swipe down on the camera screen, enter the shortcut menu, and tap the icon to enter Dive Case Mode. Once in Dive Case Mode, press the Power Button to switch shooting modes and the Q Button to start or stop shooting. For more, please refer to your camera's User Manual.
- Before inserting the camera, be sure that the camera lens and the Dive Case interior are clean and free of dirt or dust.
- When inserting the camera, be sure to remove any pre-installed lens guards and take care not to scratch the lens.

④ Close the Case

To close the Dive Case, latch the buckle onto the case's hook and firmly push down until it clicks.

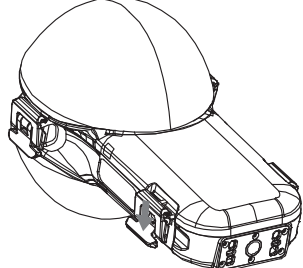


3

Note:

- Ensure the Dive Case is firmly closed. Check that the parts of the Dive Case in contact with its rubber seal are free of dirt or dust.
- For best results, keep the Dive Case lenses clean.

⑤ Diving housing adapter

When connecting the diving housing to other accessories, a 1/4-inch interface and a quick-release interface are provided, allowing users to select the appropriate connection method based on operational requirements.

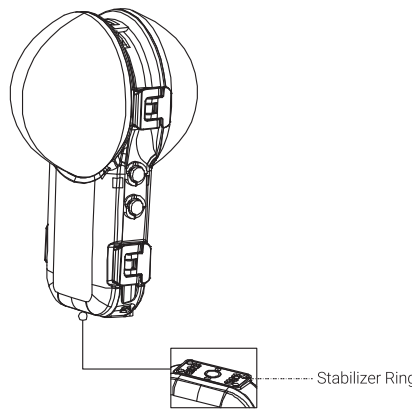

⑥ Stitching

For best results when shooting underwater, it's recommended to keep the Dive Case's lenses perpendicular to the surface of the water (so neither lens is facing upwards). After shooting, open the files in the Insta360 app or Studio and they will be automatically selected to stitch for Dive Case.


Maintenance

- Do not open the Dive Case while it is wet.
- After using the product in seawater, take out X3 and soak the Dive Case in fresh water for at least 60 minutes (ensure the Dive Case is firmly closed beforehand). If the Dive Case is not rinsed after use in seawater, residual salt may crystallize in gaps. These salt crystals will not dissolve in water and can lift the rubber seal and cause water leakage. After soaking the Dive Case in fresh water, rinse it under gently flowing tap water. Never apply a strong water stream from a single direction, as it may cause water leakage.
- Ensure that the dive case is firmly closed before washing. After washing, wipe away any water droplets remaining on the surface with a soft, dry cloth and leave to dry. Ensure there is no sand on the Dive Case before drying as sand may scratch the product surface when wiped with a cloth. Do not dry with a hair dryer or any other heat source.

4

⑥ 转接口

当将潜水壳转接至其他配件时，配备1/4英寸接口和快拆接口，用户可根据操作需求选择合适的连接方式。

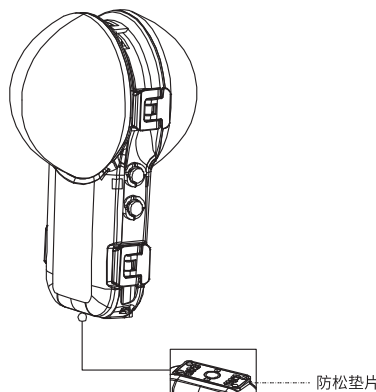

⑥ 拼接


为获得更好画质，水下拍摄时，建议保持潜水壳的镜头与水面垂直。使用潜水壳完成拍摄，将拍摄素材导入 Insta360 APP 或者 Insta360 Studio 后，拍摄素材可自动进行潜水壳拼接。

维护

- 潜水壳潮湿时，请勿打开。
- 在海水环境中使用产品后，请先打开潜水壳取出相机，然后关闭潜水壳将其放入清水（淡水）中浸泡至少 60 分钟以上。如果产品在海水中使用后没有冲洗，残留的盐分会在缝隙中结晶，并形成不溶于水的水晶体。这些盐晶会顶起密封胶，导致产品进水。因此，请务必将产品在淡水中浸泡，从淡水中取出产品后，在柔和流动的自来水中进行冲洗。不要从单一方向施加强力的水流，因为这可能会导致产品进水。
- 在用水清洗产品之前，请确保潜水壳牢固关闭。清洗产品后，用干毛巾擦去产品表面上残留的水滴。请勿使用烘干机或炉子进行烘干。
- 用布擦拭时，粘附在产品上的沙子可能会刮伤产品表面。
- 请勿将产品存放在炎热潮湿的环境中。特别地，请勿将产品留在汽车内。
- 请勿用肥皂水、中性清洁剂或酒精清洗产品。这可能会降低防水性能。
- 请勿使用有机溶剂（如稀释剂、酒精或汽油）进行清洁。
- 请将产品存放在干燥、通风良好的场所。

9

⑥ 置入相机

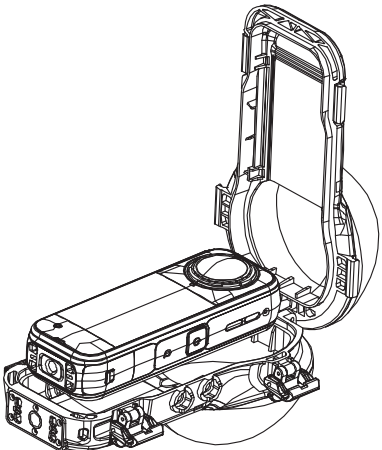


注意！

- 初次使用前，请将相机固件升级至最新版本。
- 置入相机前，长按相机侧面 Q 键进入“潜水壳模式”或者下滑相机屏幕，进入快捷菜单，点击图标 将相机切换至“潜水壳模式”。此时，可单击潜水壳侧边按键 1（对应相机电源键）切换拍摄模式。单击潜水壳侧边按键 2（对应相机 Q 键）开启/结束拍摄，按键详细教程请见相机新手引导。
- 置入相机前，请确保相机镜头和潜水壳内壁干净、无脏污。
- 置入相机时，相机不能安装有镜头保护膜，请注意不要划伤镜头。

⑥ 关闭潜水壳

关闭潜水壳，分别将潜水壳两侧的挂构锁合至挂耳，然后按下锁栓，直至发出咔嚓声。

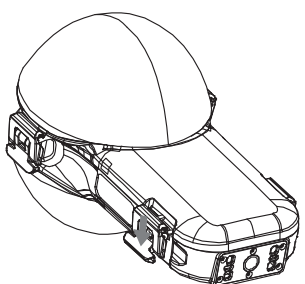

注意！

- 仔细检查潜水壳是否牢固关闭，确保密封胶及其接触表面没有污垢或灰尘。
- 为了获得最佳拍摄效果，使用时请保持潜水壳镜片的干净。

8

- Do not store the Dive Case in a hot or humid environment. For example, do not leave it inside a hot car.
- Do not wash the Dive Case with soap, neutral detergent, or alcohol cleaning products. This may degrade the waterproofing performance.
- Store the product in a dry, well-ventilated location.

After-Sales Service

The warranty period of the attached product is 1 year from the original retail purchase.

Disclaimer

Please read this Disclaimer carefully. Using this product means that you acknowledge and accept the terms of this disclaimer. By using this product, you hereby acknowledge and agree that you are solely responsible for your own conduct when using this product and any consequences thereof. damage or irregularity, stop using it immediately.


5

规格

最大防水深度：60 米

包含物品： For Insta360 X5 全隐形潜水壳、防雾片、1/4 螺丝转接头、1/4 螺丝固定环、扳手、便携收纳袋、擦镜布、使用说明 & 保修（本文档）
重量：155 克

部件名称

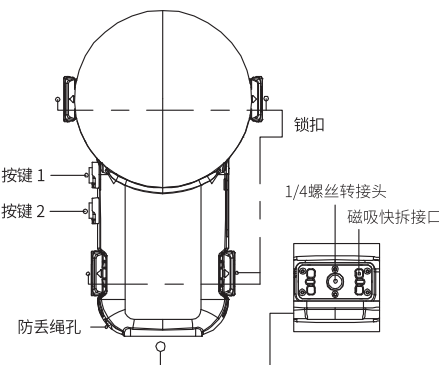

使用前


- 初次使用前，请将相机固件升级至最新版本。
- 请仔细阅读本文档，并确保在使用前进行准备和维护。如果不遵循使用指南进行操作，可能会导致相机、电池、记录内容等损失，本公司不承担任何责任。您有责任以谨慎合理的方式使用本产品。
- 由于维护方法不当可能会导致产品性能受影响，建议在每次使用前，请先将潜水壳（空壳）锁好，然后浸入水中（潜水壳空壳下水深度需小于 30 米，否则可能存在损坏风险）检查是否漏水，具体如下：
 - 将潜水壳锁好，然后慢慢浸入水中，如果有空气从潜水壳内排出则停止操作。
 - 将潜水壳浸泡在水中并操作按键 2-3 分钟，检查是否有气泡出现。
 - 将潜水壳从水中取出，用柔软的干布擦拭干净，然后打开潜水壳并仔细检查内部是否有水进入。
- 密封潜水壳前，请确保密封胶及其接触表面上没有异物（污垢、灰尘、沙子、毛发、棉绒、液体等）。确保密封胶没有扭曲、错位、划痕、裂缝等。
- 切勿在有大量沙子、污垢、灰尘等的场所打开和关闭保护壳。若不遵循此注意事项可能会导致异物粘附在密封胶上，从而降低产品性能，损坏相机。
- 为保证潜水壳密封性，关闭外壳后，请再次确认密封胶未被挤出或无异物卡在潜水壳内。
- 本产品不耐冲击。对产品施加剧烈的震动、冲击或压力可能会导致损坏或降低潜水壳防水性能。使用时，跳水高度请限制在 2 米内，跌落高度（水泥地板）1 米内。
- 潜水壳镜片与壳体固定处如有气泡状残留胶水，属于正常现象，不影响防水性能。

6

使用


① 打开潜水壳

按图示向上推动潜水壳锁栓（①），取下挂扣（②）。同理，打开其他 3 个锁扣，即可打开潜水壳。

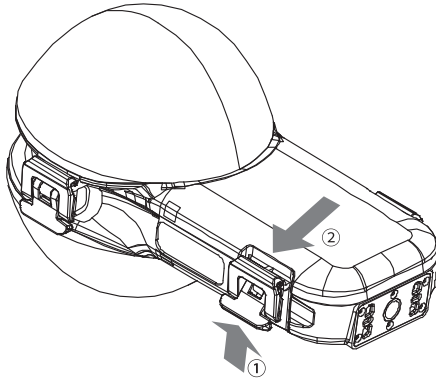

② 放置防雾片

如图，将防雾片放置在潜水壳底盖的防雾片卡槽处。

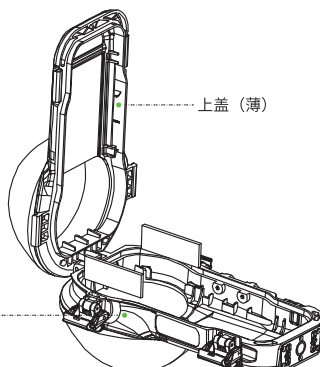

注意：如购买第三方防雾片，请确保防雾片尺寸小于或等于 37.1*16*1.2 mm。防雾片尺寸过大导致潜水壳密封不良，损毁相机。

7