
Κάλυμμα φακού Puluz για Insta360 X3 (Μαύρο)

 
Puluz · EAN 5905156106604

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.


User Instructions

Sticky Lens Covers for Insta360 X3


1. Package Contents

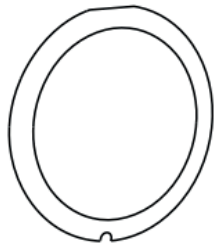


Sticky Lens Cover × 2

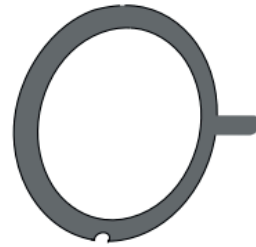 

Double-sided Tape × 4

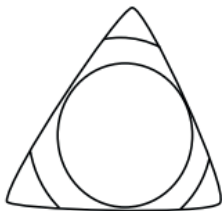

Triangle Pry Tool × 1

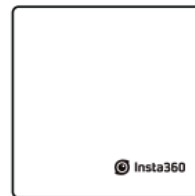


Lens Cloth × 1

2. Installation




① To view the installation instructions, please scan the QR code.



② It is important to distinguish between the front and back for proper use of the lens cover. The thinner cover should be placed on the camera screen side, and the thicker one on the opposite side.

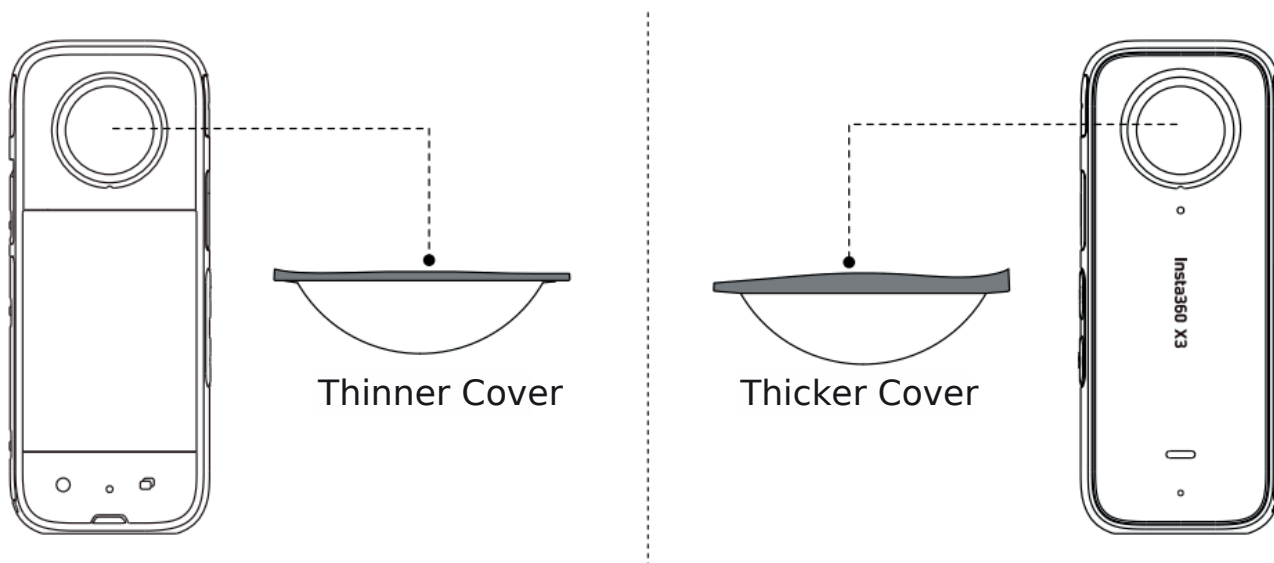

3 Carefully apply the lens cover (with the included double-sided tape) to the X3 lens. Ensure that the cutout on the edge of the lens cover is properly aligned with the edge of the lens. Hold for 15 seconds to ensure a secure adhesion. Failure to do so may negatively affect the quality of recordings or waterproof properties. Repeat this process for both sides.

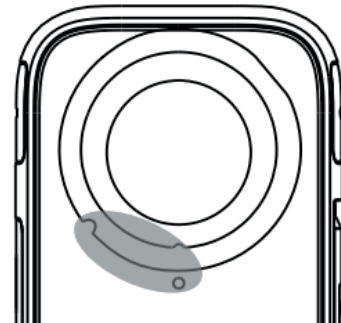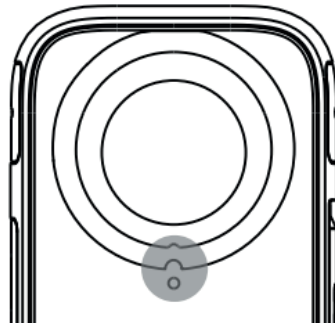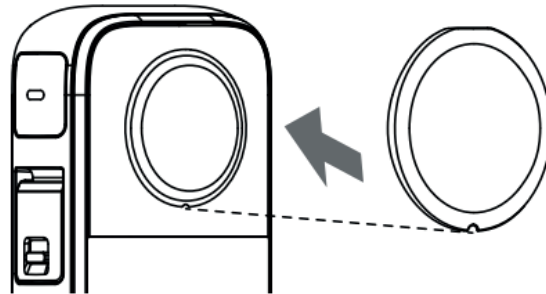

Notes

1) Before use, ensure that the camera lens is clean and dry.
Always install the lens cover in a clean and dry environment.

Check for dust or other contaminants, as they may affect

the quality of
recordings.

2) Before installation, ensure that the thin cover is mounted
on the side with the camera screen, and the thick cover on the
opposite side.

3) If you are removing the lens cover from the X3, apply a
new double-sided tape before reattaching.

4) The Sticky Lens Cover is splash-resistant and not intended for underwater recordings. If you plan to use
the X3 underwater, remove the Sticky Lens Cover and use the Dive Case.

5) Use the included triangle pry tool to remove the lens covers. Be careful not to scratch
the camera lenses while

removing the covers.

6) To replace the double-sided tapes, first remove the worn tapes and ensure that the inside of the lens
cover is clean and free of

residue. Repeat the installation process, ensuring that the cutout on

the edge of the lens cover is
properly matched.


Aligned with the notch on the edge of the lens. Apply and then
remove

the protective sticker.

After-Sales Service

The warranty period for the included product is 3 months from the date of original retail purchase. Warranty services may vary depending on the applicable laws in your state or jurisdiction.

*** Disclaimer**

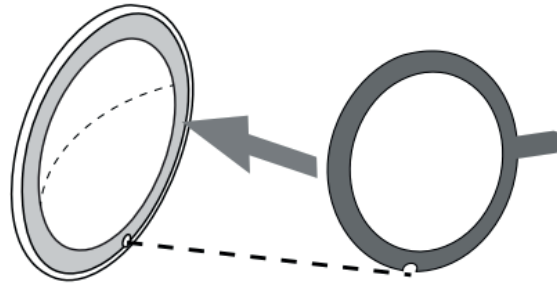

Please read this disclaimer carefully.
Using this product means that you
accept the terms of this disclaimer.

By using this product, you confirm and agree that you are solely responsible for your actions while using the product and any consequences thereof. You agree to use this product only in a proper and lawful manner. You understand and agree that Arashi Vision Inc. (hereinafter "Insta360") is not liable for any misuse, consequences, damages, injuries,

penalties, or other legal liabilities arising
directly or indirectly from the use of this
product.

Before each use, ensure that your product is functioning properly. In case of damage or irregularities, immediately cease its

use.

This document is a translation of the original user manual created by the manufacturer.

Detailed information about the warranty conditions from the distributor/manufacturer is available on the website <https://serwis.innpro.pl/>

warranty

The product should be regularly maintained (cleaned) at your own expense or through specialized service points. In the absence of information about necessary maintenance actions or service in the user manual, the physical condition of the product should be assessed regularly, at least once a week, against that of a physically new product. If any deviation is detected or identified, urgent maintenance (cleaning) or service steps should be taken. Failure to properly maintain (clean) and respond upon detection of a deviation may lead to permanent damage to the product. The warranty does not cover damages resulting from neglect.

Warnings and Safety Information

All information regarding the use of the product can be found in the user manual. Before you start using it, familiarize yourself with its content and follow the instructions provided.

Before use, also review the following information:

Usage Warnings

Risk of Equipment Damage:

Use only accessories compatible with your photographic equipment, as recommended by the manufacturer. Do not use damaged cables, chargers, or connectors – they may cause short circuits or permanent damage to the device. Store delicate accessories in appropriate protective cases to avoid scratches or cracks. Do not expose accessories to impacts, shocks, falls, and other factors that may contribute to their damage.

Risk to Children:

Photographic accessories are not intended for use by children. Keep all accessories out of reach of children to prevent accidental swallowing of small parts, electric shock, or equipment damage.

Risk of Electric Shock:

When using chargers or power cables, always connect the device to the appropriate power source, as per the user manual. Never handle cables or electrical devices with wet hands.

Risk in the Field:

When using tripods, mounts, or waterproof cases in challenging conditions (e.g., in mountainous terrain, on water, or in the rain), ensure that all components are properly mounted and secured against accidental disconnection.

Wireless Connectivity

Data Protection:

If accessories offer wireless connectivity, use only software provided by the manufacturer. Regularly update device software to protect against potential threats. Set strong passwords for user accounts and controlling applications and, if possible, enable two-factor authentication.

Access Management:

Limit access to devices to trusted users only. Regularly check the list of paired devices and remove those that should not have access.

Information on Proper Use

Storage and Transport:

Store accessories in appropriate cases or covers that protect them from dust, moisture, and mechanical damage. When transporting equipment, secure small parts such as mounts, connectors, or remotes to avoid losing them.

-
-
-
-
-
-
-
-
-
-

Using in Challenging Conditions:

Photographic accessories, such as covers or waterproof cases, should be used according to their specifications and the user manual. Avoid exposing electrical devices, such as video transmitters, chargers, or remotes, to direct contact with water or moisture unless the manufacturer indicates that they are waterproof.

Compatibility with Devices:

Importer:

- INNPRO Robert Błędowski sp. z o.o. Rudzka 65c 44-200 Rybnik, Poland tel. +48 533 234 303 hurt@innpro.pl

•

www.innpro.pl

- Manufacturer:

•

Shenzhen PULUZ Technology Limited Bagua 1st Road No.614 Building 8/F Futian District Shenzhen, China support@puluz.com

•

• •

•

•

• •

•

•

•



•



Representative in the EU:



INNPRO Robert Błędowski sp. z o.o.
Rudzka 65c
44-200 Rybnik, Poland
tel. +48 533 234 303
hurt@innpro.pl

www.innpro.pl

Manufacturer:

Shenzhen PULUZ Technology Limited
Bagua 1st Road No.614 Building 8/F
Futian District Shenzhen, China
support@puluz.com

Representative in the EU:

INNPRO Robert Błędowski sp. z o. o.
Rudzka 65C
44-200 Rybnik, Poland
zgloszenia@innpro.pl