 


User Guide

F19-L Automatic Pet Feeder

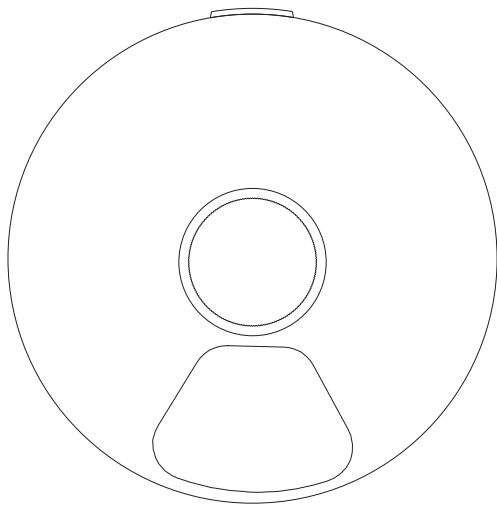

Please read all directions before using the product and retain this guide for reference.

Use Safety Guide

① Device placement

1. Pet feeder should be placed on a level surface. Do not place or store an appliance where it can fall or be pulled.
2. For indoor household use only and away from direct sunlight or wet areas.
3. Do not place the feeder under temperature of 0 °C.
4. Do not place any foreign object in the pet feeder.
5. Make sure there is no objects on and around the food bowl to prevent pets from eating normally.

⚠ Important Safety Information

1. Replace with new batteries if necessary to ensure stable operation of the device.
2. This product is only applicable to cats and small dogs.
3. Do not allow small children to play with, in or around pet feeder.
4. The filling in the ice pack is not edible. If it is damaged, do not use it.
5. Do not immerse control board in water. The device should not be submerged in water at any time, as this may damage electronic components.
6. Do not disassemble the pet feeder other than components.
7. Do not place or store an appliance into a tub or sink.
8. The feeder only supports charging with 3pcs AA Batteries.
9. Please disconnect the power supply when not in use.
10. Do not allow pets to chew on or swallow any parts.
11. Do not use the pet feeder for any purpose other than feeding pets.

Components

Top Lid

Locked Lid

First Meal Cover

Food Bowl

Display Panel


Hexagonal Bracket

Control Board

Ice Packs

Base Unit

Battery Slot

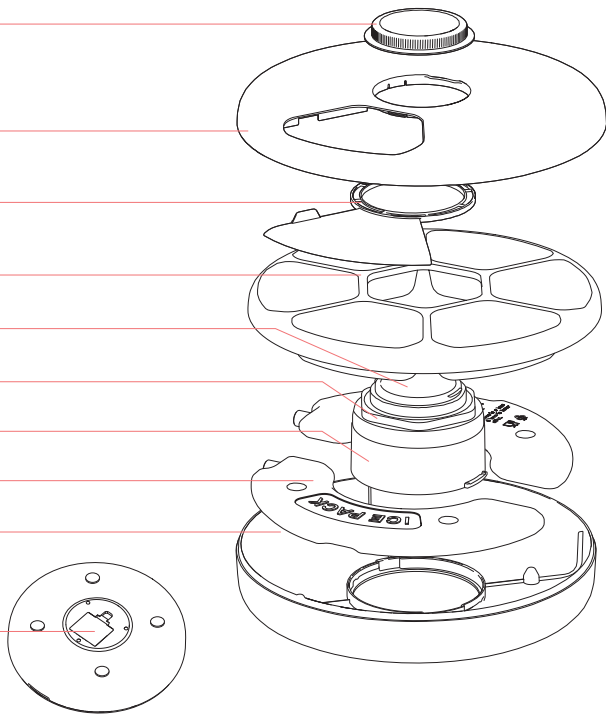

Product Introduction

Product Name	6 Meal Pet Feeder
Product Model	F19-L
Dimension	310mm*310mm*85mm
Color Box Size	L347*W114*H334mm
Material	Food Grade ABS,HDPE(Ice Pack)
Net Weight	1kg
Food Appliance	All Types Pet Food
Pets Appliance	Small dogs/cats
Capacity	200ml*6 (90-100g per tray)
Power Supply	3pcs AA Batteries

Installation and Setup


Install 3pcs AA batteries at the device bottom.

Note: Please make sure the 3pcs AA batteries are new and same specifications. Different battery specs and lifelong will effect the device working normally.

Open the lid

① Lay the feeder flat and turn it clockwise to remove the locked lid.

② Lift the entire top lid upwards.

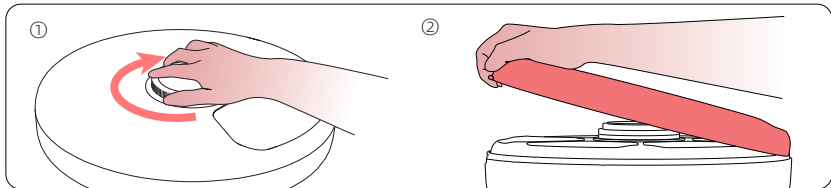

Place the Ice Pack

Take out the ice packs, place the ice packs horizontally in the refrigerator freezer (-18 °C) and freeze it for at least 6 hours, then take it out for use.



*Note :

Do not freeze the ice packs vertically, which will cause the ice pack bulge.


No need ice pack for dry pet food.

The fresh-keeping effect of ice packs are affected by environmental factors.

Fill up Pet Food

① Place the food bowl into the base unit, and then fill up with pet food in turn.


② Cover the top lid and lock it.

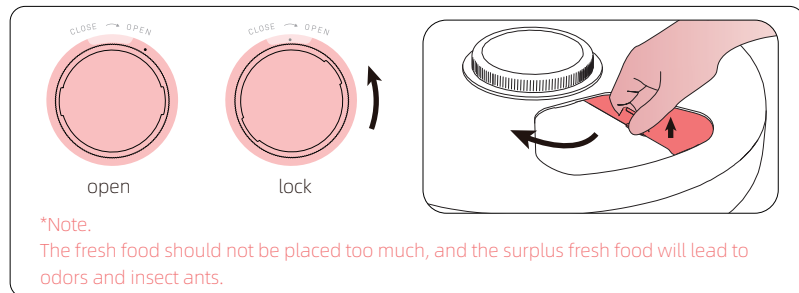

*Note.

The fresh food should not be placed too much, and the surplus fresh food will lead to odors and insect ants.

Unlock the Display

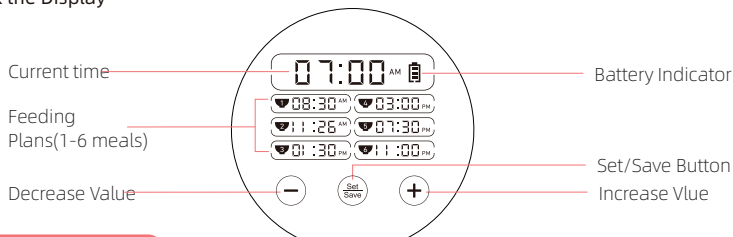


Device Setting

The product operates on a 24-hour cycle. For example, if a feeding schedule is set for one meal, the product will rotate one compartment at the specified time each day. Similarly, the set feeding schedule will repeat daily.

Current Time Setting

- ① Press and hold the "+" and "-" buttons at the same time for 3s to switch between 24-hour and 12-hour systems.
- ② Press the "Set/Save" button to confirm the current time frame is flashing, long press the "Set/Save" button to enter the clock setting.
- ③ Press "+" / "-" to adjust the clock value, press "Set/Save" to save and enter the minute setting.
- ④ Press "+" / "-" to adjust the minute value, long press "Set/Save" to save the current time.

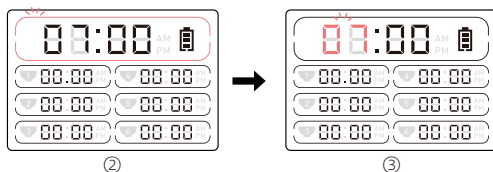


Program Meal Time

- ① Short press the "  " button and press the "  " or "  " to choose feeding meals.
- ② Press and hold the "  " button till the feeding meal frame is flashing, then press "  " or "  " to adjust the clock and minute and press "  " to save.
- ③ The settings for the next 2-6 meals are the same as the first meal.

Note:

*If there is no need for six feeding plans, long press the "  " button until you hear a "Di" sound to save the set feeding plan.

*This device can set up to six feeding plans.

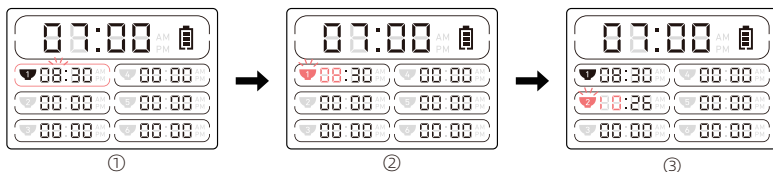

Instant Feeding

Press and hold press "  " button for 3 seconds to do the manually feeding once.

Cancel Feeding schedule

If the feeding time is set to "00:00" or "AM12:00", the feeding time will not be feed.



Restore Factory Settings

Press "  " and "  " at same time for 10 seconds, until you hear the twice sound "Di" means all settings have been cleared.

Cleaning & Maintenance

Clean product interior and food bowl

- ① Take all batteries out before cleaning.
- ② Rotate the protective cover lock clockwise, and take out the top cover and food tray in turn.
- ③ Rotate the control board clockwise, and take it out.
- ④ All parts are washable except the control board. Do not use metal stuff for cleaning to avoid damaging the product surface.

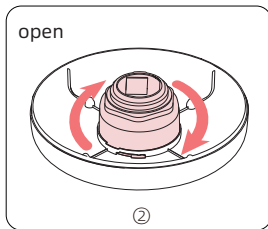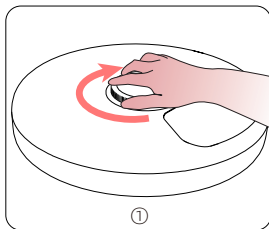

*Note:

After feeding fresh food or canned food, suggest to wash it immediately every day

Clean the Main Board

Take out the main board, wipe the outside with soft wet cloth.


*Note:

The main board is not waterproof and can not be washed.




Install the Control Board

- ①Align the main board buckle with the bottom housing installation slot, hold and rotate it counterclockwise to hear a “click” sound.
- ②Check whether the main board is installed in place

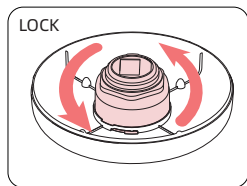

①

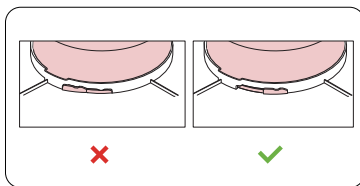

②

*Note:

If the control board is not installed properly, the food bowl will be misaligned and then the feeder can't normal use.

Change Batteries

Install 3pcs AA batteries at the device bottom.

Note: Please make sure the 3pcs AA batteries are new and same specifications. Different battery specs and lifelong will effect the device working normally.

	On	Full Charged
	Flash	Low Battery

FAQ

Fault Symptom	Cause Analysis	How to solve it
Display Off	Out of charge	Change new batteries
	Device abnormal	Contact after-sales
Misaligned Food Bowl	Main board installed improperly	Check if the main board installed properly
	Device abnormal	Contact after-sales
E1: -- Display	Photoelectric switch abnormal	Contact after-sales
E4: -- Display	Motor abnormal	Contact after-sales
E5: LP Display	Low battery	Change new batteries