

Σιντριβάνι νερού για κατοικίδια Rojeco 2,5L (μαύρο)

Rojeco · EAN 6975116293278

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

Intelligent Fountain/Drinker

for Dogs and Cats Rojeco 2.5L

User Manual

Product Description

Spout

Water Tray

Inlet Tube

Filter

Filter Tray

Outlet Tube

Foam Filter

Pump

Power Supply

Power Cord

Water Tank

Base

How to Use

1. Soak the filter in a clean bowl for 5-10 minutes, then rinse it thoroughly with tap water.

Note:

1) The filter must be completely soaked before turning on the fountain; otherwise, water may not flow smoothly through the filter and cause spillage. 2) Do not submerge the filter in the water tank of the fountain if the surface is dusty. 5-10min

2. Insert the foam filter into the groove of the water pump. The pump should be properly placed in the base of the tank. Note: Pay attention to align the recessed part of the pump with the protruding part of the water tank; otherwise, the pump may not be installed correctly. 3. Install the outlet tube on the pump. Add water to the tank. Note: Fill the tank with water, ensuring that the water level is between the MAX and MIN markings. 4. Install the water tray, passing the water cord through the hole. 5. Install the soaked filter. 6. Attach the inlet tube and spout to the water tray. Then, install the water tray in the device. 7.

Connect the power supply. 8. Mount the water tank on the base of the body, aligning the protruding hole of the tank with the base. Note: Do not submerge or soak the base of the body in water. If the base gets wet, wipe the outer surface dry before further use.

Bottom of the Tank

Base of the Body

How to Clean the Pump

1. Remove the foam filter, pump cover, and rotor cover in sequence. (Note: The foam filter significantly affects the water pumping efficiency, so it should be cleaned and replaced regularly during pump cleaning). 2. Remove the rotor using the brush handle. 3. Using a brush, clean the parts with water.

How to Clean the Inlet Tube and Spout

1. Pull out the fishtail spout. 2. Pry the inlet tube from the narrow side and remove it along with the fish head spout. 3. Using a brush, clean the parts with water.

Maintenance Instructions

1. The filter and foam filter should be replaced at least once every 2-4 weeks. 2. The pump and fountain should be cleaned at least once a week.

Specification

Model RYSJ-13, RYSJ-09

Adapter Input 100-240V 50/60Hz

Adapter Output 5V/1A

Capacity 2.5L/84oz

Material ABS+PC

Dimensions 256*167*128mm/10*6.5*5in

Net Weight 880g

Troubleshooting

Problem Solution

It is caused by the pet's saliva. A larger number of pets using the fountain will increase the amount of saliva and contaminants in the water, so the fountain and pump will require more frequent cleaning. Black residue in the water tank is loose activated carbon from the filter and is completely harmless to the pet. Carbon is made from organic coconut shell husks. Rinse the filter in cold water before placing it in the fountain to prevent this. 1) Disassemble and clean the pump. 2) Fill the fountain with water, ensuring that the water level is between the MAX and MIN markings.

Increased Noise Level 3) Check if the pump is in its place. / Stops Working 4) Ensure that the power is connected and that the water tank, base, and pump are properly installed. /

Intermittent Flow 5) If the pump has been exposed to low water levels for an extended period, the pump motor may have overheated, and the pump may need to be replaced. 1) The filter may not be fully soaked. Soak the filter in water for 5 minutes before first use. 2) Check if the filter is clogged, clean and replace filters on time. 3) Clean all parts of the fountain in water before reassembling the fountain.

Fountain Leaks 4) First, check for visible cracks in the bowl. If there are no visible cracks in the bowl, place the fountain on a towel to see where the leak is. 5) Sometimes water around the fountain is caused by pets drinking. Some pets tend to spill.

Environmental Protection

Waste electrical and electronic equipment marked according to the European Union directive must not be placed together with other municipal waste. It is subject to selective collection and recycling at designated points. By ensuring its proper disposal, you prevent potential negative consequences for the natural environment and human health.

The waste equipment collection system complies with locally applicable environmental protection regulations regarding waste disposal. Detailed information on this topic can be obtained from the municipal office, cleaning facility, or the store where the product was purchased. The product meets the requirements of the so-called New Approach directives of the European Union (EU) concerning issues related to user safety, health protection, and environmental protection, specifying hazards that should be detected and eliminated. This document is a translation of the original user manual created by the manufacturer. Detailed information about the distributor/manufacturer warranty conditions is available on the website <https://serwis.innpro.pl/gwarancja>.

The product should be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and scope. In the absence of information about necessary periodic or service maintenance actions in the user manual, the user should regularly, at least once a week, assess the difference in the physical condition of the product from that of a physically new product. If any difference is detected or identified, urgent maintenance (cleaning) or service steps should be taken. Failure to properly maintain (clean) and respond upon detecting a state of difference may lead to permanent damage to the product. The guarantor is not responsible for damages resulting from negligence.