 


User Guide

Automatic Pet Feeder

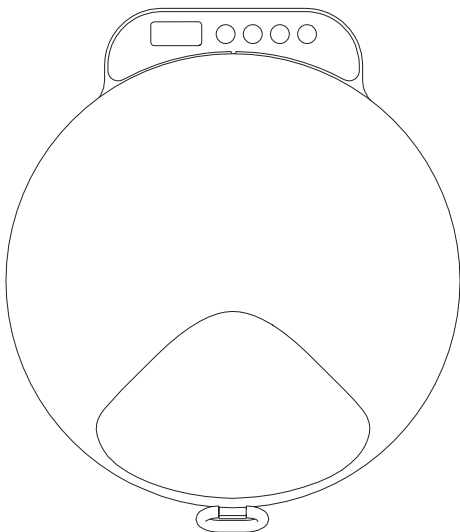

Please read all directions before using the product and retain this guide for reference.

Use Safety Guide

① Device placement

1. Pet feeder should be placed on a level surface. Do not place or store an appliance where it can fall or be pulled.
2. For indoor household use only and away from direct sunlight or wet areas.
3. Do not place the feeder in temperatures below 0°C or above 70°C.
4. Do not place any foreign objects in the pet feeder.
5. Make sure there are no objects on and around the food bowl to prevent pets from eating normally.


⚠ Important Safety Information

1. This product is only applicable to cats and small dogs.
2. Do not allow small children to play with, in or around pet feeder.
3. The filling in the ice pack is not edible. If it is damaged, do not use it.
4. Do not immerse control board in water. The device should not be submerged in water at any time, as this may damage electronic components.
5. Do not disassemble the pet feeder other than components.
- 6 Do not place or store an appliance into a tub or sink.
7. The feeder only supports charging with 4pcs AA Batteries.
8. Do not allow pets to chew on or swallow any parts.
9. Do not use the pet feeder for any purpose other than feeding pets.


Components

Locked Lid

First Meal Cover

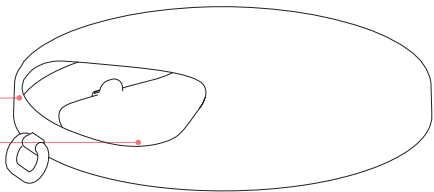


Food Bowl

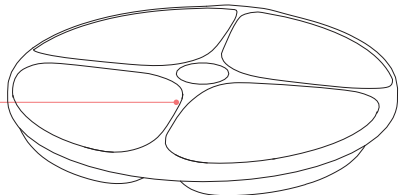


LCD Panel

Ice Packs

Battery Slot

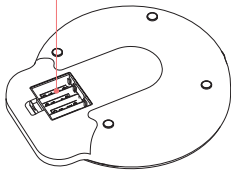

Main Board

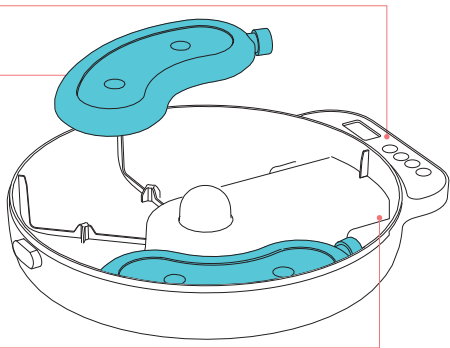

Product Introduction

Product Name	4 Meal Pet Feeder
Product Model	F26-L
Dimension	294mm*266mm*78mm
Material	ABS,PP, HDPE (Ice Pack)
Net Weight	1.05kg
Food Appliance	All Types Pet Food
Pets Appliance	Small dogs/cats
Capacity	240ml*4 (100-120g per tray)
Power Supply	4pcs AA Batteries


Installation and Setup

Install 4pcs AA batteries at the device bottom.

**Note: Please make sure the 4pcs AA batteries are new and same specifications. Different battery specs and lifelongs will effect the device working normally.*


Open the Lid

Place the feeder flat, lift the entire top lid by pushing up the circular lock.

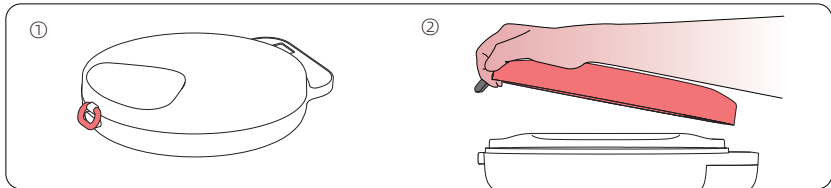

Place the Ice Pack

Take out the ice packs, place the ice packs horizontally in the refrigerator freezer (- 18 °C) and freeze it for at least 6 hours, then take it out for use.

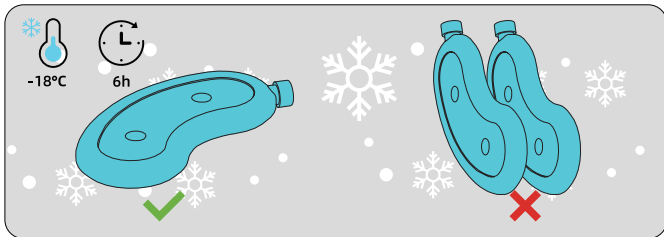

*Note :

Do not freeze the ice packs vertically, which will cause the ice pack bulge.

No need ice pack for dry pet food.


The fresh-keeping effect of ice packs are affected by environmental factors.

Place Pet Food


Place the food tray inside the feeder. Then, sequentially place pet food into the compartments of the food tray.
(Rotate the food tray counterclockwise.)

*Note.

The fresh food should not be placed too much, and the surplus fresh food will lead to odors and insect ants.

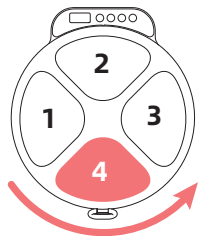

Display Pannel

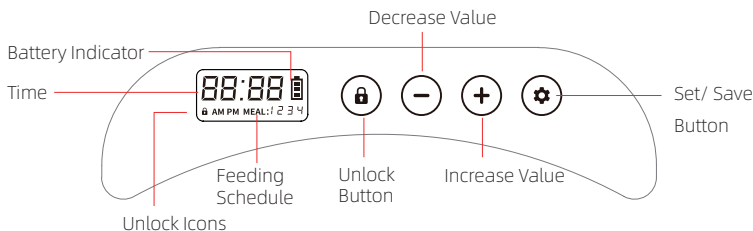

Product Usage

Set the Time Format

- ① Press and hold the "🔒" button until you hear a "beep" sound to unlock the panel.
- ② Press and hold the "+" and "-" buttons simultaneously for 3 seconds to switch between 24-hour and 12-hour formats.

Set the Clock

- ① In the unlocked state, press the "⚙️" button, then press "+/-" to adjust the hour value, and press the "⚙️" button to save.
- ② Press the "+/-" buttons to adjust the minutes, then press the "⚙️" button to save.



①



②

Setting the Feeding Schedule

- ① After setting the clock, press "⚙️" button to enter the first meal feeding schedule setting. Press the "+" and "-" buttons to set the hours, and set the minutes in the same way. Press the "⚙️" button to save the feeding schedule.
- ② To set the second meal, follow the same steps as for the first meal. Repeat for meals 2-4 if needed.
- ③ If no additional feeding plans are needed, press and hold the "⚙️" button until you hear a "beep" sound to save the feeding plan that has been set.



①



②

Note: This device can set up to four feeding schedules.

Modify The Feeding Schedule

If you need to modify the feeding time for a specific meal, unlock the panel and then press "⚙️" button to select the feeding schedule, press the "+" or "-" buttons to adjust, and press and hold the "⚙️" button to save.

Manual Feeding

Unlock the panel, press and hold press "+" button for 3 seconds to do the manually feeding once.

Cancel Feeding schedule

If the feeding time is set to "00:00" or "AM12:00", the feeding time will not be feed.

Turn on/off the feeding beep sound

Unlock the panel, press "⊛" and "⊕" at the same time for 3 seconds to turn on/off the feeding beep sound.

Restore Factory Settings

Unlock the panel, press "⊛" and "⊖" at same time for 5 seconds, until you hear the sound "beep" means all settings have been cleared.

Cleaning & Maintenance

Clean product interior and food bowl

- ① Remove the batteries before cleaning.
- ② Take out the top cover and the food tray in sequence.
- ③ Rinse all parts except for the main unit with clean water. Do not use metal scouring pads or abrasive cleaning materials, as they may damage the product's surface.



*Note:


After feeding fresh food or canned food, suggest to wash it immediately every day.

Clean the Main Unit

Wipe the exterior of the main unit with a soft, damp cloth, do not wash it with water.

*Note :

The main board is not waterproof and can not be washed.

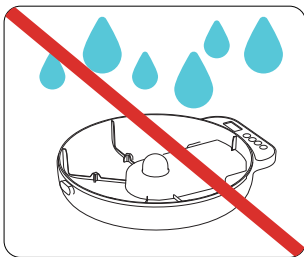

Change Batteries

Install 4pcs AA batteries at the device bottom.

Note: Please make sure the 4pcs AA batteries are new and same specifications. Different battery specs and lifelong will effect the device working normally.

FAQ

Fault Symptom	Cause Analysis	How to solve it
Display Off	Out of charge	Change new batteries
E1: -- Display	Pet's foot is stuck	Manually feeding one portion
E4: -- Display	Device abnormal	Contact after-sales
E5: LP Display	Low battery	Change new batteries

Warnings and safety information

All information regarding the use of the product can be found in the user manual. Before using it, read its contents and follow the instructions contained therein.

Also read the following information before use:

Warnings for use

Risk of product damage:

- Only use the products for their intended purpose as described in the instructions for use.
- Regularly check the condition of the feed dispenser or bowl, especially the mechanical components such as lids, handles, feeding mechanisms or feed hoppers. In the event of visible damage, discontinue use and contact service.
- Do not overload the feed or water tanks - adhere to the recommended capacities specified by the manufacturer.

Hazard to animals:

- Make sure the food dispenser is suitable for the size, age and nutritional needs of the animal.
- Regularly check the quality of the stored food - make sure it is fresh and stored in dry conditions to prevent spoilage.
- Place the unit in a stable location that is easily accessible to your pet, but away from areas exposed to excessive sunlight, moisture or contact with other animals.

Danger to children:

- Food dispensers are not toys. Keep them out of the reach of children to avoid accidental damage to the unit.
- Do not allow children to operate the appliance without adult supervision, especially when filling the feed or maintaining the mechanisms.

Risks associated with electronic components:

- Regularly check the condition of the power cables, batteries and electronic components. In the event of damage, discontinue use of the unit.
- For electrically powered models, make sure the unit is connected to a stable power source.
- If the unit is powered by batteries, replace them in accordance with the operating instructions and only use batteries recommended by the manufacturer.

Information on correct use

Recommendations for use:

- Before first use, read the instruction manual and ensure that all components, such as lids, dispensing mechanisms and feed hoppers, are correctly fitted.
- Regularly fill the hopper with feed according to the manufacturer's recommendations, avoiding products that may cause blockages in the mechanisms.
- For models with automatic functions, ensure that the feed dosing schedule is set correctly.

Maintenance and storage:

- Store products in a dry and clean place, away from moisture and extreme temperatures.
- Clean dispensers and bowls regularly according to the manufacturer's instructions, using mild detergents and soft materials. Do not use harsh chemicals or tools that could damage the dispenser.
- Replace consumable parts such as filters (if applicable) as recommended by the manufacturer.

Battery safety:

- Use only batteries recommended by the manufacturer in battery-operated devices.
- Dispose of used batteries according to local environmental regulations.
- If the device will not be used for a long period of time, remove the batteries to prevent leakage.

Additional precautions

Adaptation to the animal:

- Observe your pet's reaction to the food dispenser or bowl - ensure that using the device does not cause stress or discomfort.
- For pets with a tendency to overeat, set appropriate food portions or feeding schedules to prevent health problems.

Damage and servicing:

- Any repairs to mechanical or electronic equipment should only be carried out at authorised service centres.
- Do not modify the unit yourself, as this may affect its safety and functionality.

Declaration of conformity

The products have been designed in accordance with the safety requirements of Regulation (EU) 2023/988. They comply with the relevant technical standards, including safety in use, electromagnetic compatibility and durability of materials.