 


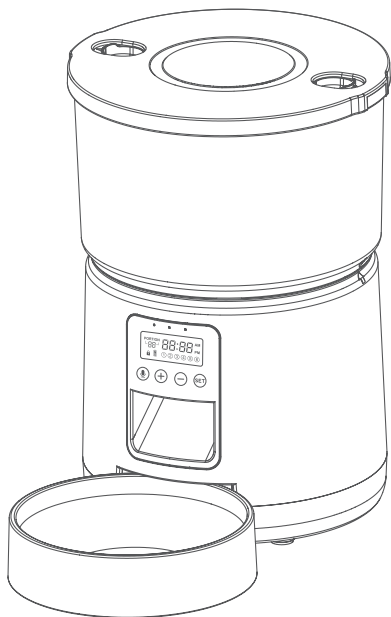

1. Contact Us

Have questions about Pet Feeder?

Our Customer Care representatives are here to help you. We guarantee our product for two years. You can contact us to solve most problems before returning the product. We will reply you within 24 hours on working days.



WARNING:

- DO NOT immerse control panel in water. Base unit should NOT be submerged in water at any time, as this may damage electronic components.
- Dispose of all packaging materials properly. Some items may be packed in polybags; these bags could cause suffocation; keep away from children and pets.
- Close supervision is required when children are using or are in close proximity to the device.
- DO NOT use outdoors. FOR INDOOR HOUSEHOLD USE ONLY. Check operation frequently to be sure the pet feeder is dispensing properly.
- For dry food use only. DO NOT use wet, canned or moist food.
- Pet feeder should be placed on a level surface.
- Before leaving for an extended period, be sure to replace the batteries with new ones or remove the batteries.
- DO NOT disassemble the pet feeder other than components as instructed in this operating guide.
- To protect against electric shock, if using power cord do not place power cord or plug in water or other liquids.
- DO NOT operate any appliance if it has a damaged power cord or plug, or if it is malfunctioning or has been damaged. Call the Customer Care Center immediately for further instructions.
- Always unplug any appliance when not in use, before putting on or taking off parts and before cleaning. Never pull on the electrical power cord to remove the plug from the wall outlet.



CAUTION:

Do not allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard plastic protector) at any hardware store to protect the power cord.



Made in China

2. Components

Note: Bowl is shipped inside feeder.

Note: Power Supply method:


(1). DC 5.0V Power adapter & Power Cord

(2). 3 D-cell alkaline batteries Required. Batteries NOT Included.

WHATS IN THE BOX :


1. Automatic Pet Feeder
2. Power Adapter
3. Power Cable
4. Desiccant Bag
5. Bowl
6. User Manual

3.Features, Controls and Indicators

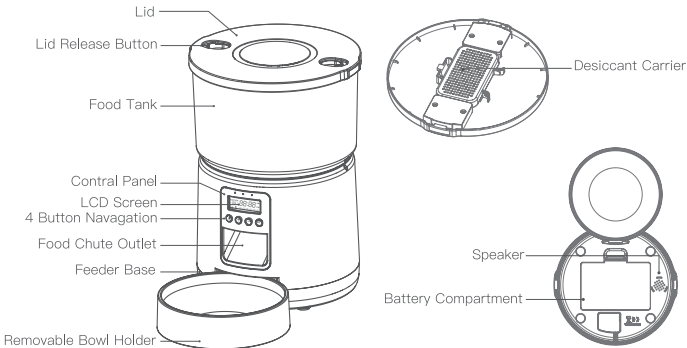

Feeding Schedule Setup:

Panel Instruction

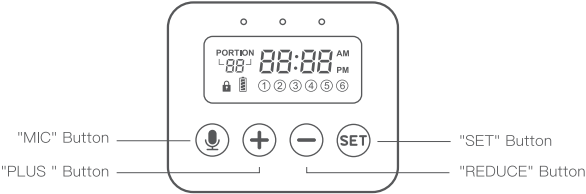

3.1 Specifications

Power	DC 5V power adapter; 3 x alkaline D batteries
Power Adapter	AC100–240V Input, DC 5V output
Working Current	Avg. 80 mA
Operating Temperature	–20°C–85°C/–4°F–185°F
External Socket	Power socket

3.2 BUTTON NAVIGATION QUICK GUIDE

BUTTON	DESCRIPTION	SETUP MODE FUNCTION
	MIC	Record you voice
	UP	Increases selection, Manual feeding
	DOWN	Decreases selection, View feeding settings
	SET	Parameter Modification, Lock / Unlock

3.3 Quick Programming Guide

Note: Please ensure the feeder machine is powered on with DC 5.0V power adapter and power cable. Or 3 D-cell alkaline batteries Required.

Note: Please ensure the control panel is unlocked.

Note: INDOOR HOUSEHOLD USE ONLY.

3.3.1 LOCK button.

Press"  "button to unlock the control panel, the lock icon opens"  "and enters the unlock standby state. The 4-Button Navigation automatically locks after 20s of inactivity and the lock icon appears on LCD screen.



3.3.2 MIC Button.

When enter the unlocked state and standby, pressing and holding this key"  "for 2 seconds then the "Low Battery/Mic" Led will turn red and the speaker ring once, which prompts to start recording. When you release the"  "button, the recording ends. At the same time, your recording will be replayed. (Please keep pressing the key"  "during the whole recording process.)**(Up to 10 seconds of recording allowed.)**

3.3.3 SYSTEM TIME SETTING

A. Hour Setting.

In the unlocked state, press the"  "button to set the "hour" of the system, and the number of "hour" flashes. At this time, press the"  "key or the"  "key to adjust the "hour". Long press can automatically increase or decrease.



B. Minute Setting.

Press the"  "button again to set the "minute" of the system, and the number of "minute" flashes. At this time, press the"  "key or the"  "key to adjust the "minute". Long press can automatically increase or decrease.



3.3.4 MEAL TIME SETTING

A. Press the"  "button again to set the "hour" of feeding time of the 1st meal, and the number of "MEAL I" and "hour" flash. At this time, press the"  "key or"  "key to adjust the "hour" of the first meal feeding time. Long press can automatically increase or decrease.



B. Press the "SET" button again to set the "minute" of feeding time of the 1st meal, and the number of "MEAL I" and "minute" flash. At this time, press the "+" key or "-" key to adjust the "minute" of the first meal feeding time. Long press can automatically increase or decrease.



C. Press the "SET" button to set the "Portion" for the 1st meal, the number of "I" and "Portion" will flash. At this Portion, press the "+" key or "-" key to adjust the "Portion" of the first meal. Press and hold to quickly increase or decrease to desired Portion.



D. Cancel the Meals. Set the portion to 0, the meal will be canceled. And the canceled meal sign will be blank when it back to standby state.



E. Repeat process for additional meals.

F. Press and hold the "SET" button until it return to the unlocked standby state. Tips: In the above steps, if you press and hold the button for a long time, it will directly return to the unlock standby state.

3.3.5 UP&DOWN BUTTON

A. UP Button. ("+" button)

Short press the "+" key once, the set number will increase by 1, and long press will automatically increase by 1.

B. DOWN Button. ("-") button)

Short press the "-" key once, the set number will decrease by 1, and long press will automatically decrease by 1.

Note: Press and hold the "+" and "-" buttons simultaneously for 3 seconds to reset all settings.

3.3.6 MANUAL FEED BUTTON

A.FEED Button. ("⊕")

In the unlocked state, press once to manually feed one portion.

3.3.7 Note:

(1). There is a Low Battery indicator on the left side of the control panel. When you go out or on a business trip, make sure if the voltage indicator light is on. If there is a light or flashing light when discharging or sounding, please replace the battery in time to prevent your pet from starvation.

(2). Do not put your fingers into the machine at any time.

(3). This product uses 3x D alkaline batteries.


(4). Please dispose of old batteries in accordance with national regulations (pay attention to environmental protection). When the feeder is not used for a long time, please remove the battery to prevent the electrolyte from leaking out.


Do not add semi-dry or wet pet food, this product can only use dry pet food.

4.Prepare and Assemble Feeder

4.1 Assembling Bowls and Food Buckets

Remove the bowls and food buckets from the feeding slot, and install them in the correct positions.

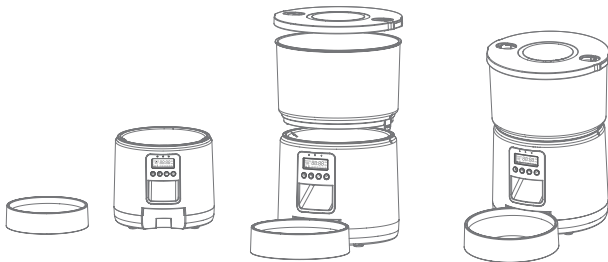

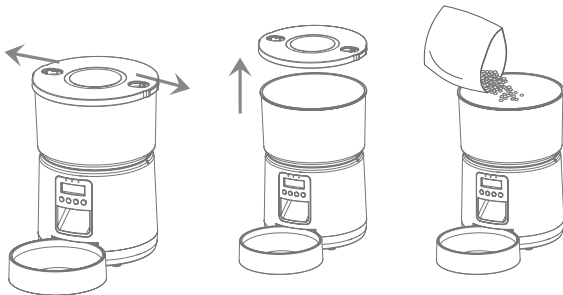


4.2 Placing Desiccant Bag

The desiccant bag can remove the moisture and odor inside the tank, protect the pet food from oxidation damage, and always be fresh.

Note:

It's recommended to use a desiccant bag and change them every 15 days in case of mold. Please remove the desiccant bag before cleaning the lid. For a better antioxidant effect, tear off the sealing film outside the small package only when you use it.

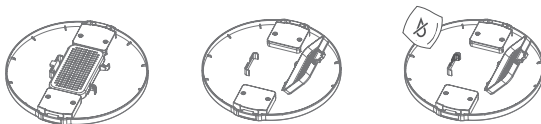

4.3 Connecting Power


- Insert the 5V power adapter into a wall socket. Plug in the power socket of the feeder.
- Open the battery compartment at the bottom of the unit, and install 3 alkaline D batteries (not included) in case of outage.
- The LCD display will light up automatically indicating the feeder is on now.

Note:

Battery NOT included.

Before connecting to power, make sure all parts are clean and completely dry.

The battery should power with an output of 4–5V; the battery level icon on the display blinks on a low battery level (<4V).

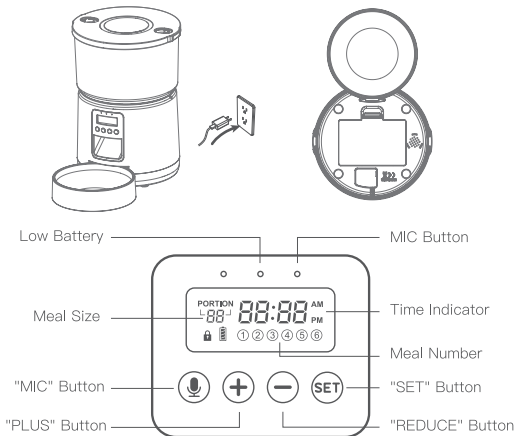

Note:

Do NOT use canned, wet or moist pet food.

Recommend kibble size ranging from 2–10mm/0.07–0.4in in diameter.

5.Troubleshooting

The answers to these questions should help you solve most problems you may have with the pet feeder.

PROBLEM	SOLUTION
4-Button Navigation is locked/ buttons do not work.	Buttons automatically lock after 2 minutes of inactivity. To unlock 4-Button Navigation, press and hold the "SET" button for 3 seconds to unlock.
The food won't come out.	Please be sure to fill in with dry food; kibble size should range from 2–10mm/0.07–0.4in in diameter. Check whether any foreign objects are placed –disassemble the food tank and check the chute. Also check the food outlet. Check whether it's low battery level –whether the power adapter is connected or there is any outage when no battery is installed.
Why is the amount of food from my feeder inaccurate, the number on the display is not clear, or the function is not working properly?	If this problem occurs after a period of use, it is mostly caused by low battery power. Please replace it with a new Dalkaline battery.
How to clean the feeder?	This product cannot be placed outdoors or exposed to rain. When cleaning, use a damp cloth to clean exterior while preventing water from going inside the machine. If you need to disassemble the food storage bucket, please follow the instructions from "Product Assembly and Use". The storage tank, bucket lid, and feeding basin can be hand-cleaned with water.

6.Clean the Parts and Accessories

6.1 Cleaning & Care

6.1.1 Cleaning parts It's recommended to clean the feeder regularly for the health of your pet.

1. Food tank. 2. Food tray. 3. Lid (without desiccant bag); They can be subnerged in water
Clean by hand-washing using cool or warm soapy water.



Washable




Washable



Not washable

6.1.2 Disassembling the food tank

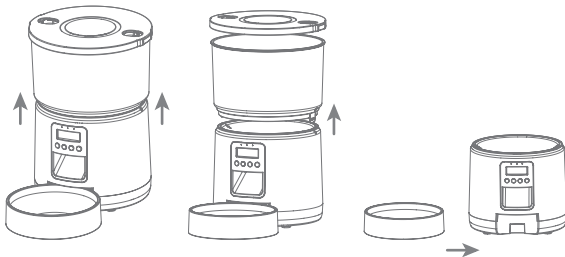

Warnings and safety information

All information regarding the use of the product can be found in the user manual. Before using it, read its contents and follow the instructions contained therein.

Also read the following information before use:

Warnings for use

Risk of product damage:

- Only use the products for their intended purpose as described in the instructions for use.
- Regularly check the condition of the feed dispenser or bowl, especially the mechanical components such as lids, handles, feeding mechanisms or feed hoppers. In the event of visible damage, discontinue use and contact service.
- Do not overload the feed or water tanks - adhere to the recommended capacities specified by the manufacturer.

Hazard to animals:

- Make sure the food dispenser is suitable for the size, age and nutritional needs of the animal.
- Regularly check the quality of the stored food - make sure it is fresh and stored in dry conditions to prevent spoilage.
- Place the unit in a stable location that is easily accessible to your pet, but away from areas exposed to excessive sunlight, moisture or contact with other animals.

Danger to children:

- Food dispensers are not toys. Keep them out of the reach of children to avoid accidental damage to the unit.
- Do not allow children to operate the appliance without adult supervision, especially when filling the feed or maintaining the mechanisms.

Risks associated with electronic components:

- Regularly check the condition of the power cables, batteries and electronic components. In the event of damage, discontinue use of the unit.
- For electrically powered models, make sure the unit is connected to a stable power source.
- If the unit is powered by batteries, replace them in accordance with the operating instructions and only use batteries recommended by the manufacturer.

Information on correct use

Recommendations for use:

- Before first use, read the instruction manual and ensure that all components, such as lids, dispensing mechanisms and feed hoppers, are correctly fitted.
- Regularly fill the hopper with feed according to the manufacturer's recommendations, avoiding products that may cause blockages in the mechanisms.
- For models with automatic functions, ensure that the feed dosing schedule is set correctly.

Maintenance and storage:

- Store products in a dry and clean place, away from moisture and extreme temperatures.
- Clean dispensers and bowls regularly according to the manufacturer's instructions, using mild detergents and soft materials. Do not use harsh chemicals or tools that could damage the dispenser.
- Replace consumable parts such as filters (if applicable) as recommended by the manufacturer.

Battery safety:

- Use only batteries recommended by the manufacturer in battery-operated devices.
- Dispose of used batteries according to local environmental regulations.
- If the device will not be used for a long period of time, remove the batteries to prevent leakage.

Additional precautions**Adaptation to the animal:**

- Observe your pet's reaction to the food dispenser or bowl - ensure that using the device does not cause stress or discomfort.
- For pets with a tendency to overeat, set appropriate food portions or feeding schedules to prevent health problems.

Damage and servicing:

- Any repairs to mechanical or electronic equipment should only be carried out at authorised service centres.
- Do not modify the unit yourself, as this may affect its safety and functionality.

Declaration of conformity

The products have been designed in accordance with the safety requirements of Regulation (EU) 2023/988. They comply with the relevant technical standards, including safety in use, electromagnetic compatibility and durability of materials.

Manufacturer: Flying Shuttle International Trading Co., Ltd.

Address: ROOM 1201, 12/F, TAI SANG BANK BUILDING, 130-132 DES VOEUX ROAD,
CENTRAL, HONG KONG

Representative in the EU

Name: Enbaoxin Germany Maternal and Infant Supplies GmbH

Address: Laubenhof 23, 45326 Essen

e-mail: jasvigor2020@hotmail.com