


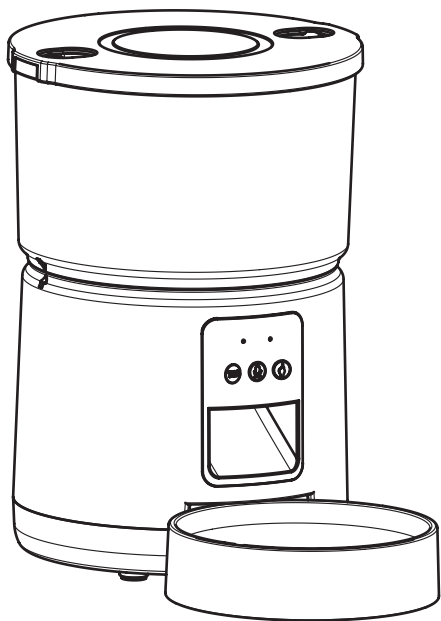


APP

Notice

1. Do not put the pet feeder in an high temperature place. The temperature should be within the range of -10°C to 40°C .
2. Do not immerse the base part in water, which will damage electronic components such as control panel.
3. Only applicable to dry food with a diameter of 2–12mm. Larger food may get stuck or block the food outlet.
4. We offer a 2 year warranty. If you encounter anything, please do not rush, contact us by email and we will get back to you within 2 working days.

Features of Automatic Pet Feeder

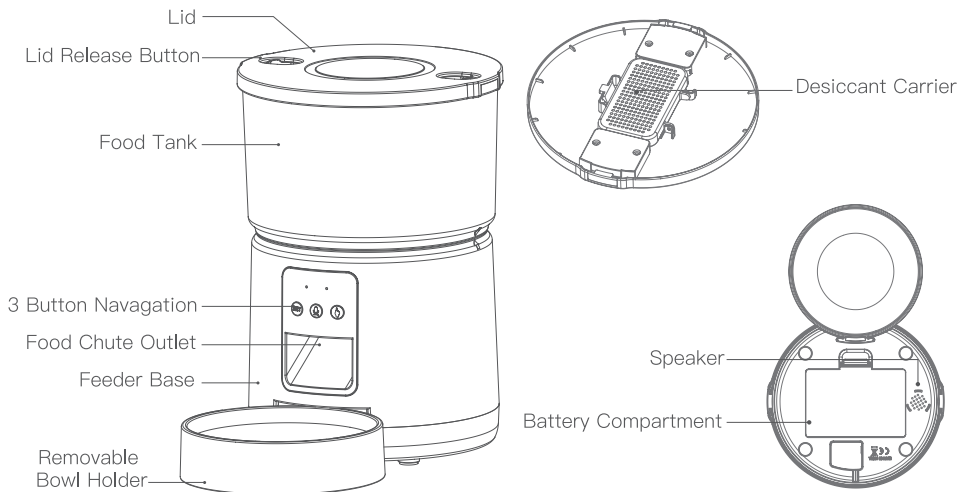


Assemble and Use

01 Filling Food Tank:

Fill food tank with dry pet food.

Note:

- 1) Do NOT use canned, wet or moist pet food.
- 2) Recommend kibble size ranging from 2–10mm/ 0.07–0.4in in diameter.

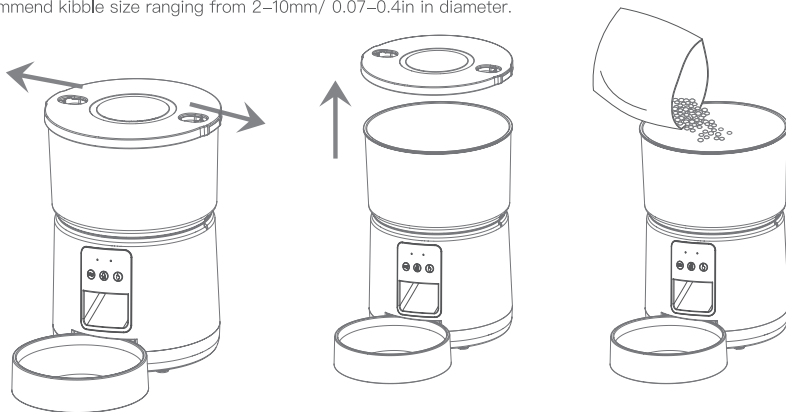


02 Placing Desiccant Bag:

The desiccant bag can remove the moisture and odor inside the tank, protect the pet food from oxidation damage, and always be fresh.


Note:

- 1) It's recommended to use a desiccant bag and change them every 5 days in case of mold.
- 2) Please remove the desiccant bag before cleaning the lid.
- 3) For a better antioxidant effect, tear off the sealing film outside the small package only when you use it.

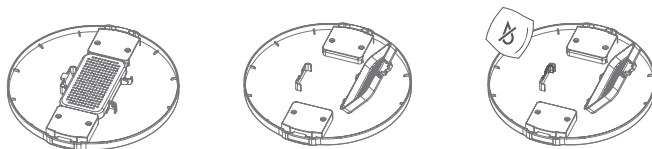

03 Assembly:

Release the bowl from the feeder food tank, and then install it in the correct position.

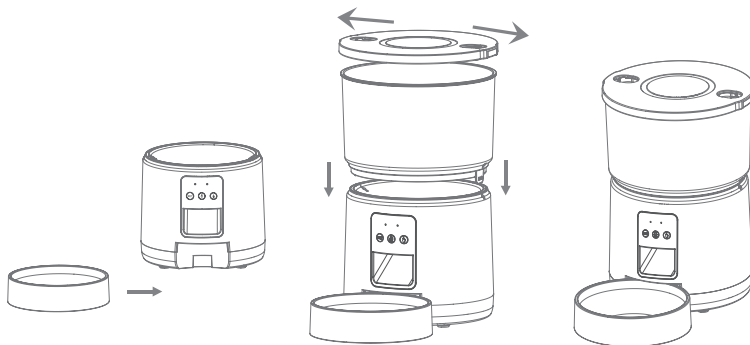


04 Connecting Power:

- Insert the 5V power adapter into a wall socket. Plug in the power socket of the feeder.
- Open the battery compartment at the bottom of the unit, and install 3 alkaline D batteries (not included) in case of outage.


Note:

- 1) Battery NOT included.
- 2) Before connecting to power, make sure all parts are clean and completely dry.
- 3) The battery should power with an output of 4–5V;

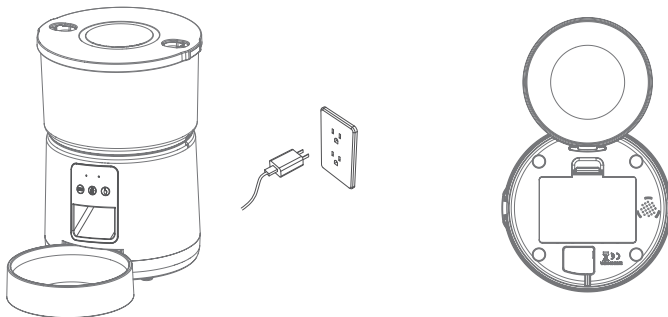

Function Introduction

Key Operation

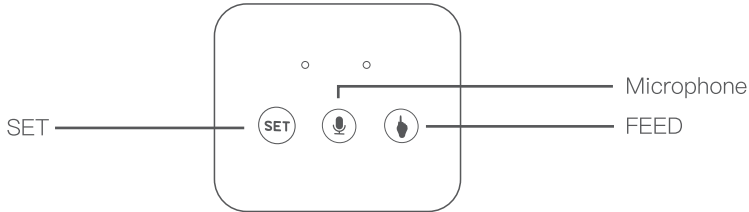

Microphone Button: Press and hold the "di" sound to start recording, release the "di,di" prompt to stop recording. The maximum recording time is 10 seconds.

SET Key: press and hold for 5 seconds to make 3 sounds of "di, di, di", and the white indicator light is to slow flashing(Reset successful and wait for connection).

FEED Key: Short press to send out 1 portion of food.

Press and hold for 3 seconds to make a sound of "di", the machine will lock;


Press and hold for 3 seconds to make 2 sounds of "di, di", the machine unlocks;

No operation within 30 seconds, the machine automatically locks.

In the locked state, press and hold the Set key to restore the factory settings.

Function Introduction

Key Operation

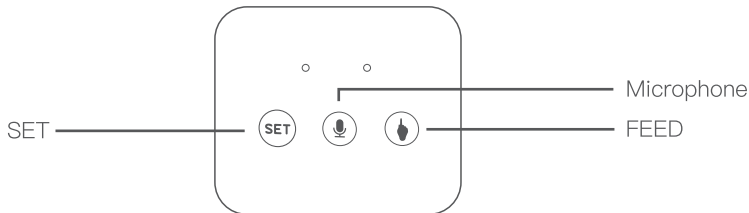

Microphone Button: Press and hold the "di" sound to start recording, release the "di,di" prompt to stop recording. The maximum recording time is 10 seconds.

SET Key: press and hold for 5 seconds to make 3 sounds of "di, di, di", and the white indicator light is to slow flashing(Reset successful and wait for connection).

FEED Key: Short press to send out 1 portion of food.

Press and hold for 3 seconds to make a sound of "di", the machine will lock;

Press and hold for 3 seconds to make 2 sounds of "di, di", the machine unlocks;


No operation within 30 seconds, the machine automatically locks.

In the locked state, press and hold the Set key to restore the factory settings.


POOEKEN APP specific operations




1. Download the App, register a dedicated account and log in

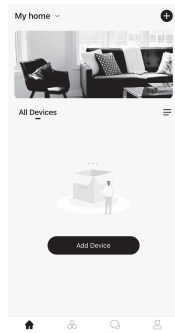


2. Enter the App and click "Add Device"

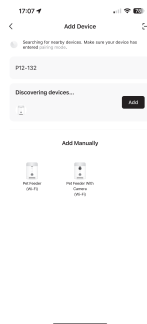


3. First open your phone Bluetooth and allow permissions. After entering the interface, wait for the device to be discovered automatically, then click "add"

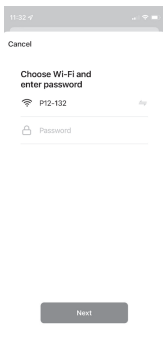


4. Enter a WiFi password (the name cannot be used in Chinese, the password cannot be used for special symbols)

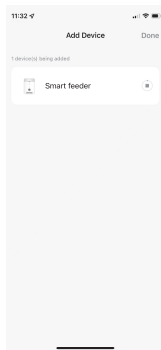


5. Waiting for the device to connect the network, showing successfully added, then next step

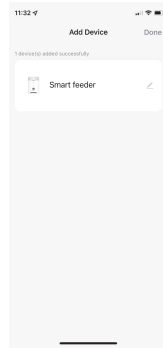


6. After successful, you can customize the name of device, click on the upper right corner to finish this step.

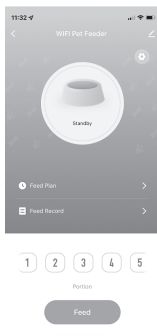


7. Enter the main interface, you can choose the meals and portions as needed, click "Feeding" to feeding immediate

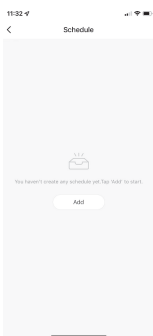


8. Click on the Main Interface "Feeding Plan" to add feeding schedule

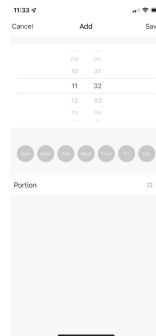

9. You can set the time and the number of meals according to the pet's eating pattern, set it to choose from Monday to Sunday every day, and click Save.

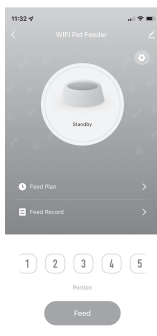

10. Steps of sharing equipment: main interface. Click the icon in the upper right corner to enter the settings option

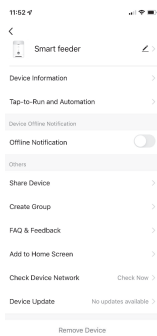

11. Enter the settings menu option and click "Shared Devices"




12. Click "Add Share" and enter the other party's APP account to share the device with multiple people

Simple trouble shooting of pet feeder

- 01 Please check if you can't connect.
a): The WiFi name and password should not be in Chinese or more than 12 digits. Please use combination of numbers and letters . **Support 5G/2.4G WIFI** .
b): Some software conflicts in the phone will also cause connection failure. Please restart the phone. Turn off the non mobile system software that starts with the phone, turn on Bluetooth and location, and then try reconnecting to the feeder.
- 02 If the feeding device is inaccurate or not feeding, please check whether there is too much food in the food plate and whether the food channels is blocked.
Please clean the food outlet and channels. When using the battery power supply , please check whether the battery is dead and whether the battery leaks.
- 03 The device shows offline. Please check the distance between the device and the router at home. Do not exceed 10 meters. Try not to partition the middle.
According to WiFi characteristics, the WiFi signal on the partition wall will drop sharply , resulting in unstable connection offline.
- 04 If there is no response after starting the machine, check whether the power supply is plugged in and whether the power switch is turned on. If they are all plugged in, please check whether the power supply is damaged, contact customer service to buy the power supply or return to the factory for maintenance according to the judgment.
- 05 Note:
(1). There is a Low Battery indicator on the left side of the control panel. When you go out or on a business trip, make sure if the voltage indicator light is on. If there is a light or flashing light when discharging or sounding, please replace the battery in time to prevent your pet from starvation.(When using the battery alone)
(2). Do not put your fingers into the machine at any time.
(3). This product uses 3xD alkaline batteries.
(4). Please dispose of old batteries in accordance with national regulations (pay attention to environmental protection). When the feeder is not used for a long time, please remove the battery to prevent the electrolyte from leaking out.

How to clean the feeder

This product cannot be placed outdoors or exposed to the rain. Please use a wet cloth to clean it and prevent water from entering the feeder. If you need to open the food tank, please pull out the head of the robot with strength. The food tank and food bowl can be washed by water.

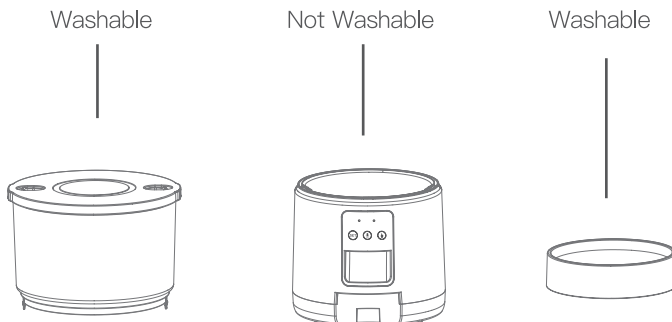

Manufacturer: Flying Shuttle International Trading Co., Ltd.

Address: ROOM 1201, 12/F, TAI SANG BANK BUILDING, 130-132 DES VOEUX ROAD, CENTRAL, HONG KONG

Representative in the EU

Name: Enbaoixin Germany Maternal and Infant Supplies GmbH

Address: Laubenhof 23 , 45326 Essen

e -mail: jasvigor2020@hmail.com

Warnings and safety information

All information regarding the use of the product can be found in the user manual. Before using it, read its contents and follow the instructions contained therein.

Also read the following information before use:

Warnings for use

Risk of product damage:

- Only use the products for their intended purpose as described in the instructions for use.
- Regularly check the condition of the feed dispenser or bowl, especially the mechanical components such as lids, handles, feeding mechanisms or feed hoppers. In the event of visible damage, discontinue use and contact service.
- Do not overload the feed or water tanks - adhere to the recommended capacities specified by the manufacturer.

Hazard to animals:

- Make sure the food dispenser is suitable for the size, age and nutritional needs of the animal.
- Regularly check the quality of the stored food - make sure it is fresh and stored in dry conditions to prevent spoilage.
- Place the unit in a stable location that is easily accessible to your pet, but away from areas exposed to excessive sunlight, moisture or contact with other animals.

Danger to children:

- Food dispensers are not toys. Keep them out of the reach of children to avoid accidental damage to the unit.
- Do not allow children to operate the appliance without adult supervision, especially when filling the feed or maintaining the mechanisms.

Risks associated with electronic components:

- Regularly check the condition of the power cables, batteries and electronic components. In the event of damage, discontinue use of the unit.
- For electrically powered models, make sure the unit is connected to a stable power source.
- If the unit is powered by batteries, replace them in accordance with the operating instructions and only use batteries recommended by the manufacturer.

Information on correct use

Recommendations for use:

- Before first use, read the instruction manual and ensure that all components, such as lids, dispensing mechanisms and feed hoppers, are correctly fitted.
- Regularly fill the hopper with feed according to the manufacturer's recommendations, avoiding products that may cause blockages in the mechanisms.
- For models with automatic functions, ensure that the feed dosing schedule is set correctly.

Maintenance and storage:

- Store products in a dry and clean place, away from moisture and extreme temperatures.
- Clean dispensers and bowls regularly according to the manufacturer's instructions, using mild detergents and soft materials. Do not use harsh chemicals or tools that could damage the dispenser.
- Replace consumable parts such as filters (if applicable) as recommended by the manufacturer.

Battery safety:

- Use only batteries recommended by the manufacturer in battery-operated devices.
- Dispose of used batteries according to local environmental regulations.
- If the device will not be used for a long period of time, remove the batteries to prevent leakage.

Additional precautions

Adaptation to the animal:

- Observe your pet's reaction to the food dispenser or bowl - ensure that using the device does not cause stress or discomfort.
- For pets with a tendency to overeat, set appropriate food portions or feeding schedules to prevent health problems.

Damage and servicing:

- Any repairs to mechanical or electronic equipment should only be carried out at authorised service centres.
- Do not modify the unit yourself, as this may affect its safety and functionality.

Declaration of conformity

The products have been designed in accordance with the safety requirements of Regulation (EU) 2023/988. They comply with the relevant technical standards, including safety in use, electromagnetic compatibility and durability of materials.