

充电指示灯

1. 充电中/电量不足——红灯闪烁

2. 充满电——蓝灯常亮

*请务必使用 DC5V/1A 电源适配器充电, 首次使用本产品, 请先充满电再使用。


按键说明

开/关机——长按 3 秒		切换模式——短按
第一次单击	2秒喷雾一次	白灯常亮
第二次单击	4秒喷雾一次	蓝灯常亮
第三次单击	持续喷雾	绿灯常亮

产品使用


1. 打开储水盖子, 注入干净的水, 然后盖好盖子。

2. 长按3秒按键开机, 单击按键选择适合的模式。

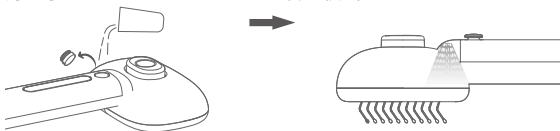

注意

- 使用时请将喷雾口朝下, 以确保雾化片能够接触到水, 并正常喷雾。
- 本产品头部可冲洗, 手柄部分用湿布擦拭。

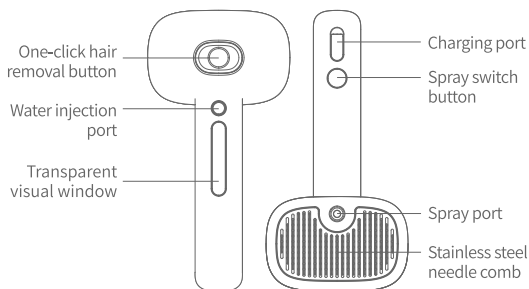

Charging Indicator

1. Charging/ Low battery—Red light blinking

2. Fully charged—Blue light always on


*Please be sure to use the DC5V/1A power adapter to charge, the first time you use this product, please fully charged before use.

Button Description


Turn On/Off—Long press 3S		Switch Modes—Short press
First click	Sprays once every 2 seconds	White light
Second click	Sprays once every 4 seconds	Blue light
Third click	Continuous spray	Green light

Product Use

1. Open the water storage lid and fill with clean water, then cover the lid.

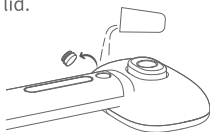

2. Long press the button for 3s to turn on, click the button to select the suitable mode.

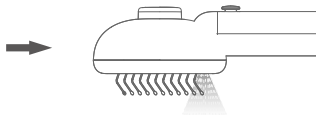

Caution

- When using the product, please turn the spray port downwards to ensure that the atomiser can touch the water and spray normally.
- The head of this product can be rinsed and the handle part can be wiped with a damp cloth.